

**TS7650/TS7650G Support Matrix**

Created By:

Nir Hegner  
[nirhegner@us.ibm.com](mailto:nirhegner@us.ibm.com)

Ahmed Almoustafa  
[aalmoust@us.ibm.com](mailto:aalmoust@us.ibm.com)

Created On: 06/24/2009

**Backup Application ISV**

Galaxy/HDPS	CommVault QiNetix ->					Website							
	Windows 2003 (x86/x64)	Windows 2008 (x86)	Solaris 8 SPARC	Solaris 9 SPARC	Solaris 10 SPARC	Solaris 10 x86_64	SUSE10	AIX 5.2	AIX 5.3	AIX 6.1	Redhat 4.7	Redhat R5	HP-UX 11v1 / 11v2
P3000 + DL77000	7.0	7.0			7.0	7.0	7.0	7.0	7.0		7.0	7.0	7.0
P3000 + LTO2	7.0	7.0			7.0	7.0	7.0	7.0	7.0		7.0	7.0	7.0
TS3500 + LTO3	7.0	7.0			7.0	7.0	7.0	7.0	7.0		7.0	7.0	7.0

**Notes on tape device drivers:**  
**TS3500** Libraries: Use the SCSI pass-through driver on all operating systems with the following exceptions:  
 On Windows, use the IBM tape driver from [ftp://ftp.software.ibm.com/storage/devdrv](http://ftp.software.ibm.com/storage/devdrv)  
**LTO2/LTO3** Drives: Use the SCSI pass-through driver on all operating systems with the following exceptions:  
 On Windows, use the IBM tape driver from [ftp://ftp.software.ibm.com/storage/devdrv](http://ftp.software.ibm.com/storage/devdrv)  
**General Note:** IBM Path Failover (CPF and DPF) feature require use of the IBM tape device drivers. CPF/DPF is supported on Windows

Networker	EMC Legato Networker					Website						
	Windows 2003 (x86/x64)	Windows 2008 (x86/x64)	Solaris 8	Solaris 9	Solaris 10	AIX 5.2	AIX 5.3	AIX 6.1	SUSE10	Redhat ES4.0	Redhat R5	HP-UX 11v3
P3000 + DL77000	7.4	7.5			7.5				7.5		7.5	
P3000 + LTO2		7.4			7.4				7.4		7.4	
TS3500 + LTO3	7.5	7.4					7.5	7.5	7.5			7.5
	7.4						7.4	7.4	7.4			7.4

**Note on tape device drivers:**  
**TS3500** Libraries: Use the passthrough device driver  
**LTO2/LTO3** Drives:  
 On Windows, use IBM's IBMTape device driver only; On AIX, use IBM's Atape device driver only;  
 On Linux, use the native "st" driver only; On Solaris, use either the IBMTape driver or the native st driver; On HP-UX, use the native stape device driver  
 IBM tape device drivers are available at: [ftp://ftp.software.ibm.com/storage/devdrv](http://ftp.software.ibm.com/storage/devdrv)  
**General Note:** IBM Path Failover (CPF and DPF) require use of the IBM tape device drivers. DPF is supported on Windows, AIX and Solaris

Data Protector	HP Data Protector ->					Website						
	Windows 2003 (x86/x64)	Windows 2008	Solaris 8	Solaris 9	Solaris 10	AIX 5.2	AIX 5.3	AIX 6.1	Redhat ES4.0	Redhat R5	HP-UX 11v1 / 11v2	HP-UX 11v3
P3000 + DL77000		6.0			5.5				6.1		5.5	6.1
P3000 + LTO2		6.0			5.5				6.1		6.0	6.1
TS3500 + LTO3		6.0							6.1		5.5	6.1
		6.1							6.1		5.5	6.1

**Note on tape device drivers:**  
**TS3500** Libraries: Use the native operating system device driver for medium changer with the following exceptions:  
 On AIX, use the driver for the operating system used for robotic control  
 On Solaris, use sst  
 On Windows 2003, disable the class driver in Windows Hardware Manager.  
**LTO2/LTO3** Drives: Use the native operating system device driver for the tape drive with the following exceptions:  
 On AIX, use the IBM Atape device driver  
 On Windows 2003, disable the class driver in Windows Hardware Manager.  
 IBM tape drivers can be downloaded from [ftp://ftp.software.ibm.com/storage/devdrv](http://ftp.software.ibm.com/storage/devdrv)  
**General Note:** IBM Path Failover (CPF and DPF) feature require use of the IBM tape device drivers. DPF is supported on AIX.

		IBM Tivoli Storage Manager ->										Website		
TSM		Windows 2003 (32bit & 64 bit)	Windows 2008	Solaris 9 SPARC	Solaris 10 SPARC	Solaris 10 x86	AIX 5.2	AIX 5.3	AIX 6.1	Redhat ES4.0	Redhat R5	DLU/SUSE10	SLES10	HP-UX 11v1 / 11v2
P3300 + DL77000		5.4 5.5 6.1	5.5.2 6.1	5.4 5.5	5.4 5.5		5.4	5.4 5.5				5.5.2	5.5.2 6.1	
P3000 + LTO2		5.4 5.5 6.1	5.5.2 6.1	5.4 5.5	5.4 5.5		5.4	5.4 5.5 6.1	5.5 6.1			5.5.2	5.5.2 6.1	
TS3500 + LTO3		5.5.2 6.1	5.5.2 6.1	5.5.2	5.5.2 6.1	5.5.2 6.1		5.4 5.5.2 6.1	5.5.2 6.1	5.5 6.1	5.5 6.1	5.5.2	5.5.2 6.1	5.5.2 6.1

Notes on tape device drivers:  
**TS3500** Libraries: Use the IBM device driver  
**LTO2/LTO3** Drives: Use the IBM device driver  
 IBM tape drivers can be downloaded from ftp://ftp.software.ibm.com/storage/devdvr  
**General Note:** IBM Path Failover (CPF and DPF) feature require use of the IBM tape device drivers. CPF and DPF are supported on Operating systems

		Symantec Netbackup										Website		
NBU		Windows 2003 (32bit)	Windows 2003 (64bit)	Windows 2008 (64bit)	Solaris 8	Solaris 9	Solaris 10 (SPARC & x86)	AIX 5.2	AIX 5.3	AIX 6.1	Redhat ES4.0	Redhat R5	SLES10	HP-UX 11v1 / 11v2 / 11v3
DTC VTL + DL77000														
DTC VTL + LTO2		5.1 6.0 6.5	6.5	6.5	5.1 6.0 6.5	5.1 6.0 6.5	5.1 6.0 6.5	5.1 6.0 6.5	5.1 6.0 6.5		5.1 6.0 6.5	6.6	6.6	6.5
V-TS3500 + LTO3 (1)		6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5		6.5	6.5	6.5	6.5

Notes on tape device drivers:  
 Check the Symantec Hardware Compatibility Lists located on the Symantec support website for the latest tested IBM driver levels.  
**TS3500** Libraries: On AIX, install and configure the Symantec ovpass driver. On all other operating systems use the native device driver.  
**LTO2/LTO3** Drives: On all operating systems use the native operating system tape device driver.  
 IBM tape drivers can be downloaded from ftp://ftp.software.ibm.com/storage/devdvr  
**General Note:** IBM Path Failover (CPF and DPF) feature require use of the IBM tape device drivers. CPF/DPF is not supported  
**(1) - V-TS3500 library is supported by Symantec (not TS3500)**

		Windows		
DPM		Windows 2003 (32bit)	Windows 2003 (64bit)	Windows 2008 (64bit)
DTC VTL + DL77000		2007	2007	
DTC VTL + LTO2		2007	2007	
V-TS3500 + LTO3				

		IBM IOS		
BRMS		V5R4	V5R4M5	V6R1
DTC VTL + DL77000				
DTC VTL + LTO2				
TS3500 + LTO3		V5R4	V5R4	V6R1

V2.2.3 is required for this support