


SIP software -X-Lite


1. Please install **X-Lite**
2. Go to **Options** page

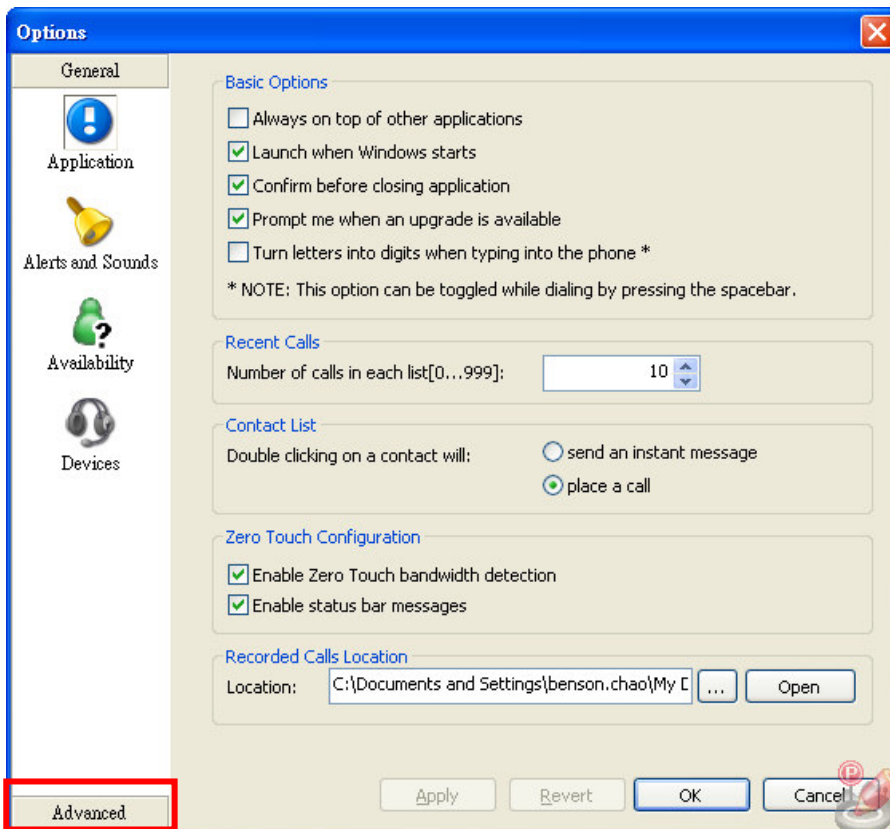

3. Click **Advanced**




4. Disabled codecs and Enable codecs settings as below :

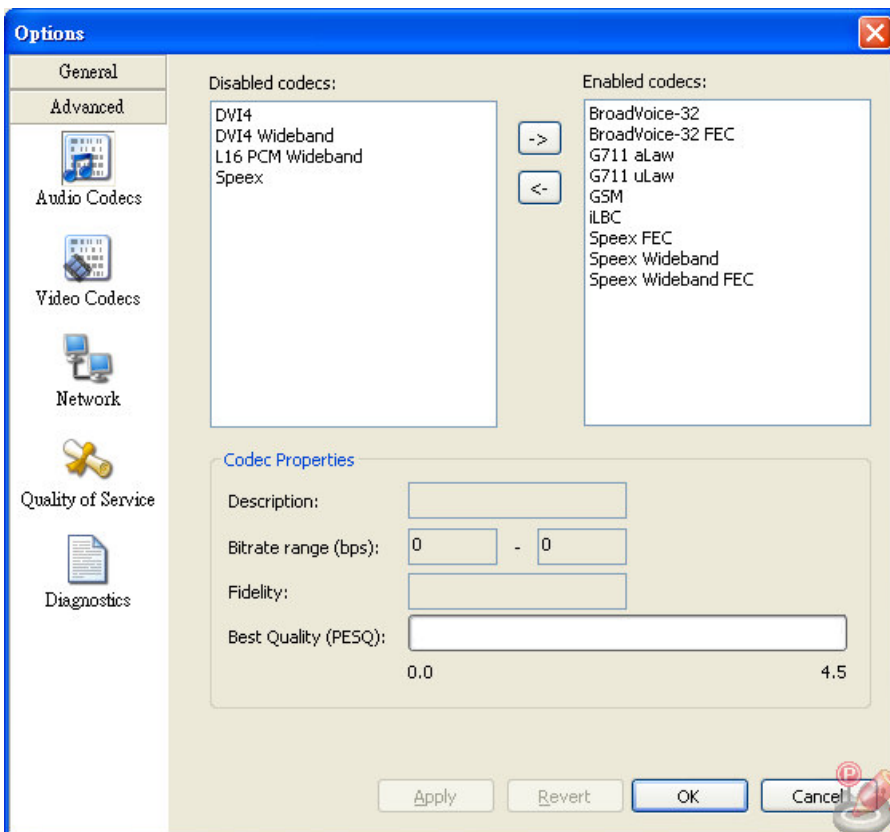


5. Go to **SIP Account Settings** to set account



6. Click **Add** button to add an account

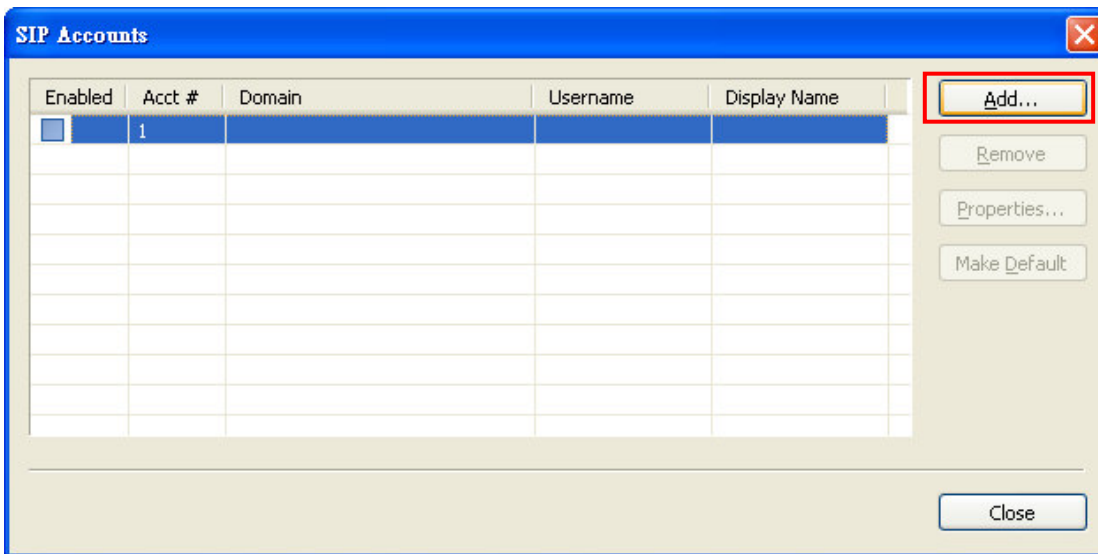

7. Input **Display Name**、**User name**、**Domain** (up to you) , and please **disable Register with domain and receive incoming calls**

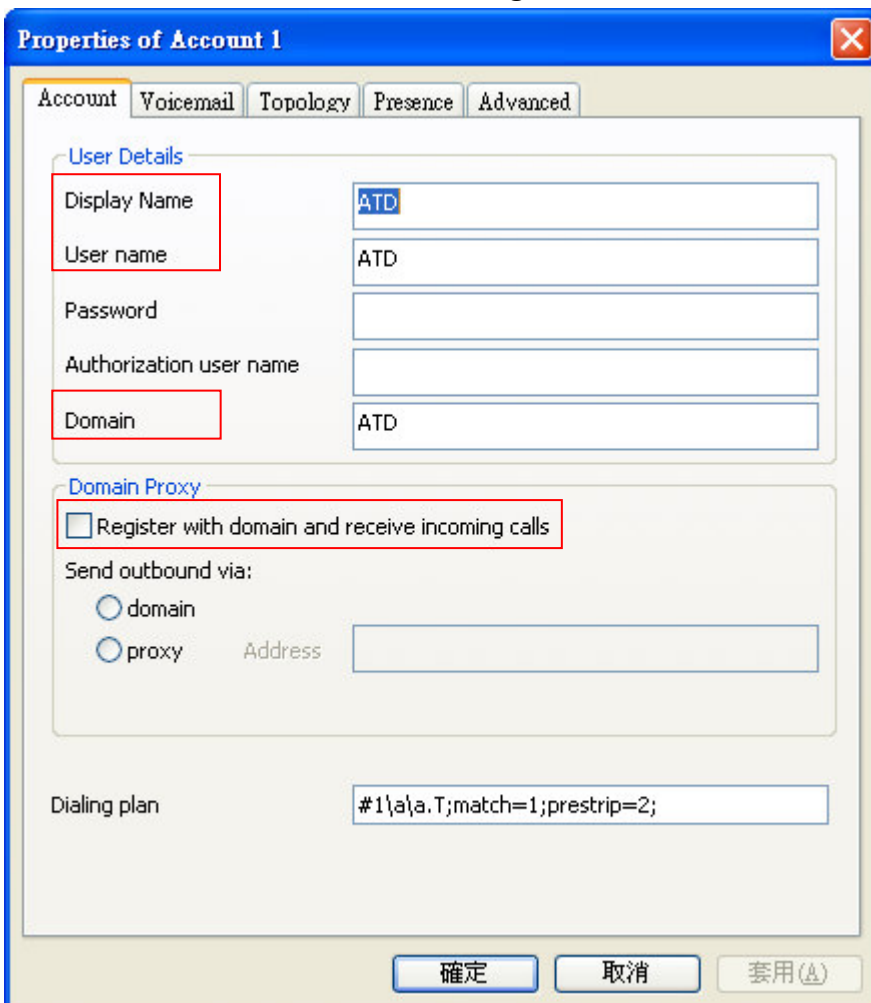

8.And now you can use the SIP, please input **username@camera IP** , e.g. ATD@192.168.3.220

