

4247 Printer
Models 001, 002 with Twinaxial Attachment



Quick Reference Guide

Configuration Menu Selection Chart

CATEGORIES	PARAMETERS / VALUES				
Configuration Storage	Save Current Values		Recall Custom Set Values		Power-On Custom Set
	Custom Set A Custom Set B Custom Set C Custom Set D	Custom Set E Custom Set F Custom Set G Custom Set H	Custom Set A Custom Set B Custom Set C Custom Set D	Custom Set E Custom Set F Custom Set G Custom Set H	* Last Used Custom Set A Custom Set B Custom Set C Custom Set D
	Power-On Paper Source		Recall Factory Defaults		
	* Front Rear Bin 1 Bin 2	Bin 3 Manual Last Used	Yes		
Attachment	* Twinax Parallel				
Rear Tractor Use	* Push Pull Push-Pull				
Twinax Configuration	Characters per Inch (CPI)	Lines per Inch (LPI)	Maximum Print Position (MPP)	Maximum Page Length (MPL)	
	* 10 12 15 16.7	* 6 8	* 132 001 - 136 (at 10 CPI) 163 (at 12 CPI) 204 (at 15 CPI) 227 (at 16.7 CPI)	* 066 001 - 660 (at 6 LPI) 880 (at 8 LPI)	
	Print Quality	Print Language	Printer Address	Data Stream (IPDS installed)	
	* DP Quality DP Text Quality Near Letter Quality	37 USA/Canada ↑↓ * 500 International 5/ Belgian New ↑↓ 1122 Estonian	* 000 ↑↓ 006	* IPDS SCS	
	Emulation Mode	Media Size Priority (IPDS only)	Bar Code Mode (IPDS only)	Graphics Mode (IPDS only)	Alarm Control
	* 4247 4224 (IPDS only) 4230 4214 (SCS only)	Standard *Alternate	* High Low Computer Selected	* High Low Computer Selected	* Enabled Disabled
Parallel Configuration	Characters per Inch (CPI)	Lines per Inch (LPI)	Maximum Print Position (MPP)	Maximum Page Length (MPL)	
	* 10 12 15 16.7 17.1 20	* 6 8	* 136 001 - 136 (at 10 CPI) 163 (at 12 CPI) 204 (at 15 CPI) 227 (at 16.7 CPI) 233 (at 17.1 CPI) 272 (at 20 CPI)	* 066 001 - 660 (at 6 LPI) 880 (at 8 LPI)	
	Emulation Mode	Print Language**	Print Language***	Print Quality**	
	* 4247 2381 Personal Printer 4202 Proprinter III XL Epson-FX	* 437 PC ↑↓ 1251 Cyrillic Windows	* 0 USA ↑↓ 1251 Cyrillic Windows	* DP Quality DP Text Quality Near Letter Quality OCR-A OCR-B	
	Print Quality***	NLQ Typeface**	Character Set		
* DP Quality Courier Gothic OCR-A OCR-B	* Courier Gothic	* PC1 PC2 Italics (Epson only)			

* Manufacturing Default

** When Emulation Mode is set to 4247, 4202 III XL, or 2381 Personal Printer

*** When Emulation Mode is set to Epson-FX

CATEGORIES	PARAMETERS / VALUES			
Parallel Configuration (Continued)	Printer Compatibility 3 Automatic LF on CR †	Printer Compatibility 4** Automatic CR on LF	Printer Compatibility 5** Form Feed Suppression	Printer Compatibility 6 Init †
	Enabled * Disabled	Enabled * Disabled	Enabled * Disabled	* Enabled Disabled
	Printer Compatibility 7** Condensed Print	Printer Compatibility 8 Slashed Zero †	Printer Compatibility 9** 20 CPI	
	15 16.7 * 17.1	Enabled * Disabled	* Enabled Disabled	
	Alarm Control	Interface Type	Input Buffer Size	Select-In Signal***
	* Enabled Disabled	* PC Parallel 1284 Parallel	256 2K 12K * 32K 64K	* Enabled Disabled
	AutoFeed XT***			
	Enabled * Disabled			
Printer Setup	Paper Source	ASF Default Bin	ASF Bin 1 Media	ASF Bin Linking
	* Front Rear Bin 1 Bin 2 Bin 3 Manual	* Bin 1 Bin 2 Bin 3	* Paper Envelope	* Disabled Bin 1+2 Bin 1+2+3 Bin 2+3
	Front Forms Backup	Rear Forms Backup	Continuous Forms Linking	Form Feed Mode
	* Enabled Disabled	* Enabled Disabled	Enabled * Disabled	* Not Active in Ready State Active in Ready State
	Automatic Eject	Automatic Restore	Continuous Forms Eject Mode	Manual Paper Overlay
	Enabled * Disabled	* Disabled Data Timer (10 seconds) Timer (20 seconds) Timer (30 seconds) Timer (40 seconds) Timer (50 seconds)	* Immediate Eject Delayed Eject	Enabled * Disabled
	Automatic Manual Load	Manual Feed Eject Mode	Bar Code Print Direction	Graphics Print Direction
	* Enabled Disabled	* Top of Form Automatic Top of Form	Bidirectional * Unidirectional	Bidirectional * Unidirectional
Perforation Safety	Jam Sensors			
Enabled * Disabled	* Enabled Disabled			

* Manufacturing Default

** When Emulation Mode is set to 4247, 4202 III XL, or 2381 Personal Printer

*** When Emulation Mode is set to Epson-FX

† When Emulation Mode is set to Epson-FX, only Compatibility Options 3, 6, and 8 are available

CATEGORIES	PARAMETERS / VALUES			
Printer Adjustment	Front AFTA	Front Tear Position	Front Left Margin Alignment	Front Paper Load Position
	* 0 -5 to +3 Fixed 1 to 8	* 0 -312 to +24	* 10 0 to 60	* 0 -24 to +288
	Rear AFTA	Rear Tear Position	Rear Left Margin Alignment	Rear Paper Load Position
	* 0 -5 to +3 Fixed 1 to 8	* 0 -312 to +24	* 10 0 to 60	* 0 -24 to +288
	ASF Bin 1 AFTA	ASF Bin 1 Left Margin Alignment	ASF Bin 1 Paper Load Position	ASF Bin 2 AFTA
	* 0 -5 to +3 Fixed 1 to 8	* 10 0 to 60	* 0 -24 to +576	* 0 -5 to +3 Fixed 1 to 8
	ASF Bin 2 Left Margin Alignment	ASF Bin 2 Paper Load Position	ASF Bin 3 AFTA	ASF Bin 3 Left Margin Alignment
	* 10 0 to 60	* 0 -24 to +576	* 0 -5 to +3 Fixed 1 to 8	* 10 0 to 60
ASF Bin 3 Paper Load Position	Manual Feed AFTA	Manual Feed Left Margin Alignment	Manual Feed Paper Load Position	
* 0 -24 to +576	* 0 -5 to +3 Fixed 1 to 8	* 10 0 to 60	* 0 -24 to +576	
Power On Reset	Yes			
Display Language	* 000 English ↑↓ 010 Suomi			
Vital Product Data	Serial Number	Device Specific Information		
	XXXXXXX	XXXXXXXXXXXXXXXXXXXX		
Quit from Menu	Restore Previous Values			

* Manufacturing Default

Changing a Value on the Configuration Menu

1. Press **Stop**. The printer becomes *not ready*.
2. Press **Menu** to display the CONFIGURATION MENU on the operator panel display.
3. Press **Scroll Up**↑ or **Scroll Down**↓ until you find the Category you want.
4. Press **Enter** to select that Category.
5. Press **Scroll Up**↑ or **Scroll Down**↓ until you find the Parameter you want.
6. Press **Enter** to select that Parameter.
7. Press **Scroll Up**↑ or **Scroll Down**↓ until you find the Value you want.
8. Press **Enter** to select a new Value. An asterisk (*) appears to indicate the new current Value.
9. To return to the CONFIGURATION MENU, press **Return** to return to the Parameter level, and then press **Return** again.
10. To save changes to a Custom Set, return to the CONFIGURATION MENU. Select Configuration Storage. Select Save Current Values. Select a Custom Set.
11. To return the printer to *ready* from any level, press **Start**.

Custom Set in Use Indicator



The current custom set in use is displayed in parentheses <X>.

Where <X> can be:

- A** (Custom Set A in use)
- C** (Custom Set C in use)
- B** (Custom Set B in use)
- D** (Custom Set D in use).
- E** (Custom Set E in use)
- F** (Custom Set F in use)
- G** (Custom Set G in use).
- H** (Custom Set H in use).

If a change was made in the Configuration Menu and not saved in a custom set, then the change is static and a **blank** < > is displayed in the parentheses.

Operator Print Tests

TEST	DESCRIPTION
Quick Reference	Print pages to show operator panel keys and configuration menu.
Printer Demonstration	Print pages showing available highlighting, print speeds, print qualities, text placements, and bar codes.
Printer Configuration	Print page showing current values for printer parameters.
Firmware Information	Print page to verify code version in your printer.
Printer Adjustments	Set and verify current adjustment parameters for the printer.

Key Description

KEY LABEL	DESCRIPTION
Menu	Enter the CONFIGURATION MENU.
Quiet	Reduces the printer noise level and the throughput of the printer.
Micro ↑ Scroll ↑	Move the form up 1/144 of an inch, or view the previous Menu item.
Micro ↓ Scroll ↓	Move the form down 1/144 of an inch, or view the next Menu item.
Enter	Select the current Menu item, or begin a Test.
Display Address Return	Display the current printer address, or return to the previous Menu level.
Hex Print	Put the printer in Hex Print mode.
Park/ Path	Moves continuous forms out of the print area in Front Push, Rear Push, and Push-Pull modes, ejects the continuous forms in Rear Pull mode, or ejects cut-sheet forms in ASF or Manual Sheet modes, or selects the paper path.
Line Feed	Advance the form one print line, as defined by the current Lines Per Inch (LPI) setting.
Load/ Eject	Load form to the top of form position, eject form to the tear-off position, or eject the last form.
Form Feed	Advance the form to the next top of form position. (Not active for ASF and Manual Sheet modes)
Set Top of Form	Set the top of form position to the current location on the form. (Not active for ASF and Manual Sheet modes)
Start	Change the display from NOT READY to READY, exit the CONFIGURATION MENU, or begin a Test.
Stop	Change the display from READY to NOT READY, clear errors, turn off the alarm, or stop a Test.
Cancel Print	Send a Cancel Request to the host computer or stop a Test and return to READY.
Test	Enter the OPERATOR PRINT TESTS menu.




Part Number: 63H6166



Printed in the United States of America
on recycled paper containing 10%
recovered post-consumer fiber.

SA24-4411-01

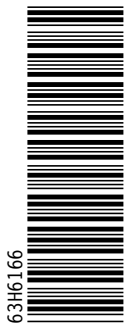

63H6166