

Power Systems

Power Supply

IBM

Power Systems


Power Supply

IBM


Remove Power Card

To remove a power card, complete the following steps:

1. Perform the following procedure on ONLY THE FRU(s) BEING SERVICED. The following images are generic and do not represent the literal location being serviced.
2. Modifying FRU locations which are not called out for service can have adverse effects on the system, INCLUDING SYSTEM OUTAGE AND LOSS OF DATA.
 1. Note the Power Card configuration of your System Control Unit.
 2. If your Power Card configuration contains two Power Cards, use the following image for reference:

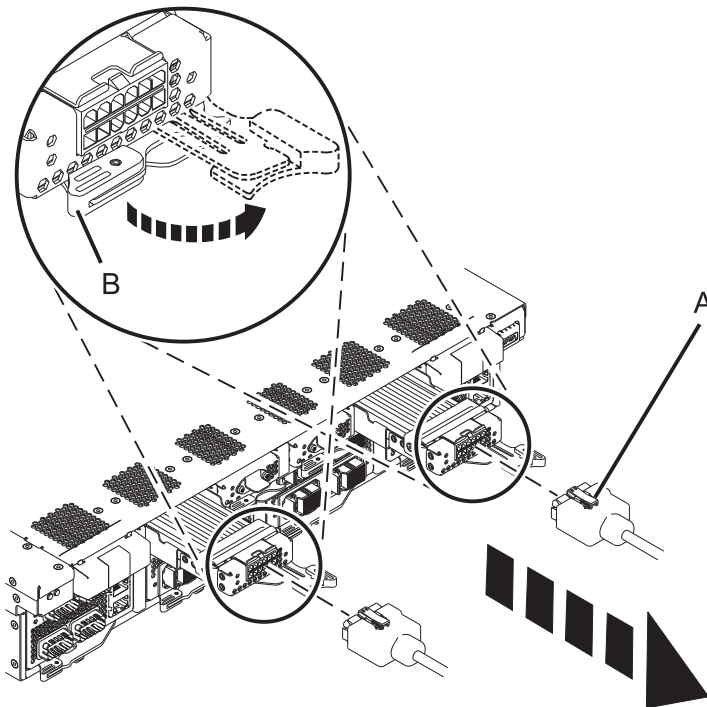

3. If your Power Card configuration contains four Power Cards, use the following image for reference:

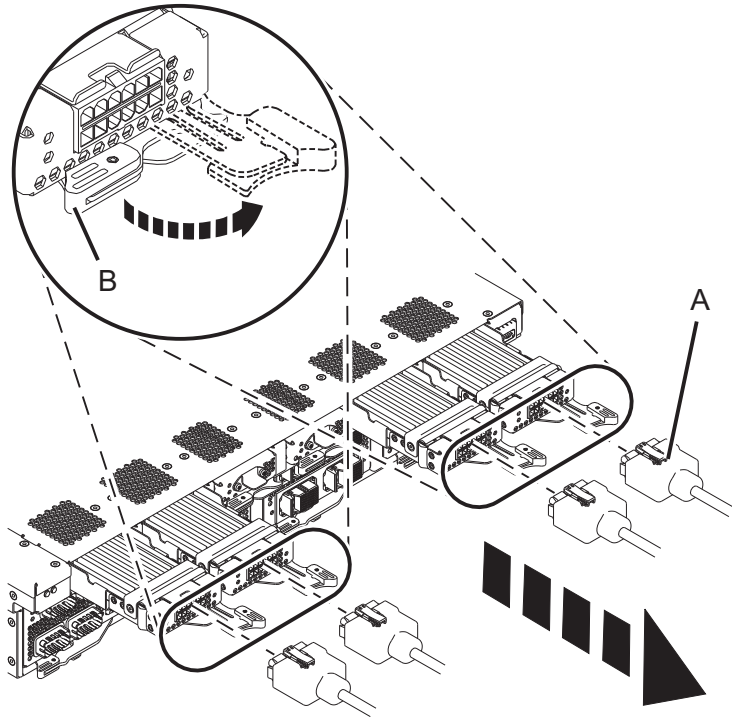


4. If present, pull the sliding latch lock out from under the UPIC cable latch.
5. Push down on clip (A) and pull the UPIC cable out from the back of the power card.
6. Open the latch (B) by pulling the lever to the right.
7. Slide the card out from the slot.

If performing this procedure from a management console, close this web page to continue with the procedure.


Install Power Card

To install a power card, complete the following steps:

1. Perform the following procedure on **ONLY THE FRU(s) BEING SERVICED**. The following images are generic and do not represent the literal location being serviced.
2. Modifying FRU locations which are not called out for service can have adverse effects on the system, **INCLUDING SYSTEM OUTAGE AND LOSS OF DATA**.
 1. Note the Power Card configuration of your System Control Unit.
 2. If your Power Card configuration contains two Power Cards, use the following image for reference:

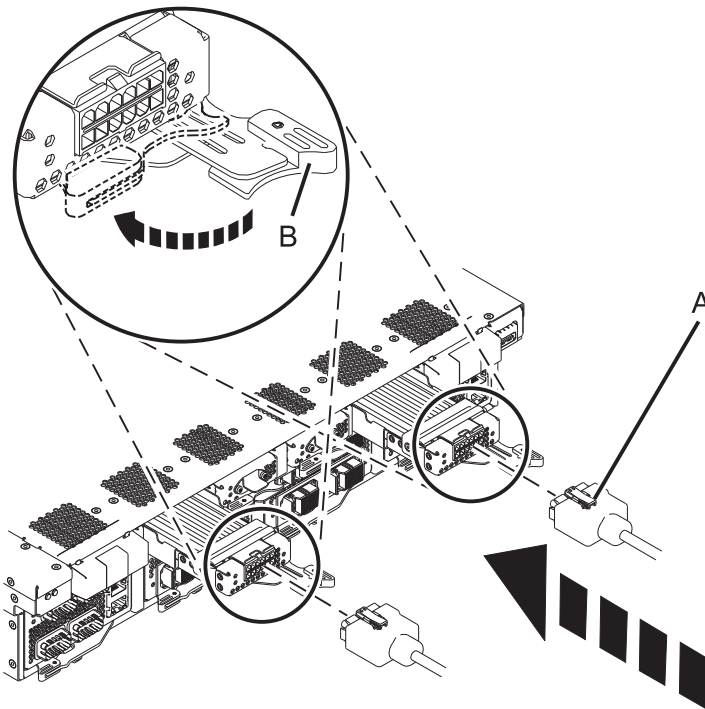

3. If your Power Card configuration contains four Power Cards, use the following image for reference:

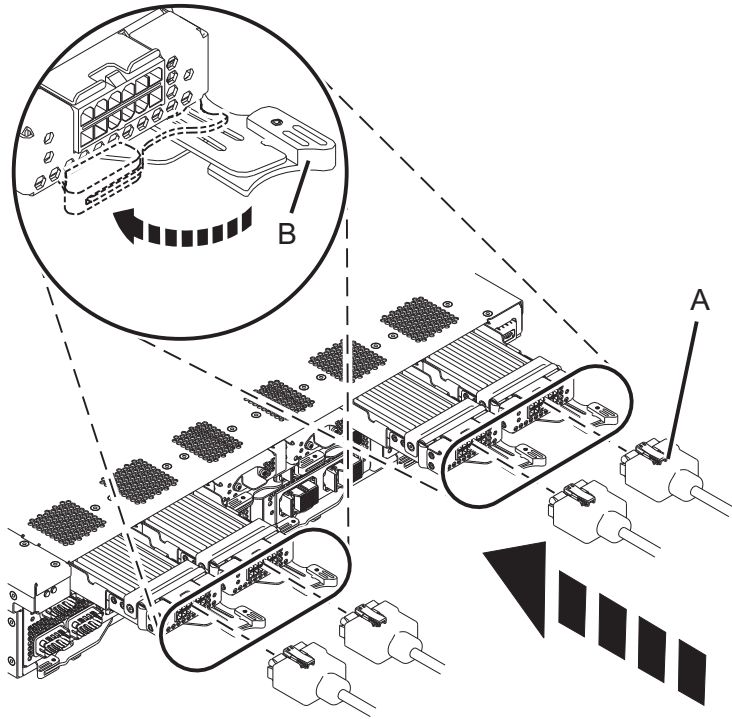

4. Align the power card **being serviced** with the slot and push the new power supply all the way in.
5. Secure the power card by closing the latch (**B**).
6. Connect the UPIC cable (**A**) to the back of the power card.
7. If present, push the sliding latch lock under the cable latch to prevent the cable from being accidentally removed.

If performing this procedure from a management console, close this web page to continue with the procedure.



Printed in USA