

Power Systems

Global FSP Interface Card

IBM

Power Systems


Global FSP Interface Card

IBM

Remove Global FSP Interface Card

To remove a global FSP interface card, complete the following steps:

1. Perform the following procedure on ONLY THE FRU(s) BEING SERVICED. The following images are generic and do not represent the literal location being serviced.
2. Modifying FRU locations which are not called out for service can have adverse effects on the system, INCLUDING SYSTEM OUTAGE AND LOSS OF DATA.
1. Disconnect the global FSP cable (A) from the global FSP interface card **being serviced** using the pull tab attached to each connector.
2. Disconnect the UPIC cable (B) from the global FSP interface card **being serviced** by pressing the locking tab, and pulling out.
3. Unlock the global FSP interface card **being serviced** by moving the locking lever (C) from left to right.
4. Remove the global FSP interface card **being serviced** by sliding it out of the system enclosure.

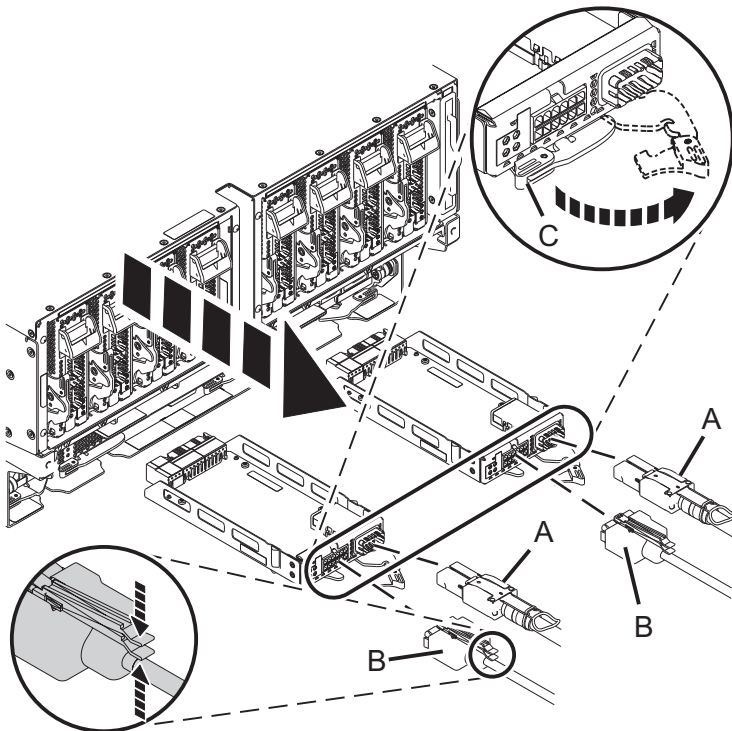


If performing this procedure from a management console, close this web page to continue with the procedure.

Install Global FSP Interface Card

To install a global FSP interface card, complete the following steps:

1. Perform the following procedure on **ONLY THE FRU(s) BEING SERVICED**. The following images are generic and do not represent the literal location being serviced.
2. Modifying FRU locations which are not called out for service can have adverse effects on the system, **INCLUDING SYSTEM OUTAGE AND LOSS OF DATA**.
1. With the locking lever in the unlocked position, install the global FSP interface card by inserting it into the system enclosure and sliding it into place
2. Lock the global FSP interface card by moving the locking lever (C) from right to left.
3. Reconnect the global FSP cable (A), pushing it in until it locks in place.
4. Lightly pull on the FSP cable from both attachment points to ensure it is locked into place. The cable should be firmly attached to the system.
5. Reconnect the UPIC cable (B), pushing it in until it locks in place.

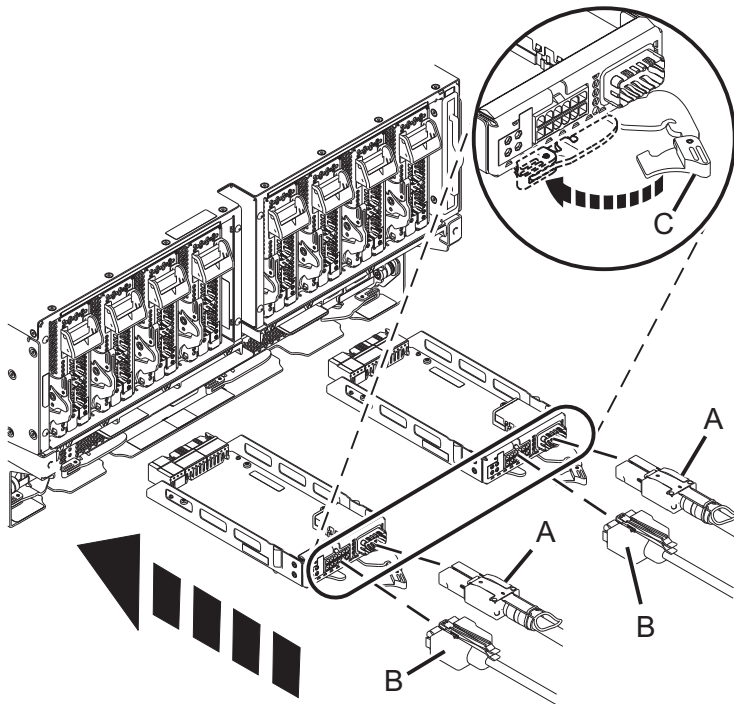

If performing this procedure from a management console, close this web page to continue with the procedure.



Printed in USA