

# *Compaq StorageWorks*

## **HSG80 Array Controller ACS Version 8.6**

CLI Reference Guide

First Edition (June 2001)  
Part Number: EK-G80CL-RA. A01  
**Compaq Computer Corporation**

© 2001 Compaq Computer Corporation.

Compaq, the Compaq logo, and StorageWorks Registered in U. S. Patent and Trademark Office.

Tru64 and OpenVMS are trademarks of Compaq Information Technologies Group, L.P. in the United States and other countries.

UNIX is a trademark of The Open Group in the United States and other countries.

All other product names mentioned herein may be trademarks of their respective companies.

Confidential computer software. Valid license from Compaq required for possession, use or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Compaq shall not be liable for technical or editorial errors or omissions contained herein. The information in this document is provided "as is" without warranty of any kind and is subject to change without notice. The warranties for Compaq products are set forth in the express limited warranty statements accompanying such products. Nothing herein should be construed as constituting an additional warranty.

Compaq service tool software, including associated documentation, is the property of and contains confidential technology of Compaq Computer Corporation. Service customer is hereby licensed to use the software only for activities directly relating to the delivery of, and only during the term of, the applicable services delivered by Compaq or its authorized service provider. Customer may not modify or reverse engineer, remove, or transfer the software or make the software or any resultant diagnosis or system management data available to other parties without Compaq's or its authorized service provider's consent. Upon termination of the services, customer will, at Compaq's or its service provider's option, destroy or return the software and associated documentation in its possession.

Printed in the U.S.A.

HSG80 Array Controller ACS Version 8.6  
CLI Reference Guide  
First Edition (June 2001)  
Part Number: EK-G80CL-RA. A01

# Contents

## Contents

### About This Guide

Text Conventions .....	vii
Symbols in Text .....	viii
Symbols on Equipment .....	viii
Rack Stability .....	ix
Getting Help .....	x
Compaq Technical Support .....	x
Compaq Website .....	x
Compaq Authorized Reseller .....	xi

### *Chapter 1*

#### CLI Command Introduction

CLI Overview .....	1-1
Using the CLI .....	1-2
Command Overview .....	1-2
Controller Commands .....	1-2
Device Commands .....	1-3
Selective Storage Presentation Commands .....	1-4
Storageset Commands .....	1-4
Partition Commands .....	1-5
Logical Unit Commands .....	1-5
Diagnostic and Utility Commands .....	1-6
Data Replication Manager (DRM) Commands .....	1-6
Getting Help .....	1-7
Entering CLI Commands .....	1-7

Command Syntax . . . . .	1-8
Changing the CLI Prompt . . . . .	1-9

*Chapter 2*

**CLI Command Descriptions**

CLI Command Descriptions . . . . .	2-1
------------------------------------	-----

**Glossary**

**Index**

## Figures

Figure 2-1. Location of node ID sticker on a BA370 enclosure. . . . . 2-111

## Tables

Table 1-1	Recall and Edit Command Keys . . . . .	1-8
Table 2-1	ADD UNITS Switches for New Containers . . . . .	2-33
Table 2-2	POWEROFF Switch Settings . . . . .	2-85
Table 2-3	SET <i>controller</i> Switches . . . . .	2-106
Table 2-4	EMU Set Point Temperatures . . . . .	2-119
Table 2-5	SET <i>unit-number</i> Switches for Existing Containers . . . . .	2-139

# About This Guide

This guide is designed to be used as step-by-step instructions for installation and as a reference for operation, troubleshooting, and future upgrades.

## Text Conventions

This document uses the following conventions to distinguish elements of text:

<b>Keys</b>	Keys appear in boldface. A plus sign (+) between two keys indicates that they should be pressed simultaneously.
USER INPUT	User input appears in a different typeface and in uppercase
<i>FILENAMES</i>	File names appear in uppercase italics.
Menu Options, Command Names, Dialog Box Names	These elements appear in initial capital letters.
COMMANDS, DIRECTORY NAMES, and DRIVE NAMES	These elements appear in upper case. <b>NOTE:</b> UNIX commands are case sensitive and will not appear in uppercase.
Type	When you are instructed to <i>type</i> information, type the information <b>without</b> pressing the <b>Enter</b> key.
Enter	When you are instructed to enter information, type the information and then press the <b>Enter</b> key.

## Symbols in Text

These symbols may be found in the text of this guide. They have the following meanings:



**WARNING:** Text set off in this manner indicates that failure to follow directions in the warning could result in bodily harm or loss of life.

---



**CAUTION:** Text set off in this manner indicates that failure to follow directions could result in damage to equipment or loss of information.

---

**IMPORTANT:** Text set off in this manner presents clarifying information or specific instructions.

---

**NOTE:** Text set off in this manner presents commentary, sidelights, or interesting points of information.

## Symbols on Equipment

These icons may be located on equipment in areas where hazardous conditions may exist.



Any surface or area of the equipment marked with these symbols indicates the presence of electrical shock hazards. Enclosed area contains no operator serviceable parts.

**WARNING:** To reduce the risk of injury from electrical shock hazards, do not open this enclosure.

---



Any RJ-45 receptacle marked with these symbols indicates a Network Interface Connection.

**WARNING:** To reduce the risk of electrical shock, fire, or damage to the equipment, do not plug telephone or telecommunications connectors into this receptacle.

---



Any surface or area of the equipment marked with these symbols indicates the presence of a hot surface or hot component. If this surface is contacted, the potential for injury exists.

**WARNING:** To reduce the risk of injury from a hot component, allow the surface to cool before touching.

---



Power supplies or systems marked with these symbols indicate the equipment is supplied by multiple sources of power.

**WARNING:** To reduce the risk of injury from electrical shock, remove all power cords to completely disconnect power from the system.

---



Any product or assembly marked with these symbols indicates that the component exceeds the recommended weight for one individual to handle safely.

**WARNING:** To reduce the risk of personal INJURY or damage to the equipment, observe local occupational health and safety requirements and guidelines for manual material handling.

---

## Rack Stability



**WARNING:** To reduce the risk of personal injury or damage to the equipment, be sure that:

- The leveling jacks are extended to the floor.
  - The full weight of the rack rests on the leveling jacks.
  - The stabilizing feet are attached to the rack if it is a single rack installations.
  - The racks are coupled together in multiple rack installations.
  - A rack may become unstable if more than one component is extended for any reason. Extend only one component at a time.
-

## Getting Help

If you have a problem and have exhausted the information in this guide, you can get further information and other help in the following locations.

### Compaq Technical Support

You are entitled to free hardware technical telephone support for your product for as long you own the product. A technical support specialist will help you diagnose the problem or guide you to the next step in the warranty process.

In North America, call the Compaq Technical Phone Support Center at 1-800-OK-COMPAQ. This service is available 24 hours a day, 7 days a week.

**NOTE:** For continuous quality improvement, calls may be recorded or monitored.

Outside North America, call the nearest Compaq Technical Support Phone Center. Telephone numbers for world wide Technical Support Centers are listed on the Compaq website. Access the Compaq website by logging on to the Internet at <http://www.compaq.com>.

Be sure to have the following information available before you call Compaq:

- Technical support registration number (if applicable)
- Product serial numbers
- Product model names and numbers
- Applicable error messages
- Add-on boards or hardware
- Third-party hardware or software
- Operating system type and revision level
- Detailed, specific questions

### Compaq Website

The Compaq website has latest information on this product as well as the latest drivers. You can access the Compaq website by logging on to the Internet at <http://www.compaq.com/storage>.

## **Compaq Authorized Reseller**

For the name of your nearest Compaq Authorized Reseller:

- In the United States, call 1-800-345-1518.
- In Canada, call 1-800-263-5868.
- Elsewhere, see the Compaq website for locations and telephone numbers.



# Chapter 1

## CLI Command Introduction

Command line interpreter (CLI) commands are used to interact with the controller to establish various controller parameters and storagesets. These CLI commands can be entered into the controller by any of the following means:

- A local terminal connected to the maintenance port of the controller
- A remote connection by way of the host system terminal
- The StorageWorks Command Console (SWCC)

This chapter provides a general description of the CLI interface and an outline of how to use this interface. Chapter 2 contains a description of each CLI command with the correct syntax and examples of usage.

### CLI Overview

The CLI is one of the user interfaces through which you control your Compaq StorageWorks array controller in the storage subsystem (the CLI being the most direct). The CLI commands allow you to manage the subsystem by viewing and modifying the configuration of the controller and the devices attached to them. You can also use the CLI to start controller diagnostic and utility programs.

While the CLI provides the most detailed level of subsystem control, a graphical user interface (GUI) is available for use with the CLI. The GUI that is designed for use in the application of CLI commands is called the StorageWorks Command Console (SWCC). The SWCC replicates most of the functions available within the CLI in graphic form and provides a user-friendly method of executing CLI commands.

CLI commands for configuring and viewing the controllers use the relative terms “this controller” and “other controller.” See Text Conventions on page vii for an explanation of these terms.

## Using the CLI

Access the CLI through the following methods:

- Connecting a PC or local terminal to the maintenance port on the front of the controller.
- Using the diagnostic utility protocol (DUP) utility from a system terminal, enable a remote connection to the controller. After the controller is initially configured and made visible to the host, other configuration tasks can be performed through this remote connection.
- Using the SWCC by way of a PC setup on the subsystem. The SWCC can be used to perform most of the CLI commands that the local terminal can perform.

## Command Overview

CLI commands are divided into categories based on the options or structures they control. The following sections list these command categories.

### Controller Commands

Controller commands configure the maintenance terminal characteristics, CLI prompt, and so forth. These commands are also used to shut down and restart the controller. There are two types of controller commands: general and failover.

The CLI commands that pertain to the controllers in a general way are:

- CLEAR\_ERRORS
  - CLI
  - INVALID\_CACHE
- CONFIGURATION
  - RESET
  - RESTORE
  - SAVE

- EXIT
- HELP
- POWEROFF
- RESTART
- SELFTEST
- SET
- SHOW
- RUN
- SHUTDOWN

The CLI commands controlling the Transparent Failover of a controller pair are:

- SET FAILOVER
- SET MULTIBUS\_FAILOVER
- SET NOFAILOVER
- SET NOMULTIBUS\_FAILOVER

### Device Commands

Device commands create and configure containers made from physical devices attached to the controller. There are two types of device commands: general and spareset/failedset.

The CLI Commands that allow you to add and configure physical devices in general are:

- ADD DISK
- ADD PASSTHROUGH
- CLEAR ERRORS
  - LOST\_DATA
  - UNKNOWN
  - UNWRITEABLE\_DATA
- DELETE
- INITIALIZE
- LOCATE

- RENAME
- SET

The CLI commands that change sparesets and failedsets include:

- ADD SPARESET
- DELETE FAILEDSET
- DELETE SPARESET
- SET FAILEDSET
- SHOW FAILEDSET

### Selective Storage Presentation Commands

Selective Storage Presentation commands enable or disable access to individually selected units from host and controller ports. Paths can be enabled or disabled either all inclusively or specifically on a per-path basis during the addition of new units or as a modification of existing units.

The CLI commands that pertain to the Selective Storage Presentation feature include:

- ADD UNITS (the ENABLE\_ACCESS\_PATH switch)
- ADD UNITS (the DISABLE\_ACCESS\_PATH switch)
- SET unit-number (the ENABLE\_ACCESS\_PATH switch)
- SET unit-number (the DISABLE\_ACCESS\_PATH switch)
- ADD CONNECTIONS (the UNIT\_OFFSET switch)
- SET connection-name (the UNIT\_OFFSET switch)

### Storageset Commands

Storageset commands create and configure complex containers made from groups of device containers. These commands group device containers together and allow them to be handled as single units. There are four types of storagesets: stripesets, RAIDsets, striped-mirrorsets, and mirrorsets.

The CLI commands that pertain to storagesets include:

- ADD MIRRORSET
- ADD RAIDSET

- ADD STRIPESSET
- DELETE
- INITIALIZE
- LOCATE
- MIRROR
- REDUCE
- RENAME
- SET
- SHOW
- UNMIRROR

### **Partition Commands**

Partition commands create multiple logical disk units from the same container.

The CLI Commands that pertain to partitions include:

- CREATE\_PARTITION
- DESTROY\_PARTITION

### **Logical Unit Commands**

Logical unit commands create and optimize access to logical units made from any container type.

The CLI commands that pertain to units include:

- ADD CONCATSETS
- ADD SNAPSHOT\_UNITS
- DELETE
- LOCATE
- RENAME
- RETRY\_ERRORS UNWRITEABLE\_DATA
- SET
- SHOW

## Diagnostic and Utility Commands

Diagnostic and utility commands perform general controller support functions.

The commands that pertain to the diagnostics and utilities include:

- DIRECTORY
- RUN

## Data Replication Manager (DRM) Commands

DRM uses the peer-to-peer remote copy function of the HSG80 controller to achieve data replication. HSG80 controller pairs at the initiator site are connected to a partner HSG80 controller pair at the target site. Remote copy sets are created from units at the initiator and target sites. These remote copy sets are mirrors of each other.

The HSG80 controllers provide failover and failback capabilities in case of failures. Failover makes the data available at the target site after a failure. Failback is used to move data operations back to the initiator site once the site is back online.

The following CLI commands are used to configure a DRM environment and for failover and failback procedures include

**NOTE:** All DRM commands are hidden and inoperative until the controller pair is put into remote copy mode by specifying the *REMOTE\_COPY* switch of the *SET controller* command.  
DRM applies only to the HSG80 array controller running ACS version 8.6P.

The CLI commands used to configure a DRM environment and for failover and failback procedures include:

- ADD ASSOCIATIONS
- ADD REMOTE\_COPY\_SET
- DELETE *association-set-name*
- DELETE *remote-copy-set-name*
- SET *association-set-name*
- SET *remote-copy-set-name*
- SITE FAILOVER

## Getting Help

To get help with using the CLI commands, enter `HELP` at the CLI prompt. The resulting display shows an overview of the CLI Help System. To obtain help with a specific command or to determine what switches are available with a command, enter as much of the command syntax that is known, followed by a space and a question mark.

For example, to get information on the switches used with the `SET THIS_CONTROLLER` command, enter:

```
SET THIS_CONTROLLER=?
```

To see what is allowed for a prompt, enter the following:

```
SET THIS PROMPT=?
```

## Entering CLI Commands

Use the following tips and techniques for the entering of CLI commands:

- Commands are *not* case-sensitive.
- For most commands, only enter enough of the command to make the command unique. For example, `SHO` is the same as entering `SHOW`.
- The controller processes each command in sequence, regardless of the number of commands entered. A controller experiencing heavy data I/O might respond slowly to CLI commands.

Specific keys or a combination of keys allow the ability to recall and edit the last four commands. This feature can save time and help prevent mistakes when entering similar commands during the configuration process. Table 1-1 lists the keys used to recall and edit commands.

Table 1-1 Recall and Edit Command Keys

Key	Function
<b>Up Arrow</b> key or <b>Ctrl+B</b> keys, <b>Down Arrow</b> key or <b>Ctrl+N</b> keys	Steps forwards or backward through the four most recent CLI commands.
<b>Left Arrow</b> key or <b>Ctrl+D</b> keys, <b>Right Arrow</b> key or <b>Ctrl+F</b> keys	Moves the cursor left or right in a command line.
<b>Ctrl+E</b> keys	Moves the cursor to the end of the line.
<b>Ctrl+H</b> keys or <b>Backspace</b> key	Moves the cursor to the beginning of the line.
<b>Ctrl+J</b> keys or <b>Linefeed</b> key	Deletes the word to the left of the cursor.
<b>Ctrl+U</b> keys	Deletes all characters on the same line as the cursor.
<b>Ctrl+A</b> keys or <b>F14</b> key	Toggles between insert and overstrike mode: <ul style="list-style-type: none"> <li>■ The default setting is insert mode allowing you to insert characters at the cursor location (moving the existing characters to the right).</li> <li>■ Overstrike mode replaces existing characters. The CLI prompt returns to insert mode at the beginning of each line.</li> </ul>
<b>Ctrl+R</b> keys	Recalls the contents of the command line. This function is especially helpful if the system issues a message that interrupts your typing.

## Command Syntax

Each CLI command is described using the following structure:

COMMAND <PARAMETER\_NAME=*parameter*> SWITCHES

- **COMMAND**—A word or phrase expressed as a verb that is used to instruct the controller what to do. Commands are represented in this guide in capitalized form.
- **PARAMETER\_NAME**—The name of a parameter, followed by an equal sign and the parameter variable. If a specific command specifies parameter names, they must be entered in the command string. Parameter names are represented in this guide in capitalized form.
- *parameter*—When required in the command, parameters are used as one or more words or phrases that supply necessary information to support the action of the COMMAND. Note that not all CLI commands require parameters. Parameters are represented in this guide as lowercase, italicized text.

- *SWITCHES*—An optional word or phrase that modifies the command/parameter string. Not all CLI commands require switches. Switches are represented in this guide as capitalized, italicized text.

## Changing the CLI Prompt

Change the CLI prompt display by using the SET *controller PROMPT* command. Enter a 1- to 16- character string as the new prompt. For example, the prompt could be changed to indicate the array controller type, such as “HSG>.”



# *Chapter 2*

## CLI Command Descriptions

The previous chapter provided a general description of the CLI interface and an outline of how to use the interface. This section contains the CLI command descriptions which contain the description, full syntax, and examples of the use of each command available on the CLI interface.

### CLI Command Descriptions

This section contains the descriptions of the available CLI commands used with the ACS versions 8.6F, 8.6G, 8.6P, and 8.6S software. Each command is described using the following format:

- Command name and brief description
- Syntax needed to enable command
- Parameters needed (if any) to further specify the command
- Switches needed (if any) to modify the command
- Example(s) to illustrate the command usage
- A “See Also” section to cross-reference to others with similar usage

## ADD ASSOCIATIONS

An association set is a group of remote copy sets that shares common attributes. This command adds a one-member association set (that is, an association set consisting of one remote copy set) to the controller pair's configuration. Additional remote copy sets can be added to the association set with the SET *associations* command.

**NOTE:** This command works only in a Data Replication Manager (DRM) environment and requires an HSG80 array controller with ACS version 8.6P code. Like all DRM commands, use of this command is heavily restricted. Refer to *Compaq StorageWorks Data Replication Manager HSG80 ACS Version 8.6P Operations Guide* for examples of usage.

This command is valid only on the node on which the Initiator resides (where remote copy sets are configured).

This command is rejected if the specified remote copy set is unknown to the controller pair.

### Syntax

```
ADD ASSOCIATIONS association-set-name  
ADD ASSOCIATIONS remote-copy-set-name
```

### Parameters

The following parameters are required for the ADD ASSOCIATIONS command:

- *association-set-name*
- *remote-copy-set-name*

These parameters are described in the following paragraphs:

#### *association-set-name*

The name can be any character string assigned to the association set.

**NOTE:** Association sets cannot be renamed with the RENAME command. If the wrong name is entered, the association set must be deleted and then added again.

The *association-set-name* must start with a letter (A through Z) and may consist of a maximum of nine characters including letters A through Z, numbers 0 through 9, periods (.), dashes (-), or underscores (\_).

#### *remote-copy-set-name*

The name of the first member of the association set. This name can be any character string.

### Switches

There are no switches associated with this command.

### Examples

To create an association set, AS3, from remote copy sets RSC1 and RSC2, enter:

```
ADD ASSOCIATIONS AS3 RSC1  
SET AS3 ADD=RSC2
```

### See Also

```
ADD REMOTE_COPY_SETS  
SET associations
```

## ADD CONCATSETS

Creates a specialized volume, called a storageset expansion or concatset (short for concatenation set), from a storageset that has been given a unit number. Another storageset can then be added to the concatset by the SET *CONCATSETS* command.



**CAUTION:** This command should only be executed with host operating systems that support dynamic volume expansion. If the operating system cannot handle one of its disks increasing in size, use of this command could make data inaccessible.

### Syntax

ADD CONCATSETS *concatset-name storageset-name*

### Parameters

The following parameters are required for the ADD CONCATSETS command:

- *concatset-name*
- *storageset-name*

These parameters are described in the following paragraphs:

*concatset-name*

Assigns a name to the concatenation set, or concatset.

The *concatset-name* must start with a letter (A through Z) and may consist of a maximum of nine characters including letters A through Z, numbers 0 through 9, periods (.), dashes (-), or underscores (\_).

*storageset-name*

Designates the first storageset to be a member of the concatset.

### Switches

There are no switches associated with this command.

## Examples

To expand the capacity of unit D0, which consists of stripeset Stripe1, by adding another stripeset, Stripe2, enter:

```
ADD CONCATSETS C1 STRIPE1
SET C1 ADD=STRIPE2
```

## See Also

```
DELETE concatset-name
SET concatset-name
SHOW CONCATSETS
SHOW concatset-name
```

## ADD CONNECTIONS

Each path between a Fibre Channel adapter in a host computer and an active host port on a controller is a connection.

This command adds the specified host connection to the table of known connections. This table is maintained in the controller's memory. The maximum table length is 96 connections; if the table contains 96 entries, new connections cannot be added unless some old ones are deleted.

There are two mechanisms for adding a new connection to the table:

1. Physically connecting a host adapter to a controller host port. During Fibre Channel initialization, the controller becomes aware of the connection and adds it to the table. This physical discovery of connections occurs at the point when a host adapter is plugged in to a controller port and after issuing a RESTART command. New connections discovered through physical connection are assigned a default connection name by the controller. The default connection name is of the form !NEWCONnn.

**NOTE:** Certain host conditions, such as a power cycle, that disturb the state of the switched fabric may cause a connection to reappear in the table. The connection will be assigned a default connection name.

2. Adding a connection through the ADD CONNECTIONS command.

**NOTE:** ADD CONNECTIONS will add an entry to the table whether the connection physically exists or not. The table can be completely filled up with fictitious connections.

### Syntax

```
ADD CONNECTIONS connection-name HOST_ID=host-id ADAPTER_ID=adapter-id  
CONTROLLER=controller PORT=port
```

### Parameters

The following parameters are required to the ADD CONNECTIONS command:

- *connection-name*
- *HOST\_ID*
- *ADAPTER\_ID*
- *CONTROLLER*
- *PORT*

These parameters are described in the following paragraphs:

*connection-name*

The name that will be assigned to the host connection. The connection name can be any character string, with one exception: the name cannot be in the form of a default connection name. The form of a default connection name is !NEWCONnn.

The default connection name is assigned automatically by the controller when the connection is physically made between a host adapter and a controller port. Default connection names are assigned only by the controller.

HOST\_ID=*host-id*

HOST\_ID is the parameter name for the *host-id* variable, which is the worldwide name (WWN) of the host. WWN is a 16-character hexadecimal number. The hyphens are not necessary, but are recommended to avoid mistakes in entering the number. The HOST\_ID parameter name must be entered, followed by an equal sign, followed by the WWN of the host.

For example, to specify a WWN of AAAA-BBBB-CCCC-DDDD, type:

```
HOST_ID=AAAA-BBBB-CCCC-DDDD
```

ADAPTER\_ID=*adapter-id*

ADAPTER\_ID is the parameter name for the *adapter-id* variable, which is the worldwide name (WWN) of the host Fibre Channel adapter. WWN is a 16-character hexadecimal number. The hyphens are not necessary, but are recommended to avoid mistakes in entering the number. The ADAPTER\_ID parameter name must be entered, followed by an equal sign, followed by the WWN of the host bus adapter.

For example, to specify a WWN of FFFF-GGGG-BBBB-9876, type:

```
ADAPTER_ID=FFFF-GGGG-BBBB-9876
```

**NOTE:** The worldwide name of the host and adapter are sometimes the same. This is a characteristic of the adapter.

CONTROLLER=*controller*

CONTROLLER is the parameter name for the *controller* variable, which specifies which controller the host is to connect through. The choices are THIS\_CONTROLLER, which can be shortened to THIS, and OTHER\_CONTROLLER, which can be shortened to OTHER.

PORT=*port*

PORT is the parameter name for the *port* variable that specifies which host port (1 or 2) the connection is on.

## Switches

The following switches are available with the ADD CONNECTION command:

- *OPERATING\_SYSTEM*
- *RESERVATION\_STYLE*
- *UNIT\_OFFSET*

These switches are described in the following paragraphs.

*OPERATING\_SYSTEM=OS\_name*

Specifies the operating system of the host. The *OPERATING\_SYSTEM* switch tailors the controllers behavior for use with a particular operating system. Enter a question mark after *OPERATING\_SYSTEM* to see the supported operating systems, as follows:

```
ADD CONNECTIONS SERVER1 OPERATING_SYSTEM=?
```

The response for this command is a list of abbreviations for the supported operating systems.

*RESERVATION\_STYLE=CONNECTION\_BASED (default)*

*RESERVATION\_STYLE=HBA\_PORT\_ID\_BASED*

Selection of a *RESERVATION\_STYLE* should be based upon the capabilities of the host operating system. See the OS kit for more details. SCSI persistent reservations are processed differently by the HSG80 based upon the *RESERVATION\_STYLE*. Normal SCSI reservations ( not persistent) are always treated as *CONNECTION\_BASED*.

When set to *HBA\_PORT\_ID\_BASED*, a single persistent reservation command is propagated to all HSG80 controller ports, thereby enabling the host to access the unit over any available path.

When set to *CONNECTION\_BASED*, the persistent reservation is only valid for the port on which it is received, thereby limiting the host access to those paths that have been explicitly reserved.

---

**IMPORTANT:** If a particular host prefers either the *CONNECTION\_BASED* or *HBA\_PORT\_ID\_BASED* reservation style, all the connections to that particular host must have identical reservation style settings.

The most important advantage of this mechanism is allowing various hosts, with different reservation style requirements, to be connected to the same HSG80 controllers in a SAN environment.

---

*UNIT\_OFFSET=n*

*UNIT\_OFFSET* is a decimal value (*n*) that establishes the beginning of the range of units that a host connection can access. This offset defines and restricts host connection access to a contiguous group of unit numbers.

In transparent failover mode, host connections on port 1 default to an offset of 0; port 1 connections can see units 0 through 99. Host connections on port 2 default to an offset of 100; port 2 connections can see units 100 through 199.

In multiple-bus failover mode, the default offset is 0 for all host connections.

**NOTE:** If a controller pair is switched from transparent failover mode to multiple-bus failover mode, the unit offsets for transparent mode remain in effect.

The LUN number equals the unit number minus the offset:

LUN number = unit number – offset

- ❑ Logical unit number or LUN number = the logical unit number presented to the host connection.
- ❑ Unit number = the number assigned to the unit in the ADD UNITS command. This is the number by which the unit is known internally to the controllers.

For example, a system has three host connections, each of which can see 8 LUNs. Each connection designates its LUNs as 0 through 7. To define for each of these connections a block of 8 units, set the offset for each connection, as follows:

```
CLI>SET SERVER1 UNIT_OFFSET=0
CLI>SET SERVER2 UNIT_OFFSET=10
CLI>SET SERVER3 UNIT_OFFSET=120
```

(It is not necessary to use offsets that are divisible by 10, but it makes things simpler.)

The effect of these offset assignments will be as follows:

- ❑ Server1 will access units D0 through D7, which it will see as LUNs 0 through 7.
- ❑ Server2 will access units D10 through D17, which it will see as LUNs 0 through 7.
- ❑ Server3 will access units D120 through D127, which it will see as LUNs 0 through 7.

There is one additional factor to consider when assigning unit numbers and offsets. If the *SCSI\_VERSION* qualifier of the SET THIS/OTHER CONTROLLER command is set to SCSI-3, the command console LUN (CCL) is presented as LUN 0 to every connection, superseding any unit assignments. For more information see the ADD UNITS command.

## Examples

This example shows how to add an entry for a connection named George to the table of known connections, with the indicated host and adapter worldwide names, on port 2 of “this controller,” and with reservations checked using the port\_id of the host bus adapter.

```
ADD CONNECTIONS GEORGE HOST_ID=1000-0000-C920-1234
ADAPTER_ID=1000-0000-C920-5678 CONTROLLER=THIS PORT=2
RESERVATION_STYLE=HBA_PORT_ID_BASED
```

## See Also

ADD UNITS  
DELETE *connections*  
SET *connection-name*

## ADD DISKS

Names a disk drive and adds it to the controller configuration. This command is typically used when disk drives are added to a previously configured subsystem. During initial setup, the entire disk set is customarily added to the controller's configuration through the CONFIG utility.

**NOTE:** The controller supports a maximum of 84 storage devices, even though more than 84 target IDs are available. Do not exceed the maximum number of devices in the subsystem.

### Syntax

ADD DISKS *disk-name scsi-port-target-lun*

### Parameters

The following parameters are required for the ADD DISKS command:

- *disk-name*
- *scsi-port-target-lun*

These parameters are described in the following paragraphs:

#### *disk-name*

Assigns a name to the disk device. This *disk-name* is then used with the ADD UNITS command to create a logical unit. It is also used as a parameter in the adding of a storageset.

The disk name must start with a letter (A through Z) and may consist of a maximum of nine characters including letters A through Z, numbers 0 through 9, periods (.), dashes (-), or underscores (\_).

A disk drive is commonly named DISK<sub>*ptll*</sub>, where *ptll* is the disk Port-Target-LUN address. Although other naming conventions are acceptable, this naming convention presents the type of disk drive and the disk drive SCSI location.

#### *scsi-port-target-lun*

Indicates the SCSI device PTL address. Place one space between the port number, target number, and the LUN number when entering the PTL address.

- *port*—Designates the SCSI device port number, from 1 to 6, on which the disk resides.

- ❑ *target*—Designates the SCSI target ID of the disk on the port. Valid device target IDs for single controller configurations are 00–15, excluding ID 7. Valid device target IDs for dual controller configurations are 00–15, excluding IDs 6 and 7.
- ❑ *lun*—Indicates the LUN of the disk drive and is always zero.

The parameters *port*, *target*, and *lun* must be entered with at least one space between them. Leading zeroes can be excluded.

## Switches

The following switches are available with the ADD DISKS command:

- *TRANSFER\_RATE\_REQUESTED*
- *TRANSPORTABLE* and *NOTTRANSPORTABLE*

These switches are described in the following paragraphs.

*TRANSFER\_RATE\_REQUESTED=ASYNCHRONOUS*  
*TRANSFER\_RATE\_REQUESTED=DEFAULT*  
*TRANSFER\_RATE\_REQUESTED=20MHZ (default)*  
*TRANSFER\_RATE\_REQUESTED=10MHZ*  
*TRANSFER\_RATE\_REQUESTED=5MHZ*

Specifies the maximum data transfer rate at which the controller is to communicate with the disk drive. The transfer rate might need to be limited to accommodate long cables between the controllers and the device.

*TRANSPORTABLE*

*NOTTRANSPORTABLE (default)*

Indicates whether a disk drive can be accessed exclusively by StorageWorks controllers or can be used by non-StorageWorks systems:

- ❑ *TRANSPORTABLE* = disk drives do not contain any metadata or restricted areas. Therefore, transportable disks forfeit the advantage metadata provides, but can be moved to a non-StorageWorks environment with their data intact. Disks that are to be used in storagesets cannot be set as transportable.
- ❑ *NOTTRANSPORTABLE* = the controller makes a small portion of the disk inaccessible to the host. This restricted space is used to store administrative information (metadata) used to improve data reliability, error detection, and the ability to recover data. As a result of this metadata, only StorageWorks controllers can retrieve data from non-transportable devices.

If you specify the *NOTTRANSPORTABLE* switch and there is no metadata on the unit, the unit must be initialized. If you specify *TRANSPORTABLE* for a disk that was originally initialized as a *NOTTRANSPORTABLE*, you should initialize the disk.

**NOTE:** Compaq recommends you avoid using transportable disks unless there is no other way to move the data.

### Examples

To add DISK10000 at port 1, target 0, LUN 0, enter:

```
ADD DISKS DISK10000 1 0 0
```

To add DISK40200 as a transportable disk drive to port 4, target 2, LUN 0, enter:

```
ADD DISKS DISK40200 4 2 0 TRANSPORTABLE
```

To add a disk drive named DISK30200 as a non-transportable disk to port 3, target 2, LUN 0 and set the data transfer rate to 10 MHz, enter the following on one line:

```
ADD DISKS DISK30200 3 2 0 NOTTRANSPORTABLE TRANSFER_RATE_REQUESTED=10MHZ
```

To create a host-addressable unit after the disk is added, enter:

```
INITIALIZE DISK40200
ADD UNITS D199 DISK40200
```

### See Also

```
ADD PASSTHROUGH
ADD UNITS
DELETE container-name
INITIALIZE
LOCATE
SHOW DISKS
SHOW DEVICES
SHOW PASSTHROUGH
SET container-name
```

## ADD MIRRORSETS

Names a mirrorset and adds it to the controller configuration. Mirrorsets are often referred to as RAID 1 storagesets. The data capacity of a RAID 1 is determined by the storage size of the smallest member (base member size).

### Syntax

```
ADD MIRRORSETS mirrorset-name disk-name1 [disk-nameN]
```

### Parameters

The following parameters are required for the ADD MIRRORSETS command:

- *mirrorset-name*
- *disk-name1*

These parameters are described in the following paragraphs:

*mirrorset-name*

Assigns a name to the mirrorset container. This is the name used with the ADD UNITS command to identify the mirrorset as a host-addressable unit.

The *mirrorset-name* must start with a letter (A through Z) and may consist of a maximum of nine characters including letters A through Z, numbers 0 through 9, periods (.), dashes (-), or underscores (\_).

A mirrorset is commonly named MIRR*n*, where *n* is a sequentially assigned, unique identifier. Other naming conventions are acceptable, but this naming convention presents both the type of container and a unique identifier for the container in an intuitive manner.

*disk-name1* [*disk-nameN*]

Identifies the disk drives making up the mirrorset. A mirrorset may contain one to six disk drives.

### Switches

The following switches are available with the ADD DISKS command:

- *COPY*
- *POLICY* and *NOPOLICY*

## ■ *READ\_SOURCE*

These switches are described in the following paragraphs.

*COPY=FAST*

*COPY=NORMAL* (default)

Sets the speed at which the controller copies data to a new member from normal mirrorset members:

- ❑ Specify *COPY=FAST* to allow the creation of mirrored data to take precedence over other controller operations. When you specify *COPY=FAST*, the controller uses more resources to create the mirrored data and copying takes less time. However, overall controller performance is reduced.
- ❑ Specify *COPY=NORMAL* when operations performed by the controller should take priority over the copy operation. If you specify *COPY=NORMAL* creating the mirrored data has a minimal impact on performance.

*POLICY=BEST\_FIT*

*POLICY=BEST\_PERFORMANCE* (default)

*NOPOLICY*

Sets the selection criteria the controller uses to choose a replacement disk from the spareset when a mirrorset member fails.

- ❑ Specify *POLICY=BEST\_FIT* to choose a replacement disk drive from the spareset that equals or exceeds the base member size (smallest disk drive at the time the mirrorset was initialized). If there is more than one disk drive in the spareset that meets the criteria, the controller selects a disk drive with the best performance.
- ❑ Specify *POLICY=BEST\_PERFORMANCE* to allow the software to choose a replacement disk drive from the spareset with the best performance. The controller attempts to select a disk on a different port than existing mirrorset members. If more than one disk drive in the spareset matches the best performance criteria, the controller selects a disk drive that equals or exceeds the base member size.
- ❑ Specify *NOPOLICY* to prevent the controller from automatically replacing a failed disk device. The mirrorset operates in a reduced state until a *POLICY=BEST\_FIT* or *POLICY=BEST\_PERFORMANCE* is selected or a member is manually placed in the mirrorset (see page 2-125).

*READ\_SOURCE=LEAST\_BUSY* (default)

*READ\_SOURCE=ROUND\_ROBIN*

Selects the mirrorset member used by the controller to satisfy a read request.

- ❑ Specify *READ\_SOURCE=LEAST\_BUSY* to direct read requests to the mirrorset disk with the least amount of work in its queue. If multiple disks have equally short queues, the controller queries normal disks for each read request as it would when *READ\_SOURCE=ROUND\_ROBIN* is specified.
- ❑ Specify *READ\_SOURCE=ROUND\_ROBIN* to sequentially direct read requests to each local mirrorset disk. The controller equally queries all normal disks for each read request.

### Examples

To create a mirrorset named MIRR1 consisting of disks DISK10000, DISK20100, and DISK30200, enter:

```
ADD MIRRORSETS MIRR1 DISK10000 DISK20100 DISK30200
```

To create a host-addressable unit after the mirrorset MIRR1 has been created, enter:

```
INITIALIZE MIRR1  
ADD UNITS D104 MIRR1
```

### See Also

```
ADD DISKS  
ADD UNITS  
DELETE container-name  
INITIALIZE  
MIRROR  
REDUCE  
SHOW mirrorset-name  
SHOW MIRRORSETS  
SHOW STORAGESETS  
UNMIRROR
```

## ADD PASSTHROUGH

Names a passthrough devices and adds it to the controller configuration. This command is typically used when passthrough devices are added to a previously configured subsystem. During initial setup, the entire device set is customarily added to the controller's configuration through the CONFIG utility.

**NOTE:** The controller supports a maximum of 84 storage devices, even though more than 84 target IDs are available. Do not exceed the maximum number of devices in the subsystem.

### Syntax

ADD PASSTHROUGH *passthrough-name scsi-port-target-lun*

### Parameters

The following parameters are required for the ADD PASSTHROUGH command:

- *passthrough-name*
- *scsi-port-target-lun*

These parameters are described in the following paragraphs:

#### *passthrough-name*

Assigns a name to the passthrough device. This container name is then used with the ADD UNITS command to create a logical unit.

The passthrough device must start with a letter (A through Z) and may consist of a maximum of nine characters including letters A through Z, numbers 0 through 9, periods (.), dashes (-), or underscores (\_).

A passthrough device is commonly named *PASSptll*, where *ptll* is the disk Port-Target-LUN address. Although other naming conventions are acceptable, this naming convention presents the type of passthrough device and the passthrough device SCSI location.

#### *scsi-port-target-lun*

Indicates the SCSI device PTL address. Place one space between the port number, target number, and the LUN number when entering the PTL address.

- *port*—Designates the SCSI device port number, from 1 to 6, on which the passthrough device resides.

- ❑ *target*—Designates the SCSI target ID of the passthrough device on the port. Valid device target IDs for single controller configurations are 00–15, excluding ID 7. Valid device target IDs for dual controller configurations are 00–15, excluding IDs 4 through 7.
- ❑ *lun*—Indicates the LUN of the passthrough device.

The parameters *port*, *target*, and *lun* must be entered with at least one space between them. Leading zeroes can be excluded.

## Switches

The following switch is available with the ADD DISKS command:

### ■ *TRANSFER\_RATE\_REQUESTED*

These switches are described in the following paragraphs.

*TRANSFER\_RATE\_REQUESTED=ASYNCHRONOUS*  
*TRANSFER\_RATE\_REQUESTED=DEFAULT*  
*TRANSFER\_RATE\_REQUESTED=20MHZ (default)*  
*TRANSFER\_RATE\_REQUESTED=10MHZ*  
*TRANSFER\_RATE\_REQUESTED=5MHZ*

Specifies the maximum data transfer rate at which the controller is to communicate with the passthrough device. The transfer rate might need to be limited to accommodate long cables between the controllers and the device.

## Examples

To add PASS10200 at port 1, target 2, LUN 0, enter:

```
ADD PASSTHROUGH PASS10200 1 2 0
ADD UNIT P4 PASS10200
```

## See Also

ADD UNITS  
DELETE *container-name*  
LOCATE  
SHOW DISKS  
SHOW DEVICES  
SHOW PASSTHROUGH  
SET *container-name*

## ADD RAIDSETS

Names a RAIDset and adds the RAIDset to the controller configuration. RAIDsets can contain from 3 to 14 members.

**NOTE:** The maximum size of a RAIDset is up to 1.024TB

Compaq RAIDsets are RAID level 3/5 storagesets that use the best characteristics of RAID level 3 and RAID level 5. A RAIDset should only contain disk drives of the same capacity. The controller limits the effective capacity of each member to the capacity of the smallest member in the storageset (base member size) when the storageset is initialized. Thus, if you combine 9 GB disk drives with 4 GB disk drives in the same storageset, you will waste 5 GB of capacity on each 9 GB member. A RAIDset must include at least 3 disk drives, but no more than 14.

### Syntax

```
ADD RAIDSETS RAIDset-name disk-name1 disk-name2 disk-name3 [disk-nameN]
```

### Parameters

The following parameters are available to the ADD RAIDSETS command:

- *RAIDset-name*
- *disk-name*

These parameters are described in the following paragraphs:

#### *RAIDset-name*

Assigns a name to the RAIDset. This is the name used with the ADD UNITS command to identify the RAIDset as a host-addressable unit.

The RAIDset name must start with a letter (A through Z) and may consist of a maximum of nine characters including letters A through Z, numbers 0 through 9, periods (.), dashes (-), or underscores (\_).

It is common to name a RAIDset RAID*n*, where *n* is a sequentially assigned, unique identifier. This naming convention presents the user with the type of container and its unique identifier.

#### *disk-name1* *disk-name2* *disk-name3* [*disk-nameN*]

Identifies the disk making up the RAIDset. RAIDsets must include at least 3 containers and no more than 14.

## Switches

The following switches are available with the ADD RAIDSETS command:

- *POLICY* and *NOPOLICY*
- *RECONSTRUCT*
- *REDUCED* and *NOREDUCED*

These switches are described in the following paragraphs.

*POLICY=BEST\_FIT*

*POLICY=BEST\_PERFORMANCE* (default)

*NOPOLICY*

Sets the selection criteria the controller uses to choose a replacement member from the spareset when a RAIDset member fails:

- ❑ Specify *POLICY=BEST\_FIT* to choose a replacement disk drive from the spareset that equals or exceeds the base member size of the remaining members of the RAIDset. If more than one disk drive in the spareset is the correct size, the controller selects a disk drive giving the best performance.
- ❑ Specify *POLICY=BEST\_PERFORMANCE* to choose a replacement disk drive from the spareset resulting in the best performance of the RAIDset. The controller attempts to select a disk on a different port than existing RAIDset members. If there is more than one disk drive in the spareset matching the best performance criteria, the controller selects a disk drive that equals or exceeds the base member size of the RAIDset.
- ❑ Specify *NOPOLICY* to prevent the controller from automatically replacing a failed disk device. This RAIDset operates in a reduced state until you select either *POLICY=BEST\_PERFORMANCE* or *POLICY=BEST\_FIT*, or manually place a member in the RAIDset. See page 2-133, for more information regarding this procedure.

*RECONSTRUCT=FAST*  
*RECONSTRUCT=NORMAL (default)*

Sets the speed at which the controller reconstructs data to a new RAIDset disk that replaces the failed disk:

- Specify *FAST* to allow the reconstruct process to take precedence over other controller operations. When the *RECONSTRUCT=FAST* switch is specified, the controller uses more resources to perform the reconstruction. Reconstruction takes less time, but overall controller performance is reduced during reconstruction.
- Specify *NORMAL* to balance other controller operations with the reconstruct operation. The controller uses relatively few resources to perform the reconstruct process and there is little impact on performance.

*REDUCED*  
*NOREduced (default)*

Permits the addition of a RAIDset that is missing a member (due to a failure):

- Specify the *REDUCED* switch when you add a reduced RAIDset (a RAIDset that is missing one member).

**NOTE:** Verify that the RAIDset contains all but one of its disks before specifying the *REDUCED* switch.

- Specify the *NOREduced* switch when all the disks making up the RAIDset are present—for instance, when creating a new RAIDset.

## Examples

To create a RAIDset named RAID9 that contains disks DISK10000, DISK20100, and DISK30200, enter:

```
ADD RAIDSETS RAID9 DISK10000 DISK20100 DISK30200
```

To create a RAIDset named RAID8 that contains disks DISK10000, DISK20100, and DISK30200, and uses the *BEST\_FIT* switch to indicate the replacement policy, enter:

```
ADD RAIDSETS RAID8 DISK10000 DISK20100 DISK30200 POLICY=BEST_FIT
```

**NOTE:** Enter the ADD RAIDSETS command on one line.

To create a RAIDset named RAID8 that contains disks DISK10000, DISK20100, and DISK30200, then initialize it and make it into a host-addressable unit, enter:

```
ADD RAIDSETS RAID8 DISK10000 DISK20100 DISK30200
INITIALIZE RAID8
ADD UNITS D70 RAID8
```

To create a three-member RAIDset from the members of a reduced four-member RAIDset, enter the following (do not initialize the RAIDset again):



**CAUTION:** Data contained on the RAIDset will be erased if you reinitialize the RAIDset.

---

```
ADD RAIDSETS RAID6 DISK10300 DISK20400 DISK30200 REDUCED
```

### See Also

ADD UNITS  
DELETE *container-name*  
INITIALIZE  
SET RAIDSETS  
SHOW RAIDSETS  
SHOW *RAIDset-name*  
SHOW STORAGESETS

## ADD REMOTE\_COPY\_SETS

Creates a remote copy set (RCS), consisting of one unit at the initiator site and one unit at the target site. The units may be a single disk (JBOD) or a stripeset, mirrorset, or RAIDset.

**NOTE:** This command works only in a DRM environment and requires an HSG80 array controller with ACS version 8.6P code. Like all DRM commands, use of this command is heavily restricted. Refer to the *Compaq StorageWorks Data Replication Manager HSG80 ACS Version 8.6P Operations Guide* for examples of usage.

This command must only be used on the initiator (local) site.

The following restrictions apply to remote copy sets:

- There is a maximum of 12 remote copy sets per initiator/target pair.
- Neither initiator nor target units can be transportable units, concatset units, or snapshot units.

### Syntax

```
ADD REMOTE_COPY_SETS remote-copy-set-name initiator-unit-name
remote-node-name\target-unit-name
```

### Parameters

The parameters required for this command are:

- *remote-copy-set-name*
- *initiator-unit-name*
- *remote-node-name*\*target-unit-name* (this parameter is not required; it can be added later through the SET command)

These parameters are described in the following paragraphs:

*remote-copy-set-name*

The name by which the remote copy set will be known. This name must be unique across the fabric.

**NOTE:** Remote copy sets cannot be renamed with the RENAME command. If the wrong name is entered, the remote copy set must be deleted and then added again.

The remote copy set name must start with RCS and may consist of a maximum of 9 characters including letters A through Z, numbers 0 through 9, periods (.), dashes (-), or underscores (\_).

*initiator-unit-name*

The name of the initiator unit that is to be the first member of the remote copy set.

*remote-node-name*\target-unit-name

The *remote-node-name* part of the parameter specifies the name of the controller pair—called a *node*—receiving the command. The *target-unit-name* part specifies the unit on the remote node to be added as the target of the remote copy set.

## Switches

The following switches are available with the ADD REMOTE\_COPY\_SETS command:

- *OPERATION\_MODE*
- *OUTSTANDING\_IOS*

These switches are described in the following paragraphs.

*OPERATION\_MODE=SYNCHRONOUS* (default)

*OPERATION\_MODE=ASYNCHRONOUS*

This switch determines which of two normal operating modes is assigned to the remote copy set.

In synchronous mode, write operations must be completed on the remote units of the remote copy set before the host is informed that the operation is complete.

Synchronous operation assures data consistency at all times among the members of a remote copy set.

In asynchronous mode, the write operation is reported as complete to the host before the data is written to the remote units of the remote copy set. Asynchronous mode gives greater performance and faster response time, but the data on all members of the remote copy set cannot be assumed to be always the same.

*OUTSTANDING\_IOS=n (1 to 240; default is 200)*

This switch sets the number of outstanding I/O operations from the initiator to the target. The way this switch operates depends on which operating mode is set by the *OPERATION\_MODE* switch:

- ❑ In synchronous mode, *OUTSTANDING\_IO* refers to the number of remote writes (write operations from the initiator to the target) that can be outstanding.
- ❑ In asynchronous mode, *OUTSTANDING\_IO* refers to the number of write operations that can be reported as completed to the host before they have been written on all the members of the remote copy set.

### Example

To create remote copy set RCS1, consisting of unit D1 on the local controller pair and unit D21 on a remote controller pair (node) named London, enter:

```
ADD REMOTE_COPY_SET RCS1 D1 LONDON\D21
```

### See Also

```
ADD ASSOCIATIONS  
SET controller REMOTE_COPY  
SET remote-copy-set-name
```

## ADD SNAPSHOT\_UNITS

Creates and names a snapshot unit. A snapshot unit is one that reflects the contents of another unit at a particular point in time (the instant the ADD SNAPSHOT\_UNITS command is entered). The snapshot unit can be presented to the host. The snapshot unit remains until it is deleted (DELETE command).

**NOTE:** This command is operational only in ACS versions 8.6S and 8.6P and only if both controllers have 512 MB of mirrored cache.

### Syntax

ADD SNAPSHOT\_UNITS *snapshot-unit storageset-name source-unit*

### Parameters

The following parameters are required for the ADD SNAPSHOT\_UNITS command:

- *snapshot-unit*
- *storageset-name*
- *source-unit*

The relationship of the parameters can be summarized as follows:

When the ADD SNAPSHOT\_UNITS command is entered, *storageset-name* becomes *snapshot-unit* and archives the current contents of *source-unit* at that instant.

These parameters are described in the paragraphs that follow.

#### *snapshot-unit*

The unit number that will be assigned to the snapshot unit. The unit number must start with a letter (A through Z) and may consist of a maximum of nine characters including letters A through Z, numbers 0 through 9, periods (.), dashes (-), or underscores (\_).

The snapshot unit is created with all host access disabled by default. Do a SET command to set up host access.

The snapshot unit will be created on the same controller as the source unit, and must remain there.

#### *storageset-name*

Identifies the name of the storageset that will become the snapshot unit. The storageset must have the following characteristics:

- Capacity equal to or greater than the source unit
- Initialized
- Not a partition or a concatset

*source-unit*

The unit whose contents will be frozen in time and preserved on the snapshot unit. The source unit must have the following characteristics:

- Less than 1.024 TB
- Write-back cache enabled
- Non-transportable

### Switches

There are no switches associated with this command.

### Example

To create unit D4, which consists of storageset RAID4 and which will become a point-in-time snapshot of unit D1, enter:

```
ADD SNAPSHOT_UNITS D4 raid2 D1
```

### See Also

SET *UNITS*  
DELETE *container-name*

## ADD SPARESETS

Adds a disk drive to the spareset and initializes the metadata on the drive. The spareset is a pool of drives available to the controller to replace failing storageset members.

### Syntax

```
ADD SPARESETS disk-name
```

### Parameters

*disk-name*

Indicates the name of the disk drive being added to the spareset. Only one disk drive can be added to the spareset with each ADD SPARESETS command.

### Switches

There are no switches associated with this command.

### Example

To add disk drives named DISK20200 and DISK30300 to a spareset, enter:

```
ADD SPARESETS DISK20200  
ADD SPARESETS DISK30300
```

### See Also

```
DELETE SPARESETS  
SHOW SPARESETS  
SHOW STORAGESETS
```

## ADD STRIPESETS

Names a stripeset and adds it to the controller configuration. A stripeset can contain from 2 to 24 members. Stripesets are also referred to as RAID level 0 storagesets. The number of members in the stripeset is determined by the number of *container-name* parameters specified.

**NOTE:** The maximum size of a stripeset is up to 1.024 TB

### .Syntax

```
ADD STRIPESETS stripeset-name container-name1 container-name2
[container-nameN]
```

### Parameters

The following parameters are required for the ADD STRIPESETS command:

- *stripeset-name*
- *container-name*

These parameters are described in the following paragraphs:

#### *stripeset-name*

Assigns a name to the stripeset. This is the name used with the ADD UNITS command to identify the stripeset as a host-addressable unit.

The stripeset name must start with a letter (A through Z) and may consist of a maximum of nine characters including letters A through Z, numbers 0 through 9, periods (.), dashes (-), or underscores (\_).

It is common to name a stripeset STRIPEn, where n is a sequentially assigned, unique identifier. This naming convention presents to the user both the type of container and its unique identifier.

#### *container-name1 container-name2 [container-nameN]*

Identifies the members (disk drives or mirrorsets) making up the stripeset. Stripesets can contain between 2 and 24 members.

The container name each must start with a letter (A through Z) and may consist of a maximum of nine characters including letters A through Z, numbers 0 through 9, periods (.), dashes (-), or underscores (\_).

It is common to name a stripeset container `STRIPE $n$` , where  $n$  is a sequentially assigned, unique identifier. This naming convention presents to the user both the type of container and its unique identifier.

**NOTE:** A 256-character limit exists for the command line. If configuring a stripeset with many members, consider renaming the members to shorter names in order to enter the entire command line.

## Switches

There are no switches associated with this command.

## Examples

To create a stripeset named `STRIPE1` that contains disks `DISK10000`, `DISK20100`, and `DISK30200`, enter:

```
ADD STRIPESETS STRIPE1 DISK10000 DISK20100 DISK30200
```

To create a stripeset named `STRIPE1` and then create a logical unit from it, enter:

```
INITIALIZE STRIPE1  
ADD UNITS D103 STRIPE1
```

To create a two-member striped mirrorset (a stripeset whose members are mirrorsets), and a logical unit from it, enter the following:

**NOTE:** Because you can initialize the stripeset, you do not need to individually initialize the mirrorset members.

```
ADD MIRRORSETS MR1 DISK10000 DISK20100  
ADD MIRRORSETS MR2 DISK30200 DISK40300  
ADD STRIPESETS STRIPE1 MR1 MR2  
INITIALIZE STRIPE1  
ADD UNITS D104 STRIPE1
```

## See Also

```
ADD UNITS  
ADD MIRRORSETS  
DELETE container-name  
INITIALIZE  
SHOW STORAGESET  
SHOW STRIPESETS  
SHOW stripeset-name
```

## ADD UNITS

Creates a logical unit from a specified container. The controller maps all requests from the host to the logical-unit number as requests to the container specified in the ADD UNITS command. Units can be created from all container types:

- Disk and passthrough devices
- Stripesets
- Mirrorsets
- RAIDsets
- Partitions
- Striped mirrorsets

If adding a newly created container to a subsystem, the container must be initialize in order to be added as a logical unit. If adding a container with stored data that needs to be maintained, do not initialize this container; the container will be added as a logical unit.



**CAUTION:** Adding a unit immediately makes that unit available to all host connections unless the *DISABLE\_ACCESS\_PATH* switch is specified. See the *ENABLE\_ACCESS\_PATH/DISABLE\_ACCESS\_PATH* switch description for more information.

### Syntax

ADD UNITS *unit-number container-name*

### Parameters

The following parameters are required for the ADD UNITS command:

- *unit-number*
- *container-name*

These parameters are described in the following paragraphs:

*unit-number*

The unit number is the designation by which the controller keeps track of the unit. This number maps to one or more host-accessible LUNs. Unit numbers are prefixed by D and are in the range of 0—199. How units are assigned to ports depends on the failover mode.

- Transparent failover mode:
  - D0 to D99 are units assigned to port 1
  - D100 to D199 are units assigned to port 2
- Multiple-bus failover mode:
  - D0 to D199 are units visible to the hosts through both ports of both controllers

In transparent failover mode, adding unit D0 creates a logical unit and presents it as D0 to the host on port 1. Adding unit D100 creates a logical unit and presents it as D0 to the host on port 2.

Partitioned units cannot be split across ports.

In multiple-bus failover mode, adding unit D0 creates a logical unit that is presented to both ports on both controllers. What hosts can see the unit is determined by parameters of the ADD CONNECTIONS command and by the *ENABLE/DISABLE\_ACCESS\_PATH* switch of the ADD UNITS command.

The LUN number a host connection assigns to a unit is a function of the *UNIT\_OFFSET* switch in the ADD (or SET) CONNECTIONS command. LUN number equals unit number minus offset:

LUN number = unit number – offset

If no value is specified for the *UNIT\_OFFSET* switch in the ADD (or SET) CONNECTIONS command, the offsets are as follows:

- In transparent failover mode, host connections on port 1 have an offset of 0 and host connections on port 2 have an offset of 100.
- In multiple-bus failover mode, all ports have a default offset of 0.

*container-name*

Specifies the name of the container (disk drive, device, storage set, or partition) being used to create the unit.

A unit can consist of a maximum of 48 devices.

## Switches

Table 2-1 lists all switches for the ADD UNITS command and identifies which switches may be used with each type of device or storageset. Descriptions of each switch follow the table.

Switch	Container Type	RAIDset	Stripeset	Mirrorset	NOTransportable	Transportable	Passthrough
<i>ENABLE_ACCESS_PATH</i> <i>DISABLE_ACCESS_PATH</i>		✓	✓	✓	✓	✓	✓
<i>MAX_READ_CACHED_TRANSFER_SIZE</i>		✓	✓	✓	✓	✓	
<i>MAX_WRITE_CACHED_TRANSFER_SIZE</i>		✓	✓	✓	✓	✓	
<i>MAXIMUM_CACHED_TRANSFER_SIZE</i>		✓	✓	✓	✓	✓	
<i>PARTITION=partition-number</i>		✓	✓	✓	✓		
<i>PREFERRED_PATH</i> <i>NOPREFERRED_PATH</i>		✓	✓	✓	✓	✓	✓
<i>READ_CACHE</i> <i>NOREAD_CACHE</i>		✓	✓	✓	✓	✓	
<i>READAHEAD_CACHE</i> <i>NOREADAHEAD_CACHE</i>		✓	✓	✓	✓	✓	
<i>RUN</i> <i>NORUN</i>		✓	✓	✓	✓	✓	
<i>WRITE_PROTECT</i> <i>NOWRITE_PROTECT</i>		✓	✓	✓	✓	✓	
<i>WRITEBACK_CACHE</i> <i>NOWRITEBACK_CACHE</i>		✓	✓	✓	✓		

**NOTE:** The *NORUN* switch cannot be specified for partitioned units.

*ENABLE\_ACCESS\_PATH=*  
*DISABLE\_ACCESS\_PATH=*

Determines which host connections can access the unit. The allowable variables are:

- ❑ ALL
- ❑ A string of connection names, separated by commas and enclosed in parentheses.

Setting *ENABLE\_ACCESS\_PATH=ALL* permits all host connections to access the unit. This is the default.



**CAUTION:** If the storage subsystem has more than one host connection, access path must be specified carefully to avoid giving undesirable host connections access to the unit. The default condition is that access paths to all host connections are enabled. To restrict host access to a set of host connections, specify *DISABLE\_ACCESS\_PATH=ALL* when the unit is added, then use the *SET unit* command to specify the set of host connections that are to have access to the unit.

Enabling the access path to a particular host connection does not override previously enabled access paths. All access paths previously enabled are still valid; the new host connection is simply added to the list of connections that can access the unit.

The procedure of restricting access by enabling all access paths then disabling selected paths is particularly not recommended because of the potential data/security breach that occurs when a new host connection is added.

---

*MAX\_READ\_CACHED\_TRANSFER\_SIZE=n*  
*MAX\_READ\_CACHED\_TRANSFER\_SIZE=32 (default)*

Sets the largest number of read blocks to be cached by the controller. The controller will not cache any transfers over the size set. Acceptable values are 0 through 2048.

The *MAXIMUM\_CACHED\_TRANSFER* switch affects both read and write-back cache when set on a controller that has read and write-back caching.

*MAX\_WRITE\_CACHED\_TRANSFE\_SIZE=n*  
*MAX\_WRITE\_CACHED\_TRANSFER\_SIZE=32 (default)*

Sets the largest number of write blocks to be cached by the controller. The controller will not cache any transfers over the size set. Acceptable write block sizes are 0 through 2048.

The *MAXIMUM\_CACHED\_TRANSFER* switch affects both read and write-back cache when set on a controller that has read and write-back caching.

*MAXIMUM\_CACHED\_TRANSFER\_SIZE=n*  
*MAXIMUM\_CACHED\_TRANSFER\_SIZE=32 (default)*

Sets the largest number of read and write blocks to be cached by the controller. The controller will not cache any transfers over the size set. Acceptable write block sizes are 1 through 2048.

The *MAXIMUM\_CACHED\_TRANSFER\_SIZE* switch affects both read and write-back cache when set on a controller that has read and write-back caching. The use of this switch has the effect of setting both the *MAX\_READ\_CACHED\_TRANSFER\_SIZE* and the *MAX\_WRITE\_CACHED\_TRANSFER\_SIZE* switches.

*PARTITION=partition-number*

Identifies the partition-number for a partition on a container. The *partition-number* identifies the partition associated with the unit number being added. Use the *SHOW container-name* command to find the partition numbers used by a storageset or a single-disk unit.

**NOTE:** Transportable units cannot be partitioned. All partitions on a container must be addressed through the same controller. If you add a unit for a partition and specify the preferred path switch, all partitions on that container inherit the same path.

*PREFERRED\_PATH=OTHER\_CONTROLLER*  
*PREFERRED\_PATH=THIS\_CONTROLLER*  
*NOPREFERRED\_PATH (default)*

The *PREFERRED\_PATH* switch allows balancing of the I/O load by specifying the controller through which the unit will be accessed. If you set *NOPREFERRED\_PATH* for a unit, it can be accessed through either controller.

The controllers only use the *PREFERRED\_PATH* setting if they are in a dual-redundant configuration. If one controller fails, all the devices are accessed through the remaining controller ignoring the *PREFERRED\_PATH* setting.

You can specify the *PREFERRED\_PATH* switch for a single controller configuration; however, the switch will not take effect until you add a second controller and configure the two controllers for dual-redundancy.

**NOTE:** If your controllers are configured to operate in transparent-failover mode, do not set the *PREFERRED\_PATH* switch with the *ADD UNITS* or *SET unit-number* command—otherwise, an error message is generated. This error message will indicate the assignment of a preferred controller path at the unit level as valid only when operating in multiple bus failover mode.

- ❑ When no preferred path is assigned, the unit is targeted through the controller which detects the unit first after the controllers start.

- ❑ Select *PREFERRED\_PATH=THIS\_CONTROLLER* to instruct “this controller” to bring the units online.
- ❑ Select *PREFERRED\_PATH=OTHER\_CONTROLLER* to instruct the “other controller” to bring the units online.

**NOTE:** All partitions on a container must be addressed through the same controller. If you set *PREFERRED\_PATH* for one partition, all partitions on that container inherit the same preferred path setting.

*READ\_CACHE (default)*

*NOREAD\_CACHE*

Sets the controller’s read-cache policy function. When *READ\_CACHE* is selected, and the controller receives a read request from the host, the following events occur: the controller reads the data from the disk drives, delivers it to the host, and stores the data in its cache module. Subsequent reads for the same data will take the data from cache rather than accessing the data from the disks.

Read caching improves performance in almost all situations. Therefore, it is recommended you leave its default setting, *READ\_CACHE*, enabled. However, under certain conditions, such as when performing a backup, read caching may not be necessary since only a small amount of data is cached. In such instances, it may be beneficial to disable the read cache function and remove the processing overhead associated with caching data.

*READAHEAD\_CACHE (default)*

*NOREADAHEAD\_CACHE*

Enables the controller to keep track of read I/Os. If the controller detects sequential read I/Os from the host, it will then try to keep ahead of the host by reading the next sequential blocks of data (those the host has not yet requested) and putting the data in cache. This process is sometimes referred to as prefetch. The controller can detect multiple sequential I/O requests across multiple units.

Read-ahead caching improves host application performance since the data will be read from the controller cache instead of disk. Read-ahead caching is the default for units.

If you are adding a unit that is not expected to get sequential I/O requests, select *NOREADAHEAD\_CACHE* for the unit.

*RUN (default)*

*NORUN*

Controls the unit’s availability to the host:

- ❑ Specify *RUN* to make a unit available to the host.

- ❑ Specify *NORUN* to make a unit unavailable to the host and to cause any data in cache to be flushed to one or more drives. *NORUN* spins down all the disks used in the unit. The drives making up the unit spin down after the data has been completely flushed.

**NOTE:** Do not specify the *RUN/NORUN* switches for partitions.

#### *WRITE\_PROTECT*

#### *NOWRITE\_PROTECT* (default)

Specifies whether data contained on the selected unit can be overwritten:

- ❑ Specify *WRITE\_PROTECT* to prevent host write operations to the unit. However, the controller may still write to a write-protected RAIDset to satisfy a reconstruct pass or to reconstruct a newly replaced member. Additionally, metadata, reconstruct, and copy writes are still allowed to RAIDsets and mirrorsets.
- ❑ Specify *NOWRITE\_PROTECT* to allow the host to write data to the unit. This allows the controller to overwrite existing data. *NOWRITE\_PROTECT* is the default for transportable disks.

#### *WRITEBACK\_CACHE*

#### *NOWRITEBACK\_CACHE*

Enable or disable the write-back data caching function of the controller. The controller write-back caching feature improves write performance.

**NOTE:** *NOWRITEBACK\_CACHE* cannot be applied to is the default on transportable disks. *WRITEBACK\_CACHE* is the default on nottransportable disks.

- ❑ Specify *WRITEBACK\_CACHE* for all new RAIDsets, mirrorsets, and units that you want to take advantage of the controller write-back caching feature.
- ❑ Specify *NOWRITEBACK\_CACHE* for units that you want data from the host to go directly to the specified devices without being cached.



**CAUTION:** Though there is built-in redundancy to protect data contained in cache, allowing data to be written to write-back cache may result in the loss of data if the controller fails.

---

Specifying *NOWRITEBACK\_CACHE* enables only write-through caching. In write-through caching, when the controller receives a write request from the host it places the data in its cache module, writes the data to the disk drives, then notifies the host when the write operation is complete. This process is called *write-through caching* because the data passes through—and is stored in—the cache memory on its

way to the disk drives. Write-through caching is only enabled when write-back caching is disabled, or when the *MAXIMUM\_CACHED\_TRANSFER\_SIZE* switch is set to zero.

**NOTE:** The controller may take up to five minutes to flush data contained within the write-back cache when you specify the *NOWRITEBACK\_CACHE* switch.

## Examples

To create unit D102 from a single-disk drive named DISK10000 and set the host access to the unit through “this controller,” enter:

```
ADD UNITS D102 DISK10000 PREFERRED_PATH=THIS_CONTROLLER
```

- ❑ If the controller pair is in transparent failover mode, this unit is on port 2. It will be presented to each host connection as LUN (2 – offset). Offset is a host connection characteristic, specified in the ADD (or SET) CONNECTIONS command.
- ❑ If the controller pair is in multiple-bus failover mode, this unit can potentially be seen by all four controller ports. It will be presented to each host connection as LUN (2 – offset). Offset is a host connection characteristic, specified in the ADD (or SET) CONNECTIONS command.

To create unit D5 from mirrorset MIRR1, and to let only two host connections (Server1 and Server2) have access to this unit, enter:

```
ADD UNITS D5 MIRR1 DISABLE_ACCESS_PATH=ALL  
SET UNITS D5 ENABLE_ACCESS_PATH=(SERVER1,SERVER2)
```

- ❑ If the controller pair is in transparent failover mode, this unit is on port 1, and is available only to host connections Server1 and Server2. Server1 and Server2 must be connected to host port 1 to access the unit. The unit will be presented to each host connection as LUN (5 – offset). Offset is a host connection characteristic, specified in the ADD (or SET) CONNECTIONS command.
- ❑ If the controller pair is in multiple-bus failover mode, this unit can potentially be seen by all four controller ports, but is accessible only by host connections Server1 and Server2. It will be presented to each host connection as LUN (5 – offset).

To create unit D7 from a RAIDset named RAID9 and instruct the unit to take advantage of the controller’s write-back caching feature.

```
ADD RAIDSETS RAID9 DISK10100 DISK20100 DISK30100 DISK40100  
INITIALIZE RAID9  
ADD UNITS D7 RAID9 WRITEBACK_CACHE
```

**See Also**

CREATE\_PARTITION  
DELETE *unit-number*  
SET *unit-number*  
SHOW UNITS

## CLEAR\_ERRORS CLI

Stops the display of current or previous error messages at the CLI prompt. Errors are displayed (even after the error condition has been rectified) until the controller is restarted or this command is entered.

**NOTE:** This command does not clear the error condition. The command only stops the CLI from displaying the error.

There are three message types:

- General information
- Warning (user may want to examine, but the command will be executed)
- Error (command will not execute)

### Syntax

```
CLEAR_ERRORS CLI
```

### Parameters

There are no parameters associated with this command.

### Switches

There are no switches associated with this command.

### Example

To clear any message enter:

```
CLEAR_ERRORS CLI
```

### See Also

```
CLEAR_ERRORS controller INVALID_CACHE  
CLEAR_ERRORS unit-number LOST_DATA  
CLEAR_ERRORS device-name UNKNOWN  
CLEAR_ERRORS unit-number UNWRITEABLE_DATA
```

## CLEAR\_ERRORS *controller* INVALID\_CACHE

Clears an invalid cache error and allows the controller and cache to resume operation. If the error is due to a mirrored-cache configuration that is incorrect, the controller indicates mirrored mode status after the error is cleared.

Use this command for the following situations:

- When the controller or cache modules have been replaced resulting in mismatched data between the controllers.
- When the controller or cache module is replaced while data is still in cache and not properly flushed with the SHUTDOWN, SET NOFAILOVER, or SET NOMULTIBUS FAILOVER commands first.

### Syntax

CLEAR\_ERRORS *controller* INVALID\_CACHE *data-retention-policy*

### Parameters

The following parameters are required for the CLEAR\_ERRORS INVALID\_CACHE command:

- *controller*
- *data-retention-policy*

These parameters are described in the following paragraphs:

#### *controller*

Identifies which controller is to receive the CLEAR\_ERRORS command. You must specify THIS\_CONTROLLER (the one connected to the CLI maintenance terminal) or OTHER\_CONTROLLER.

#### *data-retention-policy*

Instructs the controller how to handle write-back cached data:

---

**IMPORTANT:** Because misuse of this command can cause data loss, both the command and the switch DESTROY\_UNFLUSHED\_DATA or NODESTROY\_UNFLUSHED\_DATA must be entered in their entirety. They cannot be abbreviated.

---

- ❑ Specify `NODESTROY_UNFLUSHED_DATA` (default) to retain the cached data and discard controller information. The controller metadata synchronizes with that of the cache module and preserves any unwritten data for eventual flushing to the disk array.

The `NODESTROY_UNFLUSHED_DATA` parameter is used in the following situations:

- ❑ If the controller module has been replaced.
- ❑ If the controller nonvolatile memory (NVMEM) contents were lost.
- ❑ Specify `DESTROY_UNFLUSHED_DATA` to retain the controller information and discard the unwritten cache data.

The `DESTROY_UNFLUSHED_DATA` parameter is used in the following situations:

- ❑ If the cache module has been replaced.
- ❑ Any other reason not listed above.



**CAUTION:** Specifying the `DESTROY_UNFLUSHED_DATA` parameter destroys data remaining in cache, which can result in data loss.

---

## Switches

There are no switches associated with this command.

## Examples

To clear an invalid cache error on “this controller” after replacing a controller module, enter the following command on one line:

```
CLEAR_ERRORS THIS_CONTROLLER INVALID_CACHE NODESTROY_UNFLUSHED_DATA
```

To clear an invalid cache error on the “other controller” after replacing a cache module, enter the following command on one line:

```
CLEAR_ERRORS OTHER_CONTROLLER INVALID_CACHE DESTROY_UNFLUSHED_DATA
```

## See Also

```
CLEAR_ERRORS CLI  
CLEAR_ERRORS LOST_DATA  
CLEAR_ERRORS UNKNOWN  
CLEAR_ERRORS UNWRITEABLE_DATA
```

## **CLEAR\_ERRORS** *device-name* UNKNOWN

Use this command to force the controller to recognize a failed device, regardless of the controller's prior evaluation of the device's condition.

A device failure may cause the controller to label the device as unknown. When that happens, the controller does not check the device again to see if it has been repaired or if the error condition has been corrected. You must enter this command so the controller can recognize the device after the cause of the error has been corrected.

### **Syntax**

```
CLEAR_ERRORS device-name UNKNOWN
```

**NOTE:** Spell out UNKNOWN when using this command.

### **Parameters**

*device-name*

Identifies the device with the unknown error.

### **Switches**

There are no switches associated with this command.

### **Example**

To force the controller to recognize a previously unknown device named DISK30000, enter:

```
CLEAR_ERRORS DISK30000 UNKNOWN
```

### **See Also**

```
CLEAR_ERRORS CLI  
CLEAR_ERRORS INVALID_CACHE  
CLEAR_ERRORS UNWRITEABLE_DATA
```

## CLEAR\_ERRORS *unit-number* LOST\_DATA

Clears lost data errors on a unit; all partitions on the unit's container are affected.

The controller reports a lost data error on the unit when you remove a write-back cache module or when the cache module contains unflushed data, possibly due to an interruption in the primary power source with no backup power present. The CLEAR\_ERRORS *unit-number* LOST\_DATA command clears the lost data error but does not recover the lost data.

**NOTE:** Clearing lost data errors or lost data block errors on a RAIDset causes a reconstruction of all parity blocks. Clearing lost data errors or lost data block errors on a mirrorset causes members to normalize.

### Syntax

CLEAR\_ERRORS *unit-number* LOST\_DATA

**NOTE:** Spell out LOST\_DATA when using this command.



**CAUTION:** This command may cause data loss.

---

### Parameters

*unit-number*

Identifies the unit number on which the lost data error is to be cleared. The *unit-number* is the same name given to the unit when you added it to the controller's configuration with the ADD UNITS command.

### Switches

There are no switches associated with this command.

### Example

To clear the lost data error on disk unit number D103, enter:

```
CLEAR_ERRORS D103 LOST_DATA
```

**See Also**

CLEAR\_ERRORS CLI  
CLEAR\_ERRORS INVALID\_CACHE  
CLEAR\_ERRORS UNKNOWN  
CLEAR\_ERRORS UNWRITEABLE\_DATA

## CLEAR\_ERRORS *unit-number* UNWRITEABLE\_DATA

Clears an unwriteable data error on a unit.

This command affects all partitions on the same container.

If a storageset or disk drive fails before its data has been written to it, the controller reports an unwriteable data error. The CLEAR\_ERRORS *unit-number* UNWRITEABLE\_DATA command removes the data from the cache and clears the unwriteable data error.



**CAUTION:** This command will cause data loss.

---

### Syntax

CLEAR\_ERRORS *unit-number* UNWRITEABLE\_DATA

---

**IMPORTANT:** Because misuse of this command will cause data loss, the command cannot be abbreviated.

---

### Parameters

*unit-number*

Identifies the unit having the unwriteable data error. The *unit-number* is the name given to the unit when it was created with the ADD UNITS command.

### Switches

There are no switches associated with this command.

### Example

To clear the unwriteable data error on disk unit D103, enter:

```
CLEAR_ERRORS D103 UNWRITEABLE_DATA
```

**See Also**

CLEAR\_ERRORS CLI  
CLEAR\_ERRORS INVALID\_CACHE  
CLEAR\_ERRORS LOST\_DATA  
CLEAR\_ERRORS UNKNOWN  
RETRY\_ERRORS UNWRITEABLE\_DATA

## CONFIGURATION RESET

Erases the entire subsystem configuration data file stored in the non-volatile memory (NVRAM) of “this controller.”

---

**IMPORTANT:** This command sets the controller to a default configuration and shuts down the controller, disabling communication between host and controller. Enter new configuration information through the SET THIS\_CONTROLLER command or the CONFIGURATION RESTORE command to make the controller operational.

---

This command does *not* erase the configuration file that was stored on disk with the INITIALIZE *container-name* SAVE\_CONFIGURATION command.

**NOTE:** Before issuing this command, make sure the subsystem configuration is saved.

- In single-controller subsystems, the configuration is saved on the disk array. If a container has the SAVE\_CONFIGURATION switch specified when it is initialized (through the INITIALIZE command), the disks that constitute that unit will be able to save a copy of the configuration.
- For dual-redundant controllers, the configuration is stored in the companion controller.

Specify the CONFIGURATION RESET command on “this controller” in nofailover mode (SET NOFAILOVER or SET NOMULTIBUS FAILOVER CLI command) only. Enter this command to ensure all of the old configuration information is removed when a controller module is moved from one subsystem to another.

Dual-redundant controller subsystems have the configuration information stored on the “other” controller and do not need to use the INITIALIZE *container-name* SAVE\_CONFIGURATION command unless the subsystem is being upgraded (for example, both controllers are being replaced with newer versions).

- New subsystem configuration information can be re-entered by using the SET THIS\_CONTROLLER command.
- Saved subsystem configuration information can be re-established by using the CONFIGURATION RESTORE command.
- New subsystem configuration information can be re-established by using the SET FAILOVER COPY or SET NOMULTIBUS FAILOVER= command. These CLI commands “copy” the configuration file from the defined controller non-volatile memory and places the file into the redundant controller non-volatile memory. For example, use SET FAILOVER COPY=OTHER\_CONTROLLER or SET NOMULTIBUS FAILOVER executed from “this controller” to place the “other controller” configuration file into the “this controller” non-volatile memory.

- Ensure subsystem configuration is stored on disk for single controller subsystems by way of the INITIALIZE *container-name* SAVE\_CONFIGURATION or the CONFIGURATION SAVE command.

Initiate the CONFIGURATION RESET command from the controller operator control panel (OCP) using the following steps:

1. Push and hold port button #5 and then momentarily press the reset (/) button.
2. Continue holding the port button until the port button #5 LED starts FLASHING.
3. Release the port button.

### Syntax

CONFIGURATION RESET

### Parameters

There are no parameters associated with this command.

### Switches

There are no switches associated with this command.

### Example

To erase the subsystem configuration information in “this controller,” enter:

```
CONFIGURATION RESET
```

### See Also

CONFIGURATION RESTORE  
CONFIGURATION SAVE  
INITIALIZE

## CONFIGURATION RESTORE

Copies the subsystem configuration information from the configuration file saved on disk into the NVRAM of “this controller.” This command locates the most recent configuration file created on disk and restores it. This command causes a reboot and takes effect immediately.



**CAUTION:** If a disk has been moved from one subsystem to another, and it contains configuration information, perform a CONFIGURATION SAVE command to synchronize the new disk with the subsystem configuration.

---

**IMPORTANT:** Use this command for a single controller configuration only. Do not use this command for controllers in a dual-redundant configuration. (The only time this command is used for a dual-redundant controller configuration is for a remote copy environment. Refer to the Compaq StorageWorks Data Replication Manager HSG80 ACS Version 8.6P Operations Guide for examples of appropriate usage.)

---

Initiate the CONFIGURATION RESTORE command from the controller OCP using the following steps:

1. Push and hold port button #5 and then momentarily pressing the reset (/) button.
2. Continue holding the port button until the port button #5 LED starts FLASHING.
3. Release the port button.

If the controller you are installing was previously used in another subsystem, it will restart with the configuration that resides in its nonvolatile memory. If this differs from the current configuration of the subsystem, you can purge the controller’s old configuration with the following command:

```
CONFIGURATION RESET
```

Use of the CONFIGURATION RESET command erases the entire configuration on the controller, restores the controller’s default configuration, and performs a shutdown of the controller. Press the controller reset (/) button to restart the controller after the controller has been configured—refer to the controller installation and configuration guide for configuration information.

---

**IMPORTANT:** The *container-name SAVE\_CONFIGURATION* command on page 2-76 must be used to save controller configuration information to a disk in order to reset the configuration or to restore the configuration. See the commands on page 2-73, page 2-48, and page 2-52 for more information.

---

### Syntax

CONFIGURATION RESTORE

### Parameters

There are no parameters associated with this command.

### Switches

There are no switches associated with this command.

### Example

To restore the subsystem configuration into the memory of the controller in a single-controller subsystem, enter:

```
CONFIGURATION RESTORE
```

### See Also

CONFIGURATION RESET  
CONFIGURATION SAVE  
INITIALIZE

## CONFIGURATION SAVE

Forces the controller to copy the subsystem configuration information in its NVRAM memory onto a configuration file on the disk array. This allows you to know exactly when a copy of the configuration is saved. The command takes effect immediately.

Use the `INITIALIZE container-name SAVE_CONFIGURATION` command to set up the location of the configuration file on the specified container and to save the current subsystem configuration.

The controller periodically updates the configuration file on the disk array. This command forces an immediate update. In single-controller subsystems, the configuration is saved on the disk array. If a container had the `SAVE_CONFIGURATION` switch specified when it was initialized (through the `INITIALIZE` command), the disks that constitute that unit will be able to save a copy of the configuration.

---

**IMPORTANT:** Use this command for a single controller configuration only. Compaq *does not* recommend using this command for controllers in a dual-redundant configuration. The only time this command is used for a dual-redundant controller configuration is for a remote copy environment. Refer to the *Compaq StorageWorks Data Replication Manager HSG80 ACS Version 8.6P Operations Guide* for examples of appropriate usage.

---

### Syntax

CONFIGURATION SAVE

### Parameters

There are no parameters associated with this command.

### Switches

There are no switches associated with this command.

### Example

To save the subsystem configuration into the memory of the controller in a single-controller subsystem, enter:

```
CONFIGURATION SAVE
```

**See Also**

CONFIGURATION RESET  
CONFIGURATION RESTORE  
INITIALIZE

## CREATE\_PARTITION

Divides a non-transportable disk drive storageset into several separately addressable storage units. The command marks a specified percentage of a disk drive or storageset to be used as a separately addressable unit—a partition. Any non-transportable disk or storageset can be divided into a maximum of eight partitions. Each partition can then be separately presented to the host.

Initialize all disks and storagesets before creating or destroying partitions.

### Syntax

CREATE\_PARTITION *container-name* SIZE=*percent*

### Parameters

*container-name*

Identifies the disk or storageset to partition. This is the same name given to the disk or storageset when it was created with the ADD command (for example, ADD DISKS, ADD STRIPESETS, and so forth). Any disk, stripeset, mirrorset, striped mirrorset, or RAIDset can be partitioned. A transportable disk cannot be partitioned. You must initialize the container before creating the first partition.

### Switches

The following switches are used with the CREATE\_PARTITION command:

- Geometry switches
  - ❑ CAPACITY
  - ❑ CYLINDERS
  - ❑ HEADS
  - ❑ SECTORS\_PER\_TRACK
- SIZE

These switches are described in the following paragraphs:

*CAPACITY*=*n* (1 to the maximum container size in blocks)

*CYLINDERS*=*n* (1 to 16,777,215)

*HEADS*=*n* (1 to 255)

*SECTORS\_PER\_TRACK*=*n* (1 to 255)

These switches are used to set the geometry reported to the host.

**NOTE:** The geometry switches should not be used unless there is a compatibility problem with the existing defaults.

The geometry switches for the INITIALIZE command are ignored when you create partitions. The geometry switches supplied with the CREATE\_PARTITION command are used by the unit.

*SIZE=percent*

*SIZE=LARGEST*

Specifies the size of the partition to be created as a percentage of the total container's storageset size:

- Specify *SIZE=percent* to create a partition on the specified container that is a percentage of the container's total capacity. Up to eight partitions may be created on any one container.

**NOTE:** The resulting partition is slightly smaller than the size specified because metadata also occupies some of the space allocated to the partition.

- Specify *SIZE=LARGEST* to:
  - Have the controller create the largest partition possible from unused space on the disk or storageset.
  - Create the last partition on a container. Because the remaining space is not equal to an exact percentage value, specifying LARGEST allows you to optimize use of the remaining space.

## Example

To create a RAIDset named RAID9, divide it into four equal parts, and create host-addressable units for each partition, enter:

```
ADD RAIDSETS RAID9 DISK10000 DISK20100 DISK30200
INITIALIZE RAID9
CREATE_PARTITION RAID9 SIZE=25
CREATE_PARTITION RAID9 SIZE=25
CREATE_PARTITION RAID9 SIZE=25
CREATE_PARTITION RAID9 SIZE=LARGEST
ADD UNITS D101 RAID9 PARTITION=1
ADD UNITS D102 RAID9 PARTITION=2
```

```
ADD UNITS D103 RAID9 PARTITION=3  
ADD UNITS D104 RAID9 PARTITION=4
```

**See Also**

```
ADD UNITS  
DELETE unit-number  
DESTROY PARTITION  
CREATE_PARTITION  
SET unit-number  
SHOW
```

## DELETE *associations*

Deletes an existing association set.

**NOTE:** This command works only in a DRM environment and requires an HSG80 array controller with ACS version 8.6P code. Like all DRM commands, use of this command is heavily restricted. Refer to the *Compaq StorageWorks Data Replication Manager HSG80 ACS Version 8.6P Operations Guide* for examples of usage.

### Syntax

```
DELETE association-set-name
```

### Parameters

*association-set-name*

The name of the association set to be deleted.

### Switches

There are no switches associated with this command.

### Examples

To delete association set AS4, enter:

```
DELETE AS4
```

### See Also

ADD ASSOCIATIONS  
SET *associations*

## DELETE *concatsets*

Deletes an existing concatset. If the concatset is associated with a unit, the unit must be deleted before deleting the concatset.

### Syntax

DELETE *concatset-name*

### Parameters

*concatset-name*

The name of the concatset to be deleted.

### Switches

There are no switches associated with this command.

### Examples

To delete concatset C1, which is associated with unit D0, enter:

```
DELETE D0  
DELETE C1
```

### See Also

DELETE *unit-number*  
SET *concatsets*

## DELETE *connections*

Deletes a specified connection from the table of known connections maintained by the controller.

The table of known host connections is maintained in the controller's memory. Once a connection is added to the table, it stays there, even if the physical connection between host adapter and controller port is severed. The only way to remove a connection from the table is through the DELETE *connections* command.

DELETE *connections* removes the connection from the table whether or not the host adapter is still physically connected to a controller port.

**NOTE:** A connection with an access path *explicitly* enabled on a unit cannot be deleted. Access path is enabled explicitly through the *ENABLE\_ACCESS\_PATH* qualifier of the ADD UNITS or SET unit commands. If access path is generically enabled for all connections (*ENABLE\_ACCESS\_PATH= ALL*), then any or all connections can be deleted. A connection with explicit access path must have the access path disabled (through the *DISABLE\_ACCESS\_PATH* qualifier of the SET *unit* command) before the connection can be deleted.

### Syntax

DELETE *connection-name*

### Parameters

*connection-name*

The name given to the host connection. The connection name is one of the following:

- The default name assigned to the host connection when it was physically connected to the controller port. Default names are of the form !NEWCON*nn*.
- The name given through the RENAME command.
- The name given through the ADD CONNECTIONS command.

### Switches

There are no switches associated with this command.

## Examples

To delete host connection Server1 from the table of known connections (unless the access path to Server1 is specifically enabled for one or more unit), enter:

```
DELETE SERVER1
```

To delete host connection Server4 from the table of known connections when Server4 has explicit access path to unit D7, enter:

```
SET D7 DISABLE_ACCESS_PATH=SERVER4  
DELETE SERVER4
```

## See Also

ADD CONNECTIONS  
ADD UNITS  
SET *connection-name*  
SET *unit-number*

## DELETE *container-name*

Deletes a specified container belonging to the controller configuration.

---

**IMPORTANT:** A container cannot be deleted if the container is in use by a higher-level container. For example, a disk belonging to a member of a RAIDset, or a RAIDset unit, cannot be deleted. To delete a member of one of these storagesets, the higher-level container or containers must be deleted first.

Also, to delete a unit that belongs to a remote copy set, the remote copy set must be deleted first. (One exception to this rule: a remote (target) member of a remote copy set can be deleted from the copy set.)

---

**NOTE:** This command *does not* delete failedsets or sparesets. See page 2-63 and page 2-65 for details.

When a storageset is deleted, the individual disks are free to be used by another container. If you create the container again with the exact same disk configuration, and none of the disks have been used for anything or initialized, then the container can be reassembled using its original disks.

### Syntax

```
DELETE container-name
```

### Parameters

*container-name*

Identifies the container to be deleted. This is the name given to the container when it was created using the ADD command (for example, ADD DISKS, ADD STRIPESETS, and so forth).

### Switches

There are no switches associated with this command.

### Examples

To delete a disk drive named DISK10000, enter:

```
DELETE DISK10000
```

To delete a stripeset named STRIPE1, enter:

```
DELETE STRIPE1
```

To delete a RAIDset named RAID9, enter:

```
DELETE RAID9
```

**See Also**

```
DELETE FAILEDSET  
DELETE SPARESETS  
UNMIRROR
```

## DELETE FAILEDSETS

Removes a disk drive from a failedset. The failedset contains disk drives that were:

- Removed by the controller from RAIDsets and mirrorsets because they failed
- Manually removed using the SET command (for example, SET *mirrorset-name REMOVE=disk-name*)

Enter the DELETE FAILEDSETS command before physically removing failed members from the storage enclosure for testing, repair, or replacement.

You should consider all disk drives in the failedset as defective. Repair or replace disks found in the failedset.

### Syntax

```
DELETE FAILEDSETS disk-name
```

### Parameters

*disk-name*

Identifies the disk you want to delete from the failedset. Only one disk at a time can be removed from a failedset.

### Switches

There are no switches associated with this command.

### Example

To delete DISK20200 from the failedset, enter:

```
DELETE FAILEDSETS DISK20200
```

### See Also

```
SET FAILEDSETS  
SHOW FAILEDSETS
```

## DELETE *remote-copy-set-name*

Deletes a specified remote copy set. Upon completion of this command, the target unit will no longer be a member of the remote copy set.

**NOTE:** This command works only in a DRM environment and requires an HSG80 array controller with ACS version 8.6P code. Like all DRM commands, use of this command is heavily restricted. Refer to the *Compaq StorageWorks Data Replication Manager HSG80 ACS Version 8.6P Operations Guide* for examples of usage.

This command works only on the site acting as initiator. This is the local site except in a failover situation.

This DELETE command is only valid if the error mode of the remote copy set is normal. The error mode is set by the *ERROR\_MODE* switch of the SET *remote copy set* command.

If the remote copy set is a member of an association set, the association set must be deleted before the remote copy set is deleted.

### Syntax

DELETE *remote-copy-set-name*

### Parameters

*remote-copy-set-name*

The name given to the remote copy set that is to be deleted.

### Switches

There are no switches associated with this command.

### Examples

To delete RCS1, enter:

```
DELETE RCS1
```

### See Also

ADD REMOTE\_COPY\_SETS  
SET *remote-copy-set-name*

## DELETE SPARESETS

Removes a disk drive from the spareset. The spareset contains disk drives that are available for use, but not yet added to the controller configuration.

### Syntax

```
DELETE SPARESETS disk-name
```

### Parameters

*disk-name*

Identifies the disk drive being deleted from the spareset. Remove only one disk at a time from a spareset.

### Switches

There are no switches associated with this command.

### Example

To remove DISK20300 from the spareset, enter:

```
DELETE SPARESETS DISK20300
```

### See Also

ADD SPARESETS  
SHOW SPARESETS

## DELETE *unit-number*

Deletes a unit from the subsystem configuration.

The DELETE command causes the flushing of any user data from the write-back cache to the disks and deletes the specified unit. The command deletes the association of the unit with its underlying device, storageset, RAIDset, or partition. The container and any data in it are left intact.

If any errors occur when trying to flush the user data, the logical unit is not deleted. To delete a unit that has existing errors, you must clear all the errors using a CLEAR\_ERRORS command.

### Syntax

```
DELETE unit-number
```

### Parameters

*unit-number*

Identifies the unit number to be deleted. The *unit-number* is the same name given to the unit when it was created using the ADD UNITS command.

### Switches

There are no switches associated with this command.

### Example

This example shows how to delete disk unit number D103:

```
DELETE D103
```

**See Also**

ADD UNITS  
CLEAR\_ERRORS  
CLEAR\_ERRORS LOST\_DATA  
CLEAR\_ERRORS UNWRITEABLE\_DATA  
DELETE *container-name*  
DELETE FAILEDSETS  
DELETE SPARESETS  
DESTROY\_PARTITION

## DESTROY\_PARTITION

Removes a partition from a container. Marks the area reserved for a partition as available. The available area is then consolidated with any adjacent free areas.



**CAUTION:** Data contained on a partition is lost when you enter the DESTROY\_PARTITION command.

You cannot destroy a partition that has been assigned a unit number. You must first enter the DELETE *unit-number* command to delete the unit using the partition.

After a partition is destroyed, the container from which it was created must be initialized.

### Syntax

```
DESTROY_PARTITION container-name PARTITION=partition-number
```

### Parameters

The following parameters are available to the DESTROY\_PARTITION command:

- *container-name*
- *partition-number*

These parameters are described in the following paragraphs:

#### *container-name*

Identifies the disk or storage set containing the partition to be destroyed. This is the name given to the container when it was created using the ADD command (for example, ADD DISKS, ADD STRIPESETS, and so forth).

#### *partition-number*

Identifies the partition to be destroyed. Use the SHOW *container-name* command to identify the correct partition before carrying out the DESTROY\_PARTITION command.

### Switches

There are no switches associated with this command.

### Example

To delete the unit for partition 2 on RAIDset RAID9 and destroy the partition, enter:

```
DELETE D102  
DESTROY_PARTITION RAID9 PARTITION=2
```

If partition 2 of RAID9 has not yet been assigned a unit number, to delete partition 2, enter:

```
DESTROY_PARTITION RAID9 PARTITION=2
```

### See Also

```
CREATE_PARTITION  
DELETE unit-number  
SHOW
```

## DIRECTORY

Displays a list of the diagnostics and utilities available on “this controller.”

### Syntax

DIRECTORY

### Parameters

There are no parameters associated with this command.

### Switches

There are no switches associated with this command.

### Example

To display a directory listing, enter:

```
DIRECTORY
```

The following is an example of the resultant display:

```
HSUTIL      V86P D
FRUTIL      V86P D
CHVSN       V86P D
CLCP        V86P D
CLONE       V86P D
CONFIG      V86P D
DILX        V86P D
DIRECT      V86P D
DSTAT       V86P D
DDSTAT      V86P D
DWNGRD     V86P D
FMU         V86P D
VTDPY      V86P D
```

**NOTE:** CHVSN, DSTAT and DWNGRAD are not user utilities. These utilities are used by Compaq authorized service providers only.

### See Also

RUN

## EXIT

This command is used only to terminate a remote virtual terminal connection. Use of this command exits the CLI program and returns control to the host.

### Syntax

EXIT

### Parameters

There are no parameters associated with this command.

### Switches

There are no switches associated with this command.

### Example

To terminate the CLI program, enter:

EXIT

## HELP

Displays a brief explanation of how to obtain help on any command or CLI function by using the question mark (?) character.

---

**IMPORTANT:** A character space must precede the question mark.

---

### Syntax

HELP

### Parameters

There are no parameters associated with this command.

### Switches

There are no switches associated with this command.

### Example

To display information regarding the HELP command, enter:

```
HELP
```

The following is displayed:

```
Help may be requested by typing a question mark (?) at the CLI prompt.  
This will print a list of all available commands.
```

```
For further information you may enter a partial command and type a space  
followed by a (?) to print a list of all available options at that point  
in the command. For example:
```

```
SET THIS_CONTROLLER ?
```

```
Prints a list of all legal SET THIS_CONTROLLER commands.
```

To list all legal commands pertaining to a specific CLI command: type the command, type a space, and enter a question mark. For example:

```
SET ?
```

## INITIALIZE

Initializes metadata on the specified container. During initialization, a small amount of disk space is reserved for metadata that the controller uses to keep track of the array. This metadata is inaccessible to the host. Disks made transportable (using the *TRANSPORTABLE* switch of the *ADD DISKS* command) do not contain metadata.

Units are not initialized; a container is initialized before being assigned to a unit.



**CAUTION:** The *INITIALIZE* command destroys all user data on the container unless you use the *NODESTROY* switch. The *NODESTROY* switch is valid only on mirrorsets and striped mirrorsets.

If a partitioned container is initialized, all partitions are eliminated.

### Syntax

*INITIALIZE container-name*

If you initialize a transportable disk, any metadata contained on the disk is destroyed and the entire disk drive is accessible by the host. The drive does not have the error detection and data security provided by the metadata that is on nottransportable disks.

Use the *INITIALIZE* command when:

- Creating a unit from a newly installed disk.
- Creating a unit from a newly created RAIDset, stripeset, or mirrorset.
- Initializing the data structure of a previously partitioned container.

Do not use the *INITIALIZE* command when:

- Creating a unit from the same disks previously initialized, such as when a RAIDset is moved.
- Creating a storageset from existing members.
- Adding a RAIDset with the *REDUCED* switch.

## Parameters

*container-name*

Specifies the container to initialize. This is the same name given to the disk or storageset when it was created using the ADD command (for example, ADD DISKS, ADD STRIPESETS, and so forth).

## Switches

The following switches are used by this command:

- Geometry switches
  - *CAPACITY*
  - *CYLINDERS*
  - *HEADS*
  - *SECTORS\_PER\_TRACK*
- *CHUNKSIZE*
- *DESTROY* and *NODESTROY*
- *SAVE\_CONFIGURATON* and *NOSAVE\_CONFIGURATION*

These switches are described in the following paragraphs.

*CAPACITY=n* (1 to the maximum container size in blocks)

*CYLINDERS=n* (1 to 16,777,215)

*HEADS=n* (1 to 255)

*SECTORS\_PER\_TRACK=n* (1 to 255)

These commands are used to set the geometry switches reported to the host.

**NOTE:** The geometry switches should not be used unless there is a compatibility problem with the existing defaults.

The geometry switches for the INITIALIZE command are ignored when you create partitions. The geometry switches supplied with the CREATE\_PARTITION command are used by the unit.

*CHUNKSIZE=DEFAULT* (default)

*CHUNKSIZE=n*

Specifies the block chunk size to be used for RAIDsets and stripesets. You can specify the chunk block size by entering *CHUNKSIZE=n*, or allow the controller to set the chunk size by entering *CHUNKSIZE=DEFAULT*.

**NOTE:** The *CHUNKSIZE* switch is only valid with stripesets and raidsets.

The default chunk size for storagesets with less than or equal to nine members is 256 blocks, or 128 kilobytes (K). The default chunk size for storagesets with more than nine members is 128 blocks or 64K. Compaq *does not* recommend a chunk size less than 128 blocks (64K).

---

**IMPORTANT:** The default chunk size should be used with caution. It is imperative that you analyze the I/O transfers being used with your application to determine the proper chunk size. An improper value used as a chunk size may cause serious performance problems with the subsystem.

---

Refer to the detailed description of chunk size that is contained in the controller installation and configuration guide for information regarding recommended chunk size settings for this application.

*DESTROY* (default)

*NODESTROY*

Controls how the metadata on the initialized container is to be handled.

**NOTE:** The *DESTROY* and *NODESTROY* switches are valid only with striped mirrorsets and mirrorsets.

- Specify *NODESTROY* to preserve forced error metadata during the initialization process. Use the *NODESTROY* switch only when a unit is to be created from disk drives reduced from mirrorsets. This allows the data on the container to be accessed by a mirrorset or striped mirrorset unit. The *NODESTROY* switch is not valid for RAIDsets, simple stripesets, and single-disk configurations.
- Specify *DESTROY* to overwrite user data and forced error flags during the initialization.

*SAVE\_CONFIGURATION*

*NOSAVE\_CONFIGURATION* (default)

Instructs the controller to save the controller configuration (or not to save the configuration) to the container being initialized.

The *SAVE\_CONFIGURATION* switch requires only one disk to be initialized with this option. However, more disks may be used, if desired, for redundancy.

- ❑ Specify *SAVE\_CONFIGURATION* to store a copy of the controller configuration on the container being initialized. A new controller can receive information from a container containing configuration information saved with the *SAVE\_CONFIGURATION* switch. If you specify *SAVE\_CONFIGURATION* for a multi-device storageset, such as a stripeset, the complete controller configuration information is stored on each disk drive in the storageset.
- ❑ A disk drive initialized with the *SAVE\_CONFIGURATION* switch specified has slightly less storage space available for user data.
- ❑ Specify *NOSAVE\_CONFIGURATION* if you do not want to store a copy of the controller configuration on a container.

## Examples

To initialize container DISK10000 and save a copy of the controller configuration on it, enter:

```
INITIALIZE DISK10000 SAVE_CONFIGURATION
```

To initialize RAID4 and to reserve an area for configuration information on all the disks that constitute RAID4, enter:

```
INITIALIZE RAID4 SAVE_CONFIGURATION
```

To initialize stripeset STRIPE1 with the default chunk size, enter:

**NOTE:** Note that the chunk size is not specified, so the controller initializes the unit with the default chunk size.

```
INITIALIZE STRIPE1
```

To initialize RAIDset RAID9 with a chunk size of 20, enter:

```
INITIALIZE RAID9 CHUNKSIZE=20
```

To initialize DISK40400 and preserve the data after it is removed (reduced) from a mirrorset, enter:

```
REDUCE DISK40400
INITIALIZE DISK40400 NODESTROY
```

To show the devices with the *SAVE\_CONFIGURATION* switch enabled, enter:

```
SHOW DEVICES FULL
```

Name	Type	Port	Targ	Lun	Used by
DISK10000	disk	1	0	0	S2
	DEC	RZ28M	(C) DEC 1003		
	Switches:				
	NOTTRANSPORTABLE				
	TRANSFER_RATE_REQUESTED=20MHZ (synchronous 10.00 MHZ negotiated)				
	LOCAL				
	Size: 4108970 blocks				
	Configuration being backed up on this container				
DISK30300	disk	3	3	0	S2
	DEC	RZ28M	(C) DEC 1003		
	Switches:				
	NOTTRANSPORTABLE				
	TRANSFER_RATE_REQUESTED=20MHZ (synchronous 10.00 MHZ negotiated)				
	LOCAL				
	Size: 4108970 blocks				
	Configuration being backed up on this container				

### See Also

```
ADD DISKS
ADD MIRRORSETS
ADD RAIDSETS
ADD STRIPESETS
ADD PASSTHOUGH
ADD UNITS
CONFIGURATION RESET
CONFIGURATION RESTORE
CREATE_PARTITION
MIRROR
```

## LOCATE

Indicates the physical location of configured units, storagesets, and devices by FLASHING the device fault LED on the front of the storage device. A FLASHING LED helps to distinguish between located devices and failed devices.

The LOCATE command causes the device fault LED to function as follows:

- FLASH once per second on a good device. The LED turns OFF with the LOCATE CANCEL command.
- Illuminate continuously on a failed device. The LED stays ON even after being turned OFF with the LOCATE CANCEL command.

**NOTE:** The LOCATE command can also be used to test the device fault LED.

Not all devices provide a device fault LED; therefore, these devices cannot be identified using the LOCATE command.

### Syntax

LOCATE *parameter*

### Parameters

The following parameters are available to the LOCATE command:

- *ALL*
- *CANCEL*
- *container-name*
- *DISKS*
- *ptl*
- *UNITS*
- *unit-number*

These parameters are described in the following paragraphs:

**NOTE:** Only one of the following parameters can be entered with each LOCATE command.

#### *ALL*

Causes the device fault LEDs of all configured devices to FLASH. You can also specify *ALL* to test all of the LEDs at once.

**CANCEL**

Turns OFF all device fault LEDs turned ON with the LOCATE command.

***container-name***

Causes the device fault LEDs on the devices within the *container-name* to FLASH. If a device name is given, the device fault LED FLASHES. If a storageset name is given, the fault LED on all of the devices assigned to the storageset FLASHES.

**DISKS**

Causes the device fault LEDs of all configured disks to FLASH.

***ptl (scsi-port-target-lun)***

Causes the device fault LED on the device at the given SCSI location to FLASH.

**UNITS**

Causes the device fault LEDs of all devices used by the units to FLASH.

**NOTE:** This parameter is useful for determining which storage devices are not currently configured into logical units.

***unit-number***

Causes the device fault LEDs on the devices making up the *unit-number* to FLASH.

**Switches**

There are no switches associated with this command.

**Examples**

To cause the device fault LED on device DISK10000 to FLASH, enter:

```
LOCATE DISK10000
```

To cause the device fault LEDs on all of the devices assigned to disk unit number D102 to FLASH, enter:

```
LOCATE D102
```

To cause the device fault LEDs on all configured disk devices to FLASH, enter:

```
LOCATE DISKS
```

To turn OFF the device fault LEDs that are FLASHING on all devices, enter:

```
LOCATE CANCEL
```

**See Also**

SHOW

## MIRROR

Creates a one-member mirrorset from a single disk and names it.

**NOTE:** This command is *used only* on disks already configured as units or members of a stripeset.

Use the ADD MIRRORSETS command to create a mirrorset from disk drives not already members of higher-level containers.

After the disk drive is converted to a mirrorset, increase the nominal number of members by entering the SET *mirrorset-name* MEMBERSHIP=*number-of-members* command, then enter the SET *mirrorset-name* REPLACE=*disk-name* command to add more members to the mirrorset.

### Syntax

MIRROR *disk-name mirrorset-name*

### Parameters

The following parameters are available to the MIRROR command:

- *disk-name*
- *mirrorset-name*

These parameters are described in the following paragraphs:

#### *disk-name*

Specifies the name of the disk to convert to a one-member mirrorset. The disk must be part of a unit.

#### *mirrorset-name*

Assigns a name for the mirrorset.

The mirrorset-name must start with a letter (A through Z) and may consist of a maximum of nine characters including letters A through Z, numbers 0 through 9, periods (.), dashes (-), or underscores (\_).

It is common to name a mirrorset MIRR*n*, where *n* is a sequentially assigned, unique identifier. Other naming conventions are acceptable, but this naming convention provides both the type of container and its unique identifier.

## Switches

The following switches are available for use with the MIRROR command:

- *COPY*
- *POLICY* and *NOPOLICY*

These switches are described in the following paragraphs.

*COPY=FAST*

*COPY=NORMAL* (default)

Sets the speed at which the controller copies data to a new member from normal mirrorset members when data is being mirrored to the storageset's disk drives:

- ❑ Specify *COPY=FAST* to allow the creation of mirrored data to take precedence over other controller operations. When you specify *COPY=FAST*, the controller uses more resources to create the mirrored data, and copying takes less time. However, overall controller performance is reduced.
- ❑ Specify *COPY=NORMAL* when operations performed by the controller should take priority over the copy operation. If you specify *COPY=NORMAL* creating the mirrored data has a minimal impact on performance.

*POLICY=BEST\_FIT*

*POLICY=BEST\_PERFORMANCE* (default)

*NOPOLICY*

Sets the selection criteria the controller uses to choose a replacement disk from the spareset when a mirrorset member fails.

- ❑ Specify *POLICY=BEST\_FIT* to choose a replacement disk drive from the spareset that equals or exceeds the base member size (smallest disk drive at the time the mirrorset was initialized). If there is more than one disk drive in the spareset that meets the criteria, the controller selects a disk drive with the best performance.
- ❑ Specify *POLICY=BEST\_PERFORMANCE* to choose a replacement disk drive from the spareset with the best performance. The controller attempts to select a disk on a different port than existing mirrorset members. If there is more than one disk drive in the spareset matching the best performance criteria, the controller selects a disk drive that equals or exceeds the base member size.
- ❑ Specify *NOPOLICY* to prevent the controller from automatically replacing a failed disk device. This causes the mirrorset to operate in a reduced state until either *POLICY=BEST\_PERFORMANCE* or *POLICY=BEST\_FIT* is selected, or a member is manually placed in the mirrorset (see page 2-125).

## Example

The following steps show how to create a striped mirrorset with full redundancy:

1. Create a normal stripeset.
2. Create a unit from the stripeset.
3. Make each member of the normal stripeset a mirrorset containing two members.

The commands used in the script below set the nominal number of members in each mirrorset to two and add a second disk to each mirrorset. Because the higher-level structure of the stripeset is carried down to the mirrorsets, initialization of the mirrorsets or adding them as units is not necessary.

```
ADD STRIPESETS STRIPE1 DISK10100 DISK20100 DISK30100
INITIALIZE STRIPE1
ADD UNITS D102 STRIPE1
MIRROR DISK10100 MIRROR1
SET MIRROR1 MEMBERSHIP=2
SET MIRROR1 REPLACE=DISK20200
MIRROR DISK20100 MIRROR2
SET MIRROR2 MEMBERSHIP=2
SET MIRROR2 REPLACE=DISK30200
MIRROR DISK30100 MIRROR3
SET MIRROR3 MEMBERSHIP=2
SET MIRROR3 REPLACE=DISK10200
```

## See Also

```
ADD MIRRORSETS
INITIALIZE
REDUCE
SHOW MIRRORSETS
UNMIRROR
```

## POWEROFF

This command only applies to BA370 enclosure configurations for turning OFF the power to the subsystem enclosure.

**NOTE:** Stop all I/O operations between the hosts and controllers before issuing a POWEROFF command.

### Syntax

POWEROFF

### Parameters

There are no parameters for this command.

### Switches

The following switches are available for use with the POWEROFF command:

- *BATTERY* and *BATTERY\_OFF*
- *OVERRIDE\_BAD\_FLUSH* and *NO\_OVERRIDE\_BAD\_FLUSH*
- *SECONDS*

These switches are described in the following paragraphs.

*BATTERY\_ON*

*BATTERY\_OFF* (default)

Instructs the external cache battery (ECB) charger to turn OFF or remain ON.

- Specify *BATTERY\_ON* to keep the ECB charger ON after the POWEROFF command is issued.
- Specify *BATTERY\_OFF* to turn OFF the ECB charger after the POWEROFF command is issued.

**NOTE:** The ECB LEDs will continue to FLASH in both cases, but the cache module LEDs cease FLASHING when *BATTERY\_OFF* is used.

*OVERRIDE\_BAD\_FLUSH*

*NO\_OVERRIDE\_BAD\_FLUSH* (default)

Instructs the controller to either power OFF the enclosure or remain ON depending on the cache flush results.

- ❑ Specify *OVERRIDE\_BAD\_FLUSH* to override a failed cache flush and power OFF the enclosure.
- ❑ Specify *NO\_OVERRIDE\_BAD\_FLUSH* to prevent a power OFF when the cache flush fails.

*SECONDS=nn*

When the **POWEROFF** command is entered, all disk units in the enclosure are set to write-through. When the time interval, as represented by *nn* seconds, has elapsed, an orderly rundown of all units is started. When all units in the enclosure are successfully rundown, the enclosure power is turned OFF. Table 2-2 shows what action will be taken depending on the switch settings and the results of the attempted flush.



**CAUTION:** If the *BATTERY\_OFF* switch is used with the *OVERRIDE\_BAD\_FLUSH* switch, unwritten data could be lost. Do not power off the subsystem until the unwritten data has been recovered.

**Table 2-2 POWEROFF Switch Settings**

Battery Switch	Override Switch	Flush Results	Action
BATTERY_ON	OVERRIDE_BAD_FLUSH	Success	Controller and units in the enclosure shut down and the ECB charger remains ON.
BATTERY_ON	OVERRIDE_BAD_FLUSH	Failure	Controller and units in the enclosure shut down and the ECB charger remains ON.
BATTERY_ON	NO_OVERRIDE_BAD_FLUSH	Success	Controller and units in the enclosure shut down and the ECB charger remains ON.
BATTERY_ON	NO_OVERRIDE_BAD_FLUSH	Failure	Nothing is shut down, the ECB charger remains ON, and the user is notified of a bad flush.
BATTERY_OFF	OVERRIDE_BAD_FLUSH	Success	Controller and units in the enclosure shut down and the ECB charger turned OFF.
BATTERY_OFF	OVERRIDE_BAD_FLUSH	Failure	Controller and units in the enclosure shut down and the ECB charger turned OFF.
BATTERY_OFF	NO_OVERRIDE_BAD_FLUSH	Success	Controller and units in enclosure shut down and the ECB charger turned OFF.
BATTERY_OFF	NO_OVERRIDE_BAD_FLUSH	Failure	Nothing is shut down, the ECB charger remains ON, and the user is notified of a bad flush.

In dual-redundant mode, if both controllers cannot be shutdown, then both controllers and associated battery chargers remain ON.

### Example

To power off the disk units and the enclosure in 10 seconds (*BATTERY\_OFF* and *NO\_OVERRIDE\_BAD\_FLUSH* are the defaults), enter:

```
POWEROFF SECONDS=10
```

## REDUCE

Removes member disk drives from mirrorsets and decreases the nominal number of members in the mirrorsets.

This command *does not* put reduced members into the failedset (unlike the SET *mirrorset-name REMOVE=disk-name* command). When using the REDUCE command to take a snapshot of a striped mirrorset, you must reduce all mirrorsets with one command. The CLONE utility does this automatically.

The nominal number of members in a mirrorset is determined by the number of members assigned to the mirrorset with the SET *mirrorset-name MEMBERSHIP=number-of-members* command or the ADD MIRRORSETS *mirrorset-name disk-name1 [disk-nameN]* command—in other words, the number of disks that the mirrorset originally contained before it was reduced. The actual number of members contained in the mirrorset may be less than the nominal number of members if:

- A disk drive is not added back to the mirrorset.
- A member remains removed from the mirrorset.
- The mirrorset replacement policy switch *NOPOLICY* is specified with the SET *mirrorset-name* command.
- No spare disks exist.

The actual number of members in the mirrorset can never be greater than the nominal number of members. The disks to be removed do not need to be members of the same mirrorset. However, the disks must all be part of the same unit (for example, the same striped mirrorset). When a disk is reduced from a mirrorset, the controller:

- Flushes all of the unit's data from write-back data cache.
- Pauses I/O to the unit.
- Removes the specified disk(s).
- Decreases the nominal number of members of the mirrorset(s) by the number of disk(s) removed from the mirrorset(s).
- Re-establishes I/O to the unit.

For each reduced mirrorset, there must be at least one remaining normal member after the reduction. If this is not true for all of the *disk-names* specified, the mirrorset is not reduced.

Only normal members can be reduced. A normal member is a mirrorset member whose entire contents are the same as all other normal members within the mirrorset.

**NOTE:** An error is displayed if you attempt to reduce any mirrorset so that there would not be any normal member remaining.

### Syntax

REDUCE *disk-name1 disk-name2 disk-name3...*

### Parameters

*disk-name1 disk-name2 disk-name3...*

Specifies the names of the disk or disks to be removed from the mirrorset or mirrorsets. Multiple members can be removed with the REDUCE command.

### Switches

There are no switches associated with this command.

### Example

To remove DISK20100, DISK20200, and DISK40200 from their respective mirrorsets, enter:

```

SHOW STRIPE1
Name          Storageset          Uses          Used by
-----
STRIPE1      stripeset              MIRR1
                                MIRR2
                                MIRR3
                                D104

SHOW MIRRORSETS
Name          Storageset          Uses          Used by
-----
MIRR1        mirrorset           DISK10100
                                DISK20100
                                STRIPE1
MIRR2        mirrorset           DISK10200
                                DISK20200
                                STRIPE1
MIRR3        mirrorset           DISK30300
                                DISK40200
                                STRIPE1
    
```

```
REDUCE DISK20100 DISK20200 DISK40200
```

```
SHOW MIRRORSETS
```

Name	Storageset	Uses	Used by
MIRR1	mirrorset	DISK10100	STRIPE1
MIRR2	mirrorset	DISK10200	STRIPE1
MIRR3	mirrorset	DISK30300	STRIPE1

### See Also

```
ADD MIRRORSETS  
MIRROR  
RUN CLONE  
SET mirrorset-name  
SHOW MIRRORSETS
```

## RENAME

Renames a specified container or specified host connection.

**NOTE:** Units, remote copy sets, and association sets cannot be renamed.

### Syntax

```
RENAME old-container-name new-container-name
```

### Parameters

The following parameters are available to the RENAME command:

- *old-container-name*
- *new-container-name*

These parameters are described in the paragraphs that follow.

*old-container-name*

Specifies the existing name of the container or host connection.

*new-container-name*

Assigns the new name for the container or host connection.

A name of a host connection can be any combination of letters and numbers, with the one restriction that it cannot take the form of the default assigned by the controller (!NEWCONnn).

### Switches

There are no switches associated with this command.

### Example

To change the name of DISK10000 to MYDISK, enter:

```
RENAME DISK10000 MYDISK
```

To change the name of host connection !NEWCON03 to server2, enter:

```
RENAME !NEWCON03 SERVER2
```

## RESTART *controller*

Flushes all user data from the write-back cache of the specified controller and restarts the controller.

### Syntax

RESTART *controller*

### Parameters

*controller*

Identifies which controller is to receive the RESTART command. You must specify THIS\_CONTROLLER (the one connected to the CLI maintenance terminal) or OTHER\_CONTROLLER.

### Switches

The following switches are available to the RESTART *controller* command:

- *IGNORE\_ERRORS* and *NOIGNORE\_ERRORS*
- *IMMEDIATE\_SHUTDOWN* and *NOIMMEDIATE\_SHUTDOWN*

These switches are described in the following paragraphs.

*IGNORE\_ERRORS*

*NOIGNORE\_ERRORS* (default)

Controls the reaction of the controller based on the status of write-back cache.



**CAUTION:** The *IGNORE\_ERRORS* switch might cause the controller to keep unflushed data in the write-back cache until it restarts and is able to write the data to devices. Do not perform any hardware changes until the controller flushes the cache.

---

- Specify *IGNORE\_ERRORS* to instruct the controller to restart even if the data within write-back cache cannot be written to the devices.
- Specify *NOIGNORE\_ERRORS* to instruct the controller to not restart if the data within write-back cache cannot be written to the devices.

*IMMEDIATE\_SHUTDOWN*

*NOIMMEDIATE\_SHUTDOWN* (default)

Instructs the controller when to shutdown and whether to flush the write-back cache or not.



**CAUTION:** The *IMMEDIATE\_SHUTDOWN* switch instructs the controller to immediately shutdown without regard to any data contained within write-back cache. Do not perform any hardware changes until the controller flushes the cache.

---

- Specify *IMMEDIATE\_SHUTDOWN* to instruct the controller to restart immediately without flushing data from the write-back cache to devices.
- Specify *NOIMMEDIATE\_SHUTDOWN* to instruct the controller not to restart before all data has been flushed from write-back cache to the devices.

## Examples

To restart “this controller,” enter:

```
RESTART THIS_CONTROLLER
```

To restart “other controller,” enter:

```
RESTART OTHER_CONTROLLER
```

## See Also

*SELFTEST controller*

*SHUTDOWN controller*

**RETRY\_ERRORS** *unit-number* **UNWRITEABLE\_DATA**

Causes the controller to attempt to write previously unwriteable data from the write-back cache to the specified devices. No data is lost if the retry fails.

If a container fails in a way that prevents the data in write-back cache to be written to the container, an unwriteable data error is reported.

**Syntax**

```
RETRY_ERRORS unit-number UNWRITEABLE_DATA
```

**Parameter**

*unit-number*

Identifies the unit number to which the data contained in write-back cache tries to write. The unit-number is the same name given to the unit when it was created using the ADD UNITS command.

**Switches**

There are no switches associated with this command.

**Example**

To retry the writing of the cached data previously marked “unwriteable to disk unit D103,” enter:

```
RETRY_ERRORS D103 UNWRITEABLE_DATA
```

**See Also**

```
CLEAR_ERRORS UNWRITEABLE_DATA
```

## RUN

Runs the specified diagnostic or utility program on “this controller.”

### Syntax

RUN *program-name*

### Parameter

*program-name*

The *program-name* parameter specifies the name of the diagnostic or utility program to be run. The following programs can currently be run:

- CHVSN—This is not a user utility. This utility may be used by Compaq authorized service providers only.
- CLCP—A utility used to load updated software code or patches.
- CLI—A utility that allows the entry of the command line interpreter commands into the controller.
- CLONE—A utility used to automate the process of mirroring units to create a snapshot copy of host unit data.
- CONFIG—A utility used to locate and add devices to the controller configuration. The CONFIG utility may be run anytime new devices are added to the subsystem.
- DILX—A utility used to test and verify the controller operation with attached storage devices under a high or low I/O load. Run DILX (disk inline exerciser) only when there is no activity on the controller. The total I/O load is handled by the controller, bypassing the host.

The DILX utility has two modes: autoconfigure mode and standard mode.



**CAUTION:** Run the DILX utility in the autoconfigure mode only at initial installations. When write operations are enabled, the DILX utility may overwrite existing data.

---

The autoconfigure mode is the most thorough mode and allows you to:

- Automatically test all of the disk units configured
- Automatically perform thorough tests on all units with write operations enabled

The standard mode is more flexible and allows you to:

- ❑ Test disks you select
- ❑ Perform tests in read-only mode or write-only mode
- ❑ Provide run time and performance summary option
- ❑ Run in read-only mode
- ❑ **DIRECT**—A command used to display a list of all executable diagnostic or utility programs.
- ❑ **DSTAT**—This is not a user utility. This utility may be used by Compaq authorized service providers only.
- ❑ **DWNGRD**—This is not a user utility. This utility may be used by Compaq authorized service providers only.
- ❑ **FMU**—A fault management utility used to control several spontaneous errors. FMU also displays information regarding the most recent controller and memory system failure.
- ❑ **FRUTIL**—A utility used when replacing a failed controller, external cache battery, or cache module.
- ❑ **HSUTIL**—A utility used to format a disk device or to download new firmware to a tape or disk device.
- ❑ **VTDPY**—A utility used to display the current controller state, performance data, processor utilization, host post activity and status, device state, logical unit state, cache performance, and I/O performance.

Refer to the controller troubleshooting reference guide for more information regarding these utilities.

### Switches

There are no switches associated with this command.

### Example

To start the DILX diagnostic program, enter:

```
RUN DILX
```

### See Also

DIRECTORY

## SELFTEST *controller*

Flushes the data from the specified controller write-back cache (if present) and shuts down the controller. It then restarts the controller in looping self-test mode. Press the controller reset (//) button to take the controller out of self-test mode.

### Syntax

SELFTEST *controller*

### Parameters

*controller*

Identifies which controller is to perform the SELFTEST *controller* command. You must specify THIS\_CONTROLLER (the one connected to the CLI maintenance terminal) or OTHER\_CONTROLLER.

### Switches

The following switches are available to the SELFTEST *controller* command:

- *IGNORE\_ERRORS* and *NOIGNORE\_ERRORS*
- *IMMEDIATE\_SHUTDOWN* and *NOIMMEDIATE\_SHUTDOWN*

These switches are described in the following paragraphs.

*IGNORE\_ERRORS*

*NOIGNORE\_ERRORS* (default)

Instruct the controller how to respond to write-back cache errors.



**CAUTION:** The *IGNORE\_ERRORS* switch might cause data to remain in write-back cache. Do not perform any hardware changes until the controller flushes the cache.

- ❑ Specify *IGNORE\_ERRORS* to instruct the controller to ignore any write-back cache errors. Such errors can result from data contained within write-back cache unable to be written to the devices or lost data errors.
- ❑ Specify *NOIGNORE\_ERRORS* to instruct the controller not to run the self-test program if the write-back cache errors are detected.

*IMMEDIATE\_SHUTDOWN*  
*NOIMMEDIATE\_SHUTDOWN* (default)

Instructs the controller whether to flush the write-back cache.



**CAUTION:** The *IMMEDIATE\_SHUTDOWN* switch instructs the controller to immediately shut down, without regard to any data contained within write-back cache. Do not perform any hardware changes until the controller flushes the cache.

---

- ❑ Select *IMMEDIATE\_SHUTDOWN* to instruct the controller to run the self-test program immediately without flushing user data from write-back cache to devices.
- ❑ Select *NOIMMEDIATE\_SHUTDOWN* to instruct the controller to flush data from write-back cache before running the self-test program.

## Examples

To start the self-test program on “this controller,” enter:

```
SELFTEST THIS_CONTROLLER
```

To run the self-test program on the “other controller,” even if the “other controller” cannot flush all data from the write-back cache, enter:

```
SELFTEST OTHER_CONTROLLER IGNORE_ERRORS
```

## See Also

*RESTART controller*

*SHUTDOWN controller*

## SET associations

Changes the characteristics of an association set.

**NOTE:** This command works only in a DRM environment and requires an HSG80 array controller with ACS version 8.6P code. Like all DRM commands, use of this command is heavily restricted. Refer to the *Compaq StorageWorks Data Replication Manager HSG80 ACS Version 8.6P Operations Guide* for examples of usage.

### Syntax

SET *association-set-name*

**NOTE:** Only one characteristic of an association set can be changed at any one time; therefore, only one switch at a time can be specified with any SET *association-set-name* command.

### Parameters

*association-set-name*

These name of the association set whose characteristics are to be changed.

### Switches

The following switches are available for the SET *association-set-name* command:

- *ADD*
- *FAIL\_ALL* and *NOFAIL\_ALL*
- *LOG\_UNIT* and *NOLOG\_UNIT*
- *ORDER\_ALL* and *NOORDER\_ALL*

These switches are described in the following paragraphs.

*ADD=remote-copy-set-name*

This switch adds the specified remote copy set to the association set.

*FAIL\_ALL*

*NOFAIL\_ALL*

This switch determines the failsafe lock operation of members of the association set. (Failsafe lock is a condition a remote copy set assumes under certain potentially catastrophic error conditions. The failsafe locked condition prevents further write operations from the host to the remote copy set members.)

When *FAIL\_ALL* is specified, all the members of the association set assume the same failsafe lock condition if they are in failsafe error mode. Failsafe lock is enabled by the *ERROR\_MODE* switch of the *SET remote-copy-set-name* command. If one member of the association set becomes failsafe locked, any association set member that has failsafe lock enabled also becomes failsafe locked.

When *NOFAIL\_ALL* is specified, the members of the association set react independently to failsafe lock conditions. One member of the association set becoming failsafe locked has no effect on the other members of the association set.

This switch has no effect if all members of the association set have failsafe lock disabled (normal error mode).

*LOG\_UNIT=unit-name*

*NOLOG\_UNIT*

Specifying *LOG\_UNIT* assigns a dedicated log unit for the association set. Should the initiator become unable to access the target, the unit specified by *unit-name* logs a history of write commands from the host. When the target becomes accessible, the initiator can read the log disk and can send the write commands, in order, to the target, which brings the target into congruency with the initiator.



**CAUTION:** When the command is entered, a header is immediately written to the log unit, which may make it difficult or impossible to recover any user data previously written on the unit. Care should be taken in specifying which unit should be the log unit.

---

The log unit must be either a mirrorset or a striped mirrorset. It cannot be a partitioned unit. The log unit must reside at the initiator site and cannot be moved to the target site. In addition, it must have the following characteristics:

- Write-back caching disabled
- Access disabled
- Other unit settings at default

This switch is valid only if all members of the association set are in normal (not failsafe) error mode. Error mode is determined by the *ERROR\_MODE* switch of the *SET remote-copy-set-name* command.

Specifying *NOLOG\_UNIT* deassigns the log unit.

*ORDER\_ALL*

*NOORDER\_ALL*

When *ORDER\_ALL* is specified:

- ❑ If one member of the association set starts logging a history of write operations, all members of the association set start logging write operation history.
- ❑ The order of all asynchronous write operations across all members of the association set is preserved.

When *NOORDER\_ALL* is specified:

- ❑ Members of the association set start to log (or not) independently.
- ❑ The order of all asynchronous write operations across all members of the association set is not preserved.

This switch cannot be changed when a log unit is assigned to the association set. The log unit must be removed, then the order switch changed, then the log unit must be reassigned. The order switch goes into effect when the log unit is assigned.

## Examples

To add remote copy sets RCS2 and RCS4 to association set AS3, enter:

```
SET AS3 ADD=RCS2
SET AS3 ADD=RCS4
```

## See Also

```
ADD ASSOCIATIONS
ADD REMOTE_COPY_SETS
SET remote-copy-set-name
```

## SET *concatsets*

Expands an existing unit by concatenating another storage set of the same type to the storage set that constitutes the unit.



**CAUTION:** This command should only be done with host operating systems that can support dynamic volume expansion. If the operating system cannot handle one of its disks getting suddenly bigger, use of this command could make data inaccessible.

This command is subject to restrictions:

- Both storage sets must be of the same type.
- If either member storage set becomes inoperative, the concatset becomes inoperative. However, a reduced RAID set does not make the concatset inoperative.
- Mirror sets cannot be used.
- Partitions cannot be used.
- Concatsets cannot be partitioned.
- The maximum total disks in a concatset is 24.
- Storage sets must have been initialized before being added to the concatset.
- The CLONE utility cannot be used on a concatset.
- Concatsets cannot be used in remote copy sets.

### Syntax

*SET concatset-name*

### Parameters

*concatset-name*

The name of the concatset to be expanded.

### Switches

*ADD=storage-set-name*

Concatenates the storage set specified by *storage-set-name* to the concatset.

## Examples

To expand the capacity of unit D0 which consists of stripeset Stripe1, by adding another stripeset (Stripe2), enter:

```
ADD CONCATSETS C1 STRIPE1
SET C1 ADD=STRIPE2
```

## See Also

```
ADD CONCATSETS
DELETE concatsets
SHOW CONCATSETS
```

## SET *connection-name*

Changes the operating characteristics of a host connection. Each path between a Fibre Channel adapter in a host computer and an active host port on a controller is a connection.

This command adds the specified host connection to the table of known connections. This table is maintained in the controller's memory. The maximum table length is 96 connections; if the table contains 96 entries, new connections cannot be added unless some old ones are deleted.

The SET *connection-name* command changes the operating parameters of the specified host connection. A host connection is a specific instance of one host connected to one port of one controller through one host adapter.

### Syntax

SET *connection-name*

### Parameters

*connection-name*

This is the name of the host connection. When a new host-adapter-port-controller connection is made, the new connection is given a default connection name. The default connection name is !NEWCON $nn$ , where  $nn$  is a decimal number. The connection name can be changed through the RENAME command.

### Switches

The following switches are available for the SET *connection-name* command:

- OPERATING\_SYSTEM
- RESERVATION\_STYLE
- UNIT\_OFFSET

These switches are described in the following paragraphs.

*OPERATING\_SYSTEM=OS\_name*

Specifies the operating system of the host. After typing "*OPERATING\_SYSTEM*," add a space and enter a question mark. The CLI will display the available options.

*RESERVATION\_STYLE=CONNECTION\_BASED (default)*

*RESERVATION\_STYLE=HBA\_PORT\_ID\_BASED*

Selection of a *RESERVATION\_STYLE* should be based upon the capabilities of the host operating system. See the OS kit for more details. SCSI persistent reservations are processed differently by the HSG80 based upon the *RESERVATION\_STYLE*. Normal SCSI reservations ( not persistent) are always treated as *CONNECTION\_BASED*.

When set to *HBA\_PORT\_ID\_BASED*, a single persistent reservation command is propagated to all HSG80 controller ports, thereby enabling the host to access the unit over any available path.

When set to *CONNECTION\_BASED*, the persistent reservation is only valid for the port on which it is received, thereby limiting the host access to those paths that have been explicitly reserved.

---

**IMPORTANT:** If a particular host prefers either the *CONNECTION\_BASED* or *HBA\_PORT\_ID\_BASED* reservation style, all the connections to that particular host must have identical reservation style settings.

The most important advantage of this mechanism is allowing various hosts, with different reservation style requirements, to be connected to the same HSG80 controllers in a SAN environment.

---

### *UNIT\_OFFSET*

Unit offset (usually just called offset) is a decimal value that establishes the beginning of the range of units that a host connection can access. It defines and restricts host connection access to a contiguous group of unit numbers.

If no value is specified for the *UNIT\_OFFSET* switch, then host connections have default offsets as follows:

- ❑ In transparent failover mode, connections on port 1 have an offset of 0 and connections on port 2 have an offset of 100.
- ❑ In multiple-bus failover mode, all connections have an offset of 0.

The relationship between LUN number, unit number, and offset is as follows:

$$\text{LUN} = \text{unit-number} - \text{offset}$$

- ❑ Logical unit-number (LUN) = the logical unit-number presented to the host connection
- ❑ Unit-number = the number assigned to the unit in the *ADD UNITS* command. This is the number by which the unit is known internally to the controllers.

**Example**

```
set !newcon31 operating_system=vms unit_offset=20
```

**See Also**

ADD CONNECTIONS  
ADD UNITS  
DELETE *connections*  
RENAME

## SET controller

Changes specified switch values on the specified controller. “This controller” indicates the controller that is connected to the maintenance terminal while executing CLI commands. “Other controller” is the controller not connected to the maintenance terminal in dual-redundant controller configurations.

**NOTE:** After doing a SET command to either controller, use a SHOW THIS\_CONTROLLER and a SHOW OTHER\_CONTROLLER command to verify that the changes went into effect.

### Syntax

SET *controller*

### Parameter

*controller*

Identifies which controller is to be set. Specify THIS\_CONTROLLER (the one connected to the CLI maintenance terminal) or OTHER\_CONTROLLER.

### Switches

Table 2-3 lists the switches available with this command. Descriptions of the switches follow the table.

Switch	Values
ALLOCATION_CLASS	0-4294967295; in OpenVMS: 0-65535, 0 (default)
CACHE_FLUSH_TIMER= <i>n</i>	1-65535, 10 (default)
COMMAND_CONSOLE_LUN NOCOMMAND_CONSOLE_LUN	None
IDENTIFIER= <i>n</i> NOIDENTIFIER	1-9999
MIRRORED_CACHE NOMIRRORED_CACHE	None
NODE_ID	nnn-nnnn-nnnn-nnnn xx

Table 2-3 SET controller Switches (Continued)

Switch	Values
<i>PORT_1_AL_PA=n</i> <i>PORT_2_AL_PA=n</i>	0-EF (hexidecimal); factory defaults: port 1 is 71 and port 2 is 72
<i>PORT_1_TOPOLOGY=FABRIC</i> <i>PORT_2_TOPOLOGY=FABRIC</i>	None
<i>PORT_1_TOPOLOGY=LOOP_HARD</i> <i>PORT_1_TOPOLOGY=LOOP_SOFT</i> <i>PORT_1_TOPOLOGY=OFFLINE</i> <i>PORT_2_TOPOLOGY=LOOP_HARD</i> <i>PORT_2_TOPOLOGY=LOOP_SOFT</i> <i>PORT_2_TOPOLOGY=OFFLINE</i>	None
<i>PROMPT="new prompt"</i>	1-16 characters
<i>REMOTE_COPY=node-name</i> <i>NOREMOTE_COPY</i>	None
<i>SCSI_VERSION=SCSI-2</i> <i>SCSI_VERSION=SCSI-3</i>	None
<i>TERMINAL_PARITY</i> <i>NOTERMINAL_PARITY</i>	Odd or even, no terminal parity (default)
<i>TERMINAL_SPEED</i>	4800, 9600 (default), or 19200
<i>TIME</i>	Two-digit day, three-character month, four-digit year, and two-digit hour, minute, and second
<i>UPS=NODE_ONLY</i> <i>UPS=DATACENTER_WIDE</i> <i>NOUPS</i>	None

### *ALLOCATION\_CLASS*

Allocation class is a unique identification number assigned to the controller pair under certain operating systems. The value for an allocation class is 0-4294967295. In the OpenVMS operating system, this is a 2-byte number (do not specify a number over 65535); for Compaq Tru64 UNIX, it is a 4-byte number. It is reported in response to the SCSI inquiry command and is the same for all units connected to one or both controllers. The allocation class value allows the host to identify the controllers that are a matched dual-redundant pair. This number should be unique for every pair of dual-redundant controllers in the cluster.

---

**IMPORTANT:** This value must not be zero (default) in dual-redundant configurations in host systems that implement allocation class. A zero value in this configuration causes the operating system to disable failover between the controller pair. Some operating systems do not implement allocation class, in which case the default of zero has no meaning.

---

*CACHE\_FLUSH\_TIMER=n*  
*CACHE\_FLUSH\_TIMER=10 (default)*

Specifies how many seconds (1–65535) of idle time on a unit may elapse before the write-back cache flushes its entire contents to the disks of this idle unit. The default setting is 10 seconds. When changed, the new value entered for this switch takes effect immediately.

*COMMAND\_CONSOLE\_LUN*  
*NOCOMMAND\_CONSOLE\_LUN*

Enables or disables the command console LUN (CCL), a communication LUN used to initially setup StorageWorks Command Console. When changed, the new setting for this switch takes effect immediately.

This switch works in SCSI-2 mode only. This switch has no effect in SCSI-3 mode. SCSI mode is set by the *SCSI\_MODE* switch of this command.

- Select *COMMAND\_CONSOLE\_LUN* to enable the CCL.
- Select *NOCOMMAND\_CONSOLE\_LUN* to disable the CCL.

If all LUNs have already been allocated and you attempt to enable the CLL, the following message displays:

Error 1230 : Command console LUN can't be enabled because all LUNs are allocated

*IDENTIFIER=n*  
*NOIDENTIFIER*

*IDENTIFIER* provides an alternative way (other than worldwide name) for some operating systems to identify the command console LUN (CCL).

The *IDENTIFIER* switch is used with the *SCSI\_VERSION* switch when the SCSI version is set to SCSI-3 mode. The *IDENTIFIER* switch creates a *CCL identifier* that makes the controller and the CCL visible to the host. This number can be a value between 1-9999.

*MIRRORED\_CACHE*  
*NOMIRRORED\_CACHE*

Enables the mirrored-write-back-data cache feature on dual-redundant controllers. When changed, both controllers restart for the new switch setting to take effect.

The following tasks are performed when the *NOMIRRORED\_CACHE* switch is specified:

- Data in write-back cache is flushed when cache is configured in non-mirrored mode.
- Enables mirrored write-back cache on both controllers.
- If an invalid cache configuration exists within the cache modules, an error is generated.

---

**IMPORTANT:** Both controllers must be operational before this command is accepted.

---

Issue this switch through only one controller. The controllers must have a valid cache configuration before specifying this switch. The controllers automatically restart when this switch is specified.

**NOTE:** All unwritten write-cached data is automatically flushed from the cache before restart when the *MIRRORED\_CACHE* switch is specified. Depending on the amount of data to be flushed, this command may take several minutes to complete before the controller is restarted.

The *NOMIRRORED\_CACHE* switch disables mirror mode. Data in write-back cache is flushed when this switch is entered from mirrored mode. This switch disables mirrored write-back cache on both controllers. Therefore, this switch is only to be issued through one controller. The controller must contain a valid cache configuration before this switch is assigned. Unlike going from nonmirrored mode to mirrored mode, going from mirrored mode to nonmirrored mode is permitted with a failed cache module. The controller automatically restarts when this switch is specified.

*NODE\_ID=nnnn-nnnn-nnnn-nnnn xx*

Sets the subsystem worldwide name (node ID).

- nnnn-nnnn-nnnn-nnnn* is the node id
- xx* is the checksum



**CAUTION:** Each subsystem has its own unique worldwide name (node ID). If you attempt to set the subsystem worldwide name to a name other than the one that came with the subsystem, the data on the subsystem will not be accessible. Never set two subsystems to the same worldwide name; data corruption will occur.

*NODE\_ID* is used to set the worldwide name. Worldwide name, which is actually a number, is a Fibre Channel convention. Every port has a unique 64-bit number, consisting of 16 hex digits. Each StorageWorks Fibre Channel enclosure is assigned a node ID, which the controller pair in the enclosure assumes. The port IDs derive from the node ID. The node ID assigned to a enclosure never changes.

The node ID ends in a zero. An example of a node ID is 5000-1FE1-FF0C-EE00. The derivation of port IDs from the node ID is done automatically by the controllers. The numerical value of the port IDs depends on what failover mode the controllers are in.

In transparent failover mode, the port ID of port 1 for both controllers is the node ID plus 1, so in the above example, the port ID for port 1 would be 5000-1FE1-FF0C-EE01. Both controllers share this port ID for port 1 because in the transparent failover mode, only one controller's port 1 is active at any time, and the other port 1 is on standby. Similarly, both controllers share a port ID for port 2, which is the node ID plus 2 (in the example, 5000-1FE1-FF0C-EE02).


For a single configuration controller, the Port ID is derived the same way (plus 1 for port 1, plus 2 for port 2).

In multiple-bus failover, all four ports are independent, and each has its own port ID. The port IDs are assigned as follows:

- ❑ Controller B port 1 = node ID + 1
- ❑ Controller B port 2 = node ID + 2
- ❑ Controller A port 1 = node ID + 3
- ❑ Controller A port 2 = node ID + 4

When one of the pair of controllers in a dual redundant configuration is replaced, the remaining controller remembers the node ID. When the replacement controller is installed, the in-place controller tells the node ID to the replacement controller, and the replacement controller automatically assumes the correct port IDs.

If a situation occurs that requires the node ID to be reset, it can be done through the CLI by specifying the *NODE\_ID* parameter in the *SET controller* command. The node ID *must* be reset to the number on the enclosure sticker. (The sticker calls it the worldwide name.) The sticker also contains a checksum, which verifies the ID number. When the node ID is entered, both controllers will assume the correct port IDs automatically. Figure 2-1 shows the location of the sticker.

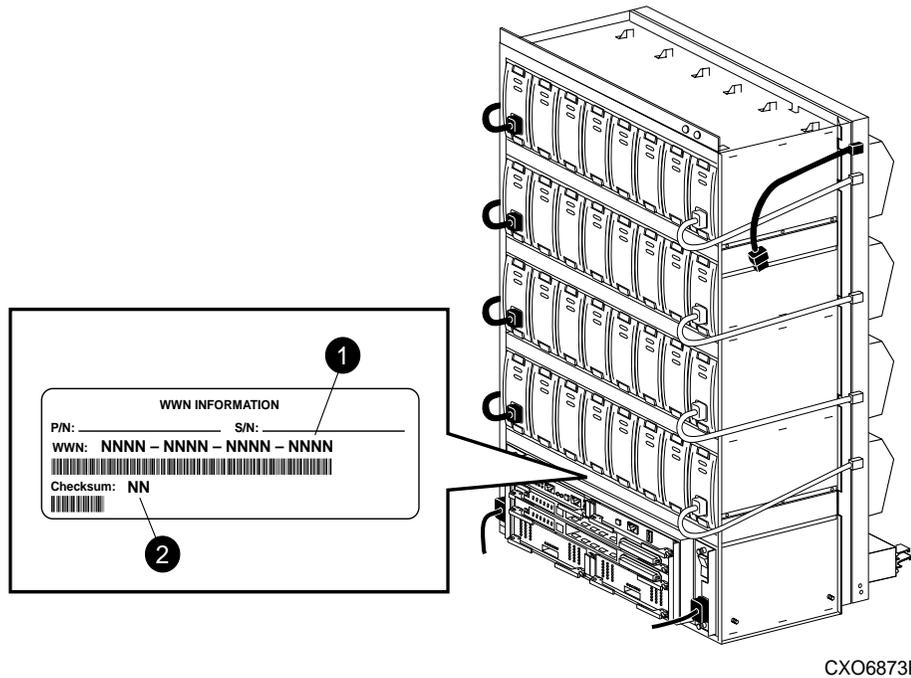

CXO6873B

- ❶ Node ID
- ❷ Checksum

Figure 2-1. Location of node ID sticker on a BA370 enclosure

*PORT\_1\_AL\_PA=n*

*PORT\_2\_AL\_PA=n*

Specifies the arbitrated loop physical address (AL-PA) for the host ports (used only in Fibre Channel arbitrated loop (FC-AL) topology). This switch works only when *LOOP\_HARD* is specified for the *PORT\_1\_TOPOLOGY* or *PORT\_2\_TOPOLOGY* switches. The range of addresses allowed is 0-EF (hexadecimal).

The factory settings for AL-PA are 71 for port 1 and 72 for port 2. If the controller memory is wiped out, the AL-PA for both ports defaults to 69.

*PORT\_1\_TOPOLOGY=FABRIC*

*PORT\_2\_TOPOLOGY=FABRIC*

Specifies switch topology for a host port (used only in Fibre Channel switch (FC-SW) topology).

*PORT\_1\_TOPOLOGY=LOOP\_HARD*  
*PORT\_1\_TOPOLOGY=LOOP\_SOFT*  
*PORT\_1\_TOPOLOGY=OFFLINE*  
*PORT\_2\_TOPOLOGY=LOOP\_HARD*  
*PORT\_2\_TOPOLOGY=LOOP\_SOFT*  
*PORT\_2\_TOPOLOGY=OFFLINE*

Indicates whether the user or controller selects the AL-PA for a host port, or whether the port is to be set offline (used only in AL-PA (FC-AL-PA) topology). LOOP\_HARD allows you to pick the AL-PA. LOOP\_SOFT requests the controller to pick the ALPA. OFFLINE sets the host port offline. Specify OFFLINE for a port when it will not be used.

---

**IMPORTANT:** If a topology is already selected, topology must be set to offline before another topology is selected.

---

*PROMPT="new prompt"*

Specifies the alpha-numeric characters that are displayed when the ACS command line interpreter prompts for input. This display (prompt) may be from 1-16 characters in length (only printable ASCII characters and spaces). The new prompt name must be enclosed within quotes. When changed, the new text entered for this switch takes effect immediately.

*REMOTE\_COPY=node-name*  
*NOREMOTE\_COPY*

---

**IMPORTANT:** This command works in a remote copy environment and requires ACS version 8.6P code.

---

The *REMOTE\_COPY* switch names a controller pair (node) and puts the controller pair into remote copy mode. The node-name can be up to eight characters long. It is suggested that the node-name be something meaningful in the context of the DRM setup, such as the location, that distinguishes one controller pair from another.

---

**IMPORTANT:** Do not use "local" and "remote" as node names. These are reserved as keywords.

---

All the other DRM commands are hidden until *REMOTE\_COPY* is specified for the controller pair.

The *REMOTE\_COPY* switch causes a restart of the controller.

The *NOREMOTE\_COPY* switch disables remote copy functionality for the controller pair. It also removes the node-name given by the *REMOTE\_COPY* switch. The switch does not work if there are any remote copy sets or remote copy connections associated with the controller pair.

**NOTE:** No other switch can be specified in the same command string if *NOREMOTE\_COPY* is specified.

*SCSI\_VERSION=SCSI-2 (default)*

*SCSI\_VERSION=SCSI-3*

Specifies the host protocol to use. SCSI-3 means that the controller uses some SCSI-3 commands. It does not mean that it is a fully-compliant SCSI-3 device. The command console LUN, CCL, presents to the host a LUN through which it communicates with the controller.

A side effect of the SCSI mode is how the command console LUN (CCL) is handled.

- SCSI-2 specifies that the CCL is not fixed at a particular location, but floats depending on the configuration.
- SCSI-3 specifies that the CCL is fixed at LUN 0. The SCSI device-type returned to the host is array controller.

Changes to this switch take place at the next controller restart.

*TERMINAL\_PARITY=ODD*

*TERMINAL\_PARITY=EVEN*

*NOTERMINAL\_PARITY (default)*

Specifies the parity with which data is transmitted and received. When changed, the new setting for this switch takes effect immediately.

*TERMINAL\_SPEED=baud-rate*

*TERMINAL\_SPEED=9600 (default)*

Sets the terminal transmission and reception speed (baud rate) to 4800, 9600 (default), or 19200 baud. When changed, the new value entered for this switch takes effect immediately.

*TIME=dd-mmm-yyyy:hh:mm:ss*

Sets the date and time using a 24-hour clock. The time is set on both controllers in a dual-redundant configuration. When changed, the new value entered for this switch takes effect immediately.

*UPS=NODE\_ONLY*  
*UPS=DATACENTER\_WIDE*  
*NOUPS*

Specifies whether the controller should perform regular battery condition checks. Setting the *UPS/NOUPS* switch for either controller sets the switch for both controllers. Both controllers must be restarted in order for the new setting to take effect.

- ❑ Specify *UPS=NODE\_ONLY* if your storage subsystem power is supplied by a separate uninterruptible power supply (UPS) directly connected to a PVA module. If *NODE\_ONLY* is specified the controller continues to check the condition of the cache batteries.



**CAUTION:** Setting *UPS=NODE\_ONLY* or *UPS=DATACENTER\_WIDE* without having a UPS or similar backup system in place may result in data loss if power is interrupted.

---

- ❑ Specify *UPS=DATACENTER\_WIDE* if the whole room or building (not just the subsystem) is supported by a UPS. If *DATACENTER\_WIDE* is specified, the controller does not check the condition of the cache batteries and ignores the battery's state. This causes RAIDsets and mirrorsets to always be available, regardless of the condition of the cache batteries.
- ❑ Specify *NOUPS* to instruct the controller to perform regular cache battery checks and evaluate the condition of the cache batteries.

## Examples

To change the “this controller” CLI prompt, enter:

```
SET THIS_CONTROLLER PROMPT="TOP"
```

To change the “other controller” CLI prompt, enter:

```
SET OTHER_CONTROLLER PROMPT="CONTROLLER B"
```

To set the name of the controller pair and put the controller pair in remote copy mode, enter:

```
SET THIS_CONTROLLER REMOTE_COPY=LONDON
```

**NOTE:** The “other controller” in the pair automatically receives the same name.

**See Also**

ADD REMOTE\_COPY\_SETS  
SET *remote-copy-set-name*  
SHOW *controller*

## SET *device-name*

Enables changes to the transfer rate and transportable characteristics of the specified disk drive.

### Syntax

SET *device-name*

### Parameter

*device-name*

Specifies the name of the device to change, such as disk or passthrough device.

### Switches

The following switches are available to the SET *device-name* command:

- *TRANSFER\_RATE\_REQUESTED*
- *TRANSPORTABLE* and *NOTTRANSPORTABLE*

These switches are described in the following paragraphs.

*TRANSFER\_RATE\_REQUESTED=ASYNCHRONOUS*

*TRANSFER\_RATE\_REQUESTED=DEFAULT*

*TRANSFER\_RATE\_REQUESTED=20MHZ (default)*

*TRANSFER\_RATE\_REQUESTED=10MHZ*

*TRANSFER\_RATE\_REQUESTED=5MHZ*

Specifies the maximum data transfer rate for the controller to use in communicating with the device. You may need to limit the transfer rate to accommodate long cables between the controllers and the device.

**NOTE:** This switch is used by all container types.

*TRANSPORTABLE*  
*NOTTRANSPORTABLE*

Indicates whether a disk can be accessed exclusively by StorageWorks controllers (the *TRANSPORTABLE* switch is used for disks only).

**NOTE:** This switch works only if the disk drive is not used by a higher level assembly, such as a storageset or a unit, and is used by disk containers only.

- Storagesets cannot be made transportable.
- Specify *NOTTRANSPORTABLE* for all disks used in RAIDsets, stripesets, mirrorsets, and sparesets.
- Transportable disks do not contain any metadata or restricted areas on the disk. Therefore, transportable disks forfeit the advantage metadata provides.
- Transportable disks can be moved to a non-StorageWorks environment with their data intact.
- If you specify the *NOTTRANSPORTABLE* switch and there is no metadata on the unit, the unit must be initialized.
- If you specify *TRANSPORTABLE* for a disk that was originally initialized as a *NOTTRANSPORTABLE*, you should initialize the disk.
- Compaq recommends you avoid specifying *TRANSPORTABLE* unless transportability of the device or media is imperative and there is no other way to accomplish moving the data.

**NOTE:** Specifying *TRANSPORTABLE* should be avoided unless transportability of the device or media is imperative and there is no other way to accomplish moving the data.

### Examples

To set the data transfer rate of DISK20000 to 5MHz, enter:

```
SET DISK20000 TRANSFER_RATE_REQUESTED=5MHZ
```

To set DISK10300 to transportable, enter:

```
SET DISK10300 TRANSPORTABLE
```

### See Also

```
ADD DISKS
SHOW DEVICES
SHOW DISKS
```

## SET EMU

Sets operating parameters for the environmental monitoring unit (EMU) in a BA370 enclosure.

In subsystems with more than one BA370 enclosure, and therefore more than one EMU, the SET EMU command controls both the master and slave EMU settings. The EMU within the primary (master) enclosure instructs the EMUs within the other enclosures to operate at the same settings as the master EMU.

### Syntax

SET EMU

### Parameters

There are no parameters for this command.

### Switches

The following switches are available to the SET EMU command:

- *ALARM*
- *FANSPEED*
- *SENSOR-n-SETPOINT*

These switches are described in the following paragraphs.

*ALARM=silent*

*ALARM=audible*

Determines whether or not the audible alarm of the EMU will sound in the following cases:

- Drive failure
- Controller restart

The EMU alarm will still sound in the event of an adverse environmental condition, such as a power failure or an over-temperature condition.

*FANSPEED=HIGH*  
*FANSPEED=AUTOMATIC (default)*

Sets the speed at which the fan operates.

- Select *FANSPEED=HIGH* to force the fans in all connected enclosures to operate at high speed continuously.
- Select *FANSPEED=AUTOMATIC* to allow the EMU to control the fan speed for the fans in all connected enclosures.

The EMU instructs the fans to operate at high speed when any of the temperature setpoints are exceeded or when one or more fans are not functioning.

*SENSOR\_1\_SETPOINT=nn*  
*SENSOR\_2\_SETPOINT=nn*  
*SENSOR\_3\_SETPOINT=nn*  
*SENSOR\_x\_SETPOINT=35 (default)*

Sets the acceptable temperatures (in Celsius) at which the subsystem operates. Sensor 1 and Sensor 2 set the maximum operating temperature for the primary subsystem enclosure. Sensor 3 sets the maximum operating temperature for the EMU unit. The allowable range for the setpoint is 0°C (32°F) to 49°C (120°F). The EMU determines the default setpoint for all three sensors.

Table 2-4 lists the valid EMU set-point temperatures in both Fahrenheit and Celsius.

°C	°F	°C	°F	°C	°F	°C	°F	°C	°F
0	32	10	50	20	68	30	86	40	104
1	34	11	52	21	70	31	88	41	106
2	46	12	54	22	72	32	90	42	108
3	37	13	55	23	73	33	91	43	109
4	39	14	57	24	75	34	93	44	111
5	41	15	59	25	77	35	95	45	113
6	43	16	61	26	79	36	97	46	115
7	45	17	63	27	81	37	99	47	117
8	46	18	64	28	82	38	100	48	118
9	48	19	66	29	84	39	102	49	120

If any of the setpoints assigned to a slave EMU do not match the corresponding setpoints assigned to the master EMU, the slave EMU settings change to match the corresponding master EMU settings.

Refer to the enclosure documentation for detailed information about setting the EMU temperature set points.

### Examples

This example shows how to set EMU sensor number 2 to 34°C:

```
SET EMU SENSOR_2_SETPOINT=34
```

This example shows how to set the EMU fan to operate at high speed:

```
SET EMU FANSPEED=HIGH
```

### See Also

SHOW

## SET FAILEDSET

Enables changes to the automatic replacement policy for the failedset.

### Syntax

```
SET FAILEDSET
```

### Parameters

There are no parameters associated with this command.

### Switches

*AUTOSPARE*

*NOAUTOSPARE*

Specifies the policy to be used by the controller when a disk drive is physically replaced in the failedset.

- ❑ Specify *AUTOSPARE* to instruct the controller to automatically move devices physically replaced in the failedset into the spareset.
- ❑ Specify *NOAUTOSPARE* to instruct the controller to leave devices physically replaced in the failedset. The device, though replaced, remains in the failedset until it is manually removed with the `DELETE FAILEDSET` command.

In most circumstances, a disk physically replaced into the failedset is functional and contains no metadata—that is, a new device (one that has not been initialized). If you specify the *AUTOSPARE* switch when a disk is physically replaced in the failedset, the controller checks to see if any metadata is present. If the controller detects metadata, the disk remains in the failedset. If the controller does not detect metadata, the controller automatically initializes the disk and moves it from the failedset to the spareset. Now a member of the spareset, the disk is available for any mirrorset or RAIDset requiring a replacement member. If the automatic initialization fails, the disk remains in the failedset.

Disks that you plan to use for *AUTOSPARE* must not have valid metadata on them. If you suspect a disk does have metadata on it (if it was used in a stripeset or was initialized as *NOTTRANSPORTABLE*), you must use the following procedure to make the disk available as a spareset replacement disk (DISK10000 is used as an example):

1. Delete all containers to which the disk belongs.

2. Make the disk transportable.  
SET DISK10000 TRANSPORTABLE.
3. Initialize the disk.  
INITIALIZE DISK10000
4. Delete the disk.  
DELETE DISK10000
5. Add disk to the Spareset or remove disk from the enclosure.

### Example

To enable the automatic spare feature, enter:

```
SET FAILEDSET AUTOSPARE
```

To disable the automatic spare feature, enter:

```
SET FAILEDSET NOAUTOSPARE
```

### See Also

```
DELETE FAILEDSET  
SHOW FAILEDSET
```

## SET FAILOVER COPY=*controller*

Configures both controllers to operate in a dual-redundant configuration under transparent failover mode. This command allows both controllers to access the storage devices, providing controller fault-tolerant data processing. If one of the two controllers fail, the devices and any cache attached to the failed controller become available to and accessible through the other controller.

---

**IMPORTANT:** Remove all connections that appear using the SHOW CONNECTIONS command prior to establishing transparent failover mode.

---

**NOTE:** Before putting the controllers in failover mode, remove any previous mode with the SET NOFAILOVER command.

### Syntax

```
SET FAILOVER COPY=controller
```

### Parameters

There are no parameters for this command.

### Switches

*COPY=controller*

Identifies which controller contains the source subsystem configuration for the copy. You must specify THIS\_CONTROLLER (the one connected to the CLI maintenance terminal) or OTHER\_CONTROLLER. The companion controller receiving the configuration information restarts after the command is executed.



**CAUTION:** Make sure you know which controller has the good configuration information before entering this command. The device configuration information from the controller specified by the *controller* parameter overwrites the information on the companion controller.

---

- Specify THIS\_CONTROLLER to copy the device configuration information from the “this controller” to “other controller.”
- Specify OTHER\_CONTROLLER to copy the device configuration information from the “other controller” to “this controller.”

Due to the amount of information being passed from one controller to the other, this command may take up to two minutes to complete.

### Example

To set the controllers in transparent failover mode and copy the configuration information from “this controller” to “other controller,” enter:

```
SET FAILOVER COPY=THIS_CONTROLLER
```

### See Also

```
SET MULTIBUS_FAILOVER  
SET NOFAILOVER  
SET NOMULTIBUS_FAILOVER
```

## SET *mirrorset-name*

Changes the characteristics of a mirrorset including the addition and removal of members.

### Syntax

SET *mirrorset-name*

### Parameter

*mirrorset-name*

Specifies the name of the mirrorset to modify. This is the same name given to the mirrorset when it was created with the ADD MIRRORSETS command.

### Switches

The following switches are available to the SET *mirrorset-name* command:

- *COPY*
- *MEMBERSHIP*
- *POLICY* and *NOPOLICY*
- *READ\_SOURCE*
- *REMOVE*
- *REPLACE*

These switches are described in the following paragraphs.

*COPY=FAST*

*COPY=NORMAL*

Sets the speed at which the controller copies data to a new member from normal mirrorset members when data is being mirrored to the storageset's disk drives.

- Specify *COPY=FAST* to allow the creation of mirrored data to take precedence over other controller operations. When you specify *COPY=FAST*, the controller uses more resources to create the mirrored data, and copying takes less time. However, overall controller performance is reduced.
- Specify *COPY=NORMAL* when operations performed by the controller should take priority over the copy operation. If you specify *COPY=NORMAL*, creating the mirrored data has a minimal impact on performance.

*MEMBERSHIP=number-of-members*

Sets the nominal number of mirrorset members to the number you specify for the *number-of-members* value. A maximum of six members can be specified.

**NOTE:** No other switches can be set when you specify the *MEMBERSHIP* switch.

If you increase the number of members, the controller automatically adds disk drives from the spareset to the mirrorset until the new number of members is reached, or there are no more suitable disk drives in the spareset.

If you increase the number of members and the *NOPOLICY* switch is specified, the *REPLACE=disk-name* switch must be specified to bring the mirrorset up to the new nominal number of members.

You cannot set the nominal number of members lower than the actual number of members. Specify the *REMOVE* switch to reduce the number of disk drives from the mirrorset.

*POLICY=BEST\_FIT*

*POLICY=BEST\_PERFORMANCE (default)*

*NOPOLICY*

Sets the selection criteria the controller uses to choose a replacement disk from the spareset when a mirrorset member fails.

- Specify *POLICY=BEST\_FIT* to choose a replacement disk drive from the spareset that equals or exceeds the base member size (smallest disk drive at the time the mirrorset was initialized). If there is more than one disk drive in the spareset that meet the criteria, the controller selects a disk drive with the best performance.
- Specify *POLICY=BEST\_PERFORMANCE* to choose a replacement disk drive from the spareset with the best performance. The controller attempts to select a disk on a different port than existing mirrorset members. If there is more than one disk drive in the spareset matching the best performance criteria, the controller selects a disk drive that equals or exceeds the base member size of the mirrorset.
- Specify *NOPOLICY* to prevent the controller from automatically replacing a failed disk device. The mirrorset operates in a reduced state until a *POLICY=BEST\_FIT* or *POLICY=BEST\_PERFORMANCE* is selected, or a member is manually placed in the mirrorset.

*READ\_SOURCE=disk-name*  
*READ\_SOURCE=LEAST\_BUSY (default)*  
*READ\_SOURCE=ROUND\_ROBIN*

Selects the mirrorset member used by the controller to satisfy a read request.

- ❑ Specify the *READ\_SOURCE=disk-name* of a specific member to which you want the controller to direct all read requests. If the member fails out of the mirrorset, the controller selects the first normal member it finds to satisfy its read requests.
- ❑ Specify *READ\_SOURCE=LEAST\_BUSY* to direct read requests to the mirrorset member with the least amount of work in its queue. If multiple members have equally short queues, the controller queries these members for each read request as it would when *READ\_SOURCE=ROUND\_ROBIN* is specified.
- ❑ Specify *READ\_SOURCE=ROUND\_ROBIN* to sequentially direct read requests to each mirrorset member. The controller equally queries all normal members for each read request.

*REMOVE=disk-name*

Instructs the controller to remove a member from an existing mirrorset. The disk drive specified by *disk-name* is removed from the mirrorset specified by *mirrorset-name*. The removed disk drive is added to the failedset.

**NOTE:** No other switches can be set when the *REMOVE* switch is specified.

For each reduced mirrorset, there must be at least one remaining normal member after the reduction. A normal member is one whose contents are the same as the other members.

Unlike the *REDUCE* command, the *REMOVE* switch does not change the nominal number of members in the mirrorset. If the mirrorset has a replacement policy and there are acceptable disk drives in the spareset, the controller adds disk drives from the spareset to the mirrorset to make the actual number of members equal to the nominal number of members.

**NOTE:** Normalizing members exist only when you first create a mirrorset or when you clear lost data on a mirrored unit. The controller recognizes the member as normal, and all other original mirrorset members as "normalizing." New data that is written to the mirrorset is written to all members. The controller copies the normal member's data existing data before the mirrorset was created to the normalizing members. The controller recognizes the normalizing members as normal when all the normalizing member's blocks are the same.

*REPLACE=disk-name*

Instructs the controller to add a disk member to an existing mirrorset if the following conditions are met.

- The replacement policy is set to *NOPOLICY*.
- The mirrorset is missing at least one member.

If these conditions are met, the disk drive specified by *disk-name* is added to the mirrorset specified by *mirrorset-name*. The nominal number of members does not change.

The disk name used is the name given to a disk when it was added to the configuration with the **ADD DISKS** command.

**NOTE:** Do not specify any other switches when the *REPLACE* switch is specified.

## Examples

To change the replacement policy of mirrorset **MIRR1** to **BEST\_FIT**, enter:

```
SET MIRR1 POLICY=BEST_FIT
```

To remove member **DISK30000** from mirrorset **MIRR1** created above, enter:

```
SET MIRR1 REMOVE=DISK30000
```

**NOTE:** If the mirrorset has a replacement policy and an acceptable disk drive is in the spareset, the controller automatically adds the spare disk drive to the mirrorset.

To add disk **DISK30200** to the mirrorset **MIRR1** and immediately begin the copy operation onto **DISK 30200**, enter:

```
SET MIRR1 REPLACE=DISK30200
```

## See Also

ADD MIRRORSETS  
MIRROR  
REDUCE  
SHOW MIRRORSETS  
UNMIRROR

## SET MULTIBUS\_FAILOVER

Places “this controller” and the “other controller” into multiple-bus failover mode. Failover is a process that allows a controller to take over total control of the storage subsystem in the event of the failure of its companion controller.

---

**IMPORTANT:** Remove all connections that appear using the SHOW CONNECTIONS command prior to establishing multibus failover mode.

---

**NOTE:** Before putting the controllers in MULTIBUS\_FAILOVER mode, remove any previous transparent failover mode with the SET NOFAILOVER command.

### Syntax

```
SET MULTIBUS_FAILOVER COPY=controller
```

### Parameters

There are no parameters for this command.

### Switches

*COPY=controller*

Identifies which controller contains the source configuration. You must specify THIS\_CONTROLLER (the one connected to the CLI maintenance terminal) or OTHER\_CONTROLLER. The companion controller receives the configuration information and restarts.



**CAUTION:** Make sure you know which controller has the good configuration information before entering this command. The device configuration information from the controller specified by the *controller* parameter overwrites the information on the companion controller.

---

- ❑ Specify THIS\_CONTROLLER to copy the device configuration information from the “this controller” to “other controller.”
- ❑ Specify OTHER\_CONTROLLER to copy the device configuration information from the “other controller” to “this controller.”

Due to the amount of information being passed from one controller to the other, this command may take up to two minutes to complete.

### Example

This example shows how to configure a controller pair to operate in multiple bus failover mode:

```
SET MULTIBUS_FAILOVER COPY=THIS_CONTROLLER
```

The configuration on “this controller” is automatically copied to the “other controller” when you issue the SET MULTIBUS\_FAILOVER command. If you want to prefer specific units to specific controllers, use the following command after setting multiple bus failover:

```
SET D100 PREFERRED_PATH=THIS_CONTROLLER  
SET D101 PREFERRED_PATH=OTHER_CONTROLLER
```

### See Also

```
SET FAILOVER  
SET NOFAILOVER  
SET NOMULTIBUS_FAILOVER
```

## SET NOFAILOVER SET NOMULTIBUS\_FAILOVER

The SET NOFAILOVER and SET NOMULTIBUS\_FAILOVER commands remove “this controller” and the “other controller” (if currently reachable) from failover mode. Either command can be used to cancel failover, as they both perform exactly the same actions.

The controller on which the command was entered is always removed from the dual-redundant mode, even if the second controller is not currently reachable. No configuration information is lost. All units that were accessed through the “other controller” fail over to “this controller,” and the “other controller” is shut down.

---

**IMPORTANT:** Immediately after entering this command, one controller should be physically removed because the sharing of devices is not supported by single controller configurations. It is recommended that both controllers be present when this command is carried out. Otherwise, the controllers become misconfigured with each other, requiring additional steps later to allow the “other controller” to be configured for failover.

---

The SET NOFAILOVER and SET NOMULTIBUS\_FAILOVER commands affect both controllers, regardless of the controller on which the command is carried out.

### Syntax

```
SET NOFAILOVER  
or  
SET NOMULTIBUS_FAILOVER
```

### Parameters

There are no parameters associated with this command.

## Switches

*DESTROY\_UNFLUSHABLE\_DATA*

*NODESTROY\_UNFLUSHABLE\_DATA* (default)

Instructs the controller how to handle data contained within write-back cache. These switches have no effect if both controllers are operational. Select one of these switches to indicate how the controller is to handle data contained in cache if one of the controllers fails before it can properly shut down with the SET NOFAILOVER, SET NOMULTIBUS FAILOVER, or SHUTDOWN commands.

Under some circumstances, the data in a failed controller's write-back cache may not fail over to the operating controller's write-back cache. For example, cache data will not failover if the operating controller has a failed cache battery because of the risk of data loss if the power is interrupted.

- ❑ Specify *NODESTROY\_UNFLUSHABLE\_DATA* to leave the unwritten data intact in the failed controller's write-back cache. When the failed controller is replaced and placed into service, the write-back cache data is flushed to the appropriate devices.
- ❑ Specify *DESTROY\_UNFLUSHABLE\_DATA* to reconfigure the operational controller before replacing the failed controller. The unwritten data of the failed controller may reference devices not present in the new configuration. If you do not destroy the old configuration data, it may conflict with the new configuration and cause the subsystem to behave unpredictably.



**CAUTION:** Unflushed data cannot be recovered after it is destroyed.

---

## Example

To terminate transparent failover mode between two controllers in a dual-redundant configuration, enter:

```
SET NOFAILOVER
```

## See Also

SET FAILOVER

SET MULTIBUS\_FAILOVER

## SET *RAIDset-name*

Changes the characteristics of the specified RAIDset.

**NOTE:** The number and type of disk drives that are used to create the storageset determine the maximum size of the RAIDset.

### Syntax

SET *RAIDset-name*

### Parameters

*RAIDset-name*

Specifies the name of the RAIDset to modify. This is the name used with the ADD UNITS command to identify the RAIDset as a host-addressable unit.

### Switches

The following switches are available to the SET *RAIDset-name* command:

- *POLICY* and *NOPOLICY*
- *RECONSTRUCT*
- *REMOVE*
- *REPLACE*

These switches are described in the following paragraphs.

*POLICY=BEST\_FIT*

*POLICY=BEST\_PERFORMANCE* (*default*)

*NOPOLICY*

Specifies the replacement policy to use when a member within the RAIDset fails.

- Specify *BEST\_FIT* to choose a replacement disk drive from the spareset that equals or exceeds the base member size (smallest disk drive at the time the RAIDset was initialized). If more than one disk drive in the spareset is the correct size, the controller selects a disk drive with the best performance.

- ❑ Specify *POLICY=BEST\_PERFORMANCE* to choose a replacement disk drive from the spareset resulting in the best performance of the RAIDset. The controller attempts to select a disk on a different port than existing members. If more than one disk drive in the spareset matches the best performance criteria, the controller selects a disk drive that equals or exceeds the base member size of the RAIDset.
- ❑ Specify *NOPOLICY* to prevent the controller from automatically replacing a failed disk device. This causes the RAIDset to operate in a reduced state until either *POLICY=BEST\_PERFORMANCE* or *POLICY=BEST\_FIT* is selected, or a member is manually replaced in the mirrorset.

*RECONSTRUCT=FAST*

*RECONSTRUCT=NORMAL (default)*

Sets the speed at which the controller reconstructs the data on the new RAIDset member replacing a failed member.

- ❑ Specify *RECONSTRUCT=NORMAL* to balance other controller operations against the reconstruct operation. The controller uses relatively few resources to perform the reconstruct, and there is little impact on performance.
- ❑ Specify *RECONSTRUCT=FAST* when the reconstruct operation must take precedence over other controller operations. The controller uses more resources to perform the reconstruction. Reconstruction takes less time, but overall controller performance is reduced during the reconstruction.

*REMOVE=disk-name*

Instructs the controller to remove a member from an existing RAIDset. The disk drive specified by *disk-name* is removed from the RAIDset specified by *RAIDset-name*. The removed disk drive is added to the failedset.

If a RAIDset is already in a reduced state, an error is displayed and the command is rejected. If a replacement policy is specified, the replacement is taken from the spareset to replace the removed member using the policy specified.

If the *NOPOLICY* switch is specified with the *SET RAIDset-name* command, the RAIDset continues to operate in a reduced state until a replacement policy is specified or the *REPLACE=disk-name* switch is specified. See the *REPLACE=disk-name* switch for information on manually replacing a RAIDset member. See the *POLICY* and *NOPOLICY* switches for information regarding setting a policy for automatic member replacement.

**NOTE:** Do not specify other switches when you use the *REMOVE* switch.

*REPLACE=disk-name*

Instructs the controller to add a disk member to an existing RAIDset if the following conditions are met:

- ❑ The replacement policy is set to *NOPOLICY*.
- ❑ The disk member is not in any configuration, including a spareset.

An error is displayed and the command is rejected if the RAIDset is not in a reduced state, if a replacement policy is already specified, or if the disk specified is already being used by a configuration (including a spareset).

**NOTE:** Do not specify other switches when you use the *REPLACE* switch.

## Examples

To change the replacement policy for RAIDset RAID9 to *BEST\_FIT*, enter:

```
SET RAID9 POLICY=BEST_FIT
```

To remove member DISK10000 from the RAID9 RAIDset, enter:

```
SET RAID9 REMOVE=DISK10000
```

**NOTE:** If there is a replacement policy, the controller moves a disk from the spareset to the RAIDset automatically.

To add disk DISK20100 to the reduced RAIDset (RAID9) and immediately begin reconstruction on DISK20100, enter:

```
SET RAID9 REPLACE=DISK20100
```

## See Also

ADD RAIDSETS  
SHOW RAIDSETS

## SET *remote-copy-set-name*

Changes the characteristics of a remote copy set.

**NOTE:** This command works only in a DRM environment and requires an HSG80 array controller with ACS version 8.6P code. Like all DRM commands, use of this command is heavily restricted. Refer to the *Compaq StorageWorks Data Replication Manager HSG80 ACS Version 8.6P Operations Guide* for examples of usage.

This command works only on the site that is functioning as initiator.

### Syntax

SET *remote-copy-set-name*

### Parameters

*remote-copy-set-name*

Specifies the name of the remote copy set to modify. This is the name used with the ADD REMOTE\_COPY\_SETS command to identify the remote copy set as a host-addressable unit.

### Switches

The following switches are available to the SET *remote-copy-set-name* command:

- *ADD*
- *ERROR\_MODE*
- *INITIATOR*
- *OPERATION\_MODE*
- *OUTSTANDING\_IOS*
- *REMOVE*
- *RESUME*
- *SUSPEND*

These switches are described in the following paragraphs.

*ADD=remote-node-name/target-unit-name*

Specifies a unit to add into the remote copy set.

*Remote-node-name* is the name of the controller pair that controls the unit that is to be added. This name is assigned through the *REMOTE\_COPY* switch of the *SET controller* command.

*Target-unit-name* is the name of the unit to be added to the remote copy set.

*ERROR\_MODE=FAILSAFE*

*ERROR\_MODE=NORMAL*

Two options are available:

- ERROR\_MODE=FAILSAFE* enables failsafe lock mode for the members of the remote copy. Failsafe lock is a condition the members of the remote copy set assume under certain potentially catastrophic error conditions. The failsafe lock condition disables access to the remote copy set members.
- ERROR\_MODE=NORMAL* allows write operations to continue even when an error condition is present.

*INITIATOR=initiator-unit-name*

Moves the role of initiator to the specified target member.

**NOTE:** This command is part of the site failover procedure. Use of this switch is restricted to only site failover conditions. Refer to the *Compaq StorageWorks Data Replication Manager HSG80 ACS Version 8.6P Operations Guide* for examples of usage.

*OPERATION\_MODE=SYNCHRONOUS*

*OPERATION\_MODE=ASYNCHRONOUS*

This switch determines which of two normal operating modes is assigned to the remote copy set.

- In synchronous mode, write operations must be written to the target cache before the host is informed that the operation is complete. Synchronous operation assures data consistency among the members of a remote copy set.
- In asynchronous mode, the write operation is reported as complete to the host before the data is written to the remote units of the remote copy set. Asynchronous mode provides greater performance and response time, but the data on all members of the remote copy set cannot be assumed to be always the same.

*OUTSTANDING\_IOS=n (1 to 240; default is 200)*

This switch sets the number of outstanding I/O operations from the initiator to the target. The way this switch operates depends on which operating mode is set by the *OPERATION\_MODE* switch:

- In synchronous mode, *OUTSTANDING\_IO* refers to the number of remote writes (write operations from the initiator to the target) that can be outstanding.

- ❑ In asynchronous mode, *OUTSTANDING\_IO* refers to the number of write operations that can be reported as completed to the host before they have been written on all the members of the remote copy set.

*REMOVE=remote-node-name/target-unit-name*

Removes a unit from an existing remote copy set.

*Remote-node-name* is the name of the controller pair that controls the unit that is to be removed. This name is assigned through the *REMOTE\_COPY* switch of the *SET THIS\_CONTROLLER* command.

*Target-unit-name* is the name of the unit to be removed from the remote copy set.

*RESUME=remote-node-name/target-unit-name*

This switch starts a recovery procedure called “mini-merge.” When the target becomes accessible, this switch enables the initiator to read the log disk and send the write commands, in order, to the target, which brings the target into congruency with the initiator.

A *SET remote-copy-set-name* command with the *SUSPEND* switch specified must have been entered prior to entering a *SET remote-copy-set-name* command with the *RESUME* switch specified.

*SUSPEND=remote-node-name/target-unit-name*

This switch allows suspension of write operations to the target so that the target can be used for backup, and then remote copy functionality can be resumed.

This switch starts the logging of write operations. When the target becomes accessible, entering a *SET remote-copy-set-name* command with the *RESUME* switch specified enables the initiator to read the log disk and send the write commands, in order, to the target, which brings the target into congruency with the initiator.

## Examples

```
SET RCS7 ERROR_MODE=FAILSAFE
SET RCS7 OPERATION_MODE=SYNCHRONOUS
SET RCS7 OPERATION_MODE=ASYNCHRONOUS
SET RCS7 OUTSTANDING_IOS=240
```

## See Also

```
ADD REMOTE_COPY_SETS
SET controller REMOTE_COPY
```

## SET *unit-number*

Changes the characteristics of the specified logical unit.

### Syntax

SET *unit-number*

### Parameters

*unit-number*

Specifies the logical unit number to modify. The *unit-number* is the name given to the unit when it was created using the ADD UNITS command.

### Switches

Table 2-5 lists all switches for the SET *unit-number* command and shows which switches can be used with each type of device and storage set. Descriptions of the switches follow the table.

Table 2-5 SET *unit-number* Switches for Existing Containers

Switch	Container Type	RAIDset	Stripeset	Mirrorset	NOTransportable Disk	Transportable Disk
<i>ENABLE_ACCESS_PATH</i> <i>DISABLE_ACCESS_PATH</i>		✓	✓	✓	✓	✓
<i>IDENTIFIER</i> <i>NOIDENTIFIER</i>		✓	✓	✓	✓	
<i>MAX_READ_CACHED_TRANSFER_SIZE</i>		✓	✓	✓	✓	✓
<i>MAX_WRITE_CACHED_TRANSFER_SIZE</i>		✓	✓	✓	✓	✓
<i>MAXIMUM_CACHE_TRANSFER_SIZE</i>		✓	✓	✓	✓	✓
<i>PREFERRED_PATH</i> <i>NOPREFERRED_PATH</i>		✓	✓	✓	✓	✓

**Table 2-5 SET *unit-number* Switches for Existing Containers (Continued)**

Switch	Container Type	RAIDset	Stripeset	Mirrorset	NOTransportable Disk	Transportable Disk
<i>READ_CACHE</i> <i>NOREAD_CACHE</i>		✓	✓	✓	✓	✓
<i>READAHEAD_CACHE</i> <i>NOREADAHEAD_CACHE</i>		✓	✓	✓	✓	✓
<i>RUN</i> <i>NORUN</i>		✓	✓	✓	✓	✓
<i>WRITE_PROTECT</i> <i>NOWRITE_PROTECT</i>		✓	✓	✓	✓	✓
<i>WRITEBACK_CACHE</i> <i>NOWRITEBACK_CACHE</i>		✓	✓	✓	✓	

**NOTE:** Regardless of storageset type, the *NORUN* switch cannot be specified for units that are partitioned.

*ENABLE\_ACCESS\_PATH=connection-names*  
*ENABLE\_ACCESS\_PATH=ALL*  
*DISABLE\_ACCESS\_PATH=connection-names*  
*DISABLE\_ACCESS\_PATH=ALL*

Specifies the access path. It can be a single specific host ID, multiple host IDs, or all host IDs (ALL). If you have multiple hosts on the same bus, you can use this switch to restrict hosts from accessing certain units. This switch limits visibility of specific units from certain hosts. For example, if two hosts are on the same bus, you can restrict each host to access only specific units.



**CAUTION:** If the storage subsystem has more than one host connection, access path must be specified carefully to avoid giving undesirable host connections access to the unit. The default condition is that access paths to all host connections are enabled. To restrict host access to a set of host connections, specify *DISABLE\_ACCESS\_PATH=ALL* when the unit is added, then use the SET *unit* command to specify the set of host connections that are to have access to the unit.

Enabling the access path to a particular host connection does not override previously enabled access paths. All access paths previously enabled are still valid; the new host connection is simply added to the list of connections that can access the unit.

The procedure of restricting access by enabling all access paths then disabling selected paths is particularly not recommended because of the potential data/security breach that occurs when a new host connection is added.

---

*IDENTIFIER=n*  
*NOIDENTIFIER*

The *IDENTIFIER* switch is used with the *SCSI\_VERSION* switch when the SCSI version is set to SCSI-3 mode. The *IDENTIFIER* switch creates a unique *unit identifier* makes the unit visible to the host. This number can be a value between 1-9999.

Identifier is an alternative way (other than worldwide name) for OpenVMS operating systems to identify the unit.

*MAX\_READ\_CACHED\_TRANSFER\_SIZE=n*  
*MAX\_READ\_CACHED\_TRANSFER\_SIZE=32 (default)*

Sets the largest number of read blocks to be cached by the controller. The controller will not cache any transfers over the size set. Acceptable values are 0 through 2048.

The *MAXIMUM\_CACHED\_TRANSFER* switch affects both read and write-back cache when set on a controller that has read and write-back caching.

*MAX\_WRITE\_CACHED\_TRANSFER\_SIZE=n*  
*MAX\_WRITE\_CACHED\_TRANSFER\_SIZE=32 (default)*

Sets the largest number of write blocks to be cached by the controller. The controller will not cache any transfers over the size set. Acceptable write block sizes are 0 through 2048.

The *MAXIMUM\_CACHED\_TRANSFER* switch affects both read and write-back cache when set on a controller that has read and write-back caching.

*MAXIMUM\_CACHED\_TRANSFER\_SIZE=n*  
*MAXIMUM\_CACHED\_TRANSFER\_SIZE=32 (default)*

Sets the largest number of write blocks to be cached by the controller. The controller will not cache any transfers over the set size. Acceptable write block sizes are 1 through 2048. The *MAXIMUM\_CACHED\_TRANSFER\_SIZE* switch affects both read and write-back cache when set on a controller that has read and write-back caching. The use of this switch has the effect of setting both the *MAX\_READ\_CACHED\_TRANSFER\_SIZE* and the *MAX\_WRITE\_CACHED\_TRANSFER\_SIZE* switches.

*PREFERRED\_PATH=OTHER\_CONTROLLER*  
*PREFERRED\_PATH=THIS\_CONTROLLER*  
*NOPREFERRED\_PATH (default)*

This command is only valid when in *MULTIBUS\_FAILOVER* mode.

The *PREFERRED\_PATH* switch allows you to balance the I/O load by specifying the controller through which the unit will be accessed. If you set *NOPREFERRED\_PATH* for a unit, it can be accessed through either controller.

The controllers only use the *PREFERRED\_PATH* setting if they are in a dual-redundant configuration. If one controller fails, all the devices are accessed through the remaining controller ignoring the *PREFERRED\_PATH* setting.

When the failed controller is restarted, the drives automatically return to the controller specified by the *PREFERRED\_PATH* switch.

You can specify the *PREFERRED\_PATH* switch for a single controller configuration; however, the switch will not take effect until you add a second controller and configure the two controllers for dual-redundancy.

- When no preferred path is assigned, the unit is targeted through the controller that detects the unit first after the controllers start.
- Select *PREFERRED\_PATH=THIS\_CONTROLLER* to instruct “this controller” to bring the units online.

- ❑ Select *PREFERRED\_PATH=OTHER\_CONTROLLER* to instruct the “other controller” to bring the units online.

**NOTE:** All partitions on a container must be addressed through the same controller. If you set *PREFERRED\_PATH* for one partition, all partitions on that container inherit the same path.

*READ\_CACHE (default)*

*NOREAD\_CACHE*

If *READ\_CACHE* is selected, when the controller receives a read request from the host, it reads the data from the disk drives, delivers it to the host, and stores the data in its cache module. Subsequent reads for the same data will take the data from cache rather than accessing the data from the disks.

Read caching improves performance in almost all situations. Therefore, it is recommended you leave its default setting, *READ\_CACHE*, enabled. However, under certain conditions, such as when performing a backup, read caching may not be necessary since only a small amount of data is cached. In such instances, it may be beneficial to disable the read cache function and remove the processing overhead associated with caching data.

*READAHEAD\_CACHE (default)*

*NOREADAHEAD\_CACHE*

Enables the controller to keep track of read I/Os. If the controller detects sequential read I/Os from the host, it will then try to keep ahead of the host by reading the next sequential blocks of data (those the host has not yet requested) and put the data in cache. This process is sometimes referred to as prefetch. The controller can detect multiple sequential I/O requests across multiple units.

Read ahead caching improves host application performance since the data will be read from the controller cache instead of disk. Read ahead caching is the default for units.

If you are adding a unit that is not expected to get sequential I/O requests, select *NOREADAHEAD\_CACHE* for the unit.

*RUN (default)*

*NORUN*

Controls the unit's availability to the host.

- Specify *RUN* to make a unit available to the host.
- Specify *NORUN* to make a unit unavailable to the host and to cause any data in cache to be flushed to one or more drives. *NORUN* spins down all the disks used in the unit. The drives making up the unit spin down after the data has been completely flushed.

**NOTE:** Specifying *NORUN* and then *RUN* to a unit also causes the subsystem configuration to be updated to the selected disk unit.

*WRITE\_PROTECT (default)*

*NOWRITE\_PROTECT*

Specifies whether data contained on the selected unit can be overwritten.

- Specify *WRITE\_PROTECT* to prevent host write operations to the unit. However, the controller may still write to a write-protected RAIDset to satisfy a reconstruct pass or to reconstruct a newly replaced member. Additionally, metadata, reconstruct, and copy writes are still allowed to RAIDsets and mirrorsets.
- Specify *NOWRITE\_PROTECT* to allow the host to write data to the unit. This allows the controller to overwrite existing data. *NOWRITE\_PROTECT* is the default for transportable disks.

*WRITEBACK\_CACHE (default)*

*NOWRITEBACK\_CACHE*

Enable or disable the write-back data caching function of the controller. The controller's write-back caching feature improves write performance.

- Specify *WRITEBACK\_CACHE* for all new RAIDsets, mirrorsets, and units you want to take advantage of the controller write-back caching feature. This switch allows the controller to declare the write operation "complete" as soon as the data reaches its cache memory. The controller performs the slower operation of writing the data to the disk drives at a later time.



**CAUTION:** Though there is built-in redundancy to protect data contained in cache, allowing data to be written to write-back cache may result in the loss of data if the controller fails.

---

*WRITEBACK\_CACHE* cannot be applied to transportable disks.

- ❑ Specify *NOWRITEBACK\_CACHE* for units you want to receive data directly from the host without being cached. This switch enables only write-through caching. In write-through caching, when the controller receives a write request from the host it places the data in its cache module, writes the data to the disk drives, then notifies the host when the write operation is complete. This process is called *write-through caching* because the data passes through—and is stored in—the cache memory on its way to the disk drives. Write-through caching is only enabled when write-back caching is disabled.

*NOWRITEBACK\_CACHE* is the default on transportable disks.

**NOTE:** When specifying the *NOWRITEBACK\_CACHE* switch, the controller might take 5 minutes to flush data contained within the write-back cache.

## Examples

To enable write protect and turn off the read cache on unit D102, enter:

```
SET D102 WRITE_PROTECT NOREAD_CACHE
```

To allow only a host connection named Roger1 to access unit D0, enter:

```
SET D0 DISABLE_ACCESS_PATH=ALL  
SET D0 ENABLE_ACCESS_PATH=ROGER1
```

## See Also

```
ADD UNITS  
SHOW UNITS  
SHOW unit-number
```

## SHOW

Displays information about controllers, storagesets, devices, partitions, and units.

The SHOW command may not display some information for devices accessed through the companion controller in a dual-redundant configuration. When information regarding a device or parameter does not appear, enter the same SHOW command from a terminal on the other controller.

### Syntax

SHOW *parameter*

### Parameters

The following parameters are available to the SHOW command:

- *association-set-name*
- ASSOCIATIONS
- *concatset-name*
- *connection-name*
- CONNECTIONS
- *controller*
- *device-name*
- *device-type*
- EMU
- *remote-copy-set-name*
- REMOTE\_COPY\_SETS
- *storageset-name*
- *storageset-type*
- *unit-number*
- UNITS

These parameters are described in the following paragraphs:

*association-set-name*

Specifies the name of the association set.

#### **ASSOCIATIONS**

Shows information on all association sets known to the controller pair.

*concatset-name*

Specifies the name of the concatset to be displayed.

*connection-name*

Specifies the name of a specific connection to be displayed.

#### **CONNECTIONS**

Shows the following connection information: connection name, operating system, controller, controller port, adapter ID address, online or offline status, and unit offset.

*controller*

Identifies the controller to be displayed. You must specify **THIS\_CONTROLLER** (the one connected to the CLI maintenance terminal) or **OTHER\_CONTROLLER**.

*device-name*

Specifies the name of a particular device to be displayed. For example, **SHOW DISK20100** displays information about the device named **DISK20100**.

*device-type*

Specifies the type of devices you want to be displayed. Valid choices include:

- DEVICES**—Shows all devices attached to the controller.
- DISKS**—Shows all disks attached to the controller.
- PASSTHROUGH**—Shows all passthrough containers attached to the controller.

#### **EMU**

Displays information regarding the status of the environmental monitoring unit.

*remote-copy-set-name*

Specifies the remote copy set to display.

#### **REMOTE\_COPY\_SETS**

Displays information on all remote copy sets known to the controller pair.

*storageset-name*

Specifies the name of a particular storageset to be displayed. For example, SHOW STRIPE1 displays information about the stripeset named STRIPE1.

*storageset-type*

Specifies the type of storageset to be displayed. Valid types include:

- CONCATSETS*—Shows all concatsets configured to the controller.
- FAILEDSETS*—Shows the failedset configured to the controller.
- MIRRORSETS*—Shows all mirrorsets configured to the controller.
- RAIDSETS*—Shows all RAIDsets configured to the controller.
- SPARESETS*—Shows the failedset configured to the controller.
- STORAGESETS*—Shows all storagesets configured with the controller.
- STRIPESETS*—Shows all stripesets configured to the controller.

*unit-number*

Specifies the name of a particular unit to be displayed. For example, SHOW D102 displays information about the unit named D102.

*UNITS*

Displays information for all units configured to the controller.

**Switches**

*FULL*

Displays additional information about each device, storageset, or controller.

**Examples**

To display a listing of disks, enter:

SHOW DISKS

Name	Type	Port	Targ	Lun	Used by
DISK20300	disk	1	0	0	D100
DISK10100	disk	1	1	0	D101

To show a full listing of devices attached to the controller, enter:

SHOW DEVICES FULL

Name	Type	Port	Targ	Lun	Used by
DISK100	disk	1	0	0	R0
	Switches:				
	NOTTRANSPORTABLE				
	TRANSFER_RATE_REQUESTED=20MHZ (synchronous 20.00 MHZ negotiated)				
	Size: 8378028 blocks				
DISK200	disk	2	0	0	R0
	Switches:				
	NOTTRANSPORTABLE				
	TRANSFER_RATE_REQUESTED=20MHZ (synchronous 20.00 MHZ negotiated)				
	Size: 8378028 blocks				
DISK300	disk	3	0	0	R0
	Switches:				
	NOTTRANSPORTABLE				
	TRANSFER_RATE_REQUESTED=20MHZ (synchronous 20.00 MHZ negotiated)				
	Size: 8378028 blocks				
DISK400	disk	4	0	0	R0
	Switches:				
	NOTTRANSPORTABLE				
	TRANSFER_RATE_REQUESTED=20MHZ (synchronous 20.00 MHZ negotiated)				
	Size: 8378028 blocks				
	Configuration being backed up on this container				

To display a complete listing of the mirrorset named MIRR1, enter:

SHOW MIRR1

Name	Storageset	Uses	Used by
MIRR1	mirrorset	DISK50300 DISK60300	S0
	Switches:		
	POLICY (for replacement) = BEST_PERFORMANCE		
	COPY (priority) = NORMAL		
	READ_SOURCE=LEAST_BUSY		
	MEMBERSHIP=2, 2 members present		
	State:		
	NORMAL		
	DISK60300 (member 0) is NORMAL		
	DISK50300 (member 1) is NORMAL		
	Size: 17769177 blocks		

To show the full information for a mirrorset, enter:

SHOW MIRRORSETS FULL

Name	Storageset	Uses	Used by
M0	mirrorset	DISK100 DISK200 DISK300 DISK400	D0

Switches:

COPY (priority) = NORMAL  
 READ\_SOURCE=LEAST\_BUSY  
 MEMBERSHIP=4, 4 MEMBER PRESENT

State:

RECONSTRUCTING  
 Size: 8378028 blocks

To show the full information for a controller, enter:

SHOW THIS\_CONTROLLER FULL

Controller:

HSG80 (c) Compaq xxxxxxxxxxx Software xxxxxx, Hardware xxxx  
 NODE\_ID = 5000-1FE1-0005-9C10  
 ALLOCATION\_CLASS = 1  
 SCSI\_VERSION = SCSI-2  
 Configured for MULTIBUS\_FAILOVER with ZG95005203  
 In dual-redundant configuration  
 Device Port SCSI address 7  
 Time: NOT SET  
 Command Console LUN is lun 0 (NOIDENTIFIER)

Host PORT\_1:

Reported PORT\_ID = 5000-1FE1-0005-9C13  
 PORT\_1\_TOPOLOGY = FABRIC (connection down)

Host PORT\_2:

Reported PORT\_ID = 5000-1FE1-0005-9C14  
 PORT\_2\_TOPOLOGY = FABRIC (connection down)  
 NOREMOTE\_COPY

Cache:

32 megabyte write cache, version 0012  
 Cache is GOOD  
 Unflushed data in cache  
 CACHE\_FLUSH\_TIMER = DEFAULT (10 seconds)

Mirrored Cache:

32 megabyte write cache, version 0012  
 Cache is GOOD  
 Unflushed data in cache

Battery:

NOUPS

```
FULLY CHARGED
Expires:          04-DEC-2002
Extended information:
Terminal speed 19200 baud, eight bit, no parity, 1 stop bit
Operation control: 00000000 Security state code: 25059
Configuration backup disabled
```

To display the current settings for the EMU, enter:

```
SHOW EMU
```

## SHOW ID

This command displays a sorted list of any unit associated with an ID. If no units are associated with an ID, an informational message will be displayed stating “No Units with Identifiers.”

### Syntax

```
SHOW ID
```

### Parameters

There are no parameters associated with this command.

### Switches

There are no switches associated with this command.

### Examples

To display a list of units associated with IDs, enter:

```
SHOW ID

Unit          ID
-----
D0            12
D3            9
D7            24
D25           90
D123          1
```

### See Also

*SET UNITS IDENTIFIER*

## SHUTDOWN *controller*

Flushes all user data from the write-back cache (if present) of the specified controller and shuts down the controller. The controller *does not* automatically restart. All units accessed through the failed controller failover to the surviving controller.

### Syntax

SHUTDOWN *controller*

### Parameter

*controller*

Identifies the controller to shut down. You must specify THIS\_CONTROLLER (the one connected to the CLI maintenance terminal) or OTHER\_CONTROLLER.

### Switches

The following switches are available to the SHUTDOWN *controller* command:

- *IGNORE\_ERRORS* and *NOIGNORE\_ERRORS*
- *IMMEDIATE\_SHUTDOWN* and *NOIMMEDIATE\_SHUTDOWN*

These switches are described in the following paragraphs.

*IGNORE\_ERRORS*

*NOIGNORE\_ERRORS* (default)

Controls the controller reaction based on the status of write-back cache.



**CAUTION:** The *IGNORE\_ERRORS* switch causes the controller to keep unflushed data in the write-back cache until it restarts and is able to write the data to devices. Do not perform any hardware changes until the controller flushes the cache.

---

- Specify *IGNORE\_ERRORS* to instruct the controller to shutdown even if the data within write-back cache cannot be written to the devices.
- Specify *NOIGNORE\_ERRORS* to instruct the controller to stop operation if the data within write-back cache cannot be written to the devices.

*IMMEDIATE\_SHUTDOWN*

*NOIMMEDIATE\_SHUTDOWN* (default)

Instructs the controller when to shutdown.



**CAUTION:** The *IMMEDIATE\_SHUTDOWN* switch causes the controller to keep unflushed data in the write-back cache until it restarts and is able to write the data to devices. Do not perform any hardware changes until the controller flushes the cache.

---

- ❑ Specify *IMMEDIATE\_SHUTDOWN* to cause the controller to shutdown immediately without checking for online devices or before flushing data from the write-back cache to devices.
- ❑ Specify *NOIMMEDIATE\_SHUTDOWN* to cause the controller not to shutdown without checking for online devices or before all data has been flushed from the write-back cache to devices.

## Examples

To shut down “this controller,” enter:

```
SHUTDOWN THIS_CONTROLLER
```

To shut down the “other controller,” even if the controller cannot write all of the write-back cached data to the units, enter:

```
SHUTDOWN OTHER_CONTROLLER IGNORE_ERRORS
```

## See Also

*RESTART controller*

*SELFTEST controller*

## SITE\_FAILOVER

Performs the site failover function in the event the original initiator site is not operational.

**NOTE:** This command works only in a DRM environment and requires an HSG80 array controller with ACS version 8.6P code. Use of this command is heavily restricted. Refer to the *Compaq StorageWorks Data Replication Manager HSG80 ACS Version 8.6P Operations Guide* for an explanation and examples of usage.

The `SITE_FAILOVER` command changes the role of a target unit to an initiator unit. A remote copy set is created with two members:

- Original target (which is the new initiator)
- Original initiator (which is the new target)

### Syntax

`SITE_FAILOVER remote-node-name\remote-copy-set-name`

### Parameters

*remote-node-name\remote-copy-set-name*

The *remote-node-name* part of the parameter specifies the name of the controller pair—called a node—receiving the command.

The *remote-copy-set-name* part of the parameter specifies the name by which the remote copy set will be known. This name must be unique across the fabric.

**NOTE:** Remote copy sets cannot be renamed with the `RENAME` command. If the wrong name is entered, the remote copy set must be deleted and then added again.

The *remote-copy-set-name* must start with `RCS` and can consist of a maximum of 9 characters including letters A through Z, numbers 0 through 9, periods (.), dashes (-), or underscores (\_).

### Switches

There are no switches associated with this command.

### Examples

Refer to the *Compaq StorageWorks Data Replication Manager HSG80 ACS Version 8.6P Operations Guide*.

## UNMIRROR

Converts a one-member mirrorset back to a non-mirrored disk drive and deletes the mirrorset from the list of known mirrorsets. This command can only be used on mirrorsets already members of higher-level containers (stripesets or units).

The UNMIRROR command is not valid for disk drives having a capacity greater than the capacity of the existing mirrorset. If a mirrorset is comprised of disk drives with different capacities, the mirrorset capacity is limited to the size of the smallest member; larger members contain unused capacity. If a member with unused capacity is the last remaining member of a mirrorset, the UNMIRROR command cannot be used to change the disk drive back to a single-disk unit. This change would cause a change in the reported disk capacity, possibly corrupting user data.

### Syntax

```
UNMIRROR disk-name
```

### Parameters

*disk-name*

Specifies the name of the normal mirrorset member to be removed from a mirror storageset.

### Switches

There are no switches associated with this command.

### Example

To convert DISK10300 back to a single device, enter:

```
UNMIRROR DISK10300
```

**See Also**

ADD MIRRORSETS  
MIRROR  
REDUCE  
RUN CLONE  
SET *mirrorset-name*



# Glossary

This glossary defines terms used in this guide or related to this product. This glossary is not a comprehensive glossary of computer terms.

## **ACS**

Array Controller Software. The software component of the HS-series array controller storage systems. ACS executes on the controller and processes input/output requests from the host, performing the device-level operations required to satisfy the requests.

## **adapter**

A device that converts the protocol and hardware interface of one bus type into that of another without changing functionality of the bus.

## **AL\_PA**

Arbitrated loop physical address. A one-byte value used to identify a port in an Arbitrated Loop topology.

## **ANSI**

Pronounced “ann-see.” Acronym for the American National Standards Institute. An organization who develops standards used voluntarily by many manufacturers within the USA. ANSI is not a government agency.

**arbitrated loop**

In Fibre Channel Technology, a serial bus configuration in which device ports are connected in a loop. Each port has a unique loop address and it communicates with other ports on the loop by arbitrating for loop access. Loop addresses are assigned via cooperative port intercommunication during loop initialization, which occurs any time the device configuration on the loop is physically changed.

**arbitrated loop physical address**

*See* AL\_PA

**array controller**

*See* controller

**array controller software**

*See* ACS

**association set**

A group of remote copy sets that share selectable attributes for logging and failover. Members of an association set transition to the same state simultaneously. For example, if one association set member assumes the failsafe locked condition, then other members of the association set also assume the failsafe locked condition. An association set can also be used to share a log between a group of remote copy set members that require efficient use of the log space. *See also* remote copy set.

**asynchronous**

Pertaining to events that are scheduled as the result of a signal asking for the event; pertaining to that which is without any specified time relation. *See also* synchronous.

**autospare**

A controller feature that automatically replaces a failed disk drive. Autospare aids the controller in automatically replacing failed disk drives. You can enable the *AUTOSPARE* switch for the failedset causing physically replaced disk drives to be automatically placed into the spareset. *Also called* autonewspare.

**backplane**

The electronic printed circuit board into which you plug subsystem devices—for example, a controller or power supply.

**bad block**

A data block containing a physical defect.

**bad block replacement**

*See* BBR

**battery hysteresis**

The ability of the software to allow write-back caching during the time a battery is charging, but only when a previous down time has not drained more than 50 percent of rated battery capacity.

**BBR**

Bad Block Replacement. A replacement routine that substitutes defect-free disk blocks for those found to have defects. This process takes place in the controller, transparent to the host.

**BIST**

Built-in self-test. A diagnostic test performed by the array controller software on the controller's policy processor.

**bit**

A single binary digit having a value of either 0 or 1. A bit is the smallest unit of data a computer can process.

**block**

A number of consecutive bytes of data stored on a storage device. In most storage systems, a block is the same size as a physical disk sector. *Also called* sector.

**bootstrapping**

A method used to bring a system or device into a defined state by means of its own action. For example, a machine routine whose first few instructions are enough to bring the rest of the routine into the computer from an input device.

**built-in self-test**

*See* BIST

**byte**

A binary character string made up of 8 bits operated on as a unit.

**cache memory**

A portion of memory used to accelerate read and write operations. The objective of caching data in a system is to improve performance by placing the most frequently used data in the highest performance memory.

**CDU**

Cable distribution unit. The power entry device for StorageWorks racks (cabinets). The CDU provides the connections necessary to distribute power to the rack enclosures and fans.

**channel**

An interface which allows high speed transfer of large amounts of data. Another term for a SCSI bus. *See also* SCSI.

**chunk**

In any form of RAID that stripes data, data is stored in pieces called chunks. One chunk is stored on each member device in the unit. Taken together, the chunks make up a stripe. The chunk size can be used in some controllers to tune the stripeset for a specific application.

**chunk size**

The number of data blocks, assigned by a system administrator, written to the primary RAIDset or stripeset member before the remaining data blocks are written to the next RAIDset or stripeset member.

**CI bus**

Computer Interconnect bus. A serial 70 MHz, dual path, party-line, bus. It is the host bus for the HSJ-series controller-based storage systems. The CI bus is used by OpenVMS hosts to connect the nodes in a clustered subsystem.

**CLCP**

Code-Load Code-Patch utility. This utility can be used to download patches to the ACS software.

**CLI**

Command Line Interpreter. A command line entry utility used to interface with the HS-series controllers. CLI enables the configuration and monitoring of a storage subsystem through textual commands.

**coax or  
coaxial cable**

A two-conductor wire in which one conductor completely wraps the other with the two separated by insulation.

**code-load code-patch utility**

*See* CLCP

**command line interpreter**

*See* CLI

**computer interconnect bus**

*See* CI bus

**configuration file**

A file that contains a representation of a storage subsystem configuration.

**container**

(1) Any entity that is capable of storing data, whether it is a physical device or a group of physical devices. (2) A virtual, internal controller structure representing either a single disk or a group of disk drives linked as a storageset. Stripesets and mirrorsets are examples of storageset containers that the controller uses to create units.

*See also* storage unit.

**controller**

A hardware device that, with proprietary software, facilitates communications between a host and one or more storage devices organized in a storage array. The HS-series of the StorageWorks family of controllers are all array controllers.

**copying**

A state in which data to be copied to the mirrorset is inconsistent with other members of the mirrorset. *See also* normalizing.

**copying member**

Any member that joins the mirrorset after the mirrorset is created is regarded as a copying member. Once all the data from the normal member (or members) is copied to a normalizing or copying member, the copying member then becomes a normal member. *See also* normalizing member.

**CSR**

Control and Status Register.

**DAEMON**

Pronounced “demon.” A program usually associated with a UNIX system that performs a utility (housekeeping or maintenance) function without being requested or even known of by the user. A daemon is a diagnostic and execution monitor.

**data center cabinet (rack)**

A generic reference to large subsystem racks, such as those in which StorageWorks products can be mounted.

**data striping**

The process of segmenting logically sequential data, such as a single file, so that segments can be written to multiple physical devices (usually disk drives) in a round-robin fashion. This technique is useful if the processor is capable of reading or writing data faster than a single disk can supply or accept the data. While data is being transferred from the first disk, the second disk can locate the next segment.

**DDL**

Dual data link. The ability to operate on the CI bus using both paths simultaneously to the same remote node.

**device**

In its physical form, a magnetic disk that can be attached to a SCSI bus. The term is also used to indicate a physical device that has been made part of a controller configuration; that is, a physical device that is known to the controller. Units (virtual disks) can be created from devices, once the devices have been made known to the controller.

The targets, initiators, hubs, converters, adapters, and similar items interconnected to form a SCSI bus. Connectors, expanders, and hubs do not use a SCSI bus ID. *See also* node; peripheral device.

**differential I/O module**

A 16-bit I/O module with SCSI bus converter circuitry for extending a differential SCSI bus. *See also* I/O module.

**differential SCSI bus**

A bus in which a signal level is determined by the potential difference between two wires. A differential bus is more robust and less subject to electrical noise than is a single-ended bus.

**DILX**

Disk Inline Exerciser. DILX is a diagnostic used to test the data transfer capabilities of disk drives in a way that simulates a high level of user activity.

**DIMM**

Dual Inline Memory Module.

**dirty data**

The write-back cached data that has not been written to storage media, even though the host operation processing the data has completed.

**disaster tolerance**

The ability to resume data center operations shortly after a significant event occurs at the primary data center. The ability to restart processing can require an alternate data center, with current copies of critical data in a usable state.

**disk inline exerciser**

*See* DILX

**DMA**

Direct Memory Access.

**DOC**

DWZZA-on-a-chip. An SYM53C120 SCSI bus extender chip used to connect a SCSI bus in one enclosure to the corresponding SCSI bus in another enclosure.

**driver**

A hardware device or a program that controls or regulates another device. For example, a device driver is a driver developed for a specific device that allows a computer to operate with the device, such as a printer or a disk drive.

**dual data link**

*See* DDL

**dual-redundant configuration**

A controller configuration consisting of two active controllers operating as a single controller. If one controller fails, the other controller assumes control of the failing controller devices.

**dual-simplex**

A communications protocol that allows simultaneous transmission in both directions in a link, usually with no flow control.

**DUART**

Dual Universal Asynchronous Receiver and Transmitter. An integrated circuit containing two serial, asynchronous transceiver circuits.

**DWZZA**

A StorageWorks SCSI-bus-signal converter used to connect 8-bit single-ended devices to hosts with 16-bit differential SCSI adapters. This converter extends the range of a single-ended SCSI cable to the limit of a differential SCSI cable. *See also* SCSI bus signal converter.

**DWZZB**

A StorageWorks SCSI bus signal converter used to connect a variety of 16-bit single-ended devices to hosts with 16-bit differential SCSI adapters. *See also* SCSI bus signal converter.

**DWZZC**

The 16-bit SCSI table-top SCSI bus signal converter used to extend a differential SCSI bus, or to connect a differential SCSI bus to a single-ended SCSI bus. *See also* SCSI bus signal converter.

**ECB**

External Cache Battery. The unit that supplies backup power to the cache module in the event the primary power source fails or is interrupted.

**EIA**

Electronic Industries Association. EIA is a standards organization specializing in the electrical and functional characteristics of interface equipment.

**EMU**

Environmental Monitoring Unit. A unit that provides increased protection against catastrophic failures. Some subsystem enclosures include an EMU which works with the controller to detect conditions such as failed power supplies, failed blowers, elevated temperatures, and external air sense faults. The EMU also controls certain cabinet hardware including DOC chips, alarms, and fan speeds.

**environmental monitoring unit**

*See* EMU

**ESD**

Electrostatic Discharge. The discharge of potentially harmful static electrical voltage as a result of improper grounding.

**extended subsystem**

A subsystem in which one or two enclosures are connected to the primary enclosure.

**external cache battery**

*See* ECB

**F\_Port**

A port in a fabric where an N\_Port or NL\_Port may attach.

**fabric**

A group of interconnections between ports that includes a fabric element.

**failback**

The process of restoring data access to the newly-restored controller in a dual-redundant controller configuration. *See also* failover.

**failedset**

A group of disk drives that have been removed from RAIDsets due to a failure or a manual removal. Disk drives in the failedset should be considered defective and should be tested and repaired before being placed back into the spareset. *See also* spareset.

**failover**

The process that takes place when one controller in a dual-redundant configuration assumes the workload of a failed companion controller. Failover continues until the failed controller is repaired or replaced. *See also* failback.

**fault management utility**

*See* FMU

**FC–AL**

The Fibre Channel Arbitrated Loop standard.

**FC–ATM**

ATM AAL5 over Fibre Channel.

**FCC**

Federal Communications Commission. The federal agency responsible for establishing standards and approving electronic devices within the United States.

**FCC Class A**

This certification label appears on electronic devices that can only be used in a commercial environment within the United States.

**FCC Class B**

This certification label appears on electronic devices that can be used in either a home or a commercial environment within the United States.

**FC–FG**

Fibre Channel Fabric Generic requirements.

**FC-GS-1**

Fibre Channel Generic Services-1.

**FC–GS-2**

Fibre Channel Generic Services-2.

**FC–IG**

Fibre Channel Implementation Guide.

**FC-LE**

Fibre Channel Link Encapsulation (ISO 8802.2).

**FCP**

The mapping of SCSI-3 operations to Fibre Channel.

**FC-PH specification**

The Fibre Channel Physical and Signaling standard.

**FC-SB**

Fibre Channel Single Byte Command Code Set.

**FC-SW**

Fibre Channel Switched Topology and Switch Controls.

**FD SCSI**

The fast, narrow, differential SCSI bus with an 8-bit data transfer rate of 10 MB/s. *See also* FWD SCSI; SCSI.

**FDDI**

Fiber Distributed Data Interface. An ANSI standard for 100 megabaud transmission over fiber optic cable.

**FG-FP**

Fibre Channel Framing Protocol (HIPPI on FC).

**fiber**

A fiber or optical strand. Spelled *fibres* in Fibre Channel.

**fiber optic cable**

A transmission medium designed to transmit digital signals in the form of pulses of light. Fiber optic cable is noted for its properties of electrical isolation and resistance to electrostatic contamination.

**FL\_Port**

A port in a fabric where N\_Port or an NL\_Port may be connected.

**flush**

The act of writing dirty data from cache to a storage media. *See also* dirty data.

**FMU**

Fault Management Utility. A utility that is run to provide fault or error reporting information.

**forced errors**

A data bit indicating that a corresponding logical data block contains unrecoverable data.

**frame**

An invisible unit used to transfer information in Fibre Channel.

**FRU**

Field Replaceable Unit. A hardware component that can be replaced at a customer location by Compaq authorized service providers.

**FRUTIL**

Field Replacement Utility.

**full duplex (adj)**

Pertaining to a communications method in which data can be transmitted and received at the same time.

**full duplex (n)**

A communications system in which there is a capability for 2-way transmission and acceptance between two sites at the same time.

**FWD SCSI**

A fast, wide, differential SCSI bus with a maximum 16-bit data transfer rate of 20 MB/s. *See also* SCSI; FD SCSI.

**GBIC**

Gigabit Interface Converter. The devices that are inserted into the ports of the Fibre Channel switch and that hold the Fibre Channel cables.

**giga**

A prefix indicating a billion ( $10^9$ ) units, as in gigabaud or gigabyte.

**gigabaud**

An encoded bit transmission rate of one billion ( $10^9$ ) bits per second.

**gigabyte**

A value normally associated with the storage capacity of a disk drive, meaning a billion ( $10^9$ ) bytes. The decimal value 1024 is usually used for one thousand.

**GLM**

Gigabit Link Module.

**half-duplex (adj)**

Pertaining to a communications system in which data can be either transmitted or received but only in one direction at one time.

**hard address**

The AL\_PA which an NL\_Port attempts to acquire during loop initialization.

**heterogeneous host support**

Also called *noncooperating host support*.

**HIPPI-FC**

Fibre Channel over HIPPI.

**host**

The primary or controlling computer to which a storage subsystem is attached.

**host adapter**

A device that connects a host system to a SCSI bus. The host adapter usually performs the lowest layers of the SCSI protocol. This function may be logically and physically integrated into the host system.

**host compatibility mode**

A setting used by the controller to provide optimal controller performance with specific operating systems. This improves the controller performance and compatibility with the specified operating system.

**hot disks**

A disk containing multiple hot spots. Hot disks occur when the workload is poorly distributed across storage devices which prevents optimum subsystem performance. *See also* hot spots.

**hot spots**

A portion of a disk drive frequently accessed by the host. Because the data being accessed is concentrated in one area, rather than spread across an array of disks providing parallel access, I/O performance is significantly reduced. *See also* hot disks.

**hot-pluggable**

A replacement method that allows normal I/O activity on a device bus to remain active during device removal and insertion. The device being removed or inserted is the only device that cannot perform operations during this process. *See also* pluggable.

**HSUTIL**

Format and Device Code Load Utility.

**I/O**

Refers to input and output functions.

**I/O driver**

The set of code in the kernel that handles the physical I/O to a device. This is implemented as a fork process. *Also called* driver.

**I/O interface**

*See* interface

**I/O module**

A device that integrates an enclosure with either an 8-bit single-ended SCSI bus, 16-bit single-ended SCSI bus, 16-bit differential SCSI bus, or Fibre Channel bus.

**I/O operation**

The process of requesting a transfer of data from a peripheral device to memory (or visa versa), the actual transfer of the data, and the processing and overlaying activity to make the request and transfer occur.

**initiator**

A SCSI device that requests an I/O process to be performed by another SCSI device, namely, the SCSI target. The controller is the initiator on the device bus. The host is the initiator on the host bus.

**instance code**

A 4-byte value displayed in most text error messages and issued by the controller when a subsystem error occurs. The instance code indicates when during software processing the error was detected.

**interface**

A set of protocols used between components, such as cables, connectors, and signal levels.

**IPI**

Intelligent Peripheral Interface. An ANSI standard for controlling peripheral devices by a host computer.

**IPI-3 Disk**

Intelligent Peripheral Interface Level 3 for Disk.

**IPI-3 Tape**

Intelligent Peripheral Interface Level 3 for Tape.

**JBOD**

Just a bunch of disks. A term used to describe a group of single-device logical units not configured into any other container type.

**kernel**

The most privileged processor access mode.

**L\_Port**

A node or fabric port capable of performing Arbitrated Loop functions and protocols. NL\_Ports and FL\_Ports are loop-capable ports.

**link**

A connection between two Fibre Channel ports consisting of a transmit fibre and a receive fibre.

**local connection**

A connection to the subsystem, by way of the controller serial maintenance port, to a maintenance terminal or the host terminal. A local connection enables you to connect to one subsystem controller to perform maintenance tasks. *See also* maintenance terminal; local terminal.

**local terminal**

A terminal plugged into the EIA-423 maintenance port located on the front bezel of the controller. *See also* maintenance terminal; local connection.

**logical bus**

A single-ended bus connected to a differential bus by a SCSI bus signal converter.

**logical unit**

A physical or virtual device addressable through a target ID number. LUNs use their target's bus connection to communicate on the SCSI bus. *See also* unit; LUN.

**logical unit number**

*See* LUN

**logon**

Also called login. A procedure whereby a participant, either a person or network connection, is identified as being an authorized network participant.

**loop**

*See* arbitrated loop.

**loop tenancy**

The period of time between the following events: when a port wins loop arbitration and when the port returns to a monitoring state.

**Loop\_ID**

A 7-bit value numbered contiguously from zero to 126-decimal and represent the 127 legal AL\_PA values on a loop (not all of the 256 hex values are allowed as AL\_PA values per FC-AL).

**LUN**

Logical Unit Number. A value that identifies a specific logical unit belonging to a SCSI target ID number. A number associated with a physical device unit during a task's I/O operations. Each task in the system must establish its own correspondence between logical unit numbers and physical devices. *See also* logical unit.

**maintenance terminal**

An EIA-423-compatible terminal used with the controller. This terminal is used to identify the controller, enable host paths, enter configuration information, and check the controller's status. The maintenance terminal is not required for normal operations. *See also* local terminal; local connection.

**mass storage control protocol**

*See* MSCP

**Mbps**

Approximately one million ( $10^6$ ) bits per second—that is, megabits per second.

**MBps**

Approximately one million ( $10^6$ ) bytes per second—that is, megabytes per second.

**member**

A container that is a storage element in a RAID array.

**metadata**

The data written to a disk for the purposes of controller administration. Metadata improves error detection and media defect management for the disk drive. It is also used to support storage set configuration and partitioning. Nontransportable disks also contain metadata to indicate they are uniquely configured for StorageWorks environments. Metadata can be thought of as “data about data.”

**mirrored write-back caching**

A method of caching data that maintains two copies of the cached data. The copy is available if either cache module fails.

**mirroring**

The act of creating an exact copy or image of data.

**mirrorset**

*See* RAID level 1

**MIST**

Module Integrity Self-Test.

**MSCP**

Mass Storage Control Protocol. MSCP is the protocol by which blocks of information are transferred between the host and the subsystem controller on the CI bus.

**multibus failover**

Allows the host to control the failover process by moving the unit(s) from one controller to another.

**N\_Port**

A port attached to a node for use with point-to-point topology or fabric topology.

**network**

A data communication, a configuration in which two or more terminals or devices are connected to enable information transfer.

**NL\_Port**

A port attached to a node for use in all three topologies.

**node**

In data communications, the point at which one or more functional units connect transmission lines. In Fibre Channel, a device that has at least one N\_Port or NL\_Port.

**nominal membership**

The desired number of mirrorset members when the mirrorset is fully populated with active devices. If a member is removed from a mirrorset, the actual number of members may fall below the “nominal” membership.

**Non-L\_Port**

A node of fabric port that is not capable of performing the Arbitrated Loop functions and protocols. N\_Ports and F\_Ports are loop-capable ports.

**non-participating mode**

A mode within an L\_Port that inhibits the port from participating in loop activities. L\_Ports in this mode continue to retransmit received transmission words but are not permitted to arbitrate or originate frames. An L\_Port in non-participating mode may or may not have an AL\_PA. *See also* participating mode.

**nonredundant controller configuration**

(1) A single controller configuration. (2) A controller configuration that does not include a second controller.

**normal member**

A mirrorset member that, block-for-block, contains the same data as other normal members within the mirrorset. Read requests from the host are always satisfied by normal members.

**normalizing**

A state in which, block-for-block, data written by the host to a mirrorset member is consistent with the data on other normal and normalizing members. The normalizing state exists only after a mirrorset is initialized; therefore, no customer data is on the mirrorset.

**normalizing member**

A mirrorset member whose contents is the same as all other normal and normalizing members for data that has been written since the mirrorset was created or lost cache data was cleared. A normalizing member is created by a normal member when either all of the normal members fail or all of the normal members are removed from the mirrorset. *See also* copying member.

**OCP**

Operator control panel. The control and indicator panel associated with an array controller. The OCP is mounted on the controller and is accessible to the operator

**operator control panel**

*See* OCP

**other controller**

The controller in a dual-redundant pair that is connected to the controller serving your current CLI session. *See also* “this controller.”

**outbound fiber**

One fiber in a link that carries information away from a port.

**parallel data transmission**

A data communication technique in which more than one code element (for example, bit) of each byte is sent or received simultaneously.

**parity**

A method of checking if binary numbers or characters are correct by counting the ONE bits. In odd parity, the total number of ONE bits must be odd; in even parity, the total number of ONE bits must be even. Parity information can be used to correct corrupted data. RAIDsets use parity to improve the availability of data.

**parity bit**

A binary digit added to a group of bits that checks to see if errors exist in the transmission.

**parity check**

A method of detecting errors when data is sent over a communications line. With even parity, the number of ones in a set of binary data should be even. With odd parity, the number of ones should be odd.

**parity RAID**

*See* RAIDset

**participating mode**

A mode within an L\_Port that allows the port to participate in loop activities. A port must have a valid AL\_PA to be in participating mode.

**partition**

A logical division of a container represented to the host as a logical unit.

**PCMCIA**

Personal Computer Memory Card Industry Association. An international association formed to promote a common standard for PC card-based peripherals to be plugged into notebook computers. The card, commonly known as a PCMCIA card or program card, is about the size of a credit card. *See also* program card.

**peripheral device**

Any unit, distinct from the CPU and physical memory, that can provide the system with input or accept any output from it. Terminals, printers, tape drives, and disks are peripheral devices.

**pluggable**

A replacement method that allows the complete system to remain online during device removal or insertion. The system bus must be halted, or quiesced, for a brief period of time during the replacement procedure. *See also* hot-pluggable.

**point-to-point connection**

A network configuration in which a connection is established between two, and only two, terminal installations. The connection might include switching facilities.

**port**

In general terms, the port is: (1) A logical channel in a communications system. (2) The hardware and software used to connect a host controller to a communications bus, such as a SCSI bus or serial bus.

Regarding the controller, the port is: (1) The logical route for data in and out of a controller that can contain one or more channels, all of which contain the same type of data. (2) The hardware and software that connects a controller to a SCSI device.

**port\_name**

A 64-bit unique identifier assigned to each Fibre Channel port. The Port\_Name is communicated during the logon and port discovery process.

**preferred address**

The AL\_PA which an NL\_Port attempts to acquire first during initialization.

**primary enclosure**

The subsystem enclosure that contains the controllers, cache modules, external cache batteries, and the PVA module.

**private NL\_Port**

An NL\_Port which does not attempt login with the fabric and only communicates with NL\_Ports on the same loop.

**program card**

The PCMCIA card containing the controller operating software. *See also* PCMCIA.

**protocol**

The conventions or rules for the format and timing of messages sent and received.

**PTL**

Port-Target-LUN. The controller method of locating a device on the controller device bus.

**public NL\_Port**

An NL\_Port that attempts login with the fabric and can observe the rules of either public or private loop behavior. A public NL\_Port may communicate with both private and public NL\_Ports.

**PVA module**

Power Verification and Addressing module.

**RAID**

Redundant array of independent disks. Represents multiple levels of storage access developed to improve performance or availability or both.

**RAID level 0**

A RAID storage set that stripes data across an array of disk drives. A single logical disk spans multiple physical disks, allowing parallel data processing for increased I/O performance. While the performance characteristics of RAID level 0 is excellent, this RAID level is the only one that does not provide redundancy. Raid level 0 storage sets are referred to as stripesets.

**RAID level 0+1**

A RAID storage set that stripes data across an array of disks (RAID level 0) and mirrors the striped data (RAID level 1) to provide high I/O performance and high availability. RAID level 0+1 storage sets are referred to as striped mirror sets.

**RAID level 1**

A RAID storage set of two or more physical disks that maintains a complete and independent copy of the entire virtual disk's data. This type of storage set has the advantage of being highly reliable and extremely tolerant of device failure. RAID level 1 storage sets are referred to as mirror sets.

**RAID level 3**

A RAID storage set that transfers data parallel across the array's disk drives a byte at a time, causing individual blocks of data to be spread over several disks serving as one enormous virtual disk. A separate redundant check disk for the entire array stores parity on a dedicated disk drive within the storage set. *See also* RAID level 5.

**RAID level 3/5**

A specially developed RAID storage set that stripes data and parity across three or more members in a disk array. A RAID set combines the best characteristics of RAID level 3 and RAID level 5. A RAID set is the best choice for most applications with small to medium I/O requests, unless the application is write intensive. A RAID set is sometimes called parity RAID. RAID level 3/5 storage sets are referred to as RAID sets.

**RAID level 5**

A RAID storage set that, unlike RAID level 3, stores the parity information across all of the disk drives within the storage set. *See also* RAID level 3.

**RAID set**

*See* RAID level 3/5

**read caching**

A cache management method used to decrease the subsystem response time to a read request by allowing the controller to satisfy the request from the cache memory rather than from the disk drives.

**read-ahead caching**

A caching technique for improving performance of synchronous sequential reads by prefetching data from disk.

**reconstruction**

The process of regenerating the contents of a failed member's data. The reconstruct process writes the data to a spareset disk and then incorporates the spareset disk into the mirrorset, striped mirrorset, or RAIDset from which the failed member came. *See also* regeneration.

**reduced**

A term that indicates that a mirrorset or RAIDset is missing one member because the member has failed or has been physically removed.

**redundancy**

The provision of multiple interchangeable components to perform a single function in order to cope with failures and errors. A RAIDset is considered to be redundant when user data is recorded directly to one member and all of the other members include associated parity information.

**regeneration**

(1) The process of calculating missing data from redundant data. (2) The process of recreating a portion of the data from a failing or failed drive using the data and parity information from the other members within the storageset.

The regeneration of an entire RAIDset member is called reconstruction. *See also* reconstruction.

**remote copy**

A feature intended for disaster tolerance and replication of data from one storage subsystem or physical site to another subsystem or site. Remote copy also provides methods of performing a backup at either the local or remote site. With remote copy, user applications continue to run while data movement goes on in the background. Data warehousing, continuous computing, and enterprise applications all require remote copy capabilities.

**remote copy set**

A bound set of two units, one located locally and one located remotely for long distance mirroring. The units can be a single disk, or a storage set, mirror set, or RAID set. A unit on the local controller is designated as the “initiator” and a corresponding unit on the remote controller is designated as the “target.” *See also* association set.

**replacement policy**

The policy specified by a switch with the SET FAILEDSET command indicating whether a failed disk from a mirror set or RAID set is to be automatically replaced with a disk from the spare set. The two switch choices are *AUTOSPARE* and *NOAUTOSPARE*.

**request rate**

The rate at which requests are arriving at a servicing entity.

**RFI**

Radio Frequency Interference. The disturbance of a signal by an unwanted radio signal or frequency.

**SCSI**

Small Computer System Interface. (1) An American National Standards Institute (ANSI) interface standard defining the physical and electrical parameters of a parallel I/O bus used to connect initiators to devices. (2) A processor-independent standard protocol for system-level interfacing between a computer and intelligent devices including hard drives, floppy disks, CD-ROMs, printers, scanners, and others.

**SCSI bus signal converter**

(1) A device used to interface between the subsystem and a peripheral device unable to be mounted directly into the SBB shelf of the subsystem. (2) A device used to connect a differential SCSI bus to a single-ended SCSI bus. (3) A device used to extend the length of a differential or single-ended SCSI bus.

*Also called* adapter. *See also* DWZZA, DWZZB, DWZZC, and I/O module.

**SCSI device**

(1) A host computer adapter, a peripheral controller, or an intelligent peripheral that can be attached to the SCSI bus. (2) Any physical unit that can communicate on a SCSI bus.

**SCSI device ID number**

A bit-significant representation of the SCSI address referring to one of the signal lines, numbered 0 through 7 for an 8-bit bus, or 0 through 15 for a 16-bit bus. *See also* target ID number.

**SCSI ID number**

The representation of the SCSI address that refers to one of the signal lines numbered 0 through 15.

**SCSI port**

(1) Software: The channel controlling communications to and from a specific SCSI bus in the system. (2) Hardware: The name of the logical socket at the back of the system unit to which a SCSI device is connected.

**SCSI-A cable**

A 50-conductor (25 twisted-pair) cable generally used for single-ended, SCSI-bus connections.

**SCSI-P cable**

A 68-conductor (34 twisted-pair) cable generally used for differential bus connections.

**selective storage presentation**

Selective Storage presentation is a feature of the HSG80 controller that enables the user to control the allocation of storage space and shared access to storage across multiple hosts. This is also known as "Restricting Host Access."

**serial transmission**

A method transmission in which each bit of information is sent sequentially on a single channel rather than simultaneously as in parallel transmission.

**service rate**

The rate at which an entity is able to service requests. For example, the rate at which an Arbitrated Loop is able to service arbitrated requests.

**signal converter**

*See* SCSI bus signal converter

**single ended I/O module**

A 16-bit I/O module. *See also* I/O module.

**single-ended  
SCSI bus**

An electrical connection where one wire carries the signal and another wire or shield is connected to electrical ground. Each signal logic level is determined by the voltage of a single wire in relation to ground. This is in contrast to a differential connection where the second wire carries an inverted signal.

**spareset**

A collection of disk drives used by the controller to replace failed members of a storageset.

**star coupler**

The physical hub of the CI cluster subsystem cabling. The star coupler is a set of connection panels contained within a cabinet containing cable connections and transformers through which the nodes of a cluster connect to one another through the CI bus. *See also* node and CI bus.

**storage array**

An integrated set of storage devices.

**storage array subsystem**

*See* storage subsystem

**storage subsystem**

The controllers, storage devices, shelves, cables, and power supplies used to form a mass storage subsystem.

**storage unit**

The general term that refers to storagesets, single-disk units, and all other storage devices that are installed in your subsystem and accessed by the host. A storage unit can be any entity that is capable of storing data, whether it is a physical device or a group of physical devices. *See also* container.

### **storageset**

- (1) A group of devices configured with RAID techniques to operate as a single container.
- (2) Any collection of containers, such as stripesets, mirrorsets, striped mirrorsets, and RAIDsets.

### **storageset expansion**

The dynamic expansion of the storage capacity (size) of a unit. A storage container is created in the form of a concatenation set which is added to the existing storage set defined as a unit.

### **StorageWorks**

A family of modular data storage products that allow customers to design and configure their own storage subsystems. Components include power, packaging, cabling, devices, controllers, and software. Customers can integrate devices and array controllers in StorageWorks enclosures to form storage subsystems. StorageWorks systems include integrated devices and array controllers to form storage subsystems.

### **stripe**

The data divided into blocks and written across two or more member disks in an array.

### **stripe size**

The stripe capacity as determined by  $n-1$  times the chunksize, where  $n$  is the number of RAIDset members.

### **striped mirrorset**

*See* RAID level 0+1

### **stripeset**

*See* RAID level 0

### **striping**

The technique used to divide data into segments, also called chunks. The segments are striped, or distributed, across members of the stripeset. This technique helps to distribute hot spots across the array of physical devices to prevent hot spots and hot disks.

Each stripeset member receives an equal share of the I/O request load, improving performance.

**surviving controller**

The controller in a dual-redundant configuration pair that serves its companion's devices when the companion controller fails.

**switch**

A method that controls the flow of functions and operations in software.

**synchronous**

Pertaining to a method of data transmission which allows each event to operate in relation to a timing signal. *See also* asynchronous.

**tape**

A storage device supporting sequential access to variable sized data records.

**target**

(1) A SCSI device that performs an operation requested by an initiator. (2) Designates the target identification (ID) number of the device.

**target ID number**

The address a bus initiator uses to connect with a bus target. Each bus target is assigned a unique target address.

**this controller**

The controller that is serving your current CLI session through a local or remote terminal. *See also* "other controller."

**TILX**

Tape inline exerciser. The controller diagnostic software to test the data transfer capabilities of tape drives in a way that simulates a high level of user activity.

**topology**

An interconnection scheme that allows multiple Fibre Channel ports to communicate with each other. For example, point-to-point, Arbitrated Loop, and switched fabric are all Fibre Channel topologies.

**transfer data rate**

The speed at which data may be exchanged with the central processor, expressed in thousands of bytes per second.

**transparent failover**

Keeps the storage array available to the host(s) by allowing the surviving controller of a dual redundant pair to take over total control of the subsystem and is transparent (invisible) to the host(s).

**ULP**

Upper Layer Protocol.

**ULP process**

A function executing within a Fibre Channel node which conforms to the ULP requirements when interacting with other ULP processes.

**Ultra SCSI bus**

A Fast-20 SCSI bus. *See also* Wide Ultra SCSI.

**uninterruptible power supply**

*See* UPS

**unit**

A container made accessible to a host. A unit may be created from a single disk drive. A unit may also be created from a more complex container such as a RAIDset. *See also* target; target ID number.

**unwritten cached data**

Sometimes called unflushed data. *See also* dirty data.

**UPS**

Uninterruptible power supply. A battery-powered power supply guaranteed to provide power to an electrical device in the event of an unexpected interruption to the primary power supply. Uninterruptible power supplies are usually rated by the amount of voltage supplied and the length of time the voltage is supplied.

**VHDCI**

Very High-Density-Cable Interface. A 68-pin interface that is required for Ultra SCSI connections.

**virtual terminal**

A software path from an operator terminal on the host to the controller CLI interface, sometimes called a host console. The path can be established via the host port on the controller or via the maintenance port through an intermediary host. *See also* maintenance terminal.

**VTDPY**

Virtual terminal display. A utility that allows viewing of specific informational displays using CLI commands.

**wide Ultra SCSI**

Fast-20 on a Wide SCSI bus.

**worldwide name**

A unique 64-bit number assigned to a subsystem by the Institute of Electrical and Electronics Engineers (IEEE) and set by DIGITAL manufacturing prior to shipping. *Also called* node ID within the CLI.

**write hole**

The period of time in a RAID level 1 or RAID level 5 write operation when an opportunity emerges for undetectable RAIDset data corruption. Write holes occur under conditions such as power outages, where the writing of multiple members can be abruptly interrupted. A battery backed-up cache design eliminates the write hole because data is preserved in cache and unsuccessful write operations can be retried.

**write-back caching**

A cache management method used to decrease the subsystem's response time to write requests by allowing the controller to declare the write operation "complete" as soon as the data reaches its cache memory. The controller performs the slower operation of writing the data to the disk drives at a later time.

**write-through cache**

A cache management technique for retaining host write requests in read cache. When the host requests a write operation, the controller writes data directly to the storage device. This technique allows the controller to complete some read requests from the cache, greatly improving the response time to retrieve data. The operation is complete only after the data to be written is received by the target storage device.

This cache management method may update, invalidate, or delete data from the cache memory accordingly, to ensure that the cache contains the most current data.

**write-through caching**

A cache management method used to decrease the subsystem's response time to a read. This method allows the controller to satisfy the request from the cache memory rather than from the disk drives.

# Index

## A

ADAPTER\_ID, parameter for ADD CONNECTIONS 2-7

### ADD ASSOCIATIONS

command parameters 2-2

description 2-2

parameters

*association-set-name* 2-2

*remote-copy-set-name* 2-2

related commands

ADD REMOTE\_COPY\_SETS 2-3

SET *associations* 2-3

syntax 2-2

### ADD CONCATSETS

command parameters 2-4

concatenation set 2-4

description 2-4

dynamic volume expansion 2-4

parameters

*concatset-name* 2-4

*storageset-name* 2-4

related commands

DELETE *concatset-name* 2-5

SET *concatset-name* 2-5

SHOW *concatset-name* 2-5

SHOW CONCATSETS 2-5

storageset expansion 2-4

syntax 2-4

### ADD CONNECTIONS

command parameters 2-6

description 2-6

parameters

ADAPTER\_ID 2-7

*connection-name* 2-7

CONTROLLER 2-7

HOST\_ID 2-7

PORT 2-7

physically connecting 2-6

related commands

ADD UNITS 2-10

DELETE *connections* 2-10

SET *connection-name* 2-10

switches

OPERATING\_SYSTEM 2-8

RESERVATION\_STYLE 2-8

UNIT\_OFFSET 2-9

syntax 2-6

### ADD DISKS

command parameters 2-11

description 2-11

parameters

*disk-name* 2-11

*scsi-port-target-lun* 2-11

related commands

ADD PASSTHROUGH 2-13

ADD UNITS 2-13

**Index-2** HSG80 Array Controller ACS Version 8.6 CLI Reference Guide

- DELETE *container-name* 2-13
- INITIALIZE 2-13
- LOCATE 2-13
- SET *container-name* 2-13
- SHOW DEVICES 2-13
- SHOW DISKS 2-13
- SHOW PASSTHROUGH 2-13
- switches
  - NOTTRANSPORTABLE 2-12
  - TRANSFER\_RATE\_REQUESTED 2-12
  - TRANSPORTABLE 2-12
- syntax 2-11
- ADD MIRRORSETS
  - command parameters 2-14
  - description 2-14
  - parameters
    - disk-name* 2-14
    - mirrorset-name* 2-14
  - related commands
    - ADD DISKS 2-16
    - ADD UNITS 2-16
    - DELETE *container-name* 2-16
    - INITIALIZE 2-16
    - MIRROR 2-16
    - REDUCE 2-16
    - SHOW *mirrorset-name* 2-16
    - SHOW MIRRORSETS 2-16
    - SHOW STORAGESETS 2-16
    - UNMIRROR 2-16
  - switches
    - COPY 2-15
    - NOPOLICY 2-15
    - POLICY 2-15
    - READ\_SOURCE 2-15
  - syntax 2-14
- ADD PASSTHROUGH
  - command parameters 2-17
  - description 2-17
  - parameters
    - passthrough-name* 2-17
    - scsi-port-target-lun* 2-17
  - related commands
    - ADD UNITS 2-18
    - DELETE *container-name* 2-18
    - LOCATE 2-18
    - SET *container-name* 2-18
    - SHOW DEVICES 2-18
    - SHOW DISKS 2-18
    - SHOW PASSTHROUGH 2-18
  - switches
    - TRANSFER\_RATE\_REQUESTED 2-18
  - syntax 2-17
- ADD RAIDSETS 2-19
  - command parameters 2-19
  - parameters
    - disk-name* 2-19
    - RAIDset-name* 2-19
  - related commands
    - ADD UNITS 2-22
    - DELETE *container-name* 2-22
    - INITIALIZE 2-22
    - SET RAIDSETS 2-22
    - SHOW *RAIDset-name* 2-22
    - SHOW RAIDSETS 2-22
    - STORAGESETS 2-22
  - switches
    - NOPOLICY 2-20
    - NOREDUCE 2-21
    - POLICY 2-20
    - RECONSTRUCT 2-21
    - REDUCED 2-21
  - syntax 2-19
- ADD REMOTE\_COPY\_SETS
  - command parameters 2-23
  - description 2-23
  - parameters
    - initiator-unit-name* 2-24
    - remote-copy-set-name* 2-23
    - remote-node-name*\target-unit-name 2-24
  - related commands
    - ADD ASSOCIATIONS 2-25
    - SET *controller* REMOTE\_COPY 2-25
    - SET *remote-copy-set-name* 2-25
  - restrictions 2-23

- switches
  - OPERATION\_MODE 2-24
  - OUTSTANDING\_IOS 2-25
- syntax 2-23
- ADD SNAPSHOT\_UNITS
  - command parameters 2-26
  - description 2-26
  - parameters
    - snapshot-unit* 2-26
    - source-unit* 2-27
    - storageset-name* 2-26
  - related commands
    - DELETE *container-name* 2-27
    - SET UNITS 2-27
  - restrictions
    - mirrored cache 2-26
    - software version 2-26
  - syntax 2-26
- ADD SPARESETS
  - command parameters 2-28
  - description 2-28
  - parameter, *disk-name* 2-28
  - related commands
    - DELETE SPARESETS 2-28
    - SHOW SPARESETS 2-28
    - STORAGESETS 2-28
  - syntax 2-28
- ADD STRIPESETS
  - command parameters 2-29
  - descriptions 2-29
  - parameters
    - container-name* 2-29
    - stripeset-name* 2-29
  - related commands
    - ADD UNITS 2-30
    - DELETE *container-name* 2-30
    - INITIALIZE 2-30
    - MIRRORSETS 2-30
    - SHOW STORAGESETS 2-30
    - SHOW *stripeset-name* 2-30
  - syntax 2-29
- ADD UNITS
  - command parameters 2-31
  - description 2-31
  - parameters
    - container-name* 2-32
    - unit-number* 2-32
  - related commands
    - CREATE\_PARTITION 2-39
    - DELETE *unit-number* 2-39
    - SET *unit-number* 2-39
    - SHOW UNITS 2-39
  - switches
    - DISABLE\_ACCESS\_PATH 2-34
    - ENABLE\_ACCESS\_PATH 2-34
    - MAX\_READ\_CACHED\_TRANSFER\_SIZE 2-34
    - MAX\_WRITE\_CACHED\_TRANSFER\_SIZE 2-34
    - MAXIMUM\_CACHED\_TRANSFER\_SIZE 2-35
    - NOPREFERRED\_PATH 2-35
    - NOREAD\_CACHE 2-36
    - NOREADAHEAD\_CACHE 2-36
    - NORUN 2-36
    - NOWRITE\_PROTECT 2-37
    - NOWRITEBACK\_CACHE 2-37
    - PARTITION 2-35
    - PREFERRED\_PATH 2-35
    - READ\_CACHE 2-36
    - READAHEAD\_CACHE 2-36
    - RUN 2-36
    - WRITE\_PROTECT 2-37
    - WRITEBACK\_CACHE 2-37
  - syntax 2-31
- ADD, switch for
  - SET *associations* 2-98
  - SET *concatsets* 2-101
  - SET *remote-copy-set-name* 2-136
- adding
  - disk drives 2-11
  - mirrorsets 2-14
  - passthrough devices 2-17
  - physical devices, general commands 1-3



- CLI 2-47
  - INVALID\_CACHE 2-47
  - LOST\_DATA 2-47
  - UNKNOWN 2-47
  - RETRY\_ERRORS UNWRITEABLE\_DATA 2-47
  - syntax 2-46
- CLI
  - commands
    - abbreviating commands 1-7
    - for adding or configuring physical devices 1-3
    - for changing sparesets/failedsets 1-4
    - for customizing the prompt 2-112
    - general controller commands 1-2
    - getting help 1-7
    - overview 1-2
    - partitions 1-5
    - rules for entering 1-7
    - selective presentation 1-4
    - shortcuts 1-7
    - storagesets 1-4
    - syntax 1-8
    - transparent failover 1-3
  - definition 1-1
  - overview 1-1
  - program termination 2-71
  - prompt, changing display appearance 1-9
  - running 2-94
- CLI commands
  - ADD
    - ASSOCIATIONS 2-2
    - CONCATSETS 2-4
    - CONNECTIONS 2-6
    - DISKS 2-11
    - MIRRORSETS 2-14
    - PASSTHROUGH 2-17
    - RAIDSETS 2-19
    - REMOTE\_COPY\_SETS 2-23
    - SNAPSHOT\_UNITS 2-26
    - SPARESETS 2-28
    - STRIPESETS 2-29
  - UNITS 2-31
  - CLEAR\_ERRORS
    - CLI 2-40
    - controller* INVALID\_CACHE 2-41
    - device-name* UNKNOWN 2-43
    - unit-number* LOST\_DATA 2-44
    - unit-number* UNWRITEABLE\_DATA 2-46
  - CONFIGURATION
    - RESET 2-48
    - RESTORE 2-50
    - SAVE 2-52
  - CREATE\_PARTITION 2-54
  - DELETE
    - associations* 2-57
    - concatsets* 2-58
    - connections* 2-59
    - container-name* 2-61
    - FAILEDSETS 2-63
    - remote-copy-set-name* 2-64
    - SPARESETS 2-65
    - unit-number* 2-66
  - DESTROY\_PARTITION 2-68
  - DIRECTORY 2-70
  - EXIT 2-71
  - HELP 2-72
  - INITIALIZE 2-73
  - LOCATE 2-78
  - MIRROR 2-81
  - POWEROFF 2-84
  - REDUCE 2-87
  - RENAME 2-90
  - RESTART *controller* 2-91
  - RETRY\_ERRORS *unit-number* UNWRITEABLE\_DATA 2-93
  - RUN 2-94
  - SELFTTEST *controller* 2-96
  - SET
    - associations* 2-98
    - concatsets* 2-101
    - connection-name* 2-103
    - controller* 2-106

- device-name* 2-116
  - EMU 2-118
  - FAILEDSET 2-121
  - FAILOVER COPY=*controller* 2-123
  - mirrorset-name* 2-125
  - MULTIBUS\_FAILOVER 2-129
  - NOFAILOVER 2-131
  - NOMULTIBUS\_FAILOVER 2-131
  - RAIDset-name* 2-133
  - remote-copy-set-name* 2-136
  - unit-number* 2-139
- SHOW 2-146
- SHOW ID 2-152
- SHUTDOWN *controller* 2-153
- SITE\_FAILOVER 2-155
- UNMIRROR 2-156
- CLONE, running 2-94
- command line interpreter. *See* CLI.
- command syntax, general attributes 1-8
- COMMAND\_CONSOLE\_LUN, switch for SET *controller* 2-108
- concatenation set. *See* ADD CONCATSETS.
- concatset-name*, parameter for
  - ADD CONCATSETS 2-4
  - DELETE *concatsets* 2-58
  - SET *concatsets* 2-101
  - SHOW 2-147
- concatsets, showing 2-148
- CONFIG, running 2-94
- configuration
  - modifying controller configurations
  - resetting 2-48
  - restoring 2-50, 2-76
- CONFIGURATION RESET
  - command parameters 2-49
  - description 2-48
  - related commands
    - CONFIGURATION RESTORE 2-49
    - CONFIGURATION SAVE 2-49
    - INITIALIZE 2-49
  - syntax 2-49
- CONFIGURATION RESTORE
  - command parameters 2-51
  - description 2-50
  - related commands
    - CONFIGURATION RESET 2-51
    - CONFIGURATION SAVE 2-51
    - INITIALIZE 2-51
  - syntax 2-51
- CONFIGURATION SAVE
  - command parameters 2-52
  - description 2-52
  - related commands
    - CONFIGURATION RESET 2-53
    - CONFIGURATION RESTORE 2-53
    - INITIALIZE 2-53
  - syntax 2-52
- configuring physical devices, general
  - commands 1-3
- connection-name*, parameter for
  - ADD CONNECTIONS 2-7
  - DELETE *connections* 2-59
  - SET *connection-name* 2-103
  - SHOW 2-147
- CONNECTIONS, parameter for SHOW 2-147
- container initializing 2-73
- container-name*, parameter for
  - ADD
    - STRIPESETS 2-29
    - UNITS 2-32
  - CREATE\_PARTITION 2-54
  - DELETE *container-name* 2-61
  - DESTROY\_PARTITION 2-68
  - INITIALIZE 2-74
  - LOCATE 2-79
- containers, naming a
  - disk drive 2-11
  - passthrough device 2-17
  - unit 2-32
- controller
  - behavior at shutdown 2-154
  - displaying information 2-146
  - error handling at shutdown 2-153
  - general command information 1-2

- purging old configuration information 2-50
  - showing 2-146
  - shutting down 2-153
- controller*, parameter for
  - CLEAR\_ERRORS *controller*
    - INVALID\_CACHE 2-41
    - RESTART *controller* 2-91
    - SELFTEST *controller* 2-96
    - SET *controller* 2-106
    - SHOW 2-147
    - SHUTDOWN *controller* 2-153
- CONTROLLER, parameter for ADD CONNECTIONS 2-7
- COPY, switch for
  - ADD MIRRORSETS 2-15
  - MIRROR 2-82
  - SET
    - FAILOVER COPY 2-123
    - mirrorset-name* 2-125
    - MULTIBUS\_FAILOVER 2-129
- CREATE\_PARTITION
  - command parameters 2-54
  - description 2-54
  - parameter, *container-name* 2-54
  - related commands
    - ADD UNITS 2-56
    - DELETE *unit-number* 2-56
    - DESTROY PARTITION 2-56
    - SET *unit-number* 2-56
    - SHOW 2-56
  - switches
    - geometry
      - CAPACITY 2-55
      - CYLINDERS 2-55
      - HEADS 2-55
      - SECTORS\_PER\_TRACK 2-55
      - SIZE 2-55
  - syntax 2-54
- creating
  - disk drives 2-11
  - mirrorsets 2-14
  - passthrough devices 2-17
  - RAIDsets 2-19
  - single-disk units 2-38
  - sparesets 2-28
  - stripesets 2-29
  - units 2-31
- CYLINDERS, switch for
  - CREATE\_PARTITION 2-55
  - INITIALIZE 2-74
- D**
  - data replication manager. *See* DRM.
  - data-retention-policy*, parameter for
    - CLEAR\_ERRORS *controller*
      - INVALID\_CACHE 2-41
  - DELETE *associations*
    - command parameters 2-57
    - description 2-57
    - parameter, *association-set-name* 2-57
    - related commands
      - ADD ASSOCIATIONS 2-57
      - SET *associations* 2-57
    - syntax 2-57
  - DELETE *concatsets*
    - command parameters 2-58
    - description 2-58
    - parameter, *concatset-name* 2-58
    - related commands
      - DELETE *unit-number* 2-58
      - SET *concatsets* 2-58
    - syntax 2-58
  - DELETE *connections*
    - command parameters 2-59
    - description 2-59
    - parameter, *connection-name* 2-59
    - related commands
      - ADD CONNECTIONS 2-60
      - ADD UNITS 2-60
      - SET *connection-name* 2-60
      - SET *unit-number* 2-60
    - syntax 2-59
  - DELETE *container-name*
    - command parameters 2-61

- description 2-61
- parameter, *container-name* 2-61
- related commands
  - DELETE FAILEDSET 2-62
  - DELETE SPARESET 2-62
  - UNMIRROR 2-62
- syntax 2-61
- DELETE FAILEDSETS
  - command parameters 2-63
  - description 2-63
  - parameter, *disk-name* 2-63
  - related commands
    - SET FAILEDSETS 2-63
    - SHOW FAILEDSETS 2-63
  - syntax 2-63
- DELETE *remote-copy-set-name*
  - command parameters 2-64
  - description 2-64
  - parameter, *remote-copy-set-name* 2-64
  - related commands
    - ADD REMOTE\_COPY\_SETS 2-64
    - SET *remote-copy-set-name* 2-64
  - syntax 2-64
- DELETE SPARESETS
  - command parameters 2-65
  - description 2-65
  - parameter, *disk-name* 2-65
  - related commands
    - ADD SPARESETS 2-65
    - SHOW SPARESETS 2-65
  - syntax 2-65
- DELETE *unit-number*
  - command parameters 2-66
  - description 2-66
  - parameters
    - unit-number* 2-66
  - related commands
    - ADD UNITS 2-67
    - CLEAR\_ERRORS 2-67
    - LOST\_DATA 2-67
    - UNWRITEABLE\_DATA 2-67
    - DELETE
      - container-name* 2-67
      - FAILEDSETS 2-67
      - SPARESETS 2-67
      - DESTROY\_PARTITION 2-67
  - syntax 2-66
- deleting
  - containers 2-61
  - devices 2-59, 2-61
  - mirrorsets 2-59
  - RAIDsets 2-59, 2-61
  - storagesets 2-59, 2-61
  - stripesets 2-59
- DESTROY, switch for INITIALIZE 2-75
- DESTROY\_PARTITION
  - command parameters 2-68
  - description 2-68
  - parameters
    - container-name* 2-68
    - partition-number* 2-68
  - related commands
    - CREATE\_PARTITION 2-69
    - DELETE *unit-name* 2-69
    - SHOW 2-69
  - syntax 2-68
- DESTROY\_UNFLUSHABLE\_DATA, switch for
  - SET NOFAILOVER 2-132
  - SET NOMULTIBUS\_FAILOVER 2-132
- device-name*, parameter for
  - CLEAR\_ERRORS *device-name*
  - UNKNOWN 2-43
  - SET *device-name* 2-116
  - SHOW 2-147
- devices
  - locating 2-78
  - setting data transfer rate 2-12, 2-18, 2-116
  - showing 2-146
- DEVICES, showing 2-147
- device-type*, parameter for SHOW 2-147
- diagnostics
  - listing of 2-70
  - running 2-94

- DILX, running 2-94
  - DIRECT, running. *See also* DIRECTORY. 2-95
  - DIRECTORY
    - command parameters 2-70
    - description 2-70
    - related command, RUN 2-70
    - syntax 2-70
  - DISABLE\_ACCESS\_PATH, switch for ADD UNITS 2-34
    - SET *unit-number* 2-141
  - disk drives
    - adding to configuration 2-11
    - deleting 2-61
    - displaying information 2-146
    - initializing 2-73
    - making transportable 2-117
    - mirroring 2-81
    - naming with ADD command 2-11
    - removing from the
      - failedset 2-63
      - spareset 2-65
    - renaming 2-90
    - setting device data transfer rate 2-12
    - showing 2-146
    - transfer rate 2-12
  - disk-name*, parameter for ADD
    - DISKS 2-11
    - MIRRORSETS 2-14
    - RAIDSETS 2-19
    - SPARESETS 2-28
    - DELETE FAILEDSETS 2-63
    - DELETE SPARESETS 2-65
    - MIRROR 2-81
    - REDUCE 2-88
    - UNMIRROR 2-156
  - DISKS
    - parameter for LOCATE 2-79
    - showing 2-147
  - DRM, CLI commands
    - ADD ASSOCIATIONS 2-2
    - ADD REMOTE\_COPY\_SETS 2-23
    - SET *remote-copy-set-name* 2-136
    - SITE\_FAILOVER 2-155
  - DSTAT, running 2-95
  - dual-redundant controller configuration
    - enabling 2-123, 2-129
    - multibus failover mode 2-129
    - transparent failover mode 2-123
  - dynamic volume expansion. *See* ADD CONCATSETS.
- E**
- edit and recall command keys (table) 1-8
  - EMU
    - parameter for SHOW 2-147
    - set point temperatures table 2-119
    - setting 2-118
  - ENABLE\_ACCESS\_PATH, switch for ADD UNITS 2-34
    - SET *unit-number* 2-141
  - error messages
    - clearing from CLI 2-40
    - clearing unwriteable data errors 2-46
  - ERROR\_MODE, switch for SET *remote-copy-set-name* 2-137
  - EXIT
    - command parameters 2-71
    - description 2-71
    - syntax 2-71
- F**
- FAIL\_ALL, switch for SET *associations* 2-98
  - failedsets, deleting members 2-63
  - failedsets, showing 2-148
  - FANSPEED, switch for SET EMU 2-119
  - finding devices and storagesets 2-78
  - FMU, running 2-95
  - FRUTIL, running 2-95
  - FULL, switch for SHOW 2-148
- G**
- geometry switches for
    - CREATE\_PARTITION 2-55
    - INITIALIZE 2-74

## H

HEADS, switch for  
    CREATE\_PARTITION 2-55  
    INITIALIZE 2-74  
HELP  
    description 2-72  
    syntax 2-72  
HOST\_ID, parameter for ADD CONNECTIONS  
    2-7  
HSUTIL, running 2-95

## I

IDENTIFIER, switch for  
    SET *controller* 2-108  
    SET *unit-number* 2-141  
IGNORE\_ERRORS, switch for  
    RESTART *controller* 2-91  
    SELFTEST *controller* 2-96  
    SHUTDOWN *controller* 2-153  
IMMEDIATE\_SHUTDOWN, switch for  
    RESTART *controller* 2-92  
    SELFTEST *controller* 2-97  
    SHUTDOWN *controller* 2-154  
INITIALIZE  
    command parameters 2-74  
    description 2-73  
    parameter, *container-name* 2-74  
    related commands  
        ADD  
            DISKS 2-77  
            MIRRORSETS 2-77  
            PASSTHROUGH 2-77  
            RAIDSETS 2-77  
            STRIPESETS 2-77  
            UNITS 2-77  
        CONFIGURATION  
            RESET 2-77  
            RESTORE 2-77  
            CREATE\_PARTITION 2-77  
            MIRROR 2-77  
    saving user data 2-75  
    switches

CHUNKSIZE 2-75  
DESTROY 2-75  
geometry  
    CAPACITY 2-74  
    CYLINDERS 2-74  
    HEADS 2-74  
    SECTORS\_PER\_TRACK 2-74  
NODESTROY 2-75  
NOSAVE\_CONFIGURATION 2-76  
SAVE\_CONFIGURATION 2-76  
    syntax 2-73

INITIATOR, switch for SET *remote-copy-set-name* 2-137  
*initiator-unit-name*, parameter for ADD  
    REMOTE\_COPY\_SETS 2-24

## K

keys, recall and edit (table) 1-8

## L

listing diagnostics and utilities 2-70

### LOCATE

command parameters 2-78  
description 2-78  
parameters  
    ALL 2-78  
    CANCEL 2-79  
    *container-name* 2-79  
    DISKS 2-79  
    *ptl* 2-79  
    *unit-number* 2-79  
    UNITS 2-79  
related command, SHOW 2-80  
syntax 2-78

LOG\_UNIT, switch for SET *associations* 2-99  
lost data error, clearing 2-44

## M

MAX\_READ\_CACHED\_TRANSFER\_SIZE,  
switch for  
    ADD UNITS 2-34  
    SET *unit-number* 2-141

- MAX\_WRITE\_CACHED\_TRANSFER\_SIZE,
    - switch for
      - ADD UNITS 2-34
      - SET *unit-number* 2-142
  - MAXIMUM\_CACHED\_TRANSFER\_SIZE,
    - switch for
      - ADD UNITS 2-35
      - SET *unit-number* 2-142
  - MEMBERSHIP, switch for SET *mirrorset-name* 2-126
  - MIRROR
    - command parameters 2-81
    - description 2-81
    - parameters
      - disk-name* 2-81
      - mirrorset-name* 2-81
    - related commands
      - ADD MIRRORSETS 2-83
      - REDUCE 2-83
      - SHOW MIRRORSETS 2-83
      - UNMIRROR 2-83
    - switches
      - COPY 2-82
      - NOPOLICY 2-82
      - POLICY 2-82
    - syntax 2-81
  - MIRRORED\_CACHE, switch for SET *controller* 2-109
    - mirrorset-name*, parameter for
      - ADD MIRRORSETS 2-14
      - MIRROR 2-81
      - SET *mirrorset-name* 2-125
  - mirrorsets
    - actual number of members 2-87
    - adding to configuration 2-14
    - converting back to a single device 2-156
    - creating from a single disk 2-81
    - deleting 2-61
    - displaying information 2-146
    - manually removing a member 2-127
    - removing a member 2-87
    - renaming 2-90
      - showing 2-148
      - showing stripesets 2-146
      - unmirroring 2-156
  - multibus failover mode. *See* SET MULTIBUS\_FAILOVER.
- ## N
- new-container-name*, parameter for RENAME 2-90
  - NO\_OVERRIDE\_BAD\_FLUSH, switch for POWEROFF 2-84
  - NOAUTOSPARE, switch for SET FAILEDSET 2-121
  - NOCOMMAND\_CONSOLE\_LUN, switch for SET *controller* 2-108
  - NODE\_ID, switch for SET *controller* 2-109
  - NODESTROY, switch for INITIALIZE 2-75
  - NODESTROY\_UNFLUSHABLE\_DATA,
    - switch for
      - SET NOFAILOVER 2-132
      - SET NOMULTIBUS\_FAILOVER 2-132
  - NOFAIL\_ALL, switch for SET *associations* 2-98
  - NOIDENTIFIER, switch for
    - SET *controller* 2-108
    - SET *unit-number* 2-141
  - NOIGNORE\_ERRORS, switch for
    - RESTART *controller* 2-91
    - SELFTEST *controller* 2-96
    - SHUTDOWN *controller* 2-153
  - NOIMMEDIATE\_SHUTDOWN, switch for
    - RESTART *controller* 2-92
    - SELFTEST *controller* 2-97
    - SHUTDOWN *controller* 2-154
  - NOLOG\_UNIT, switch for SET *associations* 2-99
  - NOMIRRORED\_CACHE, switch for SET *controller* 2-109
  - NOORDER\_ALL, switch for SET *associations* 2-99
  - NOPOLICY, switch for
    - ADD MIRRORSETS 2-15

ADD RAIDSETS 2-20  
MIRROR 2-82  
SET *mirrorset-name* 2-126  
SET *RAIDset-name* 2-133  
NOPREFERRED\_PATH, switch for  
  ADD UNITS 2-35  
  SET *unit-number* 2-142  
NOREAD\_CACHE, switch for  
  ADD UNITS 2-36  
  SET *unit-number* 2-143  
NOREADAHEAD\_CACHE, switch for  
  ADD UNITS 2-36  
  SET *unit-number* 2-143  
NOREduced, switch for ADD RAIDSETS  
  2-21  
NOREMOTE\_COPY, switch for SET *controller*  
  2-112  
NORUN, switch for  
  ADD UNITS 2-36  
  SET *unit-number* 2-144  
NOSAVE\_CONFIGURATION, switch for  
  INITIALIZE 2-76  
NOTERMInAL\_PARITY, switch for SET *con-*  
  *troller* 2-113  
NOTRANSPORTABLE, switch for  
  ADD DISKS 2-12  
  SET *device-name* 2-117  
NOUPS, switch for SET *controller* 2-114  
NOWRITE\_PROTECT, switch for  
  ADD UNITS 2-37  
  SET *unit-number* 2-144  
NOWRITEBACK\_CACHE, switch for  
  ADD UNITS 2-37  
  SET *unit-number* 2-144

## O

*old-container-name*, parameter for RENAME  
  2-90  
OPERATING\_SYSTEM, switch for  
  ADD CONNECTIONS 2-8  
  SET *connection-name* 2-103  
OPERATION\_MODE, switch for

  ADD REMOTE\_COPY\_SETS 2-24  
  SET *remote-copy-set-name* 2-137  
ORDER\_ALL, switch for SET *associations* 2-99  
other controller  
  explained 1-2  
OUTSTANDING\_IOS, switch for  
  ADD REMOTE\_COPY\_SETS 2-25  
  SET *remote-copy-set-name* 2-137  
OVERRIDE\_BAD\_FLUSH, switch for  
  POWEROFF 2-84

## P

parameters  
  ADAPTER\_ID 2-7  
  ADD ASSOCIATIONS  
    *association-set-name* 2-2  
    *remote-copy-set-name* 2-2  
  ADD CONCATSETS  
    *concatset-name* 2-4  
    *storageset-name* 2-4  
  ADD CONNECTIONS  
    ADAPTER\_ID 2-7  
    *connection-name* 2-7  
    CONTROLLER 2-7  
    HOST\_ID 2-7  
    PORT 2-7  
  ADD DISKS  
    *disk-name* 2-11  
    *scsi-port-target-lun* 2-11  
  ADD MIRRORSETS  
    *disk-name* 2-14  
    *mirrorset-name* 2-14  
  ADD PASSTHROUGH  
    *passthrough-name* 2-17  
    *scsi-port-target-lun* 2-17  
  ADD RAIDSETS  
    *disk-name* 2-19  
    *RAIDset-name* 2-19  
  ADD REMOTE\_COPY\_SETS  
    *initiator-unit-name* 2-24  
    *remote-copy-set-name* 2-23  
    *remote-node-name*\target-unit-name 2-24

- ADD SNAPSHOT\_UNITS
  - snapshot-unit* 2-26
  - source-unit* 2-27
  - storageset-name* 2-26
- ADD SPARESETS, *disk-name* 2-28
- ADD STRIPESETS
  - container-name* 2-29
  - stripeset-name* 2-29
- ADD UNITS
  - container-name* 2-32
  - unit-number* 2-32
- ALL 2-78
- ASSOCIATIONS 2-147
  - association-set-name* 2-2, 2-57, 2-98, 2-147
- CANCEL 2-79
- CLEAR\_ERRORS
  - controller* INVALID\_CACHE
    - controller* 2-41
    - data-retention-policy* 2-41
  - device-name* UNKNOWN, *device-name* 2-43
  - unit-number* LOST\_DATA, *unit-number* 2-44
  - unit-number* UNWRITEABLE\_DATA, *unit-number* 2-46
- CLEAR\_ERRORS *controller*
  - INVALID\_CACHE
    - data-retention-policy* 2-41
  - concatset-name* 2-4, 2-58, 2-101, 2-147
  - connection-name* 2-7, 2-59, 2-103, 2-147
- CONNECTIONS 2-147
  - container-name* 2-29, 2-32, 2-54, 2-61, 2-68, 2-74, 2-79
  - controller* 2-41, 2-91, 2-96, 2-106, 2-147, 2-153
- CONTROLLER, for ADD CONNECTIONS 2-7
- CREATE\_PARTITION, *container-name* 2-54
  - data-retention-policy* 2-41
- DELETE
  - associations*, *association-set-name* 2-57
  - concatsets*, *concatset-name* 2-58
  - connections*, *connection-name* 2-59
  - container-name*, *container-name* 2-61
  - FAILEDSETS, *disk-name* 2-63
    - remote-copy-set-name*
      - remote-copy-set-name* 2-64
  - SPARESETS, *disk-name* 2-65
    - unit-number*, *unit-number* 2-66
- DESTROY\_PARTITION
  - container-name* 2-68
  - partition-number* 2-68
- device-name* 2-43, 2-116, 2-147
- device-type* 2-147
- disk-name* 2-11, 2-14, 2-19, 2-28, 2-63, 2-65, 2-81, 2-88, 2-156
- DISKS 2-79
- EMU 2-147
- HOST\_ID 2-7
- INITIALIZE, *container-name* 2-74
  - initiator-unit-name* 2-24
- LOCATE
  - ALL 2-78
  - CANCEL 2-79
    - container-name* 2-79
  - DISKS 2-79
    - ptl* 2-79
    - unit-number* 2-79
  - UNITS 2-79
- MIRROR
  - disk-name* 2-81
  - mirrorset-name* 2-81
  - mirrorset-name* 2-14, 2-81, 2-125
  - new-container-name* 2-90
  - old-container-name* 2-90
  - partition-number* 2-68
  - passthrough-name* 2-17
- PORT 2-7
  - program-name* 2-94
  - ptl* (scsi-port-target-lun) 2-79
- RAIDset-name 2-19, 2-133
- REDUCE, *disk-name* 2-88
- REMOTE\_COPY\_SETS 2-147

- remote-copy-set-name* 2-2, 2-23, 2-64, 2-136, 2-147, 2-155
- remote-node-name* 2-155
- remote-node-name\target-unit-name* 2-24
- RENAME
  - new-container-name* 2-90
  - old-container-name* 2-90
- RESTART *controller, controller* 2-91
- RETRY\_ERRORS *unit-number*
  - UNWRITEABLE\_DATA
    - unit-number* 2-93
- RUN *program-name* 2-94
- scsi-port-target-lun* 2-11, 2-17
- SELFTEST *controller, controller* 2-96
- SET
  - associations, association-set-name* 2-98
  - concatsets, concatset-name* 2-101
  - connection-name, connection-name* 2-103
  - controller, controller* 2-106
  - device-name, device-name* 2-116
  - mirrorset-name, mirrorset-name* 2-125
  - RAIDset-name, RAIDset-name* 2-133
  - remote-copy-set-name, remote-copy-set-name* 2-136
  - unit-number, unit-number* 2-139
- SHOW
  - ASSOCIATIONS 2-147
    - association-set-name* 2-147
    - concatset-name* 2-147
    - connection-name* 2-147
  - CONNECTIONS 2-147
    - controller* 2-147
    - device-name* 2-147
    - device-type* 2-147
  - EMU 2-147
  - REMOTE\_COPY\_SETS 2-147
    - remote-copy-set-name* 2-147
    - storageset-name* 2-148
    - storageset-type* 2-148
    - unit-number* 2-148
  - UNITS 2-148
- SHUTDOWN *controller, controller* 2-153
- SITE\_FAILOVER
  - remote-copy-set-name* 2-155
  - remote-node-name* 2-155
  - snapshot-unit* 2-26
  - source-unit* 2-27
  - storageset-name* 2-4, 2-26, 2-148
  - storageset-type* 2-148
  - stripeset-name* 2-29
  - unit-number* 2-32, 2-44, 2-46, 2-66, 2-79, 2-93, 2-139, 2-148
- UNITS 2-79, 2-148
- UNMIRROR, *disk-name* 2-156
- PARTITION, switch for ADD UNITS 2-35
- partitioned container, initializing 2-73
- partition-number*, parameter for DESTROY\_PARTITION 2-68
- partitions
  - creating 2-54
  - displaying size 2-146
  - general commands 1-5
  - setting size 2-55
  - showing 2-146
- passthrough containers
  - deleting 2-61
- PASSTHROUGH containers, showing 2-147
- passthrough devices
  - adding to configuration 2-17
  - naming with ADD command 2-17
  - setting device data transfer rate 2-18
  - transfer rate 2-18
- passthrough-name*, parameter for ADD PASSTHROUGH 2-17
- physically connecting host adapter. *See* ADD CONNECTIONS.
- POLICY, switch for
  - ADD MIRRORSETS 2-15
  - ADD RAIDSETS 2-20
  - MIRROR 2-82
  - SET *mirrorset-name* 2-126
  - SET *RAIDset-name* 2-133
- PORT, parameter for ADD CONNECTIONS 2-7

- PORT\_n\_AL\_PA, switch for SET *controller* 2-111
- PORT\_n\_TOPOLOGY, switch for SET *controller* 2-111, 2-112
- POWEROFF
- command parameters 2-84
  - description 2-84
  - switch settings 2-85
  - switches
    - BATTERY\_OFF 2-84
    - BATTERY\_ON 2-84
    - NO\_OVERRIDE\_BAD\_FLUSH 2-84
    - VERRIDE\_BAD\_FLUSH 2-84
    - SECONDS 2-85
  - syntax 2-84
- PREFERRED\_PATH, switch for
- ADD UNITS 2-35
  - SET *unit-number* 2-142
- program-name*, parameter for RUN 2-94
- prompt, CLI. *See* CLI prompt. 1-9
- PROMPT, switch for SET *controller* 2-112
- ptl*, parameter for LOCATE 2-79
- purging a controller old configuration information 2-50
- R**
- RAIDset-name*, parameter for
- ADD RAIDSETS 2-19
  - SET *RAIDset-name* 2-133
- RAIDsets
- adding to configuration 2-19
  - adding while missing a member 2-21
  - changing characteristics 2-133
  - choosing a replacement member 2-20
  - deleting 2-61
  - displaying information 2-146
  - initializing 2-73
  - removing a member 2-134
  - renaming 2-90
  - replacing a member 2-135
  - setting a replacement policy 2-20
  - showing 2-146, 2-148
  - specifying chunksize 2-75
  - specifying replacement policy 2-133
- read requests
- See also* write requests.
  - setting for improved host application performance 2-36, 2-143
  - setting read cache for improved performance 2-36, 2-143
- READ\_CACHE, switch for
- ADD UNITS 2-36
  - SET *unit-number* 2-143
- READ\_SOURCE, switch for
- ADD MIRRORSETS 2-15
  - SET *mirrorset-name* 2-127
- READAHEAD\_CACHE, switch for
- ADD UNITS 2-36
  - SET *unit-number* 2-143
- recall and edit command keys (table) 1-8
- RECONSTRUCT, switch for
- ADD RAIDSETS 2-21
  - SET *RAIDset-name* 2-134
- REDUCE
- command parameters 2-88
  - description 2-87
  - parameter, *disk-name* 2-88
  - related commands
    - ADD MIRRORSETS 2-89
    - MIRROR 2-89
    - RUN CLONE 2-89
    - SET *mirrorset-name* 2-89
    - SHOW MIRRORSETS 2-89
  - syntax 2-88
- REDUCED, switch for ADD RAIDSETS 2-21
- remote copy sets
- ADD ASSOCIATIONS 2-2
  - restrictions 2-23
  - SET *remote-copy-set-name* 2-136
  - SITE\_FAILOVER 2-155
- REMOTE\_COPY, switch for SET *controller* 2-112
- REMOTE\_COPY\_SETS, parameter for SHOW 2-147

- remote-copy-set-name*, parameter for
    - ADD ASSOCIATIONS 2-2
    - ADD REMOTE\_COPY\_SETS 2-23
    - DELETE *remote-copy-set-name* 2-64
    - SHOW 2-147
    - SITE\_FAILOVER 2-155
  - remote-node-name*, parameter for
    - SITE\_FAILOVER 2-155
  - remote-node-name/target-unit-name*, parameters for ADD REMOTE\_COPY\_SETS 2-24
  - REMOVE, switch for
    - SET *mirrorset-name* 2-127
    - SET *RAIDset-name* 2-134
    - SET *remote-copy-set-name* 2-138
  - RENAME
    - command parameters 2-90
    - description 2-90
    - parameters
      - new-container-name* 2-90
      - old-container-name* 2-90
    - syntax 2-90
  - renaming 2-90
  - REPLACE, switch for
    - SET *mirrorset-name* 2-128
    - SET *RAIDset-name* 2-135
  - RESERVATION\_STYLE, switch for
    - ADD CONNECTIONS 2-8
    - SET *connection-name* 2-104
  - resetting configuration 2-48
  - RESTART
    - physically connecting a host adapter. *See also* ADD CONNECTIONS. 2-6
  - RESTART *controller*
    - command parameters 2-91
    - description 2-91
    - parameter, *controller* 2-91
    - related commands
      - SELFTEST *controller* 2-92
      - SHUTDOWN *controller* 2-92
    - switches
      - IGNORE\_ERRORS 2-91
      - IMMEDIATE\_SHUTDOWN 2-92
      - NOIGNORE\_ERRORS 2-91
      - NOIMMEDIATE\_SHUTDOWN 2-92
    - syntax 2-91
    - restoring a configuration 2-50
    - RESUME, switch for SET *remote-copy-set-name* 2-138
    - RETRY\_ERRORS *unit-number*
      - UNWRITEABLE\_DATA
        - description 2-93
        - parameter, *unit-number* 2-93
        - related command, CLEAR\_ERRORS UNWRITEABLE\_DATA 2-93
        - syntax 2-93
  - RUN
    - command parameters 2-94
    - description 2-94
    - parameter, *program-name* 2-94
    - programs
      - CHVSN 2-94
      - CLCP 2-94
      - CLI 2-94
      - CLONE 2-94
      - CONFIG 2-94
      - DILX 2-94
      - DIRECT 2-95
      - DSTAT 2-95
      - FMU 2-95
      - FRUTIL 2-95
      - HSUTIL 2-95
      - VTDPY 2-95
    - related command, DIRECTORY 2-95
    - switch for
      - ADD UNITS 2-36
      - SET *unit-number* 2-144
    - syntax 2-94
- ## S
- SAVE\_CONFIGURATION, switch for INITIALIZE 2-76
  - SCSI\_VERSION, switch for SET *controller* 2-113
  - scsi-port-target-lun*, parameter for

- ADD DISKS 2-11
- ADD PASSTHROUGH 2-17
- SECONDS, switch for POWEROFF 2-85
- SECTORS\_PER\_TRACK, switch for
  - CREATE\_PARTITION 2-55
  - INITIALIZE 2-74
- selective presentation commands 1-4
- SELFTTEST *controller*
  - command parameters 2-96
  - description 2-96
  - parameter, *controller* 2-96
  - related commands
    - RESTART *controller* 2-97
    - SHUTDOWN *controller* 2-97
  - switches
    - IGNORE\_ERRORS 2-96
    - IMMEDIATE\_SHUTDOWN 2-97
    - NOIGNORE\_ERRORS 2-96
    - NOIMMEDIATE\_SHUTDOWN 2-97
  - syntax 2-96
- SENSOR\_n\_SETPOINT, switch for SET EMU 2-119
- SET *associations*
  - command parameters 2-98
  - description 2-98
  - parameter, *association-set-name* 2-98
  - related commands
    - ADD ASSOCIATIONS 2-100
    - ADD REMOTE\_COPY\_SET 2-100
    - SET *remote-copy-set-name* 2-100
  - switches
    - ADD 2-98
    - FAIL\_ALL 2-98
    - LOG\_UNIT 2-99
    - NOFAIL\_ALL 2-98
    - NOLOG\_UNIT 2-99
    - NOORDER\_ALL 2-99
    - ORDER\_ALL 2-99
  - syntax 2-98
- SET *concatsets*
  - command parameters 2-101
  - description 2-101
  - parameter, *concatset-name* 2-101
  - related commands
    - ADD CONCATSETS 2-102
    - DELETE *concatsets* 2-102
    - SHOW CONCATSETS 2-102
  - switch, ADD 2-101
  - syntax 2-101
- SET *connection-name*
  - command parameters 2-103
  - description 2-103
  - parameter, *connection-name* 2-103
  - related commands
    - ADD CONNECTIONS 2-105
    - ADD UNITS 2-105
    - DELETE *connections* 2-105
    - RENAME 2-105
  - switches
    - OPERATING\_SYSTEM 2-103
    - RESERVATION\_STYLE 2-104
    - UNIT\_OFFSET 2-104
  - syntax 2-103
- SET *controller*
  - command parameters 2-106
  - description 2-106
  - parameter, *controller* 2-106
  - related commands
    - ADD REMOTE\_COPY\_SETS 2-115
    - SET *remote-copy-set-name* 2-115
    - SHOW *controller* 2-115
  - switches
    - ALLOCATION\_CLASS 2-108
    - CACHE\_FLUSH\_TIMER 2-108
    - COMMAND\_CONSOLE\_LUN 2-108
    - IDENTIFIER 2-108
    - MIRRORED\_CACHE 2-109
    - NOCOMMAND\_CONSOLE\_LUN 2-108
    - NODE\_ID 2-109
    - NOIDENTIFIER 2-108
    - NOMIRRORED\_CACHE 2-109
    - NOREMOTE\_COPY 2-112
    - NOTERMINAL\_PARITY 2-113

- NOUPS 2-114
- PORT\_n\_AL\_PA 2-111
- PORT\_n\_TOPOLOGY 2-111, 2-112
- PROMPT 2-112
- REMOTE\_COPY 2-112
- SCSI\_VERSION 2-113
- TERMINAL\_PARITY 2-113
- TERMINAL\_SPEED 2-113
- TIME 2-113
- UPS 2-114
- syntax 2-106
- SET *device-name*
  - command parameters 2-116
  - description 2-116
  - parameter, *device-name* 2-116
  - related commands
    - ADD DISKS 2-117
    - SHOW DEVICES 2-117
    - SHOW DISKS 2-117
  - switches
    - NOTTRANSPORTABLE 2-117
    - TRANSFER\_RATE\_REQUESTED 2-116
    - TRANSPORTABLE 2-117
  - syntax 2-116
- SET EMU
  - command parameters 2-118
  - description 2-118
  - related command, SHOW 2-120
  - switches
    - ALARM 2-118
    - FANSPEED 2-119
    - SENSOR\_n\_SETPOINT 2-119
  - syntax 2-118
- SET FAILEDSET
  - command parameters 2-121
  - description 2-121
  - related commands
    - DELETE FAILEDSET 2-122
    - SHOW FAILEDSET 2-122
  - switches
    - AUTOSPARE 2-121
    - NOAUTOSPARE 2-121
  - syntax 2-121
- SET FAILOVER COPY=*controller*
  - command parameters 2-123
  - description 2-123
  - related commands
    - SET MULTIBUS\_FAILOVER 2-124
    - SET NOFAILOVER 2-124
    - SET NOMULTIBUS\_FAILOVER 2-124
  - switch, COPY 2-123
  - syntax 2-123
- SET *mirrorset-name*
  - command parameters 2-125
  - description 2-125
  - parameter, *mirrorset-name* 2-125
  - related commands
    - ADD MIRRORSET 2-128
    - MIRROR 2-128
    - REDUCE 2-128
    - SHOW MIRRORSET 2-128
    - UNMIRROR 2-128
  - switches
    - COPY 2-125
    - MEMBERSHIP 2-126
    - NOPOLICY 2-126
    - POLICY 2-126
    - READ\_SOURCE 2-127
    - REMOVE 2-127
    - REPLACE 2-128
  - syntax 2-125
- SET MULTIBUS\_FAILOVER
  - command parameters 2-129
  - description 2-129
  - related commands, SET
    - FAILOVER 2-130
    - NOFAILOVER 2-130
    - NOMULTIBUS\_FAILOVER 2-130
  - switch, COPY 2-129
  - syntax 2-129
- SET NOFAILOVER
  - command parameters 2-131
  - description 2-131

- related command, SET FAILOVER 2-132
- switches
  - DESTROY\_UNFLUSHABLE\_DATA 2-132
  - NODESTROY\_UNFLUSHABLE\_DATA A 2-132
- syntax 2-131
- SET NOMULTIBUS\_FAILOVER
  - command parameters 2-131
  - description 2-131
  - related command, SET MULTIBUS\_FAILOVER 2-132
  - switches
    - DESTROY\_UNFLUSHABLE\_DATA 2-132
    - NODESTROY\_UNFLUSHABLE\_DATA A 2-132
  - syntax 2-131
- SET *RAIDset-name*
  - command parameters 2-133
  - description 2-133
  - parameter, *RAIDset-name* 2-133
  - related commands
    - ADD RAIDSETS 2-135
    - SHOW RAIDSETS 2-135
  - switches
    - NOPOLICY 2-133
    - POLICY 2-133
    - RECONSTRUCT 2-134
    - REMOVE 2-134
    - REPLACE 2-135
  - syntax 2-133
- SET *remote-copy-set-name*
  - command parameters 2-136
  - description 2-136
  - parameter, *remote-copy-set-name* 2-136
  - related commands
    - ADD REMOTE\_COPY\_SETS 2-138
    - SET *controller* REMOTE\_COPY 2-138
  - switches
    - ADD 2-136
    - ERROR\_MODE 2-137
    - INITIATOR 2-137
    - OPERATION\_MODE 2-137
    - OUTSTANDING\_IOS 2-137
    - REMOVE 2-138
    - RESUME 2-138
    - SUSPEND 2-138
  - syntax 2-136
- SET *unit-number*
  - command parameters 2-139
  - description 2-139
  - parameter, *unit-number* 2-139
  - related commands
    - ADD UNITS 2-145
    - SHOW *unit-number* 2-145
    - SHOW UNITS 2-145
  - switches
    - DISABLE\_ACCESS\_PATH 2-141
    - ENABLE\_ACCESS\_PATH 2-141
    - IDENTIFIER 2-141
    - MAX\_READ\_CACHED\_TRANSFER\_SIZE 2-141
    - MAX\_WRITE\_CACHED\_TRANSFER\_SIZE 2-142
    - MAXIMUM\_CACHED\_TRANSFER\_SIZE 2-142
    - NOIDENTIFIER 2-141
    - NOPREFERRED\_PATH 2-142
    - NOREAD\_CACHE 2-143
    - NOREADAHEAD\_CACHE 2-143
    - NORUN 2-144
    - NOWRITE\_PROTECT 2-144
    - NOWRITEBACK\_CACHE 2-144
    - PREFERRED\_PATH 2-142
    - READ\_CACHE 2-143
    - READAHEAD\_CACHE 2-143
    - RUN 2-144
    - WRITE\_PROTECT 2-144
    - WRITEBACK\_CACHE 2-144
  - syntax 2-139
- setting
  - CLI prompt 2-112
  - control of metadata 2-75

- controller
    - behavior at restart 2-92
    - behavior selftest 2-97
    - cache UPS policy 2-114
    - configuration handling 2-76
    - error handling at selftest 2-92, 2-96
  - data retention policy 2-41
  - device data transfer rate 2-12, 2-18, 2-116
  - failedset autospare feature 2-121
  - fan speed 2-119
  - mirrorset
    - spareset replacement policy 2-15, 2-82
  - mirrorsets
    - copy data 2-82
    - copy speed 2-15, 2-82, 2-125
    - member read source 2-15, 2-127
    - read source 2-15, 2-127
    - spareset replacement policy 2-126
  - nofailover cached data policy 2-132
  - number of
    - blocks cached by controller 2-34, 2-141, 2-142
    - mirrorset members 2-126
    - unit partitions 2-35
  - number of blocks cached by controller 2-34, 2-35, 2-142
  - partition size 2-41, 2-55
  - RAIDsets
    - member reconstruct policy 2-21, 2-134
    - member replacement policy 2-15, 2-20, 2-127
  - read cache for units 2-36, 2-143
  - storageset chunksize 2-75
  - subsystem temperature sensor setpoint 2-119
  - terminal parity 2-113
  - terminal speed 2-113
  - time 2-113
  - transportability of devices 2-117
  - transportability of disks 2-12, 2-117
  - unit availability to the host 2-36, 2-144
  - write-back cache for units 2-37, 2-144
- SHOW**
- command parameters 2-146
  - description 2-146
  - parameters
    - ASSOCIATIONS 2-147
    - association-set-name* 2-147
    - concatset-name* 2-147
    - connection-name* 2-147
    - CONNECTIONS 2-147
    - controller* 2-147
    - device-name* 2-147
    - device-type* 2-147
    - EMU 2-147
    - REMOTE\_COPY\_SETS 2-147
    - remote-copy-set-name* 2-147
    - storageset-name* 2-148
    - storageset-type* 2-148
    - unit-number* 2-148
    - UNITS 2-148
  - switch, FULL 2-148
  - syntax 2-146
- SHOW ID**
- command parameters 2-152
  - description 2-152
  - related command, SET UNITS IDENTIFIER 2-152
  - syntax 2-152
- SHUTDOWN *controller***
- command parameters 2-153
  - description 2-153
  - parameter, *controller* 2-153
  - related commands
    - RESTART *controller* 2-154
    - SELFTEST *controller* 2-154
  - switches
    - IGNORE\_ERRORS 2-153
    - IMMEDIATE\_SHUTDOWN 2-154
    - NOIGNORE\_ERRORS 2-153
    - NOIMMEDIATE\_SHUTDOWN 2-154
  - syntax 2-153
- SITE\_FAILOVER**
- command parameters 2-155
  - description 2-155

- parameters
  - remote-copy-set-name* 2-155
  - remote-node-name* 2-155
- syntax 2-155
- SIZE, switch for CREATE\_PARTITION 2-55
- snapshot-unit*, parameter for ADD SNAPSHOT\_UNITS 2-26
- source-unit*, parameter for ADD SNAPSHOT\_UNITS 2-27
- sparesets
  - adding to configuration 2-28
  - removing a disk drive 2-65
  - showing 2-148
- storageset expansion. *See* ADD CONCATSETS. 2-4
- storageset-name*, parameter for
  - ADD CONCATSETS 2-4
  - ADD SNAPSHOT\_UNITS 2-26
  - SHOW 2-148
- storagesets
  - displaying information 2-146
  - general commands 1-4
  - initializing 2-73
  - locating 2-78
  - renaming 2-90
  - showing 2-146, 2-148
- storageset-type*, parameter for SHOW 2-148
- StorageWorks array controller
- stripeset-name*, parameter for ADD STRIPESETS 2-29
- stripesets
  - adding to configuration 2-29
  - deleting 2-61
  - displaying information 2-146
  - initializing 2-73
  - mirroring 2-81
  - renaming 2-90
  - showing 2-148
  - specifying chunksize 2-75
- SUSPEND, switch for SET *remote-copy-set-name* 2-138
- switches
- ADD CONNECTIONS
  - OPERATING\_SYSTEM 2-8
  - RESERVATION\_STYLE 2-8
  - UNIT\_OFFSET 2-9
- ADD DISKS
  - NOTTRANSPORTABLE 2-12
  - TRANSFER\_RATE\_REQUESTED 2-12
  - TRANSPORTABLE 2-12
- ADD MIRRORSETS
  - COPY 2-15
  - NOPOLICY 2-15
  - POLICY 2-15
  - READ\_SOURCE 2-15
- ADD PASSTHROUGH
  - TRANSFER\_RATE\_REQUESTED 2-18
- ADD RAIDSETS
  - NOPOLICY 2-20
  - NOREDUCE 2-21
  - POLICY 2-20
  - RECONSTRUCT 2-21
  - REDUCED 2-21
- ADD REMOTE\_COPY\_SETS
  - OPERATION\_MODE 2-24
  - OUTSTANDING\_IO 2-25
- ADD UNITS
  - DISABLE\_ACCESS\_PATH 2-34
  - ENABLE\_ACCESS\_PATH 2-34
  - MAX\_READ\_CACHED\_TRANSFER\_SIZE 2-34
  - MAX\_WRITE\_CACHED\_TRANSFER\_SIZE 2-34
  - MAXIMUM\_CACHED\_TRANSFER\_SIZE 2-35
  - NOPREFERRED\_PATH 2-35
  - NOREAD\_CACHE 2-36
  - NOREADAHEAD\_CACHE 2-36
  - NORUN 2-36
  - NOWRITE\_PROTECT 2-37
  - NOWRITEBACK\_CACHE 2-37
  - PARTITION 2-35
  - PREFERRED\_PATH 2-35
  - READ\_CACHE 2-36

READAHEAD\_CACHE 2-36  
RUN 2-36  
WRITE\_PROTECT 2-37  
WRITEBACK\_CACHE 2-37  
ADD= 2-98, 2-101, 2-136  
ALLOCATION\_CLASS 2-108  
AUTOSPARE 2-121  
BATTERY\_OFF 2-84  
BATTERY\_ON 2-84  
CACHE\_FLUSH\_TIMER= 2-108  
CAPACITY= 2-55, 2-74  
CHUNKSIZE= 2-75  
COMMAND\_CONSOLE\_LUN 2-108  
COPY= 2-15, 2-82, 2-125  
CREATE\_PARTITION  
    CAPACITY 2-55  
    CYLINDERS 2-55  
    HEADS 2-55  
    SECTORS\_PER\_TRACK 2-55  
    SIZE 2-55  
CYLINDERS= 2-55, 2-74  
DESTROY 2-75  
DISABLE\_ACCESS\_PATH= 2-33, 2-141  
ENABLE\_ACCESS\_PATH= 2-33, 2-141  
ERROR\_MODE= 2-137  
FAIL\_ALL 2-98  
FULL 2-148  
HEADS= 2-55, 2-74  
IDENTIFIER= 2-108, 2-141  
IGNORE\_ERRORS 2-91, 2-96, 2-153  
IMMEDIATE\_SHUTDOWN 2-92, 2-97,  
    2-154  
INITIALIZE  
    CAPACITY 2-74  
    CHUNKSIZE 2-75  
    CYLINDERS 2-74  
    DESTROY 2-75  
    HEADS 2-74  
    NODESTROY 2-75  
    NOSAVE\_CONFIGURATION 2-76  
    SAVE\_CONFIGURATION 2-76  
    SECTORS\_PER\_TRACK 2-74  
INITIATOR= 2-137  
LOG\_UNIT= 2-99  
MAX\_READ\_CACHED\_TRANSFER\_SIZ  
    E= 2-33, 2-141  
MAX\_WRITE\_CACHED\_TRANSFER\_  
    SIZE= 2-33, 2-142  
MAXIMUM\_CACHED\_TRANSFER\_SIZE  
    = 2-33, 2-142  
MEMBERSHIP= 2-126  
MIRROR  
    COPY 2-82  
    NOPOLICY 2-82  
    POLICY 2-82  
MIRRORED\_CACHE 2-109  
NO\_OVERRIDE\_BAD\_FLUSH 2-84  
NOCOMMAND\_CONSOLE\_LUN 2-108  
NODE\_ID= 2-109  
NODESTROY 2-75  
NOFAIL\_ALL 2-98  
NOIDENTIFIER 2-108, 2-141  
NOIGNORE\_ERRORS 2-91, 2-96, 2-153  
NOIMMEDIATE\_SHUTDOWN 2-92,  
    2-97, 2-154  
NOLOG\_UNIT 2-99  
NOMIRRORED\_CACHE 2-109  
NOORDER\_ALL 2-99  
NOPOLICY 2-15, 2-20, 2-82, 2-126,  
    2-133  
NOPREFERRED\_PATH 2-33, 2-142  
NOREAD\_CACHE= 2-33  
NOREADAHEAD\_CACHE 2-33, 2-143  
NOREAD-CACHE 2-143  
NOREDUCED 2-21  
NOREMOTE\_COPY 2-112  
NORUN 2-33, 2-144  
NOSAVE\_CONFIGURATION 2-76  
NOTERMINAL\_PARITY 2-113  
NOTRANSPORTABLE 2-12, 2-117  
NOUPS 2-114  
NOWRITE\_PROTECT 2-33, 2-144  
NOWRITEBACK\_CACHE 2-33, 2-144  
OPERATING\_SYSTEM= 2-8, 2-103

OPERATION\_MODE= 2-24, 2-137  
 ORDER\_ALL 2-99  
 OUTSTANDING\_IOS= 2-25, 2-137  
 OVERRIDE\_BAD\_FLUSH 2-84  
 PARTITION= 2-33  
 POLICY= 2-15, 2-20, 2-82, 2-126, 2-133  
 PORT\_n\_AL\_PA= 2-111  
 PORT\_n\_TOPOLOGY= 2-111, 2-112  
 POWEROFF  
     BATTERY\_OFF 2-84  
     BATTERY\_ON 2-84  
     NO\_OVERRIDE\_BAD\_FLUSH 2-84  
     OVERRIDE\_BAD\_FLUSH 2-84  
     SECONDS 2-85  
 PREFERRED\_PATH= 2-33, 2-142  
 PROMPT= 2-112  
 READ\_CACHE 2-33, 2-143  
 READ\_SOURCE= 2-15, 2-127  
 READAHEAD\_CACHE 2-33, 2-143  
 RECONSTRUCT= 2-21, 2-134  
 REDUCED 2-21  
 REMOTE\_COPY= 2-112  
 REMOVE= 2-127, 2-134, 2-138  
 REPLACE= 2-128, 2-135  
 RESERVATION\_STYLE= 2-8, 2-104  
 RESTART *controller*  
     IGNORE\_ERRORS 2-91  
     IMMEDIATE\_SHUTDOWN 2-92  
     NOIGNORE\_ERRORS 2-91  
     NOIMMEDIATE\_SHUTDOWN 2-92  
 RESUME= 2-138  
 RUN 2-33, 2-144  
 SAVE\_CONFIGURATION 2-76  
 SCSI\_VERSION= 2-113  
 SECONDS= 2-85  
 SECTORS\_PER\_TRACK= 2-55, 2-74  
 SELFTEST *controller*  
     IGNORE\_ERRORS 2-96  
     IMMEDIATE\_SHUTDOWN 2-97  
     NOIGNORE\_ERRORS 2-96  
     NOIMMEDIATE\_SHUTDOWN 2-97  
 SET *associations*  
     ADD 2-98  
     FAIL\_ALL 2-98  
     LOG\_UNIT 2-99  
     NOFAIL\_ALL 2-98  
     NOLOG\_UNIT 2-99  
     NOORDER\_ALL 2-99  
     ORDER\_ALL 2-99  
 SET *concatsets*, ADD 2-101  
 SET *connection-name*  
     OPERATING\_SYSTEM 2-103  
     RESERVATION\_STYLE 2-104  
     UNIT\_OFFSET 2-104  
 SET *controller*  
     ALLOCATION\_CLASS 2-108  
     CACHE\_FLUSH\_TIMER 2-108  
     COMMAND\_CONSOLE\_LUN 2-108  
     IDENTIFIER 2-108  
     MIRRORED\_CACHE 2-109  
     NOCOMMAND\_CONSOLE\_LUN  
         2-108  
     NODE\_ID 2-109  
     NOIDENTIFIER 2-108  
     NOMIRRORED\_CACHE 2-109  
     NOREMOTE\_COPY 2-112  
     NOTERMINAL\_PARITY 2-113  
     NOUPS 2-114  
     PORT\_n\_AL\_PA 2-111  
     PORT\_n\_TOPOLOGY 2-111, 2-112  
     PROMPT 2-112  
     REMOTE\_COPY 2-112  
     SCSI\_VERSION 2-113  
     TERMINAL\_PARITY 2-113  
     TERMINAL\_SPEED 2-113  
     TIME 2-113  
     UPS 2-114  
 SET *device-name*  
     NOTRANSPORTABLE 2-117  
     TRANSFER\_RATE\_REQUESTED  
         2-116  
     TRANSPORTABLE 2-117  
 SET EMU  
     ALARM 2-118

- FANSPEED 2-119
- SENSOR\_n\_SETPOINT 2-119
- SET FAILEDSET
  - AUTOSPARE 2-121
  - NOAUTOSPARE 2-121
- SET FAILOVER COPY, COPY 2-123
- SET *mirrorset-name*
  - COPY 2-125
  - MEMBERSHIP 2-126
  - NOPOLICY 2-126
  - POLICY 2-126
  - READ\_SOURCE 2-127
  - REMOVE 2-127
  - REPLACE 2-128
- SET MULTIBUS\_FAILOVER, COPY 2-129
- SET NOFAILOVER
  - DESTROY\_UNFLUSHABLE\_DATA 2-132
  - NODESTROY\_UNFLUSHABLE\_DATA 2-132
- SET NOMULTIBUS\_FAILOVER
  - DESTROY\_UNFLUSHABLE\_DATA 2-132
  - NODESTROY\_UNFLUSHABLE\_DATA 2-132
- SET *RAIDset-name*
  - NOPOLICY 2-133
  - POLICY 2-133
  - RECONSTRUCT 2-134
  - REMOVE 2-134
  - REPLACE 2-135
- SET *remote-copy-set-name*
  - ADD 2-136
  - ERROR\_MODE 2-137
  - INITIATOR 2-137
  - OPERATION\_MODE 2-137
  - OUTSTANDING\_IOS 2-137
  - REMOVE 2-138
  - RESUME 2-138
  - SUSPEND 2-138
- SET *unit-number*
  - DISABLE\_ACCESS\_PATH 2-141
  - ENABLE\_ACCESS\_PATH 2-141
  - IDENTIFIER 2-141
  - MAX\_READ\_CACHED\_TRANSFER\_SIZE 2-141
  - MAX\_WRITE\_CACHED\_TRANSFER\_SIZE 2-142
  - MAXIMUM\_CACHED\_TRANSFER\_SIZE 2-142
  - NOIDENTIFIER 2-141
  - NOPREFERRED\_PATH 2-142
  - NOREAD\_CACHE 2-143
  - NOREADAHEAD\_CACHE 2-143
  - NORUN 2-144
  - NOWRITE\_PROTECT 2-144
  - NOWRITEBACK\_CACHE 2-144
  - PREFERRED\_PATH 2-142
  - READ\_CACHE 2-143
  - READAHEAD\_CACHE 2-143
  - RUN 2-144
  - WRITE\_PROTECT 2-144
  - WRITEBACK\_CACHE 2-144
- SHOW, FULL 2-148
- SHUTDOWN *controller*
  - IGNORE\_ERRORS 2-153
  - IMMEDIATE\_SHUTDOWN 2-154
  - NOIGNORE\_ERRORS 2-153
  - NOIMMEDIATE\_SHUTDOWN 2-154
- SIZE= 2-55
- SUSPEND= 2-138
- TERMINAL\_PARITY= 2-113
- TERMINAL\_SPEED= 2-113
- TIME= 2-113
- TRANSFER\_RATE\_REQUESTED= 2-12, 2-18, 2-116
- TRANSPORTABLE 2-12, 2-117
- UNIT\_OFFSET. (See also SET *connection-name* 2-104
- UNIT\_OFFSET=. See also ADD CONNECTIONS. 2-9
- UPS= 2-114
- WRITE\_PROTECT 2-33, 2-144
- WRITEBACK\_CACHE 2-33, 2-144

- syntax
- ADD
    - ASSOCIATIONS 2-2
    - CONCATSETS 2-4
    - CONNECTIONS 2-6
    - DISKS 2-11
    - MIRRORSETS 2-14
    - PASSTHROUGH 2-17
    - RAIDSETS 2-19
    - REMOTE\_COPY\_SETS 2-23
    - SNAPSHOT\_UNITS 2-26
    - SPARESETS 2-28
    - STRIPESETS 2-29
    - UNITS 2-31
  - CLEAR\_ERRORS
    - CLI 2-40
    - controller* INVALID\_CACHE 2-41
    - device-name* UNKNOWN 2-43
    - unit-number* LOST\_DATA 2-44
    - unit-number* UNWRITEABLE\_DATA 2-46
  - CONFIGURATION
    - RESET 2-49
    - RESTORE 2-51
    - SAVE 2-52
  - CREATE\_PARTITION 2-54
  - DELETE
    - associations* 2-57
    - concatsets* 2-58
    - connections* 2-59
    - container-name* 2-61
    - FAILEDSETS 2-63
    - remote-copy-set-name* 2-64
    - SPARESETS 2-65
    - unit-number* 2-66
  - DESTROY\_PARTITION 2-68
  - DIRECTORY 2-70
  - EXIT 2-71
  - general command attributes 1-8
  - HELP 2-72
  - INITIALIZE 2-73
  - LOCATE 2-78
  - MIRROR 2-81
  - POWEROFF 2-84
  - REDUCE 2-88
  - RENAME 2-90
  - RESTART *controller* 2-91
  - RETRY\_ERRORS *unit-number*
    - UNWRITEABLE\_DATA 2-93
  - RUN 2-94
  - SELFTTEST *controller* 2-96
  - SET
    - associations* 2-98
    - concatsets* 2-101
    - connection-name* 2-103
    - controller* 2-106
    - device-name* 2-116
    - EMU 2-118
    - FAILEDSET 2-121
    - FAILOVER COPY=*controller* 2-123
    - mirrorset-name* 2-125
    - MULTIBUS\_FAILOVER 2-129
    - NOFAILOVER 2-131
    - NOMULTIBUS\_FAILOVER 2-131
    - RAIDset-name* 2-133
    - remote-copy-set-name* 2-136
    - unit-number* 2-139
  - SHOW 2-146
  - SHOW ID 2-152
  - SHUTDOWN *controller* 2-153
  - SITE\_FAILOVER 2-155
  - UNMIRROR 2-156
- T**
- tables
    - EMU set point temperatures 2-119
    - recall and edit command keys 1-8
  - terminal
    - setting parity 2-113
    - setting speed 2-113
  - TERMINAL\_PARITY, switch for SET *controller* 2-113
  - TERMINAL\_SPEED, switch for SET *controller* 2-113

terminating CLI program 2-71  
testing controllers 2-96  
this controller  
    explained 1-2  
    starting diagnostic or utility programs 2-94  
TIME, switch for SET *controller* 2-113  
transfer rate, setting device 2-12, 2-18, 2-116  
TRANSFER\_RATE\_REQUESTED, switch for  
    ADD DISKS 2-12  
    ADD PASSTHROUGH 2-18  
    SET *device-name* 2-116  
transparent failover  
    CLI commands 1-3  
    mode 2-123  
TRANSPORTABLE, switch for  
    ADD DISKS 2-12  
    SET *device-name* 2-117

## U

UNIT\_OFFSET, switch for  
    ADD CONNECTIONS 2-9  
    SET *connection-name* 2-104  
*unit-number*, parameter for  
    ADD UNITS 2-32  
CLEAR\_ERRORS  
    *unit-number* LOST\_DATA 2-44  
    *unit-number* UNWRITEABLE\_DATA  
        2-46  
DELETE *unit-number* 2-66  
LOCATE 2-79  
RETRY\_ERRORS *unit-number*  
    UNWRITEABLE\_DATA 2-93  
SET *unit-number* 2-139  
SHOW 2-148

## units

adding to configuration 2-31  
changing characteristics 2-139  
clearing lost data error 2-44  
deleting from the configuration 2-66  
displaying configured units 2-148  
displaying information 2-146  
mirroring 2-81

    naming with ADD command 2-32  
    showing 2-146  
UNITS, parameter for  
    LOCATE 2-79  
    SHOW 2-148  
UNMIRROR  
    command parameters 2-156  
    description 2-156  
    parameter, *disk-name* 2-156  
    related commands  
        ADD MIRRORSET 2-157  
        MIRROR 2-157  
        REDUCE 2-157  
        RUN CLONE 2-157  
        SET *mirrorset-name* 2-157  
    syntax 2-156  
unwriteable data error, retrying 2-93  
UPS, switch for SET *controller* 2-114  
utilities

    listing of 2-70  
    programs  
        CHVSN 2-94  
        CLCP 2-94  
        CLI 2-94  
        CLONE 2-94  
        CONFIG 2-94  
        DILX 2-94  
        DIRECT 2-95  
        DSTAT 2-95  
        FMU 2-95  
        FRUTIL 2-95  
        HSUTIL 2-95  
        VTDPY 2-95  
    running 2-94

## V

VTDPY, running 2-95

## W

write requests  
    improving the subsystem response time with  
        write-back caching 2-144

placing data with with write-through caching  
2-37, 2-145  
*See also* read requests.  
WRITE\_PROTECT, switch for  
ADD UNITS 2-37  
SET *unit-number* 2-144  
write-back caching, setting the flush timer 2-108  
WRITEBACK\_CACHE, switch for  
ADD UNITS 2-37  
SET *unit-number* 2-144

