

Power Systems

FSP Serial Cable

IBM

Power Systems


FSP Serial Cable

IBM

Remove FSP Serial Cable

To remove a FSP serial cable, complete the following steps:

1. Perform the following procedure on ONLY THE FRU(s) BEING SERVICED. The following images are generic and do not represent the literal location being serviced.
2. Modifying FRU locations which are not called out for service can have adverse effects on the system, INCLUDING SYSTEM OUTAGE AND LOSS OF DATA.
 1. Make note of the device to which the FSP serial cable is connected.
 2. Unplug the FSP serial cable from the system and the device.

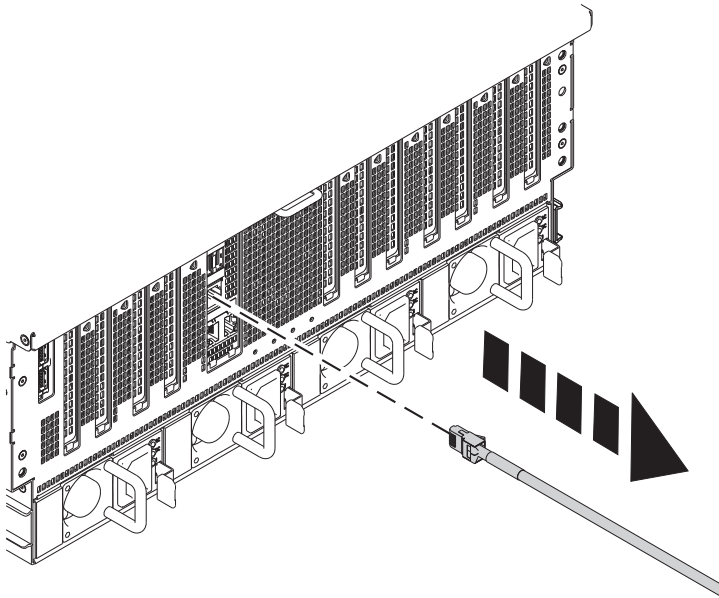


If performing this procedure from a management console, close this web page to continue with the procedure.

Install FSP Serial Cable

To install a FSP serial cable, complete the following steps:

1. Perform the following procedure on ONLY THE FRU(s) BEING SERVICED. The following images are generic and do not represent the literal location being serviced.
2. Modifying FRU locations which are not called out for service can have adverse effects on the system, INCLUDING SYSTEM OUTAGE AND LOSS OF DATA.

Plug the FSP serial cable into the appropriate device and system location.

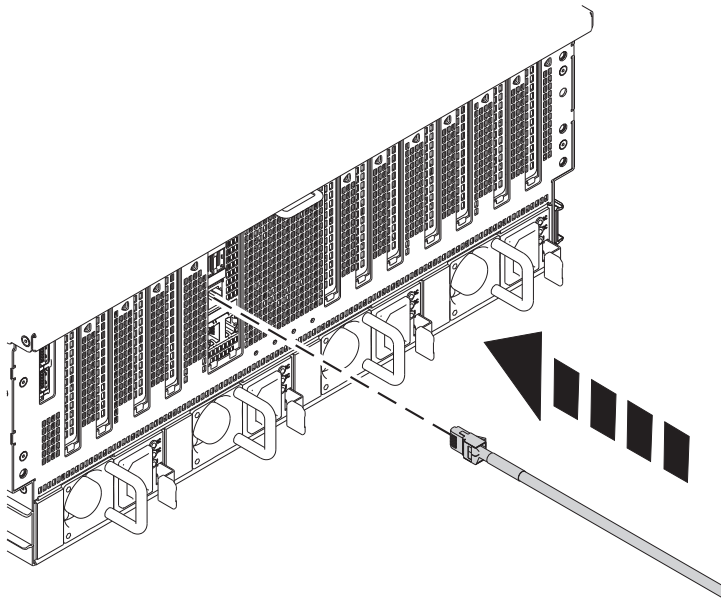

If performing this procedure from a management console, close this web page to continue with the procedure.



Printed in USA