

Power Systems

*Managing the control panel functions*

**IBM**



Power Systems

*Managing the control panel functions*

**IBM**

**Note**

Before using this information and the product it supports, read the information in “Safety notices” on page v, “Notices” on page 23, the *IBM Systems Safety Notices* manual, G229-9054, and the *IBM Environmental Notices and User Guide*, Z125-5823.

This edition applies to IBM Power Systems servers that contain the POWER8 processor and to all associated models.

© Copyright IBM Corporation 2014, 2016.

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

---

# Contents

<b>Safety notices</b> . . . . .	<b>v</b>
<b>Managing the control panel functions</b> . . . . .	<b>1</b>
What's new in Managing the control panel functions . . . . .	1
Control panel concepts . . . . .	1
Physical control panel . . . . .	1
Accessing the control panel functions using the physical control panel . . . . .	2
Putting the physical control panel in manual operating mode . . . . .	3
Control panel function codes . . . . .	3
Primary control panel functions . . . . .	6
Function 01: Display selected IPL type, and system operating mode . . . . .	6
Function 02: Select IPL type, system operating mode, and firmware mode . . . . .	6
Function 03: Restart IPL . . . . .	9
Function 04: Lamp test . . . . .	9
Functions 05 - 06: Reserved . . . . .	9
Function 07: SPCN functions . . . . .	9
Function 08: Fast power off . . . . .	11
Functions 09 - 10: Reserved . . . . .	11
Function 11: SRC display (ASCII string) . . . . .	11
Function 12: SRC display (hex words 2 - 5) . . . . .	11
Function 13: SRC display (hex words 6 - 9) . . . . .	11
Functions 14 - 19: SRC display (callouts) . . . . .	12
Function 20: System type, model, feature code, and IPL type . . . . .	13
Customer-extended panel functions . . . . .	13
Function 21: Service tool initiation . . . . .	13
Function 22: Partition dump . . . . .	13
Functions 23 - 24: Reserved . . . . .	14
Functions 25 - 26 . . . . .	14
Functions 27 - 29: Reserved . . . . .	14
Function 30: Service processor IP address and port location . . . . .	14
Functions 31 - 33: Reserved . . . . .	15
Function 34: Retry partition dump . . . . .	15
Functions 35 - 40: Reserved . . . . .	15
Function 41: Nondisruptive platform system dump . . . . .	15
Function 42: Platform system dump . . . . .	15
Function 43: Service processor dump . . . . .	16
Functions 44 - 54: Reserved . . . . .	16
Function 55: View and change platform system dump data . . . . .	16
Functions 56 - 62: Reserved . . . . .	18
Function 63: Display system status SRCs . . . . .	18
Function 64: Display diagnostic status SRCs . . . . .	19
Function 65: Deactivate remote service . . . . .	19
Function 66: Activate remote service . . . . .	20
Function 67: Disk unit IOP reset/reload . . . . .	20
Function 68: Concurrent maintenance – power off . . . . .	20
Function 69: Concurrent maintenance – power on . . . . .	20
Function 70: IOP dump . . . . .	20
Function 71: Activate network boot . . . . .	20
Function 72: Disable network boot . . . . .	20
Function 73: Factory reset . . . . .	21
Functions 74 - 99: Reserved . . . . .	21
Values for IPL types and system operating modes . . . . .	21
Flexible Service Processor (FSP) boot fail support . . . . .	22

<b>Notices</b> . . . . .	<b>23</b>
Accessibility features for IBM Power Systems servers . . . . .	24
Privacy policy considerations . . . . .	25
Trademarks . . . . .	26
Electronic emission notices . . . . .	26
Class A Notices . . . . .	26
Class B Notices . . . . .	30
Terms and conditions . . . . .	34

---

## Safety notices

Safety notices may be printed throughout this guide:

- **DANGER** notices call attention to a situation that is potentially lethal or extremely hazardous to people.
- **CAUTION** notices call attention to a situation that is potentially hazardous to people because of some existing condition.
- **Attention** notices call attention to the possibility of damage to a program, device, system, or data.

### World Trade safety information

Several countries require the safety information contained in product publications to be presented in their national languages. If this requirement applies to your country, safety information documentation is included in the publications package (such as in printed documentation, on DVD, or as part of the product) shipped with the product. The documentation contains the safety information in your national language with references to the U.S. English source. Before using a U.S. English publication to install, operate, or service this product, you must first become familiar with the related safety information documentation. You should also refer to the safety information documentation any time you do not clearly understand any safety information in the U.S. English publications.

Replacement or additional copies of safety information documentation can be obtained by calling the IBM Hotline at 1-800-300-8751.

### German safety information

Das Produkt ist nicht für den Einsatz an Bildschirmarbeitsplätzen im Sinne § 2 der Bildschirmarbeitsverordnung geeignet.

### Laser safety information

IBM® servers can use I/O cards or features that are fiber-optic based and that utilize lasers or LEDs.

#### Laser compliance

IBM servers may be installed inside or outside of an IT equipment rack.

## DANGER

When working on or around the system, observe the following precautions:

Electrical voltage and current from power, telephone, and communication cables are hazardous. To avoid a shock hazard:

- If IBM supplied the power cord(s), connect power to this unit only with the IBM provided power cord. Do not use the IBM provided power cord for any other product.
- Do not open or service any power supply assembly.
- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords.
- Connect all power cords to a properly wired and grounded electrical outlet. Ensure that the outlet supplies proper voltage and phase rotation according to the system rating plate.
- Connect any equipment that will be attached to this product to properly wired outlets.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Do not attempt to switch on power to the machine until all possible unsafe conditions are corrected.
- Assume that an electrical safety hazard is present. Perform all continuity, grounding, and power checks specified during the subsystem installation procedures to ensure that the machine meets safety requirements.
- Do not continue with the inspection if any unsafe conditions are present.
- Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.
- Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices.

To Disconnect:

1. Turn off everything (unless instructed otherwise).
2. Remove the power cords from the outlets.
3. Remove the signal cables from the connectors.
4. Remove all cables from the devices.

To Connect:

1. Turn off everything (unless instructed otherwise).
2. Attach all cables to the devices.
3. Attach the signal cables to the connectors.
4. Attach the power cords to the outlets.
5. Turn on the devices.

Sharp edges, corners and joints may be present in and around the system. Use care when handling equipment to avoid cuts, scrapes and pinching.

(D005)

(R001 part 1 of 2):

**DANGER:** Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.



- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices.



- Each rack cabinet might have more than one power cord. Be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.

**(R001 part 2 of 2):**

**CAUTION:**

- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- *(For sliding drawers.)* Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.



- *(For fixed drawers.)* This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack.

**CAUTION:**

Removing components from the upper positions in the rack cabinet improves rack stability during relocation. Follow these general guidelines whenever you relocate a populated rack cabinet within a room or building.

- Reduce the weight of the rack cabinet by removing equipment starting at the top of the rack cabinet. When possible, restore the rack cabinet to the configuration of the rack cabinet as you received it. If this configuration is not known, you must observe the following precautions:
  - Remove all devices in the 32U position (compliance ID RACK-001 or 22U (compliance ID RR001) and above.
  - Ensure that the heaviest devices are installed in the bottom of the rack cabinet.
  - Ensure that there are little-to-no empty U-levels between devices installed in the rack cabinet below the 32U (compliance ID RACK-001 or 22U (compliance ID RR001) level, unless the received configuration specifically allowed it.
- If the rack cabinet you are relocating is part of a suite of rack cabinets, detach the rack cabinet from the suite.
- If the rack cabinet you are relocating was supplied with removable outriggers they must be reinstalled before the cabinet is relocated.
- Inspect the route that you plan to take to eliminate potential hazards.
- Verify that the route that you choose can support the weight of the loaded rack cabinet. Refer to the documentation that comes with your rack cabinet for the weight of a loaded rack cabinet.
- Verify that all door openings are at least 760 x 230 mm (30 x 80 in.).
- Ensure that all devices, shelves, drawers, doors, and cables are secure.
- Ensure that the four leveling pads are raised to their highest position.
- Ensure that there is no stabilizer bracket installed on the rack cabinet during movement.
- Do not use a ramp inclined at more than 10 degrees.
- When the rack cabinet is in the new location, complete the following steps:
  - Lower the four leveling pads.
  - Install stabilizer brackets on the rack cabinet.
  - If you removed any devices from the rack cabinet, repopulate the rack cabinet from the lowest position to the highest position.
- If a long-distance relocation is required, restore the rack cabinet to the configuration of the rack cabinet as you received it. Pack the rack cabinet in the original packaging material, or equivalent. Also lower the leveling pads to raise the casters off of the pallet and bolt the rack cabinet to the pallet.

(R002)

(L001)




**DANGER:** Hazardous voltage, current, or energy levels are present inside any component that has this label attached. Do not open any cover or barrier that contains this label. (L001)

(L002)



**DANGER:** Rack-mounted devices are not to be used as shelves or work spaces. (L002)

(L003)

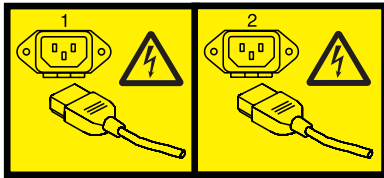

or




or



or



or

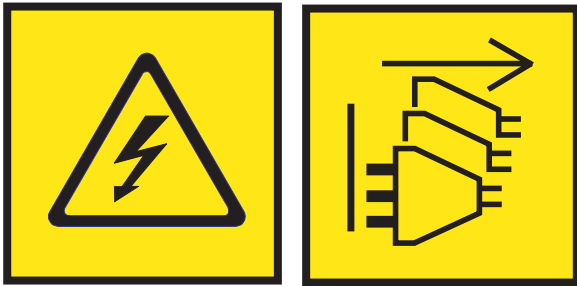

**DANGER:** Multiple power cords. The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords. (L003)

(L007)



**CAUTION:** A hot surface nearby. (L007)

(L008)



**CAUTION:** Hazardous moving parts nearby. (L008)

All lasers are certified in the U.S. to conform to the requirements of DHHS 21 CFR Subchapter J for class 1 laser products. Outside the U.S., they are certified to be in compliance with IEC 60825 as a class 1 laser product. Consult the label on each part for laser certification numbers and approval information.

**CAUTION:**

This product might contain one or more of the following devices: CD-ROM drive, DVD-ROM drive, DVD-RAM drive, or laser module, which are Class 1 laser products. Note the following information:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of the controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

(C026)

**CAUTION:**

Data processing environments can contain equipment transmitting on system links with laser modules that operate at greater than Class 1 power levels. For this reason, never look into the end of an optical fiber cable or open receptacle. Although shining light into one end and looking into the other end of a disconnected optical fiber to verify the continuity of optic fibers many not injure the eye, this procedure is potentially dangerous. Therefore, verifying the continuity of optical fibers by shining light into one end and looking at the other end is not recommended. To verify continuity of a fiber optic cable, use an optical light source and power meter. (C027)

**CAUTION:**

This product contains a Class 1M laser. Do not view directly with optical instruments. (C028)

**CAUTION:**

Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following information: laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam. (C030)

**CAUTION:**

The battery contains lithium. To avoid possible explosion, do not burn or charge the battery.

*Do Not:*

- \_\_\_ Throw or immerse into water
- \_\_\_ Heat to more than 100°C (212°F)
- \_\_\_ Repair or disassemble

Exchange only with the IBM-approved part. Recycle or discard the battery as instructed by local regulations. In the United States, IBM has a process for the collection of this battery. For information, call 1-800-426-4333. Have the IBM part number for the battery unit available when you call. (C003)

(C048)

**CAUTION** regarding IBM provided **VENDOR LIFT TOOL**:

- Operation of **LIFT TOOL** by authorized personnel only.
- **LIFT TOOL** intended for use to assist, lift, install, remove units (load) up into rack elevations. It is not to be used loaded transporting over major ramps nor as a replacement for such designated tools like pallet jacks, walkies, fork trucks and such related relocation practices. When this is not practicable, specially trained persons or services must be used (for instance, riggers or movers).
- Read and completely understand the contents of **LIFT TOOL** operator's manual before using. Failure to read, understand, obey safety rules, and follow instructions may result in property damage and/or personal injury. If there are questions, contact the vendor's service and support. Local paper manual must remain with machine in provided storage sleeve area. Latest revision manual available on vendor's web site.
- Test verify stabilizer brake function before each use. Do not over-force moving or rolling the **LIFT TOOL** with stabilizer brake engaged.
- Do not move **LIFT TOOL** while platform is raised, except for minor positioning.
- Do not exceed rated load capacity. See **LOAD CAPACITY CHART** regarding maximum loads at center versus edge of extended platform.
- Only raise load if properly centered on platform. Do not place more than 200 lb (91 kg) on edge of sliding platform shelf also considering the load's center of mass/gravity (CoG).
- Do not corner load the platform tilt riser accessory option. Secure platform riser tilt option to main shelf in all four (4x) locations with provided hardware only, prior to use. Load objects are designed to slide on/off smooth platforms without appreciable force, so take care not to push or lean. Keep riser tilt option flat at all times except for final minor adjustment when needed.
- Do not stand under overhanging load.
- Do not use on uneven surface, incline or decline (major ramps).
- Do not stack loads.
- Do not operate while under the influence of drugs or alcohol.
- Do not support ladder against **LIFT TOOL**.
- Tipping hazard. Do not push or lean against load with raised platform.
- Do not use as a personnel lifting platform or step. No riders.
- Do not stand on any part of lift. Not a step.
- Do not climb on mast.
- Do not operate a damaged or malfunctioning **LIFT TOOL** machine.
- Crush and pinch point hazard below platform. Only lower load in areas clear of personnel and obstructions. Keep hands and feet clear during operation.
- No Forks. Never lift or move bare **LIFT TOOL MACHINE** with pallet truck, jack or fork lift.
- Mast extends higher than platform. Be aware of ceiling height, cable trays, sprinklers, lights, and other overhead objects.
- Do not leave **LIFT TOOL** machine unattended with an elevated load.
- Watch and keep hands, fingers, and clothing clear when equipment is in motion.
- Turn Winch with hand power only. If winch handle cannot be cranked easily with one hand, it is probably over-loaded. Do not continue to turn winch past top or bottom of platform travel. Excessive unwinding will detach handle and damage cable. Always hold handle when lowering, unwinding. Always assure self that winch is holding load before releasing winch handle.
- A winch accident could cause serious injury. Not for moving humans. Make certain clicking sound is heard as the equipment is being raised. Be sure winch is locked in position before releasing handle. Read instruction page before operating this winch. Never allow winch to unwind freely. Freewheeling will cause uneven cable wrapping around winch drum, damage cable, and may cause serious injury. (C048)

## Power and cabling information for NEBS (Network Equipment-Building System) GR-1089-CORE

The following comments apply to the IBM servers that have been designated as conforming to NEBS (Network Equipment-Building System) GR-1089-CORE:

The equipment is suitable for installation in the following:

- Network telecommunications facilities
- Locations where the NEC (National Electrical Code) applies

The intrabuilding ports of this equipment are suitable for connection to intrabuilding or unexposed wiring or cabling only. The intrabuilding ports of this equipment *must not* be metalically connected to the interfaces that connect to the OSP (outside plant) or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE) and require isolation from the exposed OSP cabling. The addition of primary protectors is not sufficient protection to connect these interfaces metalically to OSP wiring.

**Note:** All Ethernet cables must be shielded and grounded at both ends.

The ac-powered system does not require the use of an external surge protection device (SPD).

The dc-powered system employs an isolated DC return (DC-I) design. The DC battery return terminal *shall not* be connected to the chassis or frame ground.

The dc-powered system is intended to be installed in a common bonding network (CBN) as described in GR-1089-CORE.





---

## Managing the control panel functions

Use the control panel functions to communicate with the server. Control panel functions range in complexity from functions that display status (such as initial program load (IPL)) to service functions that only service representatives must access.

---

### What's new in Managing the control panel functions

Read about new or significantly changed information in Managing the control panel functions since the previous update of this topic collection.

#### October 2016

Updated the information about “Functions 25 - 26” on page 14.

#### January 2016

Updated the information about “Function 41: Nondisruptive platform system dump” on page 15.

#### October 2014

- Added information about the following functions:
  - “Function 71: Activate network boot” on page 20
  - “Function 72: Disable network boot” on page 20
  - “Function 73: Factory reset” on page 21

#### June 2014

- Added information for IBM Power Systems™ servers that contain the POWER8® processor.

---

## Control panel concepts

Learn about the control panel functions, IPL modes and values, and other concepts.

### Physical control panel

The physical control panel is your initial interface with the server. You can use the physical control panel to perform functions such as IPL, power on, and power off.

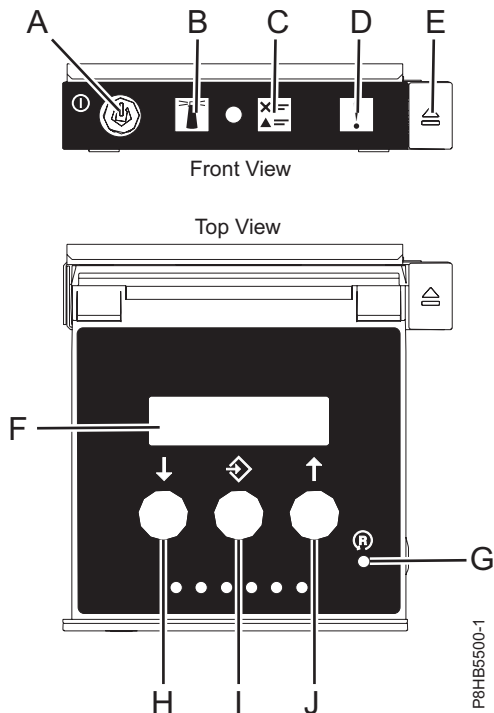


Figure 1. Control panel

- **A:** Power-on button
  - A constant light indicates full system power to the unit.
  - A flashing light indicates standby power to the unit.
  - There is approximately a 30-second transition period from the time the power-on button is pressed to when the power LED goes from flashing to solid. During the transition period, the LED might flash faster.
- **B:** Enclosure identify light
  - A constant light indicates the identify state, which is used to identify a part.
  - No light indicates that the system is operating normally.
- **C:** Check log light
  - No light indicates that the system is operating normally.
  - Light on indicates that the system requires attention.
- **D:** Enclosure fault light
  - A constant light indicates a fault in the system unit.
  - No light indicates that the system is operating normally.
- **E:** Eject button
- **F:** Function/Data display
- **G:** Pinhole reset (PHR) button
- **H:** Decrement button
- **I:** Enter button
- **J:** Increment button

## Accessing the control panel functions using the physical control panel

The control panel functions correspond to function numbers on the control panel.

To activate a control panel function, do the following:

- 2 Power Systems: Managing the control panel functions

1. Select a function number by pressing the Increment (↑) or Decrement (↓) button on the control panel.
2. To activate the function, press Enter on the control panel.

## Putting the physical control panel in manual operating mode

You must first put the physical control panel in manual operating mode before you can select or activate certain functions.

To put the physical control panel in manual operating mode, do the following:

1. Use the Increment button to scroll to function 02.

```
0 2 _ _ _ _ _ _ _ _ _ _
_ _ _ _ _ _ _ _ _ _
```

2. Press Enter to start function 02.
3. Press Enter again to move to the second character on the function 02 menu. The current system operating mode is displayed with a pointer, as shown in the following example:

```
0 2 _ _ B _ _ N < _ _ _ _ P _ _ _ _
_ _ _ _ _ _ _ _ _ _
```

4. Use the Increment button to scroll through the system operating modes, and select M for manual, as shown in the following example:

```
0 2 _ _ B _ _ M < _ _ _ _ P _ _ _ _
_ _ _ _ _ _ _ _ _ _
```

5. Press Enter to select the system operating mode.
6. Press Enter again to exit function 02.

The control panel is in manual operating mode.

---

## Control panel function codes

Learn about function codes that are displayed on the control panel to indicate status and function options.

To display all functions, put the control panel in manual operating mode. For details, see Putting the physical control panel in manual operating mode.

The following table includes descriptions of the primary and customer-extended control panel function codes.

*Table 1. Primary and customer-extended control panel (32-character) function codes*

Function code	Function selected
01	Displays the current IPL parameters.  This function is available in both normal and manual operating mode.
02	Used to select the IPL type, system operating mode, and firmware IPL mode. This function is available in both normal and manual operating mode.
03	Restarts an IPL of the system using the selected IPL parameters. This function is available only in manual operating mode and when the system power is on.
04	Performs a lamp test; all displays and indicators are lit. This function is available in both normal and manual operating mode.
05 - 06	Reserved.

Table 1. Primary and customer-extended control panel (32-character) function codes (continued)

Function code	Function selected
07	Allows you to perform SPCN service functions. This function is available only in the manual operating mode and from power on standby.
08	Causes a fast power off. This function is available only when the system is in manual operating mode and the system power is on.
09 - 10	Reserved.
11	Displays a system reference code (SRC) on the control panel using up to 32 ASCII characters, including non-hexadecimal characters. This function is available in both normal and manual operating mode when an SRC is available.
12	Displays an SRC on the control panel using up to four extended SRC data words. This function is available in both normal and manual operating mode when an SRC is available.
13	Displays an SRC on the control panel using up to eight extended SRC data words. This function is available in both normal and manual operating mode when an SRC is available.
14 - 19	Displays an SRC on the control panel using callout data. These functions are available in both normal and manual operating mode when an SRC is available.
20	Displays the machine type and model, VPD card CCIN, and IPL types. This function is available in both normal and manual operating mode.
22	Forces a partition dump. For more information on dumps, see Performing dumps. This function is available only in the manual operating mode and when activated by the operating system.
23 - 24	Reserved.
25 - 26	Use service switches 1 and 2 to enable or disable functions 50 through 99. These functions are available only in the manual operating mode.
27 - 29	Reserved.
30	Displays the service processor IP address and port location. This function is available only in the manual operating mode and in standby. <b>Note:</b> If IPv6 is displayed, then the service processor's network ports are configured with IPv6 IP addresses. There are not enough characters on the control panel to display the entire address.
31 - 33	Reserved.
34	Retries the partition dump. This function is available only in the manual operating mode and when activated by the firmware.
35 - 40	Reserved.
41	Initiates a non-disruptive platform system dump. This function is available only in the manual operating mode and when activated by the system processor.
42	Performs a platform dump. This function is available only in the manual operating mode and when activated by the system processor.

Table 1. Primary and customer-extended control panel (32-character) function codes (continued)

Function code	Function selected
43	Performs a service processor dump. This function is available only in the manual operating mode.
44 - 54	Reserved.
55	Displays or changes the platform system dump collection policy, platform system dump hardware content, and platform system dump firmware content settings. This function is available only in the manual operating mode.
56 - 62	Reserved on systems that are running on system firmware level Ax710.
63	Displays up to the last 25 system status SRCs. This function is available only in the manual operating mode.
64	Displays up to the last 25 diagnostic status SRCs. This function is available only in the manual operating mode.
65	Deactivates a remote service session. This function is available only in the manual operating mode.
66	Activates a remote service session. This function is available only in the manual operating mode.
67	Initiates an I/O processor dump and a disk unit I/O reset/reload. This function is available only in the manual operating mode.
68	Powers off power domains to affect concurrent replacement of IOPs and IOAs. This function is available only in the manual operating mode.
69	Powers on power domains to affect concurrent replacement of IOPs and IOAs. This function is available only in the manual operating mode.
70	Initiates IOP dumps. This function is available only in the manual operating mode.
71	Activate network boot. This function is only available in manual operating mode, when PowerVM is the Hypervisor and customer engineer (CE) function ranges have been enabled.
72	Disable network boot. This function is available only in manual operating mode when PowerVM is the Hypervisor and customer engineer (CE) function ranges have been enabled.
73	Factory reset. This function is only available when the platform is powered off. This function is only available in manual operating mode and customer engineer (CE) function ranges have been enabled.
74 - 99	Reserved.

If you cannot find the function code in this chart, added features or devices might not have been available when this information was produced. Look on the control panel for supplemental unit function code information for the function code that you displayed.

**Related tasks:**

“Putting the physical control panel in manual operating mode” on page 3

You must first put the physical control panel in manual operating mode before you can select or activate certain functions.

## Primary control panel functions

The primary control panel functions, include displaying the selected IPL type, selecting the firmware mode, or restarting an IPL.

### Function 01: Display selected IPL type, and system operating mode

This function allows you to display the current system operating mode, the firmware mode for the next IPL, and the operating system IPL mode (when enabled).

This function is available in both normal and manual operating mode.

This function displays the following information:

- The operating system (OS) IPL types (A, B, C, or D).
- The valid system operating modes (M or N).
- The firmware mode (P or T).
- HMC indicator (1 or 0)
- Hypervisor type (PVM (Power<sup>®</sup> Virtualization Manager) or OPAL (Open Power Abstraction Layer))

Table 2. Function 01 on systems without OS IPL enabled

Function/Data	Action or description
0 1 _	Use the Increment or Decrement buttons to scroll to function 01.
0 1 _ _ A _ _ N _ _ _ _ PVM _ _ HMC=1 _ _ _ _ _ _ _ _ T _ _ _	Valid OS IPL Modes are A, B, C, and D. Valid system operating modes are M and N. Valid Hypervisor types are PVM and OPAL. Valid firmware IPL modes are P and T. HMC indicators: Active (1), Inactive (0).
0 1 _	Use the Increment or Decrement buttons to scroll through the control panel functions.

### Function 02: Select IPL type, system operating mode, and firmware mode

On systems that are running on system firmware level Ax710, you can select the IPL type and the logical key mode when the system is either powered on or powered off by using this function.

This function is available in both normal and manual operating mode.

For powered-on systems, function 02 is used to select the operating system (OS) IPL type, system operation mode, or firmware IPL mode. The following table shows an example of the function 02 IPL type, system operating mode, and firmware IPL mode selection sequence for a powered-on system.

Table 3. Function 02: Select IPL type, system operating mode, and firmware IPL mode on powered-on systems

Function/Data	Action or description
0 2 _	Use the Increment or Decrement buttons to scroll to function 02.

Table 3. Function 02: Select IPL type, system operating mode, and firmware IPL mode on powered-on systems (continued)

Function/Data	Action or description
0 2 _ _ A < _ M _ _ _ _ _ P _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to start function 02. <ul style="list-style-type: none"> <li>The current OS IPL type is displayed with a pointer.</li> <li>The current system operating mode is displayed.</li> <li>The current firmware mode is displayed.</li> </ul>
0 2 _ _ B < _ M _ _ _ _ _ P _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Use the Increment or Decrement buttons to scroll through the OS IPL types.
0 2 _ _ B _ _ M < _ _ _ _ _ P _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to select the OS IPL type. <ul style="list-style-type: none"> <li>The current OS IPL type is displayed.</li> <li>The current system operating mode is displayed with a pointer.</li> <li>The current firmware mode is displayed.</li> </ul>
0 2 _ _ B _ _ N < _ _ _ _ _ P _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Use the Increment or Decrement buttons to scroll through the system operating modes.
0 2 _ _ B _ _ N _ _ _ _ _ P < _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to select the system operating mode. <ul style="list-style-type: none"> <li>The current OS IPL type is displayed.</li> <li>The current system operating mode is displayed.</li> <li>The current firmware mode is displayed with a pointer.</li> </ul>
0 2 _ _ B _ _ N _ _ _ _ _ T < _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Use the Increment or Decrement buttons to scroll through the firmware IPL modes.
0 2 _	Press Enter to select the firmware IPL mode and exit function 02.
0 1 _	Use the Increment or Decrement buttons to scroll through the control panel functions.

For powered-off systems, function 02 is used to select the OS IPL type, system operating mode, and firmware IPL mode. The following table shows an example of the function 02 OS IPL type, system operating mode, and firmware IPL mode selection sequence for a powered-off system.

Table 4. Function 02: Select the IPL type, system operating mode, and firmware IPL mode on powered-off systems

Function/Data	Action or description
0 2 _	Use the Increment or Decrement buttons to scroll to function 02.
0 2 _ _ A < _ M _ _ _ _ _ T _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to start function 02. <ul style="list-style-type: none"> <li>The current OS IPL type is displayed with a pointer.</li> <li>The current system operating mode is displayed.</li> <li>The current firmware IPL mode is displayed.</li> </ul>
0 2 _ _ B < _ M _ _ _ _ _ T _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Use the Increment or Decrement buttons to scroll through the OS IPL types.
0 2 _ _ B _ _ M < _ _ _ _ _ T _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to select the IPL type. <ul style="list-style-type: none"> <li>The current IPL type is displayed.</li> <li>The current system operating mode is displayed with a pointer.</li> <li>The current firmware IPL mode is displayed.</li> </ul>

Table 4. Function 02: Select the IPL type, system operating mode, and firmware IPL mode on powered-off systems (continued)

Function/Data	Action or description
0 2 _ _ B _ _ N < _ _ _ _ _ T _	Use the Increment or Decrement buttons to scroll through the system operating modes.
0 2 _ _ B _ _ N _ _ _ _ _ T _	Press Enter to select the system operating mode. <ul style="list-style-type: none"> <li>The current IPL type is displayed.</li> <li>The current system operation mode is displayed.</li> <li>The current firmware IPL mode is displayed.</li> </ul>
0 2 _ _ B _ _ N _ _ _ _ _ P < _	Use the Increment or Decrement buttons to scroll through the firmware IPL modes.
0 2 _	Press Enter to select the firmware IPL mode and exit function 02.
0 1 _	Use the Increment or Decrement buttons to scroll through the control panel functions.

On systems that are running on system firmware level Ax720, or later, you can select the operating system IPL type, the system operating mode, and the firmware IPL mode by using this function.

Table 5. Function 02: Select the IPL type, the system operating mode, and the firmware IPL mode

Function/Data	Action or description
0 2 _	Use the Increment or Decrement button to scroll to function 02.
0 2 _ _ A < _ M _ _ _ _ _ P _	Press Enter to start function 02. <ul style="list-style-type: none"> <li>The current operating system IPL type is displayed with a pointer.</li> <li>The current system operating mode is displayed.</li> <li>The current firmware mode is displayed.</li> </ul>
0 2 _ _ B < _ M _ _ _ _ _ P _	Use the Increment or Decrement button to scroll through the operating system IPL types.
0 2 _ _ B _ _ M < _ _ _ _ _ P _	Press Enter to select the operating system IPL type. <ul style="list-style-type: none"> <li>The current operating system IPL type is displayed.</li> <li>The current system operating mode is displayed with a pointer.</li> <li>The current firmware mode is displayed.</li> </ul>
0 2 _ _ B _ _ N < _ _ _ _ _ P _	Use the Increment or Decrement button to scroll through the system operating modes.
0 2 _ _ B _ _ N _ _ _ _ _ P < _	Press Enter to select the system operating mode. <ul style="list-style-type: none"> <li>The current operating system IPL type is displayed.</li> <li>The current system operating mode is displayed.</li> <li>The current firmware mode is displayed with a pointer.</li> </ul>
0 2 _ _ B _ _ N _ _ _ _ _ T < _	Use the Increment or Decrement button to scroll through the firmware IPL modes.
0 2 _	Press Enter to select the firmware IPL mode and exit function 02.
0 1 _	Use the Increment or Decrement button to scroll through the control panel functions.



## Function 03: Restart IPL

This function restarts an IPL of the system using the selected IPL parameters.

This function is available only in manual operating mode and when the system power is on.

When you select function 03 and press Enter, a confirm action SRC (A1008003) is displayed. If you want to perform a restart IPL operation, select function 03 and press Enter again.

Notifications are not required prior to restarting the IPL.

## Function 04: Lamp test

This function indicates whether any of the control panel indicators are not working correctly, and it also indicates whether the characters that are displayed in the Function/Data display on the control panel are valid.

This function is available in both the normal and manual operating modes.

When a lamp test is initiated, the firmware-controlled indicators in the central electronics complex (CEC) and the expansion units are turned on solid for 4 minutes and then restored to their previous states.

Use the following procedure to verify that the lights on the system control panel are working correctly.

1. Power on the system.
2. Press the Increment (↑) or Decrement (↓) buttons on the control panel to display function 04.  
Press Enter on the control panel.
3. Do all of the lights and indicators on the system control panel turn on?

Yes	No
↓	Exchange the FRU with the faulty LED indicator. For example, replace the fan if the LED on a fan does not turn on.

4. Do all the expansion-unit control-panel lights come on?

**Note:** The expansion-unit control-panel lights will be lit for only about 25 seconds after function 04 is entered.

Yes	No
The lights on the system control panel are working correctly.	Exchange the control panel on the expansion unit.

## Functions 05 - 06: Reserved

This function is reserved.

## Function 07: SPCN functions

This function allows you to perform a system power control network (SPCN) operation.

This function is available only in the manual operating mode and from power on standby.

### Notes:

- The system that will display the ID must be powered off with ac power applied.

- If you have just restored power to the system, the service processor must return to standby mode before the control panel functions will work correctly. Returning the service processor to standby mode takes a few minutes *after* the panel appears to be operational.
- The control panel must be in manual operating mode to access function 07 options.

To perform an SPCN operation that is controlled by function 07, do the following:

1. Select function 07, and then press Enter. 07\*\* is displayed.
2. Select the function that you want to perform (see Table 6). Use the Increment or Decrement buttons (↑↓) to scroll to the appropriate function. Press Enter to display 07nn00, where nn is the function that you selected.

Table 6. SPCN functions in function 07

Function	Description	For more information
A1	Broadcasts a power-on command.	Go to step 5.
A6	Displays frame address on all I/O enclosures.	Go to step 5.
A8	Displays the SPCN configuration ID number for a selected frame.	07A8 is displayed. Go to step 3.
A9	Sets the SPCN configuration ID for a selected frame.	07A9 is displayed. Go to step 4.

3. If you selected function A8 in step 2, complete the following steps to display the configuration of the I/O enclosure:
  - a. Use the Increment (↑) or Decrement (↓) buttons to select the first two characters of the frame address of the I/O enclosure, and then press Enter. 07nn00 is displayed, where nn is the first byte of the frame address.
  - b. Use the Increment (↑) or Decrement (↓) buttons to select the second two characters of the frame address of the I/O enclosure, and then press Enter. 07nn00 is displayed on the selected I/O enclosure, where nn is the second byte of the frame address.

**Notes:**

- The display on the addressed I/O enclosure is blinking on and off.
- The configuration ID is the last two characters of the bottom line.

4. If you selected function A9 in step 2, complete the following steps to set the configuration of the selected I/O enclosure:
  - a. Ensure that the system power of the selected I/O enclosure is in standby mode. If the system power of the selected I/O enclosure is not in standby mode, power it off. Then return to step 1.
  - b. Use the (↑) or Decrement (↓) buttons to select the first two characters of the frame address of the I/O enclosure to configure, and then press Enter. 07nn00 is displayed, where nn is the first byte of the unit address.
  - c. Use the Increment (↑) or Decrement (↓) buttons to select the second two characters of the frame address of the I/O enclosure, and then press Enter. 07nn00 is displayed, where nn is the second byte of the frame address.

**Note:** The display on the addressed I/O enclosure is blinking on and off.

- d. Use the Increment (↑) or Decrement (↓) buttons to select the correct configuration ID. 07nn is displayed, where nn is the configuration ID.
  - e. Press Enter. 07nn00 is displayed. After 20 to 30 seconds, the display on the addressed I/O enclosure stops blinking and returns to the normal display format.
5. Scroll to 07\*\* using the Increment (↑) or Decrement (↓) buttons, and then press Enter. This returns the control panel to the normal display.

## Function 08: Fast power off

This function allows you to power off the system when it is suspended. This function is available only when the system is in manual operating mode and the system power is on.

When you select function 08 and press Enter, a confirm action SRC (A1008008) is displayed. If you want to perform a fast power off (FPO) operation, select function 08 and press Enter again. After the fast power off, the system returns to its default display.

**Attention:** Because of the potential for causing a loss of data, do not use this function if you can shut down the system from the operating system.

**Note:** If you changed the system password at the most recent IPL, performing a fast power off might cause that new password information to be lost.

## Functions 09 - 10: Reserved

These functions are reserved.

## Function 11: SRC display (ASCII string)


This function displays a system reference code (SRC) on the control panel using up to 32 ASCII characters, including nonhexadecimal characters, and can be displayed in all display positions. This function serves as a diagnostic aid that helps you determine the source of a hardware or operating system problem.

This function is the default SRC display and is available in both normal and manual operating mode when an SRC is available.

Function 11, if enabled, represents the words of the SRC.

Record SRC information for error reporting. For more information, see [Using the control panel to collect reference codes and system information](#).

### Related information:

 [Using the control panel to collect reference codes and system information](#)

## Function 12: SRC display (hex words 2 - 5)

This function displays a system reference code (SRC) on the control panel to serve as a diagnostic aid that helps you determine the source of a hardware or operating system problem.

This function is available in both normal and manual operating mode when an SRC is available.

The extended SRC data words are displayed depending on the number in the SRC. Extended SRC data words are displayed four words at a time. If any extended SRC data words exist, function 12 is scrollable. Unused words are presented as blanks in the required display.

Record SRC information for error reporting. For more information, see [Using the control panel to collect reference codes and system information](#).

## Function 13: SRC display (hex words 6 - 9)


This function displays a system reference code (SRC) on the control panel to serve as a diagnostic aid that helps you determine the source of a hardware or operating system problem.

This function is available in both normal and manual operating mode when an SRC is available.

The extended SRC data words are displayed depending on the number in the SRC. Extended SRC data words are displayed four words at a time. If there are only one to four extended SRC data words, function 13 is not scrollable. If there are five to eight extended SRC data words, function 13 is scrollable. Unused words are presented as blanks in the required display.

Record SRC information for error reporting. For more information, see Using the control panel to collect reference codes and system information..

**Related information:**

 Using the control panel to collect reference codes and system information

**Functions 14 - 19: SRC display (callouts)**

These functions display a system reference code (SRC) on the control panel to serve as a diagnostic aid to help you determine the source of a hardware or operating system problem.

These functions are available in both normal and manual operating mode when an SRC is available.

Functions 14 - 19, if enabled, display field replaceable unit (FRU) and procedure callout data. This data is displayed following any present extended SRC data words. Multiple FRU and procedure callout data entries can be included with each SRC. One FRU or procedure callout data entry is displayed for each function number. Up to six different FRU or procedure callout data entries can be presented at the control panel using functions 14 - 19.

The following table shows an example of a function 14 FRU callout display selection sequence.

*Table 7. Function 14: FRU callout display selection sequence*

Function/Data	Action or description
1 4 _	Use the Increment or Decrement buttons to scroll to function 14.
H_ -PARTNUM_ CCIN_ _ U970305010ABCDE- _ _ _	Press Enter to select function 14. The FRU callout data is displayed.
1 4 _	Pressing Enter toggles between function and data display.


The following table shows an example of a function 15 procedure callout display selection sequence.

*Table 8. Function 15: Procedure callout display selection sequence*

Function/Data	Action or description
1 5 _	Use the Increment or Decrement buttons to scroll to function 15.
M_ -FSPSP04_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to select function 15. The procedure callout data is displayed.
1 5 _	Pressing Enter toggles between function and data display.

Record SRC information for error reporting.

**Related information:**

 Using the control panel to collect reference codes and system information

## Function 20: System type, model, feature code, and IPL type

This function displays the machine type and model, the custom card identification number (CCIN) for the vital product data (VPD) card, and IPL types. This function is available in both normal and manual operating mode.

The machine type, model, CCIN for the VPD card, and IPL type are displayed in the following format:

```
p p p p - m m m _ _ _ _ c c c c
T T T T T T T t t t t t t t t
```

The values are indicated as follows:

- Values for *p* indicate the machine type.
- Values for *m* indicate the machine model.
- Values for *c* indicate the system CCIN for the VPD card.
- Values for *T* indicate the CEC IPL type.
- Values for *t* indicate the FSP IPL type.

Record this information with the system reference code (SRC).

If you select this function and it has not been activated, the command is rejected.

---

## Customer-extended panel functions

The customer-extended panel functions include partition dumps, service processor IP address and port location.

### Function 21: Service tool initiation

For System i<sup>®</sup> models, this function makes dedicated service tools (DST) available on the system console display. For System p servers, it is not applicable.

This function is available only in the manual operating mode and when activated by the operating system.

The Use dedicated service tools (DST) display is available on the primary or alternative console.

To exit the DST and return to the operating system, select the **Resume operating system display** option on the Use dedicated service tools (DST) display.

### Function 22: Partition dump

This function initiates a dump of the operating system data in a logical partition.

This function is available only in the manual operating mode and when activated by the operating system.

You must perform two consecutive function 22 selections to initiate a partition dump. The following table shows an example of function 22.

Table 9. Function 22: Initiate a partition dump

Function/Data	Action or description
2 2 _	Use the Increment or Decrement buttons to scroll to function 22.
2 2 _ _ _ _ 0 0 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to start function 22.
A 1 0 0 3 0 2 2 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Displays the partition dump verification system reference code (SRC).
2 2 _	Use the Increment or Decrement buttons to scroll to function 22.
2 2 _ _ _ _ 0 0 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to start function 22.

## Functions 23 - 24: Reserved

These functions are reserved.

## Functions 25 - 26

These functions are used to set the service function range (50 to 99). These functions are available only in the manual operating mode.

To set the service function range (50 to 99), first set function 25 to 00 and then set function 26 to 00.

## Functions 27 - 29: Reserved

These functions are reserved.

## Function 30: Service processor IP address and port location

This function displays the service processor IP address and port location. This function is available only in the manual operating mode and from power on standby.

**Note:** If IPv6 is displayed on the control panel, then the service processor's network ports are configured with IPv6 IP addresses. There are not enough characters on the control panel to display the entire address.

The following table shows an example of function 30.

Table 10. Function 30: Service processor IP address and port location

Function/Data	Action or description
3 0 _	Use the Increment or Decrement buttons to scroll to function 30.
3 0 * * _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to enter subfunction mode.
3 0 0 0 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Use the Increment or Decrement buttons to select an IP address 00 = SP A: ETH0 (primary enclosure) 01 = SP A: ETH1 (primary enclosure) 02 = SP B: ETH0 (secondary enclosure) 03 = SP B: ETH1 (secondary enclosure)
S P _ A : _ E T H 0 : _ _ _ T 5 9 . 5 . 1 0 5 . 2 4 3 _ _ _ _ _	Press Enter to display the selected IP address.

Table 10. Function 30: Service processor IP address and port location (continued)

Function/Data	Action or description
3 0 * * _	Use the Increment or Decrement buttons to select subfunction exit.
3 0 _	Press Enter to exit subfunction mode.

## Functions 31 - 33: Reserved

These functions are reserved.

## Function 34: Retry partition dump

This function initiates a retry of the dump of the operating system data in a logical partition. This function is available only in the manual operating mode and when activated by the firmware.

## Functions 35 - 40: Reserved

These functions are reserved.

## Function 41: Nondisruptive platform system dump

This function initiates a nondisruptive platform system dump. This function is available only in the manual operating mode and when activated by the service processor.

You can use function 41 to dump IBM POWER® Hypervisor™ main storage data. The following table shows an example of function 41.

Table 11. Function 41: Start a platform dump

Function/Data	Action or description
4 1 _	Use the Increment or Decrement buttons to scroll to function 41.
4 1 _ _ _ _ 0 0 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to start function 41.
A 1 0 0 3 0 4 1 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Displays the confirmation SRC.
4 1 _	Use the Increment or Decrement buttons to scroll to function 41.
4 1 _ _ _ _ 0 0 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to start function 41.

## Function 42: Platform system dump

This function initiates a platform system dump. This function is available only in the manual operating mode and when activated by the service processor.

You can use function 42 to dump IBM POWER Hypervisor™ main storage and hardware data. You must perform two consecutive function 42 selections to initiate a platform system dump. The following table shows an example of function 42.

Table 12. Function 42: Start a platform system dump

Function/Data	Action or description
4 2 _	Use the Increment or Decrement buttons to scroll to function 42.
4 2 _ _ _ 0 0 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to start function 42.
A 1 0 0 3 0 4 2 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Displays the confirmation SRC.
4 2 _	Use the Increment or Decrement buttons to scroll to function 42.
4 2 _ _ _ 0 0 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to start function 42.

### Function 43: Service processor dump

This function initiates a service processor dump. This function is available only in the manual operating mode.

You must perform two consecutive function 43 selections to initiate a service processor dump. The following table shows an example of function 43.

Table 13. Function 43: Start a service processor dump

Function/Data	Action or description
4 3 _	Use the Increment or Decrement buttons to scroll to function 43.
4 3 0 0 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to confirm.
A 1 0 0 3 0 4 3 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Displays the confirmation system reference code (SRC).
4 3 _	Use the Increment or Decrement buttons to scroll to function 43.
4 3 0 0 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to confirm.

### Functions 44 - 54: Reserved

These functions are reserved.

### Function 55: View and change platform system dump data

This function allows you to view and change the platform dump data. This function is available only in the manual operating mode.

When you select function 55 and press Enter, you can view and change the platform system dump collection policy, platform system dump hardware content, and platform system dump firmware content settings.

The following table shows an example of how to view the platform system dump data.



Table 14. Function 55: View the platform system dump data

Function/Data	Action or description
5 5 _	Use the Increment or Decrement buttons to scroll to function 55.
5 5 * * _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to enter subfunction mode.
5 5 0 0 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Use the Increment or Decrement buttons to view the platform system dump variables.
5 5 0 0 _ xxyyzz_ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to process the selected subfunction. xx = Collection policy yy = Hardware content zz = Firmware content
5 5 * * _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Use the Increment or Decrement buttons to select subfunction exit.
5 5 _	Press Enter to exit subfunction mode.

The following table shows an example of how to change the platform system dump data.

Table 15. Function 55: Change the platform system dump data

Function/Data	Action or description
5 5 _	Use the Increment or Decrement buttons to scroll to function 55.
5 5 * * _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to enter subfunction mode.

Table 15. Function 55: Change the platform system dump data (continued)

Function/Data	Action or description
5 5 0 2 _ _ _ _ _ _ _ _ _ _	Use the Increment or Decrement buttons to select to change the platform system dump variable. 01 = Set platform system dump collection policy to <i>disable</i> 02 = Set platform system dump collection policy to <i>enable</i> 03 = N/A - will always display FF in Line 1 when selected 04 = Set platform system dump hardware content to <i>maximum</i> 05 = Set platform system dump hardware content to <i>automatic</i> 06 = N/A - will always display FF in Line 1 when selected 07 = N/A - will always display FF in Line 1 when selected 08 = Set platform system dump firmware content to <i>automatic</i> 09 = Set platform system dump firmware content to <i>maximum</i> 0A = Set platform system dump firmware content to <i>physical I/O</i> 0B = Set platform system dump firmware content to <i>virtual I/O</i> 0C = Set platform system dump firmware content to <i>HPS cluster</i> 0D = Set platform system dump firmware content to <i>Host Channel Adapter (HCA)</i>
5 5 0 2 _ 0 0 _ _ _ _ _ _ _ _ _ _	Press Enter to process the selected subfunction. 00 = Accept FF = Reject
5 5 * * _ _ _ _ _ _ _ _ _ _	Use the Increment or Decrement buttons to select subfunction exit.
5 5 _ _ _ _ _ _ _ _ _ _	Press Enter to exit subfunction mode.

## Functions 56 - 62: Reserved

Functions 56 - 62 are reserved on systems running system firmware level Ax810.

## Function 63: Display system status SRCs

When you select function 63 and press Enter, you can display up to the last 25 system status SRCs. This function is available only in the manual operating mode.

The following table shows an example of how to display the last 25 system status SRCs.

Table 16. Function 63: Display system status SRCs

Function/Data	Action or description
6 3 _ _ _ _ _ _ _ _ _ _	Use the Increment or Decrement buttons to scroll to function 63.

Table 16. Function 63: Display system status SRCs (continued)

Function/Data	Action or description
6 3 * * _	Press Enter to enter subfunction mode.
6 3 1 8 _	Use the Increment or Decrement buttons to select the address offset. <b>Note:</b> Enter a subfunction between 00 and 18 to view the SRCs in sequential order. The most recent SRC displays at the highest possible subfunction number (18). If no system status SRCs exist, then only subfunction 00 is available and it will not display an SRC when selected.
C 1 0 0 1 0 3 4 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to read the SRC data.
6 3 * * _	Use the Increment or Decrement buttons to select subfunction exit.
6 3 _	Press Enter to exit subfunction mode.

## Function 64: Display diagnostic status SRCs

When you select function 64 and press Enter, you can display up to the last 25 diagnostic status SRCs. This function is available only in the manual operating mode.

The following table shows an example of how to display the diagnostic status SRCs.

Table 17. Function 63: Display diagnostic status SRCs

Function/Data	Action or description
6 4 _	Use the Increment or Decrement buttons to scroll to function 64.
6 4 * * _	Press Enter to enter subfunction mode.
6 4 0 2 _	Use the Increment or Decrement buttons to select the address offset. <b>Note:</b> Enter a subfunction between 00 and 18 to view the SRCs in sequential order. The most recent SRC displays at the highest possible subfunction number (18). If no diagnostic status SRCs exist, then only subfunction 00 is available and it will not display an SRC when selected.
D 1 2 3 4 5 6 7 _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to read the SRC data.
6 4 * * _	Use the Increment or Decrement buttons to select subfunction exit.
6 4 _	Press Enter to exit subfunction mode.

## Function 65: Deactivate remote service

Use this function to deactivate a remote service session.

This function is available in manual operating mode when activated by the OS.

## Function 66: Activate remote service

Use this function to activate a remote service session.

This function is available in manual operating mode when activated by the operating system.

## Function 67: Disk unit IOP reset/reload

Use this function to initiate an I/O processor dump and a disk unit I/O reset/reload.

This function is available in manual operating mode when activated by the OS. This function is enabled only when the I/O processor of a displayed SRC supports a reset/reload function.

## Function 68: Concurrent maintenance – power off

Use this function to power off power domains to affect concurrent replacement of IOPs and IOAs.

This function is available in manual operating mode when activated by the OS.

## Function 69: Concurrent maintenance – power on

Use this function to power on power domains to change concurrent replacement of IOPs and IOAs.

This function is available in manual operating mode when activated by the OS.

## Function 70: IOP dump

Use this function to initiate IOP dumps. This function is available in manual operating mode when activated by the OS.

This function is available in manual operating mode when activated by the OS.

## Function 71: Activate network boot

When you enable function 71, the system attempts to network boot the first partition during the next initial program load (IPL). The boot happens using one of the first five discovered network devices, based on Peripheral Component Interconnect (PCI) discovery order. If the system does not have any partitions that are defined, the network boot fails. The active network boot function can be enabled when the system is powered off or running. This function is available only in manual operating mode, when PowerVM is the hypervisor and when the customer extended (CE) function ranges have been enabled.

The following table shows an example of how to activate network boot.

Table 18. Function 71: Activate network boot

Function/Data	Action or description
7 1 _	Use the Increment or Decrement buttons to scroll to function 71.
7 1 _ _ _ _ 00 _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter.

## Function 72: Disable network boot

You can use the function 72 to disable the network boot function that was activated by using function 71. The disable network boot function can be enabled when the system is powered off or running. However, the function takes effect on the next boot when then system is in PowerVM mode. During the boot, the platform will initialize normally. This function is available only in manual operating mode when PowerVM is the hypervisor and when customer extended (CE) function ranges have been enabled.

The following table shows an example of how to disable network boot.

Table 19. Function 72: Disable network boot

Function/Data	Action or description
7 2 _	Use the Increment or Decrement buttons to scroll to function 72.
7 2 _ _ _ _ 00 _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter.

## Function 73: Factory reset

Function 73 initiates a full reset of server firmware and service processor firmware settings, reverting the configuration of the entire system back to factory default settings. All the information about the partition, network settings, and other important customer settings will be reset, and then the service processor will be rebooted. This function is available only when the platform is powered off. This function is only available in manual operating mode and when customer extended (CE) function ranges have been enabled.

The following table shows an example of how to implement a factor reset.

Table 20. Function 73: Factory reset

Function/Data	Action or description
7 3 _	Use the Increment or Decrement buttons to scroll to function 73.
A 1 7 0 8 0 0 B _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Press Enter to acknowledge and continue with the factory reset.
7 3 _	Press Enter again to initiate the factory reset.

## Functions 74 - 99: Reserved

These functions are reserved.

## Values for IPL types and system operating modes

Learn about the valid initial program load (IPL) types, system operating modes, firmware IPL, and Hypervisor types that are used in control panel functions.

The following table shows the valid values for the IPL types and their descriptions.

**Note:** Operating system IPL types are displayed only when the operating system IPL mode has been enabled from the operating system.

Table 21. Operating system IPL types

Initial program load (IPL) type	Action or description
A	IPL from disk using copy A of the system Licensed Internal Code.
B	IPL from disk using copy B of the system Licensed Internal Code.

Table 21. Operating system IPL types (continued)

Initial program load (IPL) type	Action or description
C	Reserved for hardware service use only.  <b>Attention:</b> Incorrect use of this function can cause severe data loss.
D	IPL from media other than load-source disk. Alternate IPL for code installation support.

The following table shows the valid values for the operating mode.

Table 22. System operating mode values

System operating mode	Action or description
Manual (M)	Allows you to perform an attended IPL and provides access to restricted control panel functions.
Normal (N)	Allows you to perform an unattended IPL.

The following table shows the valid values for firmware IPL types.

Table 23. Firmware IPL types

IPL type	Action or description
P	IPL from disk using copy P of the system Licensed Internal Code.
T	IPL from disk using copy T of the system Licensed Internal Code.

The following table shows valid values for the Hypervisor types.

Table 24. Hypervisor types

Hypervisor type	Action or description
PVM	Power Virtualization Manager
OPAL	Open Power Abstraction Layer

---

## Flexible Service Processor (FSP) boot fail support

Learn about the FSP boot fail support.

After a boot failure, the FSP reaches the STANDBY stage. If the FSP does not stay up for at least 15 minutes after reaching the STANDBY state, the operator panel displays SRC B1817212. If the FSP takes continuous resets within 15 minutes, then as part of fourth reset (within 15 minutes), the FSP boot process terminates. During this state, the operation panel will configure the Power button as pin hole reset button and the rest of the buttons will be disabled including the pin hole reset button.

Table 25. FSP boot fail support

Data	Action or description
B1817212_ _ _ _ _ _ _ _ _ _01	SRC B1817212 signifies that there is a boot fail and the count followed by the System Reference Code (SRC) shows the number of pulse counts before the failure happened.

---

## Notices

This information was developed for products and services offered in the US.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not grant you any license to these patents. You can send license inquiries, in writing, to:

*IBM Director of Licensing  
IBM Corporation  
North Castle Drive, MD-NC119  
Armonk, NY 10504-1785  
US*

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM websites are provided for convenience only and do not in any manner serve as an endorsement of those websites. The materials at those websites are not part of the materials for this IBM product and use of those websites is at your own risk.

IBM may use or distribute any of the information you provide in any way it believes appropriate without incurring any obligation to you.

The performance data and client examples cited are presented for illustrative purposes only. Actual performance results may vary depending on specific configurations and operating conditions.

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

Statements regarding IBM's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

All IBM prices shown are IBM's suggested retail prices, are current and are subject to change without notice. Dealer prices may vary.

This information is for planning purposes only. The information herein is subject to change before the products described become available.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to actual people or business enterprises is entirely coincidental.

If you are viewing this information in softcopy, the photographs and color illustrations may not appear.

The drawings and specifications contained herein shall not be reproduced in whole or in part without the written permission of IBM.

IBM has prepared this information for use with the specific machines indicated. IBM makes no representations that it is suitable for any other purpose.

IBM's computer systems contain mechanisms designed to reduce the possibility of undetected data corruption or loss. This risk, however, cannot be eliminated. Users who experience unplanned outages, system failures, power fluctuations or outages, or component failures must verify the accuracy of operations performed and data saved or transmitted by the system at or near the time of the outage or failure. In addition, users must establish procedures to ensure that there is independent data verification before relying on such data in sensitive or critical operations. Users should periodically check IBM's support websites for updated information and fixes applicable to the system and related software.

## Homologation statement

This product may not be certified in your country for connection by any means whatsoever to interfaces of public telecommunications networks. Further certification may be required by law prior to making any such connection. Contact an IBM representative or reseller for any questions.

---

## Accessibility features for IBM Power Systems servers

Accessibility features assist users who have a disability, such as restricted mobility or limited vision, to use information technology content successfully.

### Overview

The IBM Power Systems servers include the following major accessibility features:

- Keyboard-only operation
- Operations that use a screen reader

The IBM Power Systems servers use the latest W3C Standard, WAI-ARIA 1.0 ([www.w3.org/TR/wai-aria/](http://www.w3.org/TR/wai-aria/)), to ensure compliance with US Section 508 ([www.access-board.gov/guidelines-and-standards/communications-and-it/about-the-section-508-standards/section-508-standards](http://www.access-board.gov/guidelines-and-standards/communications-and-it/about-the-section-508-standards/section-508-standards)) and Web Content Accessibility Guidelines (WCAG) 2.0 ([www.w3.org/TR/WCAG20/](http://www.w3.org/TR/WCAG20/)). To take advantage of accessibility features, use the latest release of your screen reader and the latest web browser that is supported by the IBM Power Systems servers.

The IBM Power Systems servers online product documentation in IBM Knowledge Center is enabled for accessibility. The accessibility features of IBM Knowledge Center are described in the Accessibility section of the IBM Knowledge Center help ([www.ibm.com/support/knowledgcenter/doc/kc\\_help.html#accessibility](http://www.ibm.com/support/knowledgcenter/doc/kc_help.html#accessibility)).



## Keyboard navigation

This product uses standard navigation keys.

## Interface information

The IBM Power Systems servers user interfaces do not have content that flashes 2 - 55 times per second.

The IBM Power Systems servers web user interface relies on cascading style sheets to render content properly and to provide a usable experience. The application provides an equivalent way for low-vision users to use system display settings, including high-contrast mode. You can control font size by using the device or web browser settings.

The IBM Power Systems servers web user interface includes WAI-ARIA navigational landmarks that you can use to quickly navigate to functional areas in the application.

## Vendor software

The IBM Power Systems servers include certain vendor software that is not covered under the IBM license agreement. IBM makes no representation about the accessibility features of these products. Contact the vendor for accessibility information about its products.

## Related accessibility information

In addition to standard IBM help desk and support websites, IBM has a TTY telephone service for use by deaf or hard of hearing customers to access sales and support services:

TTY service  
800-IBM-3383 (800-426-3383)  
(within North America)

For more information about the commitment that IBM has to accessibility, see IBM Accessibility ([www.ibm.com/able](http://www.ibm.com/able)).

---

## Privacy policy considerations

IBM Software products, including software as a service solutions, (“Software Offerings”) may use cookies or other technologies to collect product usage information, to help improve the end user experience, to tailor interactions with the end user, or for other purposes. In many cases no personally identifiable information is collected by the Software Offerings. Some of our Software Offerings can help enable you to collect personally identifiable information. If this Software Offering uses cookies to collect personally identifiable information, specific information about this offering’s use of cookies is set forth below.

This Software Offering does not use cookies or other technologies to collect personally identifiable information.

If the configurations deployed for this Software Offering provide you as the customer the ability to collect personally identifiable information from end users via cookies and other technologies, you should seek your own legal advice about any laws applicable to such data collection, including any requirements for notice and consent.

For more information about the use of various technologies, including cookies, for these purposes, see IBM’s Privacy Policy at <http://www.ibm.com/privacy> and IBM’s Online Privacy Statement at <http://www.ibm.com/privacy/details> the section entitled “Cookies, Web Beacons and Other Technologies” and the “IBM Software Products and Software-as-a-Service Privacy Statement” at <http://www.ibm.com/software/info/product-privacy>.

---

## Trademarks

IBM, the IBM logo, and ibm.com are trademarks or registered trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the web at Copyright and trademark information at [www.ibm.com/legal/copytrade.shtml](http://www.ibm.com/legal/copytrade.shtml).

---

## Electronic emission notices

When attaching a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices supplied with the monitor.

## Class A Notices

The following Class A statements apply to the IBM servers that contain the POWER8 processor and its features unless designated as electromagnetic compatibility (EMC) Class B in the feature information.

## Federal Communications Commission (FCC) Statement

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Industry Canada Compliance Statement

This Class A digital apparatus complies with Canadian ICES-003.

## Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

## European Community Compliance Statement

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

This product has been tested and found to comply with the limits for Class A Information Technology Equipment according to European Standard EN 55022. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.

European Community contact:  
IBM Deutschland GmbH  
Technical Regulations, Department M372  
IBM-Allee 1, 71139 Ehningen, Germany  
Tele: +49 (0) 800 225 5423 or +49 (0) 180 331 3233  
email: halloibm@de.ibm.com

**Warning:** This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

### VCCI Statement - Japan

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A

The following is a summary of the VCCI Japanese statement in the box above:

This is a Class A product based on the standard of the VCCI Council. If this equipment is used in a domestic environment, radio interference may occur, in which case, the user may be required to take corrective actions.

### Japan Electronics and Information Technology Industries Association Statement

This statement explains the Japan JIS C 61000-3-2 product wattage compliance.

(一社) 電子情報技術産業協会 高調波電流抑制対策実施  
要領に基づく定格入力電力値： Knowledge Centerの各製品の  
仕様ページ参照

This statement explains the Japan Electronics and Information Technology Industries Association (JEITA) statement for products less than or equal to 20 A per phase.

高調波電流規格 JIS C 61000-3-2 適合品

This statement explains the JEITA statement for products greater than 20 A, single phase.

高調波電流規格 JIS C 61000-3-2 準用品

本装置は、「高圧又は特別高圧で受電する需要家の高調波抑制対策ガイドライン」対象機器（高調波発生機器）です。

- 回路分類 : 6 (単相、PFC回路付)
- 換算係数 : 0

This statement explains the JEITA statement for products greater than 20 A per phase, three-phase.

高調波電流規格 JIS C 61000-3-2 準用品

本装置は、「高圧又は特別高圧で受電する需要家の高調波抑制対策ガイドライン」対象機器（高調波発生機器）です。

- 回路分類 : 5 (3相、PFC回路付)
- 換算係数 : 0

### Electromagnetic Interference (EMI) Statement - People's Republic of China

声 明

此为 A 级产品,在生活环境中,该产品可能会造成无线电干扰。在这种情况下,可能需要用户对其干扰采取切实可行的措施。

Declaration: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may need to perform practical action.

### Electromagnetic Interference (EMI) Statement - Taiwan

警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

The following is a summary of the EMI Taiwan statement above.

Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user will be required to take adequate measures.

**IBM Taiwan Contact Information:**

台灣IBM 產品服務聯絡方式：  
台灣國際商業機器股份有限公司  
台北市松仁路7號3樓  
電話：0800-016-888

**Electromagnetic Interference (EMI) Statement - Korea**

이 기기는 업무용(A급)으로 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

**Germany Compliance Statement**

**Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit**

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2004/108/EG zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 Klasse A ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung von IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung von IBM gesteckt/eingebaut werden.

EN 55022 Klasse A Geräte müssen mit folgendem Warnhinweis versehen werden:

"Warnung: Dieses ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funk-Störungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen zu ergreifen und dafür aufzukommen."

**Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten**

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)". Dies ist die Umsetzung der EU-Richtlinie 2004/108/EG in der Bundesrepublik Deutschland.

**Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC EG Richtlinie 2004/108/EG) für Geräte der Klasse A**

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Einhaltung der EMV Vorschriften ist der Hersteller:

International Business Machines Corp.

New Orchard Road

Armonk, New York 10504

Tel: 914-499-1900

Der verantwortliche Ansprechpartner des Herstellers in der EU ist:

IBM Deutschland GmbH

Technical Regulations, Abteilung M372

IBM-Allee 1, 71139 Ehningen, Germany

Tel: +49 (0) 800 225 5423 or +49 (0) 180 331 3233

email: halloibm@de.ibm.com

Generelle Informationen:

**Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse A.**

### **Electromagnetic Interference (EMI) Statement - Russia**

**ВНИМАНИЕ! Настоящее изделие относится к классу А.  
В жилых помещениях оно может создавать  
радиопомехи, для снижения которых необходимы  
дополнительные меры**

### **Class B Notices**

The following Class B statements apply to features designated as electromagnetic compatibility (EMC) Class B in the feature installation information.

### **Federal Communications Commission (FCC) Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an IBM-authorized dealer or service representative for help.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from IBM-authorized dealers. IBM is not responsible for any radio or television interference caused by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **Industry Canada Compliance Statement**

This Class B digital apparatus complies with Canadian ICES-003.

### **Avis de conformité à la réglementation d'Industrie Canada**

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### **European Community Compliance Statement**

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

This product has been tested and found to comply with the limits for Class B Information Technology Equipment according to European Standard EN 55022. The limits for Class B equipment were derived for typical residential environments to provide reasonable protection against interference with licensed communication equipment.

European Community contact:  
IBM Deutschland GmbH  
Technical Regulations, Department M372  
IBM-Allee 1, 71139 Ehningen, Germany  
Tele: +49 (0) 800 225 5423 or +49 (0) 180 331 3233  
email: halloibm@de.ibm.com

### **VCCI Statement - Japan**

この装置は、クラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。 VCCI-B

## Japan Electronics and Information Technology Industries Association Statement

This statement explains the Japan JIS C 61000-3-2 product wattage compliance.

(一社) 電子情報技術産業協会 高調波電流抑制対策実施  
要領に基づく定格入力電力値 : Knowledge Centerの各製品の  
仕様ページ参照

This statement explains the Japan Electronics and Information Technology Industries Association (JEITA) statement for products less than or equal to 20 A per phase.

高調波電流規格 JIS C 61000-3-2 適合品

This statement explains the JEITA statement for products greater than 20 A, single phase.

高調波電流規格 JIS C 61000-3-2 準用品

本装置は、「高圧又は特別高圧で受電する需要家の高調波抑制対策ガイドライン」対象機器（高調波発生機器）です。

- 回路分類 : 6 (単相、PFC回路付)
- 換算係数 : 0

This statement explains the JEITA statement for products greater than 20 A per phase, three-phase.

高調波電流規格 JIS C 61000-3-2 準用品

本装置は、「高圧又は特別高圧で受電する需要家の高調波抑制対策ガイドライン」対象機器（高調波発生機器）です。

- 回路分類 : 5 (3相、PFC回路付)
- 換算係数 : 0



## IBM Taiwan Contact Information

台灣IBM 產品服務聯絡方式：  
台灣國際商業機器股份有限公司  
台北市松仁路7號3樓  
電話：0800-016-888

## Electromagnetic Interference (EMI) Statement - Korea

이 기기는 가정용(B급)으로 전자과적합기기로  
서 주로 가정에서 사용하는 것을 목적으로 하  
며, 모든 지역에서 사용할 수 있습니다.

## Germany Compliance Statement

### Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse B EU-Richtlinie zur Elektromagnetischen Verträglichkeit

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2004/108/EG zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 Klasse B ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung von IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung von IBM gesteckt/eingebaut werden.

### Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)". Dies ist die Umsetzung der EU-Richtlinie 2004/108/EG in der Bundesrepublik Deutschland.

### Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC EG Richtlinie 2004/108/EG) für Geräte der Klasse B

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Einhaltung der EMV Vorschriften ist der Hersteller:  
International Business Machines Corp.  
New Orchard Road  
Armonk, New York 10504  
Tel: 914-499-1900

Der verantwortliche Ansprechpartner des Herstellers in der EU ist:  
IBM Deutschland GmbH  
Technical Regulations, Abteilung M372  
IBM-Allee 1, 71139 Ehningen, Germany  
Tel: +49 (0) 800 225 5423 or +49 (0) 180 331 3233  
email: halloibm@de.ibm.com

Generelle Informationen:

**Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse B.**

---

## Terms and conditions

Permissions for the use of these publications are granted subject to the following terms and conditions.

**Applicability:** These terms and conditions are in addition to any terms of use for the IBM website.

**Personal Use:** You may reproduce these publications for your personal, noncommercial use provided that all proprietary notices are preserved. You may not distribute, display or make derivative works of these publications, or any portion thereof, without the express consent of IBM.

**Commercial Use:** You may reproduce, distribute and display these publications solely within your enterprise provided that all proprietary notices are preserved. You may not make derivative works of these publications, or reproduce, distribute or display these publications or any portion thereof outside your enterprise, without the express consent of IBM.

**Rights:** Except as expressly granted in this permission, no other permissions, licenses or rights are granted, either express or implied, to the publications or any information, data, software or other intellectual property contained therein.

IBM reserves the right to withdraw the permissions granted herein whenever, in its discretion, the use of the publications is detrimental to its interest or, as determined by IBM, the above instructions are not being properly followed.

You may not download, export or re-export this information except in full compliance with all applicable laws and regulations, including all United States export laws and regulations.

IBM MAKES NO GUARANTEE ABOUT THE CONTENT OF THESE PUBLICATIONS. THE PUBLICATIONS ARE PROVIDED "AS-IS" AND WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR A PARTICULAR PURPOSE.



