YAMAHA L S I

YMF721 OPL4-ML2

FM + Wavetable Synthesizer LSI

OVERVIEW

YMF721 (OPL4-ML2) is a high quality and low cost Wavetable synthesizer LSI. YMF721 (OPL4-ML2) integrates an OPL3 (FM synthesizer), General MIDI processor and 1 Mbyte Wavetable sample ROM into one chip, and complies with General MIDI (GM) system level 1. Thus, it is best suited to multimedia applications, sound cards, MIDI synthesis modules and other sound applications.

Since this LSI outputs stereophonic 16 bit digital signal (fs = 44.1 kHz), it can be connected directly with YMF701B, 711 or 715 (OPL3-SA, SA2 or SA3) or with YAC516(DAC16-L).

Operating voltage, 3.3 V, allows this LSI to be controlled with notebook personal computers.

Power management functions (power down and suspend/resume functions) of OPL4-ML2 contribute to low power consumption of personal computers into which this product is built-in.


FEATURES

The Wavetable synthesizer of this LSI is able to generate up to 24 types of sounds simultaneously. Has an interface that makes this LSI compatible with MPU-401 UART mode. Has an OPL3 (FM synthesizer) for AdLib/SoundBlaster applications. Has a 1 Mbyte built-in Wavetable sample ROM. Complies with GM system Level 1. (Thus, it is compatible with DOS applications that support MPU-401.) MIDI signal can be transmitted either through serial input or parallel input. FM synthesizer and Wavetable synthesizer of this LSI can generate their sound at the same time. FM synthesizer is register-compatible with OPL3. All registers are readable. Power management functions included power down and suspend/resume can be supported. Frequency of master clock signal is 33.8688 MHz. Pin compatible with YMF704C-S (100 pin SQPF) Voltage of power supply can be 5.0 V or 3.3 V. Silicone gate CMOS process 100-pin SQFP (YMF721-S).

YAMAHA CORPORATION

PIN CONFIGURATION

YMF721-S

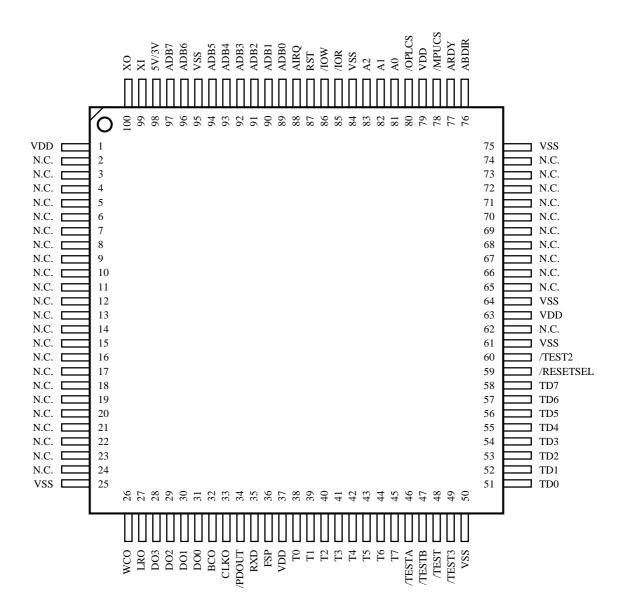

100 pin SQFP Top View

PIN DESCRIPTION

ISA bus interface : 19 pins						
Pin name	pins	I/O	Type	Size	Function	
ADB7-0	8	I/O	TTL	2mA	Data bus	
A2-0	3	Ι	TTL	-	Address bus	
/MPUCS	1	Ι	TTL	-	MPU401 chip select	
/OPLCS	1	Ι	TTL	-	FM/Wavetable/Command/Control chip select	
/IOW	1	Ι	TTL	-	Write enable	
/IOR	1	Ι	TTL	-	Read enable	
RST	1	Ι	TTL	-	Initial clear input	
AIRQ	1	0	TTL	2mA	Interrupt signal ("H" : Interrupt)	
ABDIR	1	0	TTL	2mA	Selection of data transfer direction	
					("L" : YMF721 Host)	
ARDY	1	OD	TTL	12mA	I/O channel ready/busy selection ("L" : Busy)	

MIDI interface : 2 pins						
Pin name	pins	I/O	Type	Size	Function	
RXD	1	Ι	TTL	-	MIDI serial data input	
FSP	1	Ι	TTL	-	Selection of MIDI serial/parallel transmission	
					("H" : Parallel, "L" : Serial)	

Serial audio interface : 8 pins					
Pin name	pins	I/O	Type	Size	Function
CLKO	1	0	CMOS	8mA	Clock output (384fs = 16.9344MHz)
BCO	1	0	CMOS	2mA	Bit clock output (48fs = 2.1168MHz)
LRO	1	0	CMOS	2mA	L/R clock output (fs = 44.1kHz)
WCO	1	0	CMOS	2mA	Word clock output $(2fs = 88.2kHz)$
DO3	1	0	CMOS	2mA	Effect send output
DO2	1	0	CMOS	2mA	MIX (FM + Wavetable) output
DO1	1	0	CMOS	2mA	Wavetable output
DO0	1	0	CMOS	2mA	FM output

Others : 39 pins					
Pin name	pins	I/O	Туре	Size	Function
5V/3V	1	Ι	CMOS	-	Selection of power supply
/RESETSEL	1	I+	TTL	-	RST signal polarity control pin
					(When this pin is at "L", RST is active at "L".)
/PDOUT	1	0	CMOS	2mA	Power down control output
XI	1	Ι	CMOS	2mA	Crystal oscillator connection or master clock input
					(33.8688 MHz)
XO	1	0	CMOS	2mA	Crystal oscillator connection pin
N.C.	34	-	-	-	To be open at normal use.


LSI test pins : 21 pins						
Pin name	pins	I/O	Туре	Size	Function	
/TESTA	1	I+	TTL	-	To be open at normal use.	
/TESTB	1	I+	TTL	-	To be open at normal use.	
/TEST	1	I+	TTL	-	To be open at normal use.	
/TEST2	1	I+	TTL	-	To be open at normal use.	
/TEST3	1	I+	TTL	-	To be open at normal use.	
T7-0	8	0	CMOS	2mA	To be open at normal use.	
TD7-0	8	I/O	CMOS	2mA	To be open at normal use.	

Power supply, ground : 11 pins						
Pin name	pins	I/O	Type	Size	Function	
VDD	4	-	-	-	Power supply (put on +5.0 V or +3.3V)	
VSS	7	-	-	-	Ground	

Total: 100 pins

Note : I+ : Input pin with built-in pull-up resistor, OD : Open drain output pin

BLOCK DIAGRAM

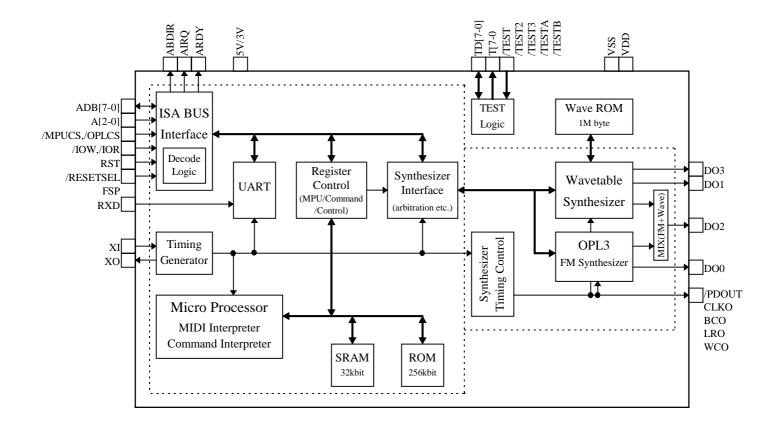


FUNCTIONS

1. 1. Example of system configuration

1-1. System with MPU401 UART

This section describes two examples of systems that have an MPU401 UART in them. In these examples, YMF701B, 711 or 715 (OPL3-SA, SA2 or SA3) has a built-in MPU401 UART.

(1) ISA BUS Connect System

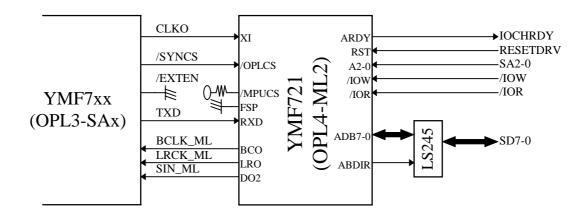


Note :

YMF721 (OPL4-ML2) has MPU401 UART in it. Thus, for the above case, TXD of YMF7xx (OPL3-SAx) is connected with RXD of YMF721 (OPL4-ML2) and MPU401 port (/MPUCS) of YMF721 (OPL4-ML2) is disabled so that YMF7xx(OPL3-SAx) sends MIDI data directly to YMF721 (OPL4-ML2).

For the above case, FM synthesizer of YMF7xx (OPL3-SAx) is disabled and the one in YMF721 (OPL4-ML2) is made active. (This control is made through /EXTEN pin of YMF7xx.) For the above system, the data bus that connects with YMF721(OPL4-ML2) gains access to FM-synthesizer/Command/Control port of YMF721(OPL4-ML2). (Chip select signal is outputted from /SYNCS pin of YMF7xx.)

For the source of master clock to be inputted to XI pin of YMF721 (OPL4-ML2), it is recommended to use CLKO pin of YMF7xx (OPL3-SAx). For other methods, a crystal oscillator can be used by attaching it to XI and XO pins of YMF721 (OPL4-ML), or a clock of 33.8688 MHz supplied from the system can be used. When serial data outputs of YMF721 (OPL4-ML2), BCO, LRO and DO2 pins, are connected with external serial data interface (BCLK_ML, LRCK_ML, SIN_ML) of YMF7xx (OPL3-SAx), the serial data is converted to analog signal in YMF7xx (OPL3-SAx) and outputted as analog signal.

(2) No ISA BUS Connect System

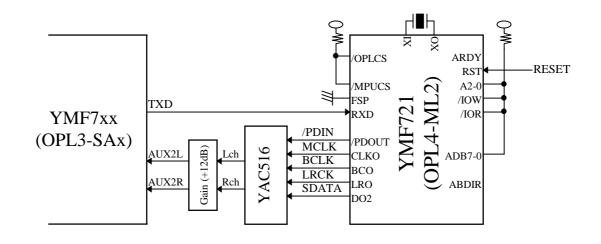

Note :

YMF721 (OPL4-ML2) has MPU401 UART in it. Thus, for the above case, TXD of YMF7xx (OPL3-SAx) is connected with RXD of YMF721 (OPL4-ML2) and MPU401 port (/MPUCS) of YMF721 (OPL4-ML2) is disabled so that YMF7xx(OPL3-SAx) sends MIDI data directly to YMF721 (OPL4-ML2).

The above system does not connect YMF721 (OPL4-ML2) and ISA bus, which is an example of Wavetable upgrade solution represented by the Wavetable daughter card. Input pins of the ISA bus interface should be pulled up externally. At this time, FM synthesizer/Command/Control ports are disabled, but the power down function is enabled by receiving System Exclusive Message on the MIDI data, except that Suspend/Resume function is disabled.


As a source of master clock for YMF721 (OPL4-ML2), use a crystal oscillator by connecting it to XI and XO pins, or use the clock of 33.8688 MHz from the system. Connect BCO, LRO, DO2, /PDOUT and CLKO directly to YAC516 (DAC16-L) as shown to convert serial data output to analog signal. Then, it is recommended to input the converted analog signal to AUX2L and AUX2R of YMF7xx (OPL3-SAx) after amplifying the volume of source of YMF721 through the gain of +12 dB as shown for the purpose of equalizing the volumes of multiple sources.

1-2. System without MPU401 UART

This section describes an example of a system that does not have MPU401 UART in it.

In this example, MPU401 UART of YMF721 (OPL4-ML2) is used.

FM synthesizer of this LSI is compatible with applications that support AdLib/Sound Blaster, and Wavetable synthesizer is compatible with applications that support MPU401.

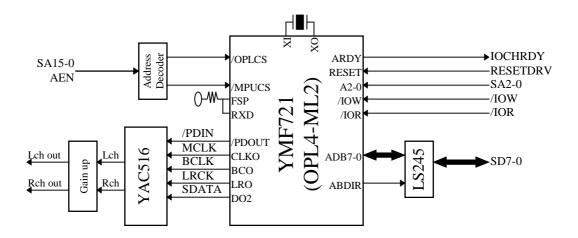

Note :

For the above case, MPU401 port of YMF721 (OPL4-ML2) must be made active because the system does not have MPU401 UART in it. Addresses of standard ports through which reading or writing of registers of YMF721 (OPL4-ML2) is made are as follows.

1) /OPLCS	: 388 - 38Fh (8byte)

2) /MPUCS : 330 - 331h (2byte)

As a source of master clock for YMF721 (OPL4-ML2), use a crystal oscillator by connecting it to XI and XO pins, or use the clock of 33.8688 MHz from the system. Connect BCO, LRO, DO2, /PDOUT and CLKO directly to YAC516 (DAC16-L) as shown to convert serial data output to analog signal. Then, it is recommended to amplify the volume of source of YMF721 through the suitable gain as shown for the purpose of equalizing the volumes of multiple sources.

2. ISA bus interface

8 bit parallel I/O of YMF721 (OPL4-ML2) can be connected with ISA bus. The ISA bus interface allows transfer of commands between the each block of YMF721 (OPL4-ML2) and host.

Data Bus & Address Bus

ADB7-0	: ISA data bus	
A2-0	: ISA address bus	
/MPUCS	: MPU401 chip select	
/OPLCS	: FM/Wavetable/Command/Control chip select	
/IOW	: ISA write enable	
/IOR	: ISA read enable	
ABDIR	: Data bus direction switching ("L" : YMF721	ISA)
ARDY	: I/O channel ready ("L" : busy)	

Control of the data bus is made with /MPUCS, /OPLCS, /IOW and /IOR signals. The mode of control of the data bus varies as follows according to the combination of states of the signals. The direction of data transfer on the data bus is determined by ABDIR. In normal operation, the internal data bus of YMF721 (OPL4-ML2) connects the built-in processor and FM/Wavetable synthesizer blocks. Every time the ISA bus accesses the register for FM/Wavetable, an internal arbitration circuit causes the internal bus to connect ISA bus and FM/Wavetable synthesizer blocks. YMF721 (OPL4-ML2) uses I/O channel ready (ARDY pin) as the internal arbitration circuit. ARDY becomes "L" (busy) every time data bus accesses the register for FM/Wavetable.

/MPUCS	/OPLCS	/IOW	/IOR	A2	A1	A0	MODE
L	Н	Н	L	×	L	L	MPU401 Acknowledge (FEh)
L	Н	L	Н	×	L	L	MPU401 MIDI Data write
L	Н	Н	L	×	L	Н	MPU401 Status read
L	Н	L	Н	×	L	Н	MPU401 Command write
Н	L	Н	L	L	L	L	FM-synth. Status read
Н	L	L	Н	L	H/L	L	FM-synth. Address write
Н	L	L	Н	L	×	Н	FM-synth. Data write
Н	L	Н	L	L	×	Н	FM-synth. Data read
Н	L	Н	L	Н	L	L	Wavetable-synth. Status read
Н	L	L	Н	Н	L	L	Wavetable-synth. Address write
Н	L	L	Н	Н	L	Н	Wavetable-synth. Data write
Н	L	Н	L	Н	L	Н	Wavetable-synth. Data read
Н	L	Н	L	Н	Н	L	Command response read
Н	L	L	Н	Н	Н	L	Command write
Н	L	L	Н	Н	Н	Н	Control write
Н	L	Н	L	Н	Н	Н	Status read
Н	L	Н	Н	×	×	×	No-active or UART mode
Н	Н	×	×	×	×	×	No-active or UART mode

Notes:

× : Don't care

When address has been written into FM block, the time required to wait until writing of address or data into Wavetable block is started is 0 (zero) nsec. When address has been written into Wavetable block, the time required to wait until writing of address or data into FM block is started is also 0 (zero) nsec. When FM block has been accessed, it is necessary to wait 860 nsec or more before the FM block can be accessed again.

Interrupt

AIRQ : Interrupt signal ("H" : Interrupt)

YMF721 (OPL4-ML2) is able to provide one interrupt signal. There are two types of sources of this interrupt signal as follows.

1) Two timer flags that are used for tempo counter of FM synthesizer


2) The flag that occurs when internal processor writes data into the Command response register The flags described in 2) is disabled as a default.

3. Serial audio interface

YMF721 (OPL4-ML2) can be connected directly with an external DAC such as YAC516 through BCO, LRO, WCO and DO3-0 pins.

BCO	Outputs bit	clock. The frequency of this clock is 48 fs. (fs is the sampling			
	frequency th	at is equal to the frequency of clock outputted from LRO.) Typical			
	duty factor o	of this signal is 50 %.			
LRO	Specifies a	channel for serial audio data. When LRO is "H", data is outputted			
	from left ch	annel, or when "L", from right channel. Frequency of this clock is			
	44.1 kHz. T	ypical duty factor of this signal is 50 %.			
WCO	Frequency of this clock is 88.2 kHz. Typical duty factor of this signal is 50 %.				
DO3-0	These pins output serial audio data as follows.				
	DO3	Outputs data of Wavetable whose effect send level has been adjusted.			
	DO2	Outputs data that is the mixture of those of FM and Wavetable.			
	DO1	Outputs Wavetable data.			
	DO0	Outputs FM data.			

Format of the serial audio interface is as follows.

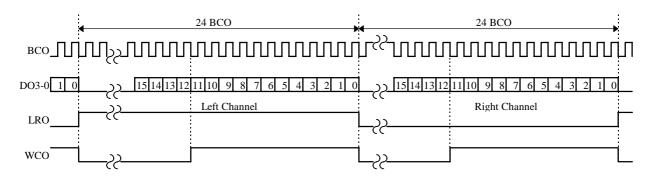

Format of YMF721 (OPL4-ML2) serial audio interface

4. MIDI Interface

MIDI serial data can be inputted from RXD pin. It is necessary to input MIDI data complied with MIDI 1.0 detailed specification to RXD pin.

The serial data is the rate of 31.25kbit/sec (+/-1%) and the unit of 10 bits. The first bit is a start bit, the next 8 bits are data (LSB to MSB), and the 10th bit is a stop bit.

5. Power management functions

YMF721 (OPL4-ML2) has two types of power management functions as follows.

- (1) Global power down mode
- (2) Suspend/Resume mode

5-1. Global power down mode

Generation of clock signal is disabled (stopped). Total power consumption of YMF721 (OPL4-ML2) is approximately 20uA (typ.). Writing "FDh" into command register or receiving System Exclusive MIDI Message makes in this mode. YMF721 (OPL4-ML2) outputs "L" from /PDOUT pin in this mode, which can be used as power down control signal for peripheral equipment. Set KON bit (FM synthesizer register) to "0" for all channels before going into this mode. Check that play back of MIDI data is stopped.

/RESETSEL pin has a built-in pull up resistor. When this pin is at "L" in this mode, the power consumption is higher by approximately 30uA than the one when this pin is open or at "H".

5-1-1. ISA BUS Connect System

When "FDh" has been written into command register, the internal processor goes into the global power down mode after performing the following internal processes.


1) Disabling synthesizer's internal clock

2) Setting GBUSY bit of status register to "0".

YMF721 (OPL4-ML2) requires over 30 msec to complete the above processes before going into the power down mode.

Since generation of the clock has been disabled, recovery from the power down mode can not be made by using command. Thus, it is necessary to use PDY and PDX bits of control register for the recovery. To resume normal operation through the recovery sequence, waiting time of 50 to 100 msec is required before the oscillation of crystal stabilizes when internal oscillation is used, or 3 msec or more before the recovery of clock generated in the synthesizer.

For the details of power down command, refer to 6-3. After the power down command, FDh, has been written, do not write any command before sending a recovery command to the control register to return to the normal mode.

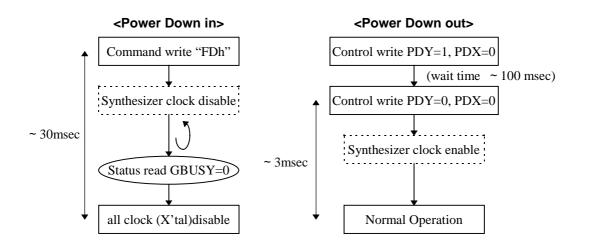

Power down sequence when connected with ISA bus

5-1-2. No ISA BUS Connect System

When YMF721 (OPL4-ML2) is not connected with ISA bus, power down operation can be controlled by sending Yamaha's original System Exclusive Message as the MIDI data. The System Exclusive Message includes the following three byte ID.

43h, 79h, 04h : Yamaha YMF721(OPL4-ML2) ID

The System Exclusive Message is as follows.

F0h, <Yamaha YMF721(OPL4-ML2) ID>, <Command>, <Data>, F7h

YMF721 (OPL4-ML2) supports the following commands and data.

Command	Data	Function
0Eh	6Dh	Power Down Command
0Fh	6Bh	Internal Micro-processor Reset Command


<Power Down Sequence>

(1) Power Down in

When YMF721 (OPL4-ML2) has received the System Exclusive Message shown above, it goes into the global power down mode after performing the processes as described in "5-1-1. ISA BUS Connect System".

(2) Power Down out

Since the clock generation has been disabled, YMF721 (OPL4-ML2) is not able to recover from the global power down mode by using the System Exclusive Message. Thus, the LSI needs to receive the "3byte MIDI data" as shown below to recover from the global power down mode. To resume normal operation through the recovery sequence, waiting time of 50 to 100 msec is required before the oscillation of crystal stabilizes when internal oscillation is used, or 3 msec or more before the recovery of clock generated in the synthesizer.

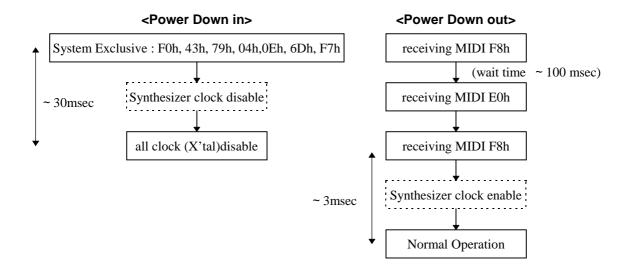

Power down sequence without ISA bus

<Micro-processor Reset>

The internal microprocessor is reset by receiving the above System Exchange Message.

5-2. Suspend/Resume mode

The state of internal processor is suspended by writing "E0h" into the command register before turning off the power. When the power has been turned on, it can be resumed by resetting it, writing "E1h" into the command register and then writing data that has been read before suspended.

On FM synthesizer block, check setting KON bit to "0" for all channels before reading out all register and turning off the power. Write register that has been read after turning on and resetting at the recovery sequence.

For the details of suspend/resume, refer to 6-3.

Note :

The system that includes YMF721 not connected with ISA bus can not support the suspend/resume function.

6. Registers

6-1. MPU401 compatible register

MPU401 is a generally used interface for controlling MIDI devices on the personal computer. I/O addresses that are compatible with MPU401 are as follows.

MPU_Base+ 0	(W/R)	MIDI Data transmit/acknowledge port
MPU_Base + 1	(R)	Status Register port
MPU_Base + 1	(W)	Command Register port

MIDI Data Write Port (WO):

port	D7	D1	D0							
MPU_Base + 0		MIDI Data								
MIDI Data	a	. Port for writing MIDI data (transmitting). Transmission of the								

Port for writing MIDI data (transmitting). Transmission of the data must be carried out while the transmitter of MIDI data is watching the state of DRR bit of the status register. An interrupt occurs in the internal processor when MIDI data has been written into the register. Since YMF721 (OPL4-ML2) has no output signal for transmitting MIDI data, the MIDI data written into this register is used to operate internal Wavetable synthesizer.

MPU Acknowledge Port (RO):

port	D7	D6	D5	D4	D3	D2	D1	D0
MPU_Base + 0	"1"	"1"	"1"	"1"	"1"	"1"	"1"	"0"

Sends acknowledge for the operation of MPU401.

When operation of the MPU401 is normal, "FEh" is read from this port.

- 1												
	port	D7	D6	D5	D4	D3	D2	D1	D0			
	MPU_Base + 1	DSR	DRR	"1"	"1"	"1"	"1"	"1"	"1"			
	DSR		This bit is "1" when reading the acknowledge from MPU401.									
			This bit is "0" when writing commands.									
	DRR		This bit is "1" while MIDI data is being written into MPU Data									
			W	rite port (N	MPU Base	+0). This	bit is "0" v	when the M	AIDI data			
			can be written into the MPU Data Write port. Do not write									
		MIDI data when this bit is "1".										

Status Register Port (RO):

Default : BFh

Command Register Port (WO):

	port	D7	D6	D5	D4	D3	D2	D1	D0
ĺ	MPU_Base + 1 COMMAND Data								
COMMAND Data The data written into this register is ignored. DSR bit is									t is set to
"0" when data is written into this register.									

6-2. Command/Response register

I/O port for power down and suspend/resume register is described here.

	inianu/ixes	pullae r		•						
	port	D7	D1	D0						
0	PL_Base + 6		Command Write							
0	PL_Base + 6		Response Read							
Command Write				interrupt	occurs whe	en data has	been writ	ten into thi	s register.	

Response to a command is read from this register.

Command/Response Port (R/W):

Note :

Response Read...

For the details of Command/Response, refer to 6-3.


6-3. Details of command register

Some of commands supported in the command register are as follows.

Command	Sub Command	Command Length	Response Length	Function
E0h	-	1 byte	variable	Reading suspend information
E1h	00h	variable	-	Resume
FDh	-	1 byte	-	Moving into power down mode
FEh	-	1 byte	-	Checking operating conditions
FFh	-	1 byte	-	Discontinuing command execution

6-3-1. Suspend information

Command and response have the following formats.

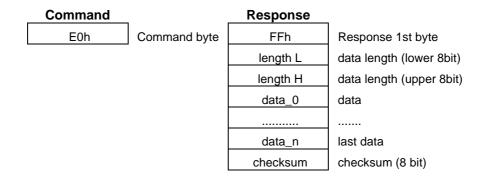

Checksum is determined so that lower eight bits of the sum of values from length L to checksum becomes "0".

The state of internal processor immediately before execution of this command can be resumed by writing the data that is read into the internal processor by using resume command described below.

6-3-2. Resume

Command and Response have the following formats.

Command		Response
E1h	Command byte	None
0x00	Sub Command	
data_0	data	
data_n	last data	
checksum	checksum	

For Resume, data following the sub command are transmitted as seven bit data. Thus, it is necessary to send the data obtained with suspend command to the internal processor after encoding it. Checksum is determined so that the result of logical product (AND) of 7Fh and the sum of sub command byte, encoded data and checksum becomes "0". The internal processor returns to the state immediately before execution of Command E0h when it confirms that the data has been received normally.

6-3-3. Others

YMF721(OPL4-ML2) can use the following special commands that do not send response.

1) Command FDh : Power down mode

Refer to 5-1.

When the power down command FDh has been written into the command register, do not write any command before the return command to the control register has been executed.

2) Command FEh : Checking operating state of internal processor

This command is used to check if the internal processor is operating normally.

The internal processor is deemed operating normally if GBUSY bit of Status register is "0".

3) Command FFh : Discontinuing command execution

This command is used to discontinue the execution of a command. This command can be used only when another command is being executed.

6-4. Control/Status register

I/O port for Control/Status register is described here.

Control/Status	Port (R/	W):						
port	D7	D6	D5	D4	D3	D2	D1	D0
OPL_Base + 7(W)	PDY	PDX	-	-	-	MPR	"0"	"1"
OPL_Base + 7(R)	PDY	PDX	-	BSEL	-	RESP	GBUSY	GDRQ
PDY, PDX.		YN	AF721 re	covers fro	om power	down m	node by 1	using the
		fol	lowing sec	luence.				
]	PDY="1",	PDX="0"			
				wait	time (in ca	ase of usin	g crystal o	scillation)
]	PDY="0",	PDX="0"			
		D7	and D6	bits of St	atus regist	er become	e "1" duri	ng power
		do	wn mode.	In this sta	te, oscillat	ion of cloc	ck can be o	confirmed
		by	monitorin	g the stat	us bit dur	ing power	down mo	de in/out
		sec	quence.					
MPR		Set	tting this	bit to "0'	" initialize	s internal	processor	. Default
		val	lue of this	bit is "1".				
BSEL		Th	is bit show	ws connec	tion of int	ernal bus	of YMF72	21(OPL4-
		MI	L2). Defau	lt value of	this bit is	"1".		
			•	"1" : Conn	ecting syn	thesizer an	d internal	processor
			•	"0" : Conn	ecting syn	thesizer an	d ISA bus	
RESP		Inc	licates that	a respons	e to a com	mand has l	been receiv	ved.
GBUSY		Fla	ıg bit that i	ndicates if	f data can l	be written i	into Comm	and write
		reg	gister.					
			•	"1" : BUS	Y			
			•	"0" : Data	can be wri	tten		
GDRQ		Fla	ng bit tha	t indicate	s if data	can be re	ead from	Response
		reg	gister.					
			•	"1" : REA	DY			
			•	"0" : Read	ing is inhit	oited		
Default : (0	0x1 x000) _{b0}						

Control/Status Port (R/W):

6-5. FM synthesizer registers

6-5-1. Status register

Status Register (RO):

port	D7	D6	D5	D4	D3	D2	D1	D0
OPL_Base + 0	IRQ	FT1	FT2	-	-	-	LD	BUSY0

Note :

Since NEW2 (index 05h of Register array1) = 1 in default state, both LD and BUSY0 bits are valid. (LD and BUSY0 bits are invalid when NEW2=0.) BUSY0 is a BUSY flag for both FM and Wavetable registers.

6-5-2. Data register

Data Register Array 0 (R/W):

Index								
IIIUEX	D7	D6	D5	D4	D3	D2	D1	D0
00 - 01h				LSI 1	TEST			
02h				TIM	ER 1			
03h				TIM	ER 2			
04h	RST	MT1	MT2	-	-	-	ST2	ST1
08h	-	NTS	-	-	-	-	-	-
20 - 35h	AM	VIB	VIB EGT KSR MULT					
40 - 55h	KS	SL			Т	L		
60 - 75h		А	R			D	R	
80 - 95h		S	L		RR			
A0 - A8h				F-NU	M (L)			
B0 - B8h	-	-	KON		BLOCK		F-NU	M (H)
BDh	DAM	DVB	RHY	RHY BD SD TOM TC				HH
C0 - C8h	CHD	CHC	CHB CHA FB C					CNT
E0 - F5h	-	-	WS					

Data Register Array 1 (R/W)

Index	D7	D6	D5	D4	D3	D2	D1	D0	
00 - 01h				LSI 1	TEST				
04h	-	-			CONNEC	TION SEL			
05h	-	-	-	NEW3 NEW2					
20 - 35h	AM	VIB	EGT	EGT KSR MULT					
40 - 55h	K	SL		Т	TL				
60 - 75h		А	R			D	R		
80 - 95h		S	L		RR				
A0 - A8h				F-NU	M (L)				
B0 - B8h	-	-	KON BLOCK F-NUM (H					M (H)	
C0 - C8h	CHD	CHC	CHB CHA FB C					CNT	
E0 - F5h	-	-	WS						

Default :

After initial clear, all the bits of Register Array 1 are cleared to "0" except NEW2 and NEW3 bits of index 05h, and CHA and CHB bits of index C0-C8h.

For the details of these registers, refer to data sheet for YMF289B(OPL3-L).

Note :

Since NEW2 and 3 (at index 05h of Register array1) = 1 in default state, both LD and BUSY0 bits are valid. (LD and BUSY0 bits are invalid when NEW2=0.) BUSY0 is a BUSY flag for both FM and Wavetable registers.

6-6. Wavetable synthesizer register

6-6-1. Status register

Status Register (RO):

port	D7	D6	D5	D4	D3	D2	D1	D0
OPL_Base + 4	-	-	-	-	-	-	LD	BUSY1

6-6-2. Data register

Data Register (R/W):

a Keyiste	(IV V).								
Index	D7	D6	D5	D4	D3	D2	D1	D0	
00 - 01h		LSI TEST							
02h	DEVIC	E ID ("0" "	1″ "0″)	тс	NE HEAD	ER	MTYPE	MODE	
03h				Me	mory Addre	ess (MA21	-16)		
04h			Me	mory Add	ess (MA15	5-8)			
05h			М	emory Add	lress(MA7-	0)			
06h				Memory D	ata(MD7-0))			
08-1Fh	TONE NUMBER (L)								
20-37h	F-NUMBER (L)					TNUM (H)			
38-4Fh	BLOCK PREV F-NUMBER						(H)		
50-67h			тс	OTAL LEV	EL	_ LDIR			
68-7Fh	KEYON	DAMP	LFORST	СН		PAN	POT		
80-97h	CHORU	S SEND		LFO			VIB		
98-AFh		А	R		D1R				
B0-C7h		D)L		D2R				
C8-DFh	R	ATE INTEI	RPOLATIO	N	RR				
E0-F7h	RE	VERB SE	ND	ID			AM		
F8h	-	-	MIX C	ONTROL (FM-R)	MIX CONTROL (FM-		(FM-L)	
F9h	-	-	MIX CC	NTROL (V	Vave-R)	MIX CC	ONTROL (V	Vave-L)	
FAh	-	-	-	-	-	-	-	ATC	
FBh	-	-	-	-	-	-	-	-	

Default :

After initial clear, index 02h becomes 40h (Device ID) and index F8h becomes 2Dh (-15dB), and all the other registers are cleared to "0". For the details of these registers, refer to data sheet for YMF295(OPL4-D).

Note :

BUSY1 is a BUSY flag for Wavetable registers. Wavetable status/Data register is normally accessed by the internal processor.

7. Hardware

7-1. ISA bus interface

(1) Data Bus Connect System

Data BUS

Since driving current of data bus, ADB7-0 pins, of YMF721(OPL4-ML2) is about 2 mA (at VDD = 5.0 V), it is recommended to use bus buffer such as LS245 as necessary. At this time, connect ABDIR pin which outputs bus direction signal of YMF721(OPL4-ML2) with DIR (direction) pin of the bus buffer such as LS245.

RESET

Reset (RST) pin of YMF721(OPL4-ML2) can be made "H" active or "L" active. When using "H" active reset, /RESETSEL pin should be open or set to "H", or to "L" when using "L" active reset. /RESETSEL pin has a built-in pull-up resistor. When this pin is set to "L", the power consumption increases approximately by 30uA from the one obtained when the pin is open or set to "H".

I/O Channel Ready

In normal operation, the internal data bus of YMF721 (OPL4-ML2) connects the built-in processor and FM/Wavetable synthesizer blocks. Every time the ISA bus accesses the register for FM/Wavetable, an internal arbitration circuit causes the internal bus to connect ISA bus and FM/Wavetable synthesizer blocks. YMF721 (OPL4-ML2) uses I/O channel ready (ARDY pin) as the internal arbitration circuit. Connect ARDY pin of YMF721 (OPL4-ML2) and IOCHRDY pin of ISA bus. Although ARDY pin is an open drain output, it is not necessary to attach pull up resistor because it is usually pulled up at the ISA bus.

(2) No Data Bus Connect System

The input pins ADB7-0, A2-0, /MPUCS, /OPLCS, /IOW and /IOR must be pulled up externally. Output pins AIRQ, ABDIR and ARDY pins must be open.

7-2. MIDI interface

When using MPU port of YMF721 (OPL4-ML2), RXD and FSP pins must be pulled up. When using MPU port of the system and receiving MIDI data through RXD pin, FSP pin must be made "L".

7-3. Serial audio interface

YMF721 (OPL4-ML2) outputs clock signals of CLKO (384 fs = 16.9344 MHz), BCO (48 fs = 2.1168 MHz), LRO (fs = 44.1 kHz) and WCO (2 fs = 88.2 kHz) as the serial audio interface. It also outputs four types of data including DO0 (FM external out), DO1 (Wavetable external out), DO2 (MIX out) and DO3 (effect-send out). Normally, it uses the output of DO2. When YMF721 (OPL4-ML2) is in power down mode, /PDOUT pin outputs "L" which can be used as the power down control signal for peripheral systems.

7-4. Others

Power Supply

It is recommended to install a line noise filter in the YMF721 (OPL4-ML2). Be sure to install 0.1uF ceramic capacitor between each of VDD pins and VSS pins as close to the pins as possible, especially the pin No. 63 (VDD).

<u>5V/3V</u>

When operating YMF721 (OPL4-ML2) with 5 V, 5V/3V pin must be pulled up. When operating it with 3.3 V, set the pin to "L".

<u>XI, XO</u>

YMF721 (OPL4-ML2) requires the clock frequency of 33.8688 MHz. This signal can be supplied from the system or from the self-oscillation circuit connected with crystal oscillator

Yamaha recommends either of the following two types of parallel resonance type oscillator made by Daishinku Co., Ltd.


(i) 3rd Overtone Type

AT-49, SMD-49 : R=5.6K, c₁=c₂=10pF

(ii) Fundamental Type

AT-49, SMD-49 : R=1M, $c_1=c_2=5pF$

Use of the Crystal oscillator with frequency deviation within 100 ppm is recommended. Length of wiring lead from XI and XO pin to each component (crystal, resistor and capacitor) should be 0.5 inch or less respectively and the circuit pattern should be shielded on its periphery to minimize effect on the peripheral devices.

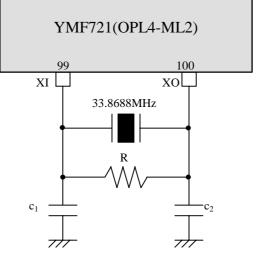

Since YMF721 (OPL4-ML2) is able to use power down mode, the power consumption can be minimized when generation of the clock signal is discontinued during this mode.

Electrical Characteristics

Absolute Maximum Ratings

Item	Symbol	Minimum	Maximum	Unit
Power Supply Voltage (Analog/Digital)	V_{DD}	V _{ss} -0.5	V _{SS} +7.0	v
Input Voltage	V_{IN}	V _{SS} -0.5	V_{DD} +0.5	v
Output Voltage	V _{OUT}	V _{SS} -0.3	V_{DD} +0.3	v
Input Current	I _{IN}	-20	20	mA
Storage Temperature	T _{STG}	-50	125	

Notes : $V_{DD}=DV_{DD}=AV_{DD}$, $V_{SS}=DV_{SS}=AV_{SS}=0[V]$

Recommended Operating Conditions

Item	Symbol	Min.	Тур.	Max.	Unit
Operating voltage 1 (5.0V Spec. 5V/3V="")	V_{DD1}	4.75	5.00	5.25	v
Operating voltage 2 (3.3V Spec. 5V/3V="L")	V _{DD2}	3.00	3.30	3.60	V
Operating Ambient Temperature	T _{OP}	0	25	70	

Notes : $DV_{SS}=AV_{SS}=0[V]$

DC Characteristics

Item	Symbol	Condition	Min.	Тур.	Max.	Unit
TTL-Input Pins					I I	
High Level Input Voltage 1	$V_{\rm IH1}$	Except XI and 5V/3V pins	2.0		1	V
Low Level Input Voltage 1	V _{IL1}				0.8	V
CMOS-Input Pins					1	
High Level Input Voltage 1	V _{IH2}	Applicable to XI and 5V/3V	$0.7 V_{\text{DD}}$		 -	V
Low Level Input Voltage 1	V _{IL2}				$0.2V_{\text{DD}}$	V
Input Leakage Current	$I_{\rm L}$	$V_{IN} = V_{SS}, V_{DD}$	-10		10	μA
Input Capacitance	CI				10	pF
		/TEST, /TEST2			 	
Pull up Register	R_{U1}	/TEST3, /TESTA	50		400	k
		/TESTB, /RESETSEL			 	
High Level Output Voltage 1	V_{OH1}	$I_{OH1} = -80 \ \mu \ A \ (5V/3V=``L")$	2.4			V
Low Level Output Voltage 1	V _{OL1}	$I_{OL1} = 2mA(*1)$			0.4	V
High Level Output Voltage 2	V _{OH2}	$I_{OH2} = -80 \ \mu \ A \ (5V/3V="H")$	V _{DD} -1.0		, 	V
Low Level Output Voltage 2	V _{OL2}	$I_{OL2} = 2mA(*1)$			V _{ss} +0.4	V
Low Level Output Voltage 3	V _{OL}	$I_{OL1} = 4mA (5V/3V = "L")$			0.4	V
		(*2)				
Low Level Output Voltage 4	V _{OL}	$I_{OL1} = 12mA (5V/3V = "H")$			0.4	V
		(*2)				
Output Capacitance	Co				10	pF

Notes : $V_{SS}=0[V]$, $T_{OP}=0 \sim 70$, $V_{DD}=5.0 \pm 0.25[V]$

*1) Applicable to output pins except XO and /ARDY.

*2) Applicable to /ARDY pin.

AC Characteristics

1. CPU interface (Refer to Fig. 1, 2, 3)

Item	Symbol	Min.	Тур.	Max.	Unit
Address set up to /IOW, /IOR active	t _{AS}	30		 	ns
Address hold to /IOW, /IOR inactive	t _{AH}	10			ns
/IOW Write Pulse Width	t _{ww}	50		 	ns
Write Data set up to /IOW active	t _{WDS}	10			ns
Write Data hold to /IOW inactive	t _{WDH}	10	1 -	1 -	ns
/IOR Read Pulse Width	t _{RW}	80	 	 	ns
Read Data access time	t _{ACC}		, ,	60	ns
Read Data hold from /IOR inactive	t _{RDH}	10			ns
Chip select setup time	t _{CS}	5	1 	1 	ns
Chip select hold time	t _{CH}	10	 	 	ns
RESET Pulse Width	t _{RST}	100	 	 	ms

Notes : $V_{SS}=0[V]$, $T_{OP}=0 \sim 70$, $V_{DD}=5.0 \pm 0.25[V]$

2. Serial audio interface (Refer to Fig. 4.)

Item	Symbol	Condition	Min.	Тур.	Max.	Unit
CLKO frequency	f _{CLKO16}		-	16.9344	-	MHz
CLKO duty	D _{CLKO16}		40	50	60	%
BCO frequency	f _{BCK}		-	2.1168	-	MHz
BCO duty	D _{BCLK}		40	50	60	%
Serial data setup time	t _{DS}	BCO /DO3-0	-	118	-	ns
Serial data hold tim	t _{DH}	BCO /DO3-0	-	118	-	ns
LRO setup time	t _{LRS}	BCO /LRO	-	118	-	ns
LRO hold time	t _{LRH}	BCO /LRO	-	118	-	ns
WCO setup time	t _{WCS}	BCO /WCO	-	118	-	ns
WCO hold time	t _{WCH}	BCO /WCO	-	118	-	ns

Notes : $V_{SS}=0[V]$, $T_{OP}=0 \sim 70$, $V_{DD}=5.0 \pm 0.25[V]$

Sampling frequency (fs) is 44.1 kHz. Duty factor is measured at 1/2 V_{DD}


3. Others

Item	Symbol	Condition	Min.	Тур.	Max.	Unit
Master Clock Frequency	f ₃₃	$V_{DD}=5.0 \pm 0.25[V]$		33.8688		MHz
(X'tal 33) Duty	D _{f33}	$V_{DD}=3.3 \pm 0.3[V]$	40	50	60	%
Power Consumption	I _{OP1}	V _{DD} =5.25[V]		40	50	mA
(during normal operation)	I _{OP2}	V _{DD} =3.60[V]		25	30	mA
Power Consumption	I _{OP3}	V _{DD} =5.25[V]		25	50	μA
(during power down mode)	I _{OP4}	V _{DD} =3.60[V]		15	30	μA


Notes : $V_{SS}=0[V]$, $T_{OP}=0 \sim 70$


/RESETSEL = "H". Duty factor is measured at 1/2 V_{DD}

I/O write cycle Cycle

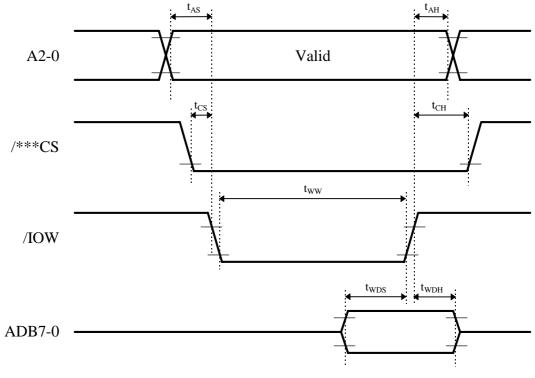







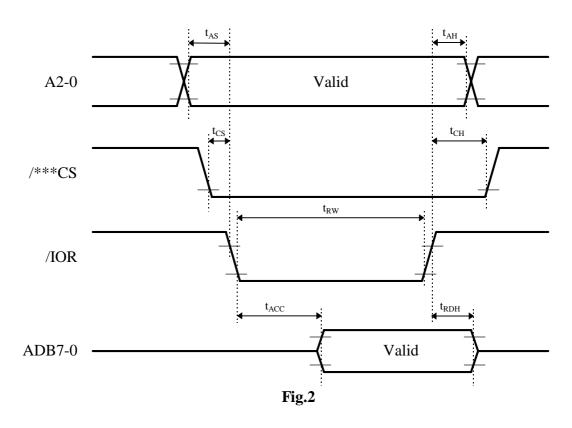

Reset pulse width



Serial audio interface

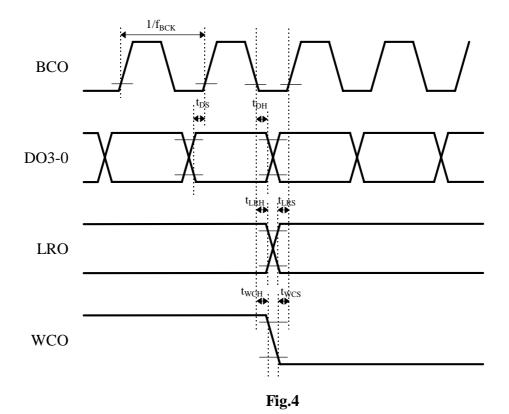

Supplementary Information 1 (about commands)


The following commands are used to check existence and identification of YMF704C/721(OPL4-ML/ML2) by using device driver.

Command	Sub Command	Command Length	Response Length	Function
80h	00h	3byte	11byte	Get Processor Device ID
80h	01h	3byte	5byte	Get Processor Software Version
80h	02h	3byte	6byte	Get Processor Software Capacity
81h	00h	3byte	8byte	Get OPL4-MLx Information
82h	00h	3byte	31byte	Get wave ROM Copyright Data
82h	01h	3byte	5byte	Get wave ROM Version

Command 80h

This command is used mainly to obtain version information of the internal processor. The device driver is able to know capability of the internal processor before it controls the hardware.

Sub Command 00h : Get Processor Device ID

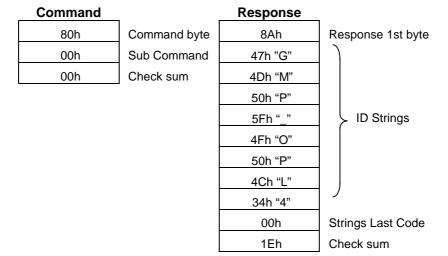

The character string "GMP_OPL4" is read from ID strings. Existence of YMF721 (OPL4-ML2) can be confirmed with this character string.

Sub Command 01h : Get Processor Software Version

Command	-	Response	
80h	Command byte	84h	Response 1st byte
01h	Sub Command	02h	Integer part of version number
7Fh	Check sum	00h	1st decimal place of version number
		00h	2nd decimal place of version number
		7Eh	Check sum

Version number of firmware stored in the internal processor is read out as shown below.

YMF704 (OPL4-ML): Version 1.22

YMF704B(OPL4-ML) : Version 1.23

YMF704C(OPL4-ML) : Version 1.24

YMF721 (OPL4-ML2): Version 2.00

Sub Command 02h : Get Processor Software Capacity

Command		Response	
80h	Command byte	85h	Response 1st byte
02h	Sub Command	00h	No use
7Eh	Check sum	00h	No use
		00h	No use
		07h	Capacity code
		79h	Check sum

The capacity of internal processor can be known through the capacity code.

bit0 = 1: The synthesizer is able to add effects such as reverb or chorus send level 1.

bit1 = 1 : Suspend/Resume is supported.

bit2 = 1:Power down is supported.


YMF704 (OPL4-ML) : Capacity Code=01h YMF704B(OPL4-ML) : Capacity Code=03h YMF704C(OPL4-ML) : Capacity Code=03h YMF721 (OPL4-ML2) : Capacity Code=07h



Command 81h

Sub Command 00h : Get OPL4-MLx Information


Since the synthesizer of YMF721(OPL4-ML2) is the same as YMF295(OPL4-D), the character string of "OPL4D" is obtained as described below.

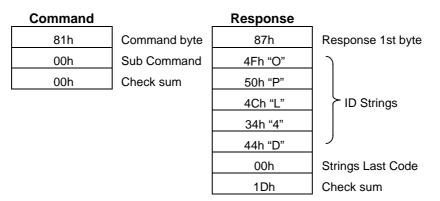

Command 82h

These commands are used to know information about the internal Wavetable sample ROM.

Sub Command 00h : Get Wave ROM Copyright Data

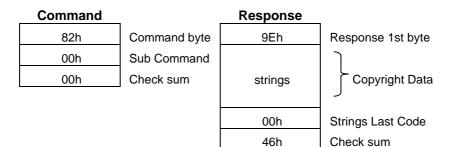

This command is used to know capacity of internal processor. As the strings, character strings of "copyright yamaha corporation" (28bytes) are returned.

Sub Command 01h : Get Wave ROM Version

Command	
82h	Command byte
01h	Sub Command
7Fh	Check sum

Response 84h

01h

00h

03h

7Ch

Response 1st byte
Integer part of version number
First decimal place of version number
Second decimal place of version number
Check sum

This command is used to know version number of internal Wavetable sample ROM.

YMF704C(OPL4-ML) : Version 1.02

YMF721 (OPL4-ML2): Version 1.03

Supplementary Information 2 (MIDI Data Format)

1. General

1-1. Application

The following MIDI information applies to the YMF721(OPL4-ML2).

1-2. Applicable Standards MIDI 1.0 Standard

2. Channel Message

2-1. Send

YMF721(OPL4-ML2) has no transmitting function.

2-2. Receive

2-2-1. Note On/Off

This is a message to inform playing information.

Note On : 9nH kkH vvH Note Off : 9nH kkH 00H or 8nH kkH vvH *n : MIDI Channel No. *kkH : Note No., vvH : Velocity (00 - 7F)

Received note range = $C-2 \sim G8$ (Note On only) Verocity range = $1 \sim 127$

2-2-2. Control Change <BnH> <Control No.> <Data>

a) Bank Select

This is a message to select a bank of the designated receiving channel. However, the channel 10 does not receive bank select since it is fixed to drum kit.

The normal voice is selected when Bank Select MSB is "0", and drum kit when "127".

After Bank Select MSB is received, it is necessary to receive Program Change.

Control No.	Parameter	Data range
0	Bank Select MSB	0 or 127
32	Bank Select LSB	don't care

b) Modulation

This is a message to inform the depth of Vibrato.

Control No.	Parameter	Data range
1	Modulation	0 to 127

c) Data Entry

This is a message to set control parameter data designated by RPN (Registered Parameter Number). Refer i) RPN for the relation between the parameter of RPN and the setting data.

Control No.	Parameter	Data range
6	Data Entry MSB	0 to 127
38	Data Entry LSB	0 to 127

d) Main Volume

This is a message to control the volume of each part (MIDI channel).

Control No.	Parameter	Data range
7	Main Volume	0 to 127

e) Pan

This is a message to control the sound position of each part.

Control No.	Parameter	Data range
10	Panpot	0 to 127
		0 : left, 64 : center, 127 : right

f) Expression

This is a message to control the volume of each part during playing sound.

Control No.	Parameter	Data range
11	Expression	0 to 127

g) Hold

This is a message to control the sustain pedal.

When "Hold ON" is received, sound is kept playing even if "Note OFF" is received.

Control No.	Parameter	Data range
64	Hold	0 to 127
		0 to 63 : OFF, 64 to 127 : ON

h) Sostenuto

This is a message to control the sostenuto pedal.

When "Sostenuto ON" is received during playing sound, sound is kept playing until "OFF" is received.

Control No.	Parameter	Data range
66	Sostenuto	0 to 63, 64 to 127
		0 to 63 : OFF, 64 to 127 : ON

i) RPN

This is a message to set Pitch Bend Sensitivity and Tuning of each part.

After the modified parameter is designated by RPN MSB and RPN LSB, set the parameter value at Data Entry.

Control No.	Parameter	Data range
100	RPN LSB	0 to 127
101	RPN MSB	0 to 127

RPN MSB/I	SB	Data E MSB/L	2	
	00H	mmH		Pitch Bend Sensitivity mmH : 00H -18H (0-24 semitone)
		2 octaves in semitone steps Set to 2 semitones when powered on		
00H	01H	mmH	11H	Master Fine Tuning (-100¢ to 100¢) mmH,llH : 00H,00H - 40H,00H - 7FH,7FH (-8192*100/8192 to 0 +8192*100/8192¢)
00H	02H	mmH		Master Coarse Tuning (-24 - 0 - +24 semitone) mmH : 28H -40H - 58H : don't care

2-2-3. Program Change <CnH> <Program No.>

This is a message to select a tone (voice) used in each part. GM tone (Bank Select MSB 0) or drum kit (Bank Select MSB 127) is received by combination with a Bank Select.

GM tone : 128 tones (Program No. 0 to 127) Drum kit : 9 sets (Program No. 0, 1, 8, 16, 24, 25, 32, 40, 48)

2-2-4. Pitch Bend <EnH> <Data-L> <Data-H>

This is a message to inform Pitch Bend information of each part. Recieving the Pitch Bend message is valid only when GM tone, and invalid when drum kit.

Parameter	Data range
Data LSB	0~127
Data MSB	0~127

The resolution is 14 bits (-8192 to 8191).

2-2-5. Channel After Touch <DnH> <Data>

This is a message to inform a degree of pressure after playing a keyboard.

2-2-6. Channel Mode Touch <BnH> <Control No.> < Data>

a) All Sound Off

When this message is received, all sounds are muted. However, states of channel messages, that are Note ON and Hold ON etc., are kept.

Control No.	Parameter	Data range
120	All Sound Off	0

b) Reset All Controllers

When this message is received, controller etc. of the designated channel are set as shown below:

Control No.	Parameter	Data range
121	ResetAll Controllers	0

c) All Note Off

All Notes, that are ON at the designated channel, become OFF.

However, when Hold and Sostenuto are ON, the sound is not stopped until they become OFF.

Control No.	Parameter	Data range
123	All Note Off	0

3. System Realtime Message
3-1. System Reset <ffh></ffh>
Notes of all channels are damped.
Controllers of all channels become default value.
3-2. System Exclusive Message
3-2-1. GM System Level 1 ON <f0 01="" 09="" 7e="" 7f="" f7=""></f0>
3-2-2. XG System ON <f0 00="" 1n="" 43="" 4c="" 7e="" f7=""></f0>
n : Device No. Don't care.
When this message is received, Notes of all channels are damped.
All setting value become default without MIDI Master Tuning.
3-2-3. MIDI Master Volume <f0 01="" 04="" 7f="" f7="" ss="" tt=""></f0>
When this message is received, all volumes are set.
Data range of ss and tt is 0 to 127 (00H to 7FH). However, the value of tt is only valid, and ss is
ignored.
00H : Minimum volume, 7FH : Maximum volume
3-2-4. MIDI Master Tuning <f0 00="" 1n="" 27="" 30="" 43="" cc="" f7="" xl="" xm=""></f0>
n : Device No. Don't care.
When this message is received, pitch of all channel are changed at the same time.
Data range of xm and xl is 0 to 127 (00H to 7FH). However, 8 bits value (0 to 255), that is composed
of m and l, is valid range.
128 (ml=80H) : Center, ± 1 : up/down by 1¢
This parameter is ignored at drum kit (channel 10 and bank 127).
And, this parameter is not reset by System Reset, GM System Level 1 ON and XG System ON.
3-2-5. Power Down Command <f0 04="" 0e="" 43="" 6d="" 79="" 7f=""></f0>
3-2-6. Internal Micro-Processor Reset Command <f0 04="" 0f="" 43="" 6b="" 79="" 7f=""></f0>

Supplementary Information 3 (MIDI Implementation Chart)

	nction	Recognized	Remarks
Basic	Default	1-16	
Channel	Changed	×	
Mode	Default	3	(Omni off Poly,)
	Messages	3	Modes other than 3 are acceptable.
	Altered	3	
Note		0-127	
Number	True Voice	0-127	
Velocity	Note ON		
	Note OFF	×	
After	Key's	×	
Touch	Channel's		
Pitc	h Bend		
Control	0		Bank Select MSB
Change	1		Modulation
	6,38		Data Entry MSB/LSB
	7		Main Volume
	10		Panpot
	11		Expression
	64		Hold
	66		Sostenuto
	100,101		RPN MSB/LSB
Program		0-127	
Change	True No.	0-127	GM128Voice
			Drum Set (0,1,8,16,24,25,32,40,48)
System Exclu	usive		GM System Level 1 ON
			XG System ON
			Master Volume
			Master Tuning
			Power Down Command
			Internal Micro-Processor Reset Command
Common	Song Position	×	
	Song Select	×	
	Tune	×	
System	Clock	×	
Real-time	Commands		System Reset (FFH)
AUX	Local On/Off	×	
Messages	All Sound Off		All Sound Off (Control No. 120)
	All Notes Off		All Notes Off (Control No. 123)
	Active Sense	×	
	Reset		Reset All Controller (Control No. 121)

Note : YMF721(OPL4-ML2) has no Transmitting function.

Supplementary Information 4 (Melody Voice List)

Group	Voice No.	Voice	Pitch	Key Range	Scale
PIANO	voice(00)	Acoustic Grand Piano	A3	G#-1 ~ C#7	Temperament
	voice(01)	Bright Acoustic Piano	A3		
	voice(02)	Electric Grand Piano	A3		
	voice(03)	Honky-tonk Piano	A3		
	voice(04)	Electric Piano1	A3	A-1 ~ C7	
	voice(05)	Electric Piano2	A3	G#-1 ~ C#7	
	voice(06)	Harpsichord	A3	A-1 ~ C7	
	voice(07)	Clavi.	A3		
Chromatic	voice(08)	Celesta	A3		
	voice(09)	Glockenspiel	A3	A-1 ~ C8	
	voice(10)	Music Box	A3	A-1 ~ C7	
	voice(11)	Vibraphone	A3		
	voice(12)	Marimba	A3	A-1 ~ G8	
	voice(13)	Xylophone	A3	C-2 ~ G8	
	voice(14)	Tubular Bells	A3	C#-2 ~ G8	
	voice(15)	Dulcimer	A3	C-2 ~ G8	
Organ	voice(16)	Drawbar Organ	A3	C#-2 ~ G8	
	voice(17)	Percussive Organ	A3	A-1 ~ C7	
	voice(18)	Rock Organ	A3		
	voice(19)	Church Organ	A3		
	voice(20)	Reed Organ	A3		
	voice(21)	Accordion	A3		
	voice(22)	Harmonica	A3		
	voice(23)	Tango Accordion	A3	C-2 ~ C7	
Guitar	voice(24)	Nylon Guitar	A3	A-1 ~ C6	
	voice(25)	Steel Guitar	A3	A-1 ~ C7	
	voice(26)	Jazz Guitar	A3		
	voice(27)	Clean Guitar	A3		
	voice(28)	Muted Guitar	A3	C#-2 ~ G8	
	voice(29)	Overdriven Guitar	A3	C-2 ~ G8	
	voice(30)	Distortion Guitar	A3	A-1 ~ C7	
	voice(31)	Guitar Harmonics	A3		
Bass	voice(32)	Acoustic Bass	A3		
	voice(33)	Finger Bass	A3	C#-2 ~ G8	
	voice(34)	Pick Bass	A3	A-1 ~ C7	
	voice(35)	Fret-less Bass	A3	C#-2 ~ G8	
	voice(36)	Slap Bass1	A3	A-1 ~ C7	
	voice(37)	Slap Bass2	A3	C#-2 ~ G8	
	voice(38)	Synth Bass1	A3	A-1 ~ C7	
	voice(39)	Synth Bass2	A3	C-2 ~ G8	





Group	Voice No.	Voice	Pitch	Key Range	Scale
	voice(40)	Violin	A3	A-1 ~ C7	Temperament
	voice(41)	Viola	A3		
	voice(42)	Cello	A3		
	voice(43)	Contrabass	A3		
	voice(44)	Tremolo Strings	A3		
	voice(45)	Pizzicato Strings	A3		
	voice(46)	Harp	A3		
	voice(47)	Timpani	A3		
Ensemble	voice(48)	String Ensemble1	A3		
	voice(49)	String Ensemble2	A3		
	voice(50)	Synth Strings1	A3	F-2 ~ C7	
	voice(51)	Synth Strings2	A3	A-1 ~ C7	
	voice(52)	Aahs Choir	A3		
	voice(53)	Oohs Choir	A3		
	voice(54)	Synth Choir	A3		
	voice(55)	Orchestra Hit	A3		
Brass	voice(56)	Trumpet	A3		
	voice(57)	Trombone	A3		
	voice(58)	Tuba	A3		
	voice(59)	Muted Trumpet	A3		
	voice(60)	French Horn	A3		
	voice(61)	Brass Section	A3		
	voice(62)	Synth Brass1	A3	C#-2 ~ G8	
	voice(63)	Synth Brass2	A3		
Reed	voice(64)	Soprano Sax	A3	A-1 ~ C7	
nood	voice(65)	Alto Sax	A3		
	voice(66)	Tenor Sax	A3	C1 ~ C7	
	voice(67)	Baritone Sax	A3	A-1 ~ C7	
	voice(68)	Oboe	A3		
	voice(69)	English Horn	A3		
	voice(70)	Bassoon	A3		
	voice(70)	Clarinet	A3		
Pipe	voice(71)	Piccolo	A3		
Tipe	voice(72)	Flute	A3		
	voice(73)	Recorder	A3	A-1 ~ D#7	
		Pan Flute			
	voice(75)		A3	A-1 ~ C7	
	voice(76)	Blown Bottle	A3		
	voice(77)	Shakuhachi	A3		
	voice(78)	Whistle	A3	C-2 ~ G8	
	voice(79)	Ocarina	A3	C# 2 C2	
Lead	voice(80)	Square Lead	A3	C#-2 ~ G8	
	voice(81)	Sawtooth Lead	A3	A 4 07	
	voice(82)	Calliope Lead	A3	A-1 ~ C7	
	voice(83)	Chiff Lead	A3	C#-2 ~ G8	
	voice(84)	Charang Lead	A3	• • •=	
	voice(85)	Voice Lead	A3	A-1 ~ C7	
	voice(86)	Fifths Lead	A3	C#-2 ~ G8	
	voice(87)	Bass & Lead	A3		

Group	Voice No.	Voice	Pitch	Key Range	Scale
	voice(88)	New-Age Pad	A3	A-1 ~ C7	Temperament
	voice(89)	Warm Pad	A3		
	voice(90)	Polysynth Pad	A3	C#-2 ~ G8	
	voice(91)	Choir Pad	A3	A-1 ~ C7	
	voice(92)	Bowed Pad	A3		
	voice(93)	Metallic Pad	A3		
	voice(94)	Halo Pad	A3		
	voice(95)	Sweep Pad	A3	C#-2 ~ G8	
Synth Effects	voice(96)	FX1 (Rain)	A3		
	voice(97)	FX2 (Soundtrack)	A3	A-1 ~ C7	
	voice(98)	FX3 (Crystal)	A3		
	voice(99)	FX4 (Atmosphere)	A3	F-2 ~ C6	
	voice(100)	FX5 (Brightness)	A3	A-1 ~ C7	
	voice(101)	FX6 (Goblins)	A3		
	voice(102)	FX7 (Echoes)	A3		
	voice(103)	FX8 (Sci-Fi)	A3		
Ethnic	voice(104)	Sitar	A3	C-2 ~ G8	
	voice(105)	Banjo	A3	A-1 ~ C#7	
	voice(106)	Shamisen	A3	A-1 ~ C7	
	voice(107)	Koto	A3	C-2 ~ G8	
	voice(108)	Kalimba	A3		
	voice(109)	Bagpipe	A3	A-1 ~ C7	
	voice(110)	Fiddle	A3		
	voice(111)	Shanai	A3		
Percussive	voice(112)	Tinkle Bell	A3	A-1 ~ G7	
	voice(113)	Agogo	A3	A-1 ~ G#7	
	voice(114)	Steel Drums	A3	A-1 ~ C7	
	voice(115)	Wood Block	F#3		50 ¢/note
	voice(116)	Taiko Drum	A1	G-1 ~ C7	50 ¢/note
	voice(117)	Melodic Tom	C#3	A-1 ~ C7	50 ¢/note
	voice(118)	Synth Drum	**		50 ¢/note
	voice(119)	Reverse Cymbal	**		50 ¢/note
Sound Effects	voice(120)	Guitar Fret Noise	A3		Temperament
	voice(121)	Breath Noise	A3	C#-2 ~ G8	
	voice(122)	Seashore	**	A-1 ~ C7	20 ¢/note
	voice(123)	Bird Tweet	**		5¢/note
	voice(124)	Telephone Ring	**		10 ¢/note
	voice(125)	Helicopter	**	C-1 ~ G8	10 ¢/note
	voice(126)	Applause	**	A-1 ~ C7	5¢/note
	voice(127)	Gunshot	**		20 ¢/note




Supplementary Information 5 (Drum Set List)

F	Program	#	1	9	17	25	26	33	41	49
24	C 0		Seq Click H							
25	C#0	0	Brush Tap							
26	D0	0	Brush Swirl L							
27	D#0		Brush Slap							
28	E0	0	Brush Swirl H			Reverse Cymbal	Reverse Cymbal			
29	F0	0	Snare Roll							
30	F#0		Castanet			Hi Q	Hi Q			
31	G0		Snare L	SD Room L	SD Power M	Snare M	SD Power H		Brush Slap L	Concert SD
32	G#0		Sticks							
33	A0		Bass Drum L	BD Room L	Bass Drum M	Bass Drum H	Bass Drum M			Gran Casa
34	A#0		Open Rim Shot							
35	B0		Bass Drum M	BD Room M	Bass Drum H	BD Power	BD Analog L			Gran Casa
36	C1		Bass Drum H	BD Room H	BD Power	BD Gate	BD Analog H			Gran Casa
37	C#1		Side Stick				Analog Side Stick			
38	D1		Snare M	SD Room M	SD Rock	SD Power L	Analog Snare L		Brush Slap	Concert SD
39	D#1		Hand Clap							
40	E1	l	Snare H	SD Room H	SD Power Rim	SD Power H	Analog Snare H		Brush Tap	Concert SD
41	F1		Floor Tom L	Room Tom 1	Power Tom 1	E Tom 1	Analog Tom 1	Jazz Tom 1	Brush Tom 1	Jazz Tom 1
42	F#1	1	Hi-Hat Closed				Analog HH Closed 1			
43	G1	1	Floor Tom H	Room Tom 2	Power Tom 2	E Tom 2	Analog Tom 2	Jazz Tom 2	Brush Tom 2	Jazz Tom 2
44	G#1	İ	Hi-Hat Pedal				Analog HH Closed 2			
45	A1	1	Low Tom	Room Tom 3	Power Tom 3	E Tom 3	Analog Tom 3	Jazz Tom 3	Brush Tom 3	Jazz Tom 3
46	A#1	İ	Hi-Hat Open				Analog HH Open			
47	B1	İ	Mid Tom L	Room Tom 4	Power Tom 4	E Tom 4	Analog Tom 4	Jazz Tom 4	Brush Tom 4	Jazz Tom 4
48	C2		Mid Tom H	Room Tom 5		E Tom 5	Analog Tom 5	Jazz Tom 5	Brush Tom 5	Jazz Tom 5
49	C#2		Crash Cymbal 1							Hand Cym.Open L
50	D2		High Tom	Room Tom 6	Power Tom 6	E Tom 6	Analog Tom 6	Jazz Tom 6	Brush Tom 6	Jazz Tom 6
51	D#2		Ride Cymbal 1							Hand Cym.Closed I
52	E2		Chinese Cymbal							
53	F2		Ride Cymbal Cup							
54	F#2		Tambourine			-				
55	G2		Splash Cymbal							
56	G#2		Cowbell							
57	A2		Crash Cymbal 2			-				Hand Cym.Open H
58	A#2		Vibraslap							nand Cym.Open n
59	B2		Ride Cymbal 2					Jazz Ride		Hand Cym.Closed
60	C3		Bongo H			-		Juzz Hide		Thand Oym.oloocd
61	C#3		Bongo L							
62	D3		Conga H Mute							
63	D#3		Conga H Open							
64	E3		Conga L							
65	E3 F3		Timbale H							
66	F#3		Timbale L							
67	F#3 G3		Agogo H							
68	G3 G#3		Agogo L							
69	G#3 A3									
69 70	A3 A#3	<u> </u>	Cabasa Maracas							
70	A#3 B3	0	Maracas Samba Whistle H							
71	В3 С4	0	Samba Whistle L							
	C4 C#4	0	Guiro Short							
73	C#4 D4	<u> </u>								
74			Guiro Long							
75	D#4		Claves							
76	E4		Wood Block H							
77	F4		Wood Block L			Quartely D. J.	Quantaly D.			
78	F#4		Cuica Mute			Scratch Push	Scratch Push			
79	G4		Cuica Open			Scratch Pull	Scratch Pull			
80	G#4		Triangle Mute							
81	A4	<u> </u>	Triangle Open							
82	A#4	<u> </u>	Shaker							
83	B4		Jingle Bell							
84	C5	1	Bell Tree							

: Same as Standard kit

EXTERNAL DIMENSIONS OF PACKAGE

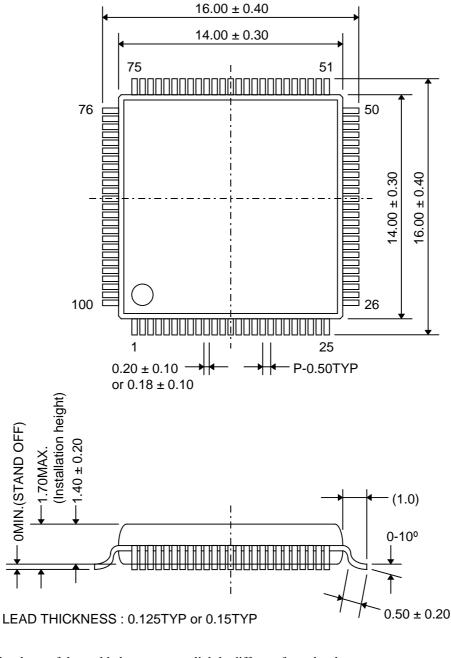

The shape of the molded corner may slightly different from the shape in this diagram. The figure in the parenthesis () should be used as a reference. Plastic body dimensions do not include burr of resin. UNIT : mm

Note : The LSIs for surface mount need especial consideration on storage and soldering conditions. For detailed information, please contact your nearest agent of Yamaha.

IMPORTANT NOTICE

1. Yamaha reserves the right to make changes to its Products and to this document without notice. The information contained in this document has been carefully checked and is believed to be reliable. However, Yamaha assumes no responsibilities for inaccuracies and makes no commitment to update or to keep current the information contained in this document.

2. These Yamaha Products are designed only for commercial and normal industrial applications, and are not suitable for other uses, such as medical life support equipment, nuclear facilities, critical care equipment or any other application the failure of which could lead to death, personal injury or environmental or property damage. Use of the Products in any such application is at the customer's sole risk and expense.

3. YAMAHA ASSUMES NO LIABILITY FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES OR INJURY THAT MAY RESULT FROM MISAPPLICATION OR IMPROPER USE OR OPERATION OF THE PRODUCTS.

4. YAMAHA MAKES NO WARRANTY OR REPRESENTATION THAT THE PRODUCTS ARE SUBJECT TO INTELLECTUAL PROPERTY LICENSE FROM YAMAHA OR ANYTHIRD PARTY, AND YAMAHA MAKES NO WARRANTY OR REPRESENTATION OF NON-INFRINGEMENT WITH RESPECT TO THE PRODUCTS. YAMAHA SPECIFICALLY EXCLUDES ANY LIABILITY TO THE CUSTOMER OR ANY THIRD PARTY ARISING FROM OR RELATED TO THE PRODUCTS' INFRINGEMENT OF ANY THIRD PARTY'S INTELLECTUAL PROPERTY RIGHTS, INCLUDING THE PATENT, COPYRIGHT, TRADEMARK OR TRADE SECRET RIGHTS OF ANY THIRD PARTY.

5. EXAMPLES OF USE DESCRIBED HEREIN ARE MERELY TO INDICATE THE CHARACTERISTICS AND PERFORMANCE OF YAMAHA PRODUCTS. YAMAHA ASSUMES NO RESPONSIBILITY FOR ANY INTELLECTUAL PROPERTY CLAIMS OR OTHER PROBLEMS THAT MAY RESULT FROM APPLICATIONS BASED ON THE EXAMPLES DESCRIBED HEREIN. YAMAHA MAKES NO WARRANTY WITH RESPECT TO THE PRODUCTS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR USE AND TITLE.

Note) The specifications of this product are subject to improvement change without prior notice.

– YAMAHA CORPORATION –

Address inquires to :	
Semi-conductor Sales	Department
Head Office	203, MatsunokiJima, Toyooka-mura.
	Iwata-gun, Shizuoka-ken, 438-01
	Tel. 0539-62-4918 Fax. 0539-62-5054
Tokyo Office	2-17-11, Takanawa, Minato-ku, Tokyo, 108
	Tel. 03-5488-5431 Fax. 03-5488-5088
Osaka Office	3-12-9, Minami Senba, Chuo-ku, Osaka City,
	Osaka, 542 Shinsaibashi Plaza Bldg. 4F
	Tel. 06-252-7980 Fax. 06-252-5615
U.S.A. Office	YAMAHA System Technology.
	100 Century Center Court, San Jose, CA 95112
	Tel. 408-467-2300 Fax. 408-437-8791