

000000

.REPT 0

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50

IDENTIFICATION

PRODUCT CODE: AC-8520C-MC
PRODUCT NAME: CZDLBCO DL11-E ON LINE TEST
PRODUCT DATE: JULY 1979
MAINTAINER: DIAGNOSTIC ENGINEERING
AUTHOR: ROBERT WHITTON

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY APPEAR IN THIS MANUAL.

THE SOFTWARE DESCRIBED IN THIS DOCUMENT IS FURNISHED UNDER A LICENSE AND MAY ONLY BE USED OR COPIED IN ACCORDANCE WITH THE TERMS OF SUCH LICENSE.

DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR THE USE OR RELIABILITY OF ITS SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL.

COPYRIGHT (C) 1972,1979 BY DIGITAL EQUIPMENT CORPORATION

51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93

1. ABSTRACT

TWO SEPARATE DIAGNOSTIC PROGRAMS ARE PROVIDED FOR THE DL11-E (ASYNCHRONOUS LINE INTERFACE), CZDLA (DL11-E OFF LINE TESTS) AND CZDLB (DL11-E ON LINE TESTS). THE OFF LINE TESTS TEST ALL DL11-E LOGIC AND MAY BE USED TO INDIVIDUALLY TEST UP TO 31 DL11-E'S. THE OFF LINE TESTS DO NOT REQUIRE THE USE OF A MODEM, HOWEVER A SPECIAL JUMPER CONNECTOR IS REQUIRED. THE ON LINE TESTS ARE ESSENTIALLY DATA RELIABILITY TESTS REQUIRING THE USE OF MODEMS AND A SUITABLE TERMINAL DEVICE.

THREE STARTING ADDRESSES ARE PROVIDED. THEY ARE:

- 200 - NORMAL START
- 210 - REMAP DEVICES PRESENT AND RESTART
- 220 - MODIFY DEVICE ADDRESSES IF NON STANDARD INSTRUCTIONS TO DO THIS ARE TYPED OUT.

THIS DOCUMENT DESCRIBES THE ON LINE TESTS.

THE AVAILABLE TESTS ARE:

- PRG0 SINGLE CHARACTER LINE MODE DATA TEST
- PRG1 BINARY COUNT LINE MODE DATA TEST
- PRG2 MESSAGE TRANSMIT ONLY W/W/O PARITY
- PRG3 RECEIVE DATA TEST
- PRG4 MESSAGE TRANSMIT (SPIRAL) ONLY W/W/O PARITY.

2. REQUIREMENTS

2.1 EQUIPMENT

- A. PDP 11 SYSTEM
- B. DL11-E(S)
- C. SUITABLE TERMINAL DEVICE (ASR 33, 37, DATA POINT, ETC)
- D. MODEM TYPE 103 OR 202 OR EQUIVALENT

2.2 STORAGE

THIS PROGRAM USES 8K OF MEMORY

94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122

3. OPERATING PROCEDURE:

3.1 LOADING PROCEDURE

THE ABSOLUTE LOADER IS USED TO LOAD THE PROGRAM.

3.2 DL11-E PARAMETER SELECTION

THE SELECTABLE DL11-E PARAMETERS ARE:

BIT1-0		CHARACTER LENGTH
BIT1	BIT0	CHAR. LENGTH
0	0	8
0	1	7
1	0	6
1	1	5

WHEN A TERMINAL IS INVOLVED DL11-E PARAMETERS SHOULD BE SET ACCORDING TO TERMINAL SPECIFICATIONS.

3.3 PDP-11 STANDARD OPERATING PARAMETERS


SW15	1	HALT ON ERROR
SW14	1	SCOPE LOOP (NOT USED)
SW13	1	INHIBIT ERROR PRINTOUT
SW12	1	INHIBIT TRACE TRAP (NOT USED)
SW11	1	INHIBIT ITERATION (NOT USED)

123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178

3.4 GENERAL

THERE ARE THREE CONFIGURATIONS USING DL11-E/MODEM PAIRS WHICH MAY BE SELECTED BY PRG0 AND PRG1. THESE CONFIGURATIONS ARE SELECTED BY THE USER WHEN REQUESTED BY THE PROGRAM DURING THE LINE CONNECTION ROUTINE. THE FOLLOWING PROCEDURES SHOULD BE FOLLOWED TO SELECT ANY OF THE THREE SELECTABLE CONFIGURATIONS:

CONFIGURATION 0: THIS CONFIGURATION TRANSMITS DATA FROM THE DL11-E CONNECTED TO THE LINE THAT WAS CALLED TO THE MODEM THAT CALLED (THE CALLER). THIS CONFIGURATION MAY BE USED TO TRANSMIT DATA TO A TERMINAL DEVICE. NOTE NO DATA CHECKING IS PERFORMED BY THE PROGRAM, HOWEVER, DATA MAY BE VISUALLY CHECKED AT THE TERMINAL DEVICE. TO INITIATE PROGRAM ACTION CALL THE MODEM CONNECTED TO A DL11-E FROM A MODEM CONNECTED TO THE TERMINAL DEVICE. WHEN THE PHONE RINGS AT THE PDP11 THE PROGRAM WILL REQUEST THE CONFIGURATION. SET BITS0-1=00 BY TYPING IN OCTAL FOLLOWED BY A CR. WHEN THE 'HANDSHAKING' IS COMPLETED THE PROGRAM WILL REQUEST DL11-E PARAMETERS. TYPE THE PARAMETERS AS REQUESTED. THE PROGRAM WILL TYPE 'LINE CONNECTION MADE' AND BEGIN DATA TRANSMISSION.

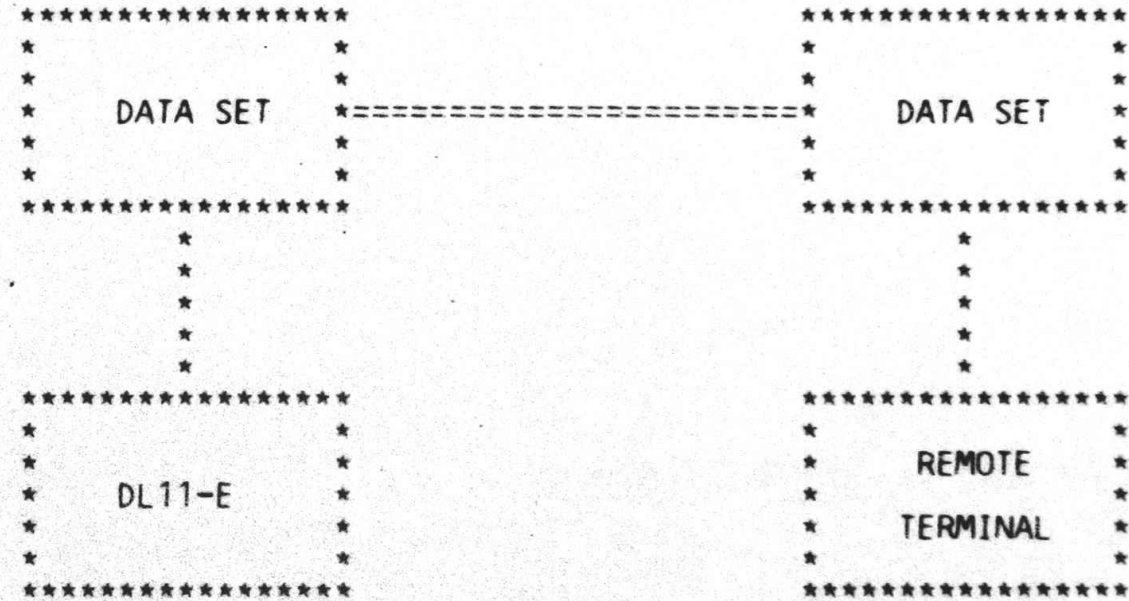


CONFIGURATION 0

CONFIGURATION 1: THIS CONFIGURATION TRANSMITS DATA FROM THE DL11-E CONNECTED TO THE LINE THAT WAS CALLED TO THE DL11-E CONNECTED TO THE LINE THAT CALLED (THE CALLER). TO INITIATE PROGRAM ACTION CALL THE DL11-E YOU WISH TO TRANSMIT ON FROM THE LINE CONNECTED TO THE DL11-E YOU WISH TO RECEIVE THE DATA ON. WHEN THE PHONE RINGS AT THE PDP11 THE PROGRAM WILL REQUEST THE CONFIGURATION AND MODEM TYPE. TYPE BIT0-1=01 & BIT2=0 IF A 103 (OR EQUIV.) AND BIT2=1 IF A 202 (OR EQUIV.). THE PROGRAM WILL REQUEST THE LINE NUMBER THAT YOU CALLED FROM. TYPE THIS IN OCTAL FOLLOWED BY A CARRIAGE RETURN. WHEN THE CARRIER

179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216

IS HEARD IN THE HEADSET PRESS THE DATA BUTTON ON THE DATA SET.
YOU HAVE APPROXIMATELY 10 SECONDS IN WHICH TO DO THIS. WHEN
THE 'HANDSHAKING' IS COMPLETED THE PROGRAM WILL REQUEST
DL11-E PARAMETERS. TYPE THE PARAMETERS AS REQUESTED.
THE PROGRAM WILL TYPE 'LINE CONNECTION MADE' AND
BEGIN DATA TRANSMISSION. WHEN 100. CHARACTERS HAVE BEEN
PROCESSED (TRANSMITTED/RECEIVED AND CHECKED) THE BELL WILL
RING AT THE TTY, AND ANOTHER 100. CHARACTER BLOCK WILL BE
PROCESSED.
NOTE, DL11-E#X REFERS TO THE 'CALLED' DL11-E, AND DL11-E#Y RE-
FERS TO THE CALLING DL11-E.

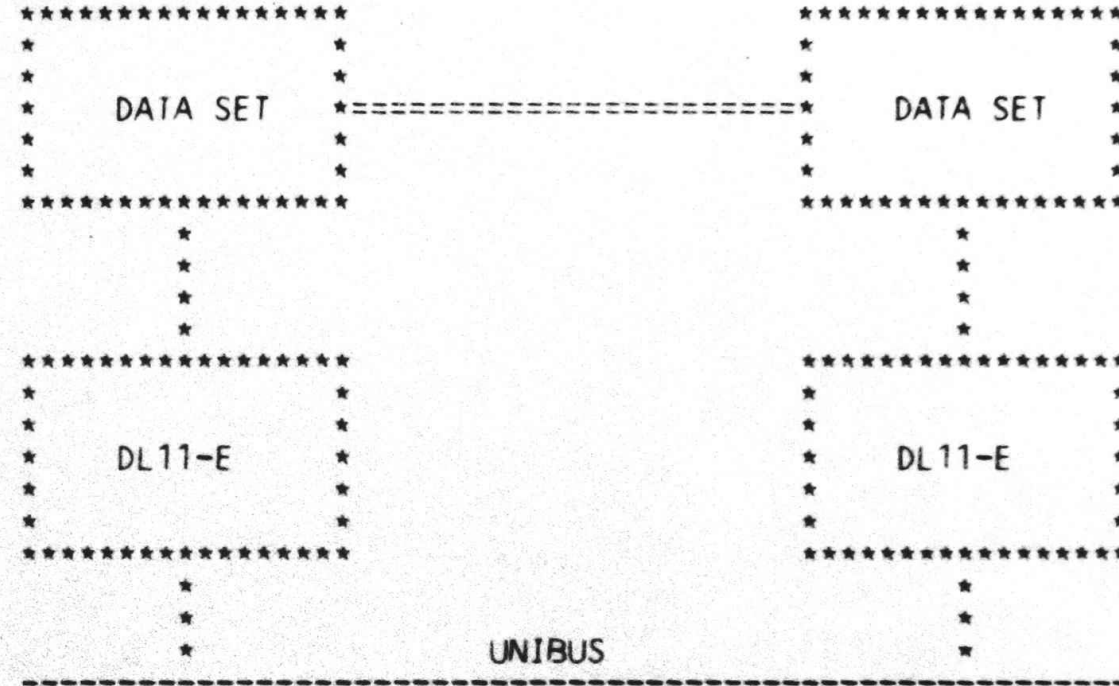

CONFIGURATION 1 103 OR 202
CONFIGURATION 2 103 ONLY

310
311
312
313
314
315

E. WHEN 'MAKE LINE CONNECTION' IS TYPED CALL THE DL11-E
YOU WISH TO TRANSMIT ON FROM THE TERMINAL MODEM.
WHEN THE 'HANDSHAKING' IS COMPLETED THE MESSAGE
'THE QUICK BROWN FOX JUMPED OVER THE LAZY DOGS BACK
0123456789' WILL BE TRANSMITTED. TO TERMINATE, HANG UP.

316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363

4.4 PRG3 - RECEIVE TRANSMIT MESSAGE TEST

- A. LOAD ADDRESS = 000200
- B. START - PROGRAM WILL REQUEST PROGRAM NUMBER
- C. THE PROGRAM WILL IDENTIFY ITSELF AND TYPE INSTRUCTIONS TO SELECT DESIRED OPTIONS.
- D. SET IN OPTIONS AND PRESS CONTINUE.
- E. WHEN 'MAKE LINE CONNECTION' IS TYPED CALL THE DL11-E YOU WISH TO TRANSMIT ON. WHEN THE 'HANDSHAKING' IS COMPLETED THE DL11-E WILL TRANSMIT A CRLF TO THE TERMINAL DEVICE. AT THIS TIME YOU MAY BEGIN TO SEND DATA FROM THE DEVICE TO THE DL11-E WHERE IT WILL BE ECHOED BACK TO THE TERMINAL. TYPE ANY CHARACTER TO SIGNAL START OF MESSAGE. THEN TYPE MESSAGE AND THE SAME CHARACTER TO SIGNAL END OF MESSAGE. CONTROL C WILL CAUSE THE BUFFERS CONTENTS TO BE TRANSMITTED WHEN TYPED.
- F. IF NO ECHO IS DESIRED (ON A CHARACTER BASIS FOR EXAMPLE WHEN USING A TERMINAL THAT PRODUCES ITS OWN LOCAL COPY) SET BIT7 OF SWITCH REGISTER.

4.5 PRG4 - SPECIAL MESSAGE XMIT ONLY

- A. LOAD ADDRESS = 000200
- B. OPTIONS
 - 1. BITS 0-2 = 4
 - 2. BITS 3-6 = LINE NUMBER (SEE SECT 3.5)
- C. DEPRESS START - THE PROGRAM WILL IDENTIFY ITSELF AND TYPE INSTRUCTIONS TO SELECT DESIRED DL11-E PARAMETERS (SEE SECT 3.2)
- D. SET IN PARAMETERS IF IT IS DESIRED TO TRANSMIT DATA WITH PARITY RAISE SR6. ALSO RAISE SR5 TO TRANSMIT ODD PARITY AND LOWER TO TRANSMIT EVEN PARITY.

BIT6	1/0	ENABLE/DISABLE PARITY
BIT5	1/0	TRANSMIT ODD/EVEN PARITY
- E. WHEN 'MAKE LINE CONNECTION' IS TYPED CALL THE DL11-E YOU WISH TO TRANSMIT ON FROM THE TERMINAL MODEM. WHEN THE 'HANDSHAKING' IS COMPLETED A SPIRAL PATTERN WILL BE TRANSMITTED. TO TERMINATE, HANG UP.

364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396

- 5. PROGRAM DESCRIPTIONS
- 5.1 PRG0 - SINGLE CHARACTER LINE MODE DATA TEST
PRG0 TRANSMITS USER SPECIFIED DATA AND A CARRIAGE RETURN/LINE FEED EVERY 72ND CHARACTER.
- 5.2 PRG1 - BINARY COUNT PATTERN LINE MODE DATA TEST
PRG1 TRANSMITS A BINARY COUNT PATTERN. THIS PROGRAM IS THE SAME AS PRG0 EXCEPT FOR THE DATA TRANSMITTED.
- 5.3 PRG2 - SPECIAL MESSAGE TRANSMIT ONLY
PRG2 TRANSMITS THE MESSAGE
THE QUICK BROWN FOX JUMPED OVER THE LAZY DOGS BACK 0123456789.
NO DATA ERROR CHECKING IS PERFORMED BY THE PROGRAM.
- 5.4 PRG3 - RECEIVE/TRANSMIT MESSAGE TEST
PRG3 - RECEIVES DATA FROM A TERMINAL AND READS THE RECEIVED MESSAGE BACK, AND TYPES THE MESSAGE ON THE PDP-11 TTY WHEN THE MESSAGE IS TERMINATED. CHARACTERS MAY BE ECHOED BACK (IF REQUIRED) ON A CHARACTER BASIS THEREBY CREATING LOCAL COPY AS THE MESSAGE IS TYPED.
TRANSMISSION MAY BEGIN AT THE TERMINAL WHEN A CR/LF IS RECEIVED AT THE TERMINAL. THIS PROGRAM IS RESTRICTED TO USE BY ONLY FULL DUPLEX MODEMS.
- 5.5 PRG4 - SPECIAL MESSAGE TRANSMIT ONLY
PRG4 TRANSMITS A SPIRAL PATTERN.
NO DATA CHECKING IS PERFORMED BY THE PROGRAM.

397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452

6.0

ERRORS

THERE ARE TWO TYPES OF ERRORS WHICH ARE DETECTED BY THESE TESTS
LINE FAILURE, AND DATA ERRORS.

LINE FAILURES ARE DETECTED AND REPORTED BY ALL TESTS, AND
DATA ERRORS ARE DETECTED ONLY IN PRG 0 & 1 WHEN USING CONFIG-
URATIONS 1 OR 2. DATA ERRORS IN THE OTHER TESTS MAY BE DETECT-
ED BY VISUAL INSPECTION OF THE DATA AT THE TERMINAL.

LINE FAILURES ARE REPORTED BY TYPING THE PC, THE RECEIVER CON-
TROL STATUS REGISTER ADDRESS, AND ITS CONTENTS. SEE THE PRO-
GRAM LISTING FOR A DETAILED DESCRIPTION OF THE ERROR.

THE MOST FREQUENTLY ENCOUNTERED ERROR WILL PROBABLY BE THE
LOSS OF CARRIER. THIS ERROR WILL BE REPORTED IF AFTER A LINE
CONNECTION IS MADE THE CARRIER IS LOST, EITHER BY 'HANGING UP'
OR A 'GLITCH' ON THE LINE CAUSING THE CARRIER TO MOMENTARILY
DROP. IN EITHER INSTANCE THE PROGRAM DISCONNECTS THE DL11-E
FROM THE MODEM (BY CLEARING DATA TERMINAL READY) AND THE
LINE WILL HAVE TO BE RECONNECTED TO RESUME TESTING.

IF IT IS PHYSICALLY IMPOSSIBLE TO GET TO THE DATA BUTTON
WITHIN THE TIME ALLOTTED (APPROX. 10 SECONDS) TO MAKE THE
LINE CONNECTION, THIS TIME MAY BE INCREASED BY PUTTING A
LARGER NUMBER INTO THE DELAY. PATCH THE LARGER NUMBER
INTO THE ADDRESS FOLLOWING THE DELAY EMT (BETWEEN RINTBG AND
RINTBH). FOR EXAMPLE PATCHING IN 72460 WILL ALLOW APPROXIMATELY
30 SECONDS IN WHICH TO RESPOND.

DATA ERRORS ARE REPORTED BY TYPING THE PC, THE RECEIVER CONTROL
REGISTER ADDRESS OF THE LINE THAT FAILED, WHAT THE DATA SHOULD
HAVE BEEN, WHAT THE DATA WAS, AND THE CHARACTER NUMBER.

PC=XXXXXX 174010 DATA S/B 301 WAS 321 CHAR NO 23

THIS TYPEOUT INDICATES A DATA ERROR ON LINE 1

IF CONFIGURATION 2 IS SELECTED TWO ERROR TYPEOUTS MAY OCCUR
FOR A SINGLE ERROR DEPENDING ON WHERE THE ERROR OCCURED. CON-
FIGURATION 2 COMPARES THE DATA RECEIVED AT THE CALLED DL11-E
WITH THE DATA TRANSMITTED BY THE CALLED DL11-E, AND ALSO THE DATA
RECEIVED AT THE CALLING DL11-E (CALLER) WITH THE DATA TRANSMITTED
BY THE CALLED DL11-E.

IF FOR EXAMPLE A DATA ERROR OCCURED AT THE RECEIVER OF THE CALLING
DL11-E CAUSING IT TO TRANSMIT INCORRECT DATA TO THE CALLED DL11-E TWO
TYPEOUTS WILL OCCUR AS SHOWN BELOW:

PC=XXXXXX 174010 DATA S/B 301 WAS 321 CHAR NO 23

PC=XXXXXX 174000 DATA S/B 301 WAS 321 CHAR NO 23

THESE TYPEOUTS SHOW THAT THE RECEIVER ON LINE 0 WAS THE CAUSE
OF THE ERROR AND THE RECEIVER ON LINE 1 RECEIVED THE CORRECT
INCORRECT DATA.

***** ECO HISTORY *****

- CHGC1 - NEW STORAGE LOCATIONS FOR REFERENCE IN ^G MODE
- CHGC2 - CHANGE START UP FOR ENTERING SOFTWARE SWITCH REGISTER INFO.
- CHGC3 - SOFTWARE STORAGE LOCATIONS
- CHGC4 - ROUTINE TO CHECK PRINTOUT, UPDATE SOFTWARE SWITCH REG.

453
454
455
456

CHGC5 - NEW MESSAGES FOR SOFTWARE SWITCH REG ROUTINES.
CHGC6 - PART OF CHGC2. NECESSARY TO DIVIDE INTO TWO PARTS

.ENDR

457
 458
 459
 460
 461
 462
 463
 464
 465
 466
 467
 468
 469
 470
 471
 472
 473
 474
 475
 476
 477
 478
 479
 480
 481
 482
 483
 484
 485
 486
 487
 488
 489
 490
 491
 492
 493
 494
 495
 496
 497
 498
 499
 500
 501
 502
 503
 504
 505
 506
 507
 508
 509
 510
 511
 512

000000
 000000 004576
 000002 000000
 000004 004576
 000006 000040
 000010 004576
 000012 000100
 000014 004576
 000016 000140
 000020 004704
 000022 000340
 000024 002724
 000026 000340
 000030 002300
 000032 000340
 000034 004576
 000036 000340
 000040 000042
 000042 000000
 000167
 177776
 001200
 000000
 100000
 100000
 040000
 020000

```

.TITLE CZDLBCO DL11-E ON LINE TSET
.ENABLE ABS,AMA
;THIS TEST CHECKS THE DL11-E USING MODEMS
;REFER ALSO TO TEST DZDLA (DL11-E OFF LINE TESTS)
;STARTING PROCEEDURE
LOAD ADDRESS 200
:
:
:   STACK POINTER IS AT 1200
:   PRESS START
:
:AVAILABLE PROGRAMS
:   PRG0- SINGLE CHARACTER LINE MODE DATA TEST.
:   PRG1- SPECIAL BINARY COUNT LINE MODE DATA TEST.
:   PRG2- SPECIAL MESSAGE XMIT ONLY W/W/O PARITY
:   PRG3- RECEIVE DATA TEST
:   PRG4- SPIRAL PATTERN MESSAGE XMIT ONLY W/W/O PARITY
:   PRG5- DATA ECHO TEST (USES FACILITY AT MAYNARD)
:
:STANDARD SR SWITCH OPTIONS (SWITCH SET TO A 1 )
:SR15- HALT ON ERROR.
:SR14- SCOPE (NOT USED)
:SR13- INHIBIT PRINTOUT
:SR12- INHIBIT TRACE (NOT USED)
:SR11- INHIBIT ITERATION (NOT USED)
.=0
ERTP                               ;UNASSIGNED TRAP
0
MACHER: ERTP                       ;SP OVERFLOW, BUS ERROR TRAP
40
ERTP                               ;RESERVED INSTRUCTION TRAP
100
ERTP                               ;TRACE TRAP
140
MAPVEC                             ;TRAP TO MAP VECTOR
PRTY7
PFAIL                              ;POWER FAIL TRAP
PRTY7
EMTINT                             ;EMT TRAP
PRTY7
ERTP
340
.+2
HALT
.REPT 119.
.+2
4
:TRAP TO MAP MAKER
.ENDR

;EQUATE STATEMENTS
PSW=177776
STKPTR=1200
OPEN=0
MANUAL=BIT15
BIT15=100000
BIT14=40000
BIT13=20000

```

513	010000	BIT12=10000
514	004000	BIT11=4000
515	002000	BIT10=2000
516	001000	BIT9=1000
517	000400	BIT8=400
518	000200	BIT7=200
519	000100	BIT6=100
520	000040	BIT5=40
521	000020	BIT4=20
522	000010	BIT3=10
523	000004	BIT2=4
524	000002	BIT1=2
525	000001	BIT0=1
526	005726	POPSP=5726
527	022626	POPSP2=022626
528	000340	PRTY7=340
529	000300	PRTY6=300
530	000240	PRTY5=240
531	000200	PRTY4=200
532	000140	PRTY3=140
533	000100	PRTY2=100
534	000040	PRTY1=40
535	000000	PRTY0=0
536	104000	TYPE=EMT+0
537	104001	TYPES=EMT+1
538	104002	STALL=EMT+2
539	104003	ERROR=EMT+3
540	104004	DATCHK=EMT+4
541	104005	CHALT=EMT+5
542	104006	STRXV=EMT+6
543	104007	STTXV=EMT+7
544	104010	EHALT=EMT+10
545	104011	SAVREG=EMT+11
546	104012	RSTREG=EMT+12
547	104013	ERROR1=EMT+13
548	104014	ERRTX=EMT+14
549	104015	ERRRX=EMT+15
550	104016	DELAY=EMT+16
551	000000	N=0
552	000000	A=0

;POP THE STACK. SAME AS TST (6)+
;POP STACK TWICE. SAME AS CMP (6)+,(6)+
;PRIORITY LEVEL DEFINITIONS

553				
554		.MACR	CNVGA SRC,DST,COUNT	
555		JSR	%5,0ACNV	;GO TO OCTAL TO ASCII CONVERT.
556		SRC		;SOURCE ADDR.
557		DST		;DESTINATION ADDR.
558		COUNT		;#OF DIGITS TO CONVERT.
559		.ENDM		

560				
561		.MACR	ISR N	
562	RISR'N':	MOV	#'N',%0	
563		JMP	RISR	;GO TO COMMON INTERRUPT SERVICE ROUTINE
564				
565		.ENDM		

566				
567		.MACR	ISRT N	
568	TISR'N':	MOV	#'N',%0	;PUT LINE # IN R0

```
569          JMP      TISR          ;GO TO COMMON INTERRUPT SERVICE
570
571          .ENDM
572
573          .MACR   RRCV      N,A
574          175610+N          ;ADDRESS OF RECEIVER LINE # 'A'
575          .ENDM
576
577          .MACR   RBUFF     N,A
578          175612+N          ;ADDRESS OF RECEIVER BUFFER LINE # 'A'
579          .ENDM
580
581          .MACR   TXMT      N,A
582          175614+N          ;ADDRESS OF TRANSMITTER CSR LINE # 'A'
583          .ENDM
584
585          .MACR   TBUFF     N,A
586          175616+N          ;ADDRESS OF TRANSMIT BUFFER LINE # 'A'
587          .ENDM
588
589
590
591          ;***** CHGC3 *****
592
593
594          .=170
595          000170 177570          SRPTR:          ;SOFT SW REG POINTER
596          000172 177570          DISPREG:         ;DISPLAY POINTER
597          000174 000000          DISPLAY:         ;SOFTWARE DISPLAY REGISTER
598          000176 000000          SWREG:          ;SOFTWARE SWITCH REG
599
600
601          ;*****
602
603
604
605          .=200
606          000200 012737 001436 000312          MOV      #START,STAD          ;SET UP FOR NORMAL START
607          000206 000407                                BR      STCONT                ;CONTINUE
608          000210 012737 001432 000312          MOV      #REMAP,STAD          ;SET FOR A REMAP START
609          000216 000403                                BR      STCONT
610          000220 012737 002102 000312          MOV      #MODEV,STAD          ;SET TO MODIFY ON START
611          000226 012706 001200          STCONT: MOV      #STKPTR,%6          ;SET BOTTOM OF STAC"
612          ;*****
613          000232 013746 000006          CHGC2: MOV      6,-(SP)          ;SAVE CURRENT VECTOR
614          000236 013746 000004          MOV      4,-(SP)
615          000242 012737 000262 000004          MOV      #64$,@#4          ;SET UP LOC. 4 FOR NON-EXISTANT
616          ;MEMORY TRAP
617          000250 022777 177777 177712          CMP      #-1,@SRPTR          ;REFERENCE HARDWARE SWITCH REGISTER
618          000256 001402                                BEQ     65$                    ;IF IT = -1, USE SOFT SW REG
619          000260 000407                                BR      66$                    ;THEN USE HARDWARE SW REG
620          000262 022626          64$:  CMP      (SP)+,(SP)+          ;CORRECT THE STACK, NO HDWE SW REG
621          000264 012737 000176 000170          65$:  MOV      #SWREG,SRPTR          ;POINT TO SOFT SW REG
622          000272 012737 000174 000172          MOV      #DISPLAY,DISPREG      ;POINT TO SOFT DISP REG
623          000300 012637 000004          66$:  MOV      (SP)+,@#4          ;RESTORE VECTORS
624          000304 012637 000006          MOV      (SP)+,@#6
```


625		
626	000310	000137
627	000312	000000
628		001200
629	001200	000000
630	001202	000000
631	001204	000000
632	001206	000000
633	001210	000000
634	001212	000200
635	001214	000000
636	001216	000200
637	001220	177560
638	001222	177562
639	001224	177564
640	001226	177566
641	001230	000060
642	001232	000200
643	001234	000064
644	001236	000200
645	001240	000000
646	001242	000000
647	001244	006502
648	001246	006616
649	001250	006720
650	001252	007016
651	001254	007552
652	001256	007764
653	001260	002432
654	001262	002432
655	001264	003200
656	001266	003322
657	001270	000000
658	001272	002570
659	001274	002470
660	001276	002444
661	001300	003120
662	001302	003150
663	001304	002456
664	001306	002332
665	001310	002372
666	001312	002612
667	001314	002766
668	001316	003010
669	001320	003544
670	001322	000000
671	001324	000000
672	001326	000000
673	001330	000000
674	001332	000000
675	001334	000000
676		
677	001336	000000
678	001340	000000
679	001342	000000
680	001344	000000

```

:*****
JMP @ (PC)+
STAD: 0
      =1200
RXCSR: 0
RXBUF: 0
TXCSR: 0
TXBUF: 0
RXVTR: OPEN
RXLVL: PRY4
TXVTR: OPEN
TXLVL: PRY4
TKS: 177560
TKB: 177562
TPS: 177564
TPB: 177566
TKVTR: 60
TKLVL: PRY4
TPVTR: 64
TPLVL: PRY4
PRGNUM: OPEN
PRGID: OPEN
PRGTAB: PRG0
          PRG1
          PRG2
          PRG3
          PRG4
          PRG5
          INCPRG
          INCPRG
EMTTAB: TYP
          TYP5
          OPEN
          ERR
          DTCHK
          CHLT
          STRVRV
          STXMTV
          EHLT
          SAVRG
          RSTRG
          ERR1
          TXERR
          RXERR
          DLY
PARBIT: OPEN
COUNT: OPEN
SAVE: OPEN
LINE: OPEN
CONFIG: OPEN
NUMBER: OPEN

OLDPS: 0
TOPC: 0
FROMPC: 0
FTITLE: 0
  
```

```

;JUMP TO SELECTED START
;RECEIVER CSR UNDER TEST
;RECEIVER BUFFER UNDER TEST
;TRANSMITTER CSR UNDER TEST
;TRANSMITTER BUFFER UNDER TEST
;RECEIVER VECTOR
;RECEIVER PRIORITY LEVEL
;TRANSMITTER VECTOR
;TRANSMITTER PRIORITY LEVEL
;LSR CSR
;LSR BUFFER
;LSP CSR
;LSP BUFFER
;LSR INTERRUPT VECTOR
;LSR PRIORITY LEVEL
;LSP INTERRUPT VECTOR
;LSP PRIORITY LEVEL
;CONTAINS CURRENT PROGRAM#
;CONTAINS PROGRAM INDICATORS
;PRG0 START ADDRESS
;PRG1 START ADDRESS
;PRG2 START ADDRESS
;PRG3 START ADDRESS
;PRG4 START ADDRESS
;PRG5 START ADDRESS
;POINTER TO TYPEOUT ROUTINE
;POINTER TO CHAINED MESSAGES ROUTINE
;POINTER TO RANDOM STALL ROUTINE
;POINTER TO ERROR ROUTINE
;POINTER TO DATA CHECK ROUTINE
;COMMON HALT
;POINTER TO ROUTINE TO SET RCVR VECTOR AND PRIORITY
;POINTER TO ROUTINE TO SET XMIT VECTOR AND PRIORITY
;POINTER TO ERROR HALT ROUTINE.
;POINTER TO SAVE REGISTERS ROUTINE
;POINTER TO RESTORE REGISTERS ROUTINE
;POINTER TO ERROR ROUTINE
;POINTER TO XMIT ERROR ROUTINE
;POINTER TO RCVR ERROR ROUTINE
;POINTER TO DELAY ROUTINE
  
```


793	002052	104000	TYPE		
794	002054	012762	MSWSEL		
795	002056	004737	003372	JSR	PC,RDOCT ;GET INPUT
796	002062	012600		MOV	(SP)+,%0 ;(SR) TO R0
797	002064	042700	177770	BIC	#177770,%0 ;LIMIT (SR) TO BITS 2-0
798	002070	010037	001240	MOV	%0,PRGNUM ;SAVE PROGRAM #
799	002074	006300		ASL	%0 ;ROX2
800	002076	000170	001244	JMP	@PRGTAB(0) ;GO TO SELECTED PROGRAM.
801					
802	002102	012706	001200	MODEV: MOV	#STKPTR,%6
803	002106	000005		RESET	
804	002110	005037	177776	CLR	PSW
805	002114	104000		MODEV1: TYPE	
806	002116	015203		MMOD1	
807	002120	004737	003372	JSR	PC,RDOCT ;GET INPUT
808	002124	011600		MOV	(SP),%0
809	002126	042700	177740	BIC	#177740,%0
810	002132	006300		ASL	%0
811	002134	022627	000036	CMP	(SP)+,#36
812	002140	101403		BLOS	MODEV2 ;BRANCH IF > 36
813	002142	104000		TYPE	
814	002144	015131		MMODX	
815	002146	000762		BR	MODEV1
816	002150	104000		MODEV2: TYPE	
817	002152	015321		MMOD2	
818	002154	004737	003372	JSR	PC,RDOCT ;GET INPUT
819	002160	032716	000001	BIT	#BIT0,(SP)
820	002164	001403		BEQ	MODEV3
821	002166	104000		TYPE	
822	002170	015153		MMODD	
823	002172	000766		BR	MODEV2
824	002174	012601		MODEV3: MOV	(SP)+,%1 ;SAVE DEV ADR
825	002176	010003		MOV	%0,%3
826	002200	062703	011216	ADD	#RCSR,%3
827	002204	010113		MOV	%1,(3)
828	002206	062701	000002	ADD	#2,%1 ;UPDATE DEV ADR
829	002212	010003		MOV	%0,%3
830	002214	062703	011314	ADD	#RBUF,%3
831	002220	010113		MOV	%1,(3)
832	002222	062701	000002	ADD	#2,%1 ;UPDATE DEV ADR
833	002226	010003		MOV	%0,%3
834	002230	062703	011412	ADD	#TCSR,%3
835	002234	010113		MOV	%1,(3)
836	002236	062701	000002	ADD	#2,%1 ;UPDATE DEV ADR
837	002242	010003		MOV	%0,%3
838	002244	062703	011510	ADD	#TBUF,%3
839	002250	010113		MOV	%1,(3)
840	002252	104000		TYPE	
841	002254	015367		MMOD3	
842	002256	004737	003372	JSR	PC,RDOCT ;GET INPUT
843	002262	022627	177777	CMP	(SP)+,#177777
844	002266	001712		BEQ	MODEV1
845	002270	005037	001344	CLR	FTITLE
846	002274	000137	001436	JMP	START
847					
848				:	EMT TRAP INTERPRETER

849 002300 011646
850 002302 162716 000002
851 002306 017616 000000
852 002312 006116
853 002314 042716 177001
854 002320 062716 001264
855 002324 017616 000000
856 002330 000136
857
858
859 002332 012637 002366
860 002336 012637 002370
861 002342 010446
862 002344 010346
863 002346 010246
864 002350 010146
865 002352 010046
866 002354 013746 002370
867 002360 013746 002366
868 002364 000002
869 002366 000000
870 002370 000000
871
872
873 002372 012637 002426
874 002376 012637 002430
875 002402 012600
876 002404 012601
877 002406 012602
878 002410 012603
879 002412 012604
880 002414 013746 002430
881 002420 013746 002426
882 002424 000002
883 002426 000000
884 002430 000000
885 002432 104000
886 002434 014121
887 002436 000000
888 002440 000137 001436
889
890 002444 011600
891 002446 162700 000002
892 002452 000000
893 002454 000002
894
895
896 002456 005777 175506
897 002462 100001
898 002464 000000
899 002466 000002
900
901
902 002470 043737 001362 001360
903 002476 123737 001356 001360
904 002504 001430

EMTINT: MOV @%6,-(6) ;GET SAVED PC.
SUB #2,@%6 ;DECREMENT PC BY 2.
EMTA: MOV @%6 ;EMT ARG X 2.
ROL @%6 ;REMOVE 7 MSB.
BIC #177001,@%6 ;FORM EMT RTN ADDR.
ADD #EMTTAB,@%6
MOV @%6,@%6
JMP @%6+ ;GO TO EMT ROUTINE.
;SAVE REGS 0 TO 4 SUBROUTINE.
SAVRG: MOV (6)+,SVRPC ;SAVE PC AND PSW.
MOV (6)+,SVRPSW
MOV %4,-(6) ;SAVE REGS 0 - 4
MOV %3,-(6) ;IN STACK.
MOV %2,-(6)
MOV %1,-(6)
MOV %0,-(6)
MOV SVRPSW,-(6) ;RESTORE PC AND PSW.
MOV SVRPC,-(6)
RTI ;EXIT.
SVRPC: OPEN
SVRPSW: OPEN
;RESTORE REGS 0 TO 4 SUBROUTINE.
RSTRG: MOV (6)+,RSTPC ;SAVE PC AND PSW.
MOV (6)+,RSTPSW
MOV (6)+,%0 ;RESTORE REGS 0 - 4
MOV (6)+,%1 ;FROM STACK.
MOV (6)+,%2
MOV (6)+,%3
MOV (6)+,%4
MOV RSTPSW,-(6) ;RESTORE PC AND PSW.
MOV RSTPC,-(6)
RTI ;EXIT
RSTPC: OPEN
RSTPSW: OPEN
INCPRG: TYPE ;TYPE INCORRECT PROGRAM SELECTED.
AINPRG
HALT
JMP START
;COMMON HALT ROUTINE
CHLT: MOV @%6,%0 ;DEVELOP ADDRESS OF CALLER.
SUB #2,%0
HALT ;HALT. ADDRESS OF CALL INSTRUCTION
RTI ;IN DATA LIGHTS.
;CONDITIONAL ERROR HALT ROUTINE.
EHLT: TST @SRPTR ;CHECK FOR HALT ON ERROR.
BPL EHLTA ;BRANCH IF NO HALT DESIRED.
HALT ;HALT.
EHLTA: RTI ;IN DATA LIGHTS.
;DATA CHECK ROUTINE.
DTCHK: BIC CARMSK,XMTDAT ;CLEAR UNTRANSMITTED BITS
CMPB RECDAT,XMTDAT ;COMPARE TRANSMITTED AND RECEIVED
BEQ DTCHKA ;CHARS. BRANCH IF SAME.


```

961 003034 017737 000042 003102 MOV @CRXTXA,CRXTXA
962 003042 032777 020000 175120 BIT #BIT13,@SRPTR ;INHIBIT PRINT?
963 003050 001017 BNE CRXTXC ;BRANCH TO INHIBIT PRINT.
964 003052 011637 002720 MOV @%6,ERRD ;DEVELOP CALLING ADDR.
965 003056 162737 000002 002720 SUB #2,ERRD
966 003064 CNVOA ERRD,APC,6 ;CONVERT CALLING ADDR TO ASCII.
967 003076 104001 TYPES ;TYPE ERROR MESSAGE.
968 003100 013176 EMO ;ERR HEADER
969 003102 000000 CRXTXA: OPEN ;ADDT'L ERR MESSAGE
970 003104 000000 CRXTXB: OPEN ;TXCSR OR RXCSR CONTENTS.
971 003106 177777 -1
972 003110 104010 CRXTXC: EHALT ;GO HALT IF DESIRED.
973 003112 062716 000002 ADD #2,@%6
974 003116 000002 RTI ;EXIT.
975
976 ;ROUTINE TO SET RECEIVER INTERRUPT VECTOR AND PRIORITY
977 003120 017637 000000 003140 STRVRV: MOV @ (6),STPRA+2 ;MOVE VECTOR ADDR TO STPRA+2
978 003126 062716 000002 ADD #2,@%6 ;SET UP EXIT
979 003132 013701 001210 MOV RXVTR,%1
980 003136 012721 000000 STPRA: MOV #OPEN,(1)+ ;SET VECTOR ADDRESS
981 003142 013721 001212 MOV RXLVL,(1)+ ;SET PRIORITY
982 003146 000002 RTI ;EXIT
983
984 ;ROUTINE TO SET TRANSMITTER INTERRUPT VECTOR AND PRIORITY.
985 003150 017637 000000 003170 STXMTV: MOV @ (6),STPPA+2 ;MOVE VECTOR ADDR TO STPPA+2
986 003156 062716 000002 ADD #2,@%6 ;SET UP EXIT
987 003162 013701 001214 MOV TXVTR,%1
988 003166 012721 000000 STPPA: MOV #OPEN,(1)+ ;SET VECTOR ADDRESS.
989 003172 013721 001216 MOV TXLVL,(1)+ ;SET PRIORITY
990 003176 000002 RTI ;EXIT.
991
992 ;SUBROUTINE TO OUTPUT ASCII MESSAGE ON TELETYPE PRINTER.
993 003200 010037 003370 TYP: MOV %0,SAVRO ;SAVE R0
994 003204 011600 MOV @%6,%0 ;GET ADDRESS THAT CONTAINS MESSAGE ADDRESS.
995 003206 062716 000002 ADD #2,@%6 ;SET UP EXIT.
996 003212 011000 MOV @%0,%0 ;ADDRESS OF MESSAGE TO R0.
997 003214 112037 003320 TYFA: MOVB (0)+,TYPDAT ;GET CHARACTER
998 003220 122737 000100 003320 CMPB #100,TYPDAT ;CHECK FOR '@' CHARACTER
999 003226 001003 BNE TYPC ;BRANCH IF NOT '@'.
1000 003230 013700 003370 MOV SAVRO,%0 ;RESTORE R0
1001 003234 000002 RTI ;TERMINATOR CHAR. DONE. EXIT.
1002 003236 122737 000045 003320 TYPC: CMPB #45,TYPDAT ;CHECK FOR '%'.
1003 003244 001412 BEQ TYPF ;BRANCH IF '%'.
1004 003246 004737 003254 JSR %7,TYPD ;TYPE CHAR IN TYPDAT
1005 003252 000760 BR TYFA
1006 003254 113777 003320 175744 TYPD: MOVB TYPDAT,@TPB ;OUTPUT CHARACTER TO PRINTER
1007 003262 105777 175736 TSTB @TPS ;WAIT FOR DONE FLAG.
1008 003266 100375 BPL -4
1009 003270 000207 RTS %7 ;EXIT
1010 003272 112737 000015 003320 TYPF: MOVB #15,TYPDAT ;MOVE CARRIAGE RETURN CODE TO TYPDAT
1011 003300 004737 003254 JSR %7,TYPD ;GO TYPE CHAR.
1012 003304 112737 000012 003320 MOVB #12,TYPDAT ;MOVE LF CODE TO TYPDAT.
1013 003312 004737 003254 JSR %7,TYPD ;GO TYPE CHAR.
1014 003316 000736 BR TYFA
1015 003320 000000 TYPDAT: OPEN
1016 ;SUBROUTINE TO OUTPUT A SERIES OF ASCII MESSAGES ON TELETYPE PRINTER

```


1073	003550	062716	000002	ADD	#2,@%6	:SET UP EXIT ADDRESS
1074	003554	017746	000024	MOV	@DLCNT,-(6)	:DELAY COUNT TO STACK
1075	003560	001407		BEQ	DLYC	
1076	003562	012746	000226	DLYA: MOV	#226,-(6)	:1 MSEC COUNT TO STACK
1077	003566	005316		DLYB: DEC	@%6	:DECREMENT 1 MSEC COUNT
1078	003570	001376		BNE	DLYB	:BRANCH IF NOT 0.
1079	003572	005726		POPSP		:ZERO. UNCOVER MSECS. COUNT.
1080	003574	005316		DEC	@%6	:DECREMENT IT
1081	003576	001371		BNE	DLYA	:BR IF NOT DONE DELAYING
1082	003600	005726		DLYC: PGPSP		:DONE
1083	003602	000002		RTI		:EXIT.
1084	003604	000000		DLCNT: OPEN		:CONTAINS MILLISECONDS COUNT ADDRESS.
1085				:		
1086				:	OCTAL TO ASCII CONVERT ROUTINE	
1087	003606	104011		OACNV: SAVREG		:SAVE REGS.
1088	003610	013500		MOV	@(5)+,%0	:GET OCTAL VALUE.
1089	003612	012501		MOV	(5)+,%1	:GET DESTINATION ADDR.
1090	003614	012502		MOV	(5)+,%2	:GET CONVERT COUNT.
1091	003616	060201		ADD	%2,%1	:DEVELOP ADDR TO STORE 1ST CHAR.
1092	003620	010003		OACNVA: MOV	%0,%3	
1093	003622	042703	177770	BIC	#177770,%3	:ISOLATE LEAST SIGNIFICANT DIGIT.
1094	003626	062703	000060	ADD	#60,%3	:CONVERT DIGIT TO ASCII.
1095	003632	110341		MOVB	%3,-(1)	:STORE ASCII CHARACTER.
1096	003634	042700	000007	BIC	#7,%0	
1097	003640	006000		ROR	%0	
1098	003642	006000		ROR	%0	
1099	003644	006000		ROR	%0	
1100	003646	005302		DEC	%2	:DONE ALL DIGITS?
1101	003650	001363		BNE	OACNVA	:BRANCH IF NOT DONE.
1102	003652	104012		RSTREG		:RESTORE REGS.
1103	003654	000205		RTS	%5	:DONE. EXIT.
1104				:		
1105				:	SUBROUTINE TO GENERATE PARITY ON DATA FOR 5,6,7,8 LEVEL CODE.	
1106				:	PARITY BIT IS THE MSB OF THE CHARACTER PARITY CAN BE EITHER	
1107				:	EVEN OR ODD	
				:	GENERATES ODD/EVEN PARITY.	

```

1108
1109 003656 032737 000200 001362 GENPAR: BIT #BIT7,CARMSK ;TEST LSB CHAR LENGTH
1110 003664 001411 BEQ EIGHT ;CHAR IS 8
1111 003666 032737 000100 001362 BIT #BIT6,CARMSK ;TEST MSB CHAR LENGTH
1112 003674 001427 BEQ SEVEN ;CHAR LENGTH IS 7
1113 003676 032737 000040 001362 BIT #BIT5,CARMSK
1114 003704 001412 BEQ SIX
1115 003706 000433 BR FIVE
1116 003710 012737 000200 001322 EIGHT: MOV #BIT7,PARBIT ;PLACE PARITY BIT IN PROPER POSITION
1117 003716 012737 000007 001324 MOV #7,COUNT ;SET UP ROTATE COUNTER=7
1118 003724 042701 177600 BIC #177600,%1 ;MASK OFF UNUSED BITS
1119 003730 000433 BR DOIT ;GO AND GENERATE PARITY FOR 8
1120 003732 012737 000040 001322 SIX: MOV #BIT5,PARBIT ;PLACE PARITY BIT IN PROPER POSITION
1121 003740 012737 000005 001324 MOV #5,COUNT ;SET UP ROTATE COUNTER=5
1122 003746 042701 177740 BIC #177740,%1 ;MASK OFF UNUSED BITS
1123 003752 000422 BR DOIT ;GO AND GENERATE PARITY FOR
1124 003754 012737 000100 001322 SEVEN: MOV #BIT6,PARBIT ;PLACE PARITY BIT IN PROPER POSITION
1125 003762 012737 000006 001324 MOV #6,COUNT ;SET UP ROTATE COUNTER=6
1126 003770 042701 177700 BIC #177700,%1 ;MASK OFF UNUSED BITS
1127 003774 000411 BR DOIT ;GO AND GENERATE PARITY FOR 7
1128 003776 012737 000020 001322 FIVE: MOV #BIT4,PARBIT ;PLACE PARITY BIT IN PROPER POSITION
1129 004004 012737 000004 001324 MOV #4,COUNT ;SET UP ROTATE COUNTER=4
1130 004012 042701 177760 BIC #177760,%1 ;MASK OFF UNUSED BITS
1131 004016 000400 BR DOIT ;GO AND GENERATE PARITY FOR
1132 004020 010137 001326 DOIT: MOV %1,SAVE ;SAVE DATA
1133 004024 006001 AGAIN: ROR %1 ;ROTATE DATA
1134 004026 103415 BCS ADD1 ;IF CARRY SET ADD IN PARBIT
1135 004030 005337 001324 RTN: DEC COUNT ;DECREMENT COUNTER
1136 004034 001373 BNE AGAIN ;NOT DONE DO IT AGAIN
1137 004036 032737 000040 001374 BIT #BIT5,SRT ;DONE EVEN OR ODD PARITY?
1138 004044 001403 BEQ DONE ;IF EVEN FINISHED
1139 004046 063737 001322 001326 ADD PARBIT,SAVE ;IF ODD ADD IN ANOTHER 1
1140 004054 013701 001326 DONE: MOV SAVE,%1 ;PLACE DATA + PARITY BACK IN R1
1141 004060 000207 RTS 7 ;AND EXIT
1142 004062 063737 001322 001326 ADD1: ADD PARBIT,SAVE ;ADD PARBIT TO DATA
1143 004070 000757 BR RTN ;RETURN TO COUNTER
1144
1145 ;SUBROUTINE TO SELECT LINE AND LOAD VECTOR ASSIGNMENT
1146 004072 104000 LINSSEL: TYPE
1147 004074 015024 LDLINE
1148 004076 004737 003372 JSR PC,RDOCT ;GET INPUT
1149 004102 012601 MOV (SP)+,%1 ;LOAD R1
1150 004104 042701 177407 BIC #177407,%1 ;MASK OFF ALL BUT LINE BITS
1151 004110 006201 ASR %1
1152 004112 006201 ASR %1
1153 004114 010137 001372 MOV %1,TEMP ;SAVE LINE #
1154 004120 012703 001200 MOV #RXCSR,%3 ;LOAD ADDRESS OF REGISTERS
1155 004124 012704 000004 MOV #4,%4 ;SET UP COUNTER
1156 004130 016102 011216 MOV RCSR(1),%2
1157 004134 010223 LINSA: MOV %2,(3)+
1158 004136 062702 000002 ADD #2,%2
1159 004142 005304 DEC %4
1160 004144 001373 BNE LINSA
1161 004146 016101 011120 MOV VECTAB(1),%1 ;GET LINE VECTOR ADDRESS
1162 004152 010123 MOV %1,(3)+ ;LOAD INTO PROG. RXVTR
1163 004154 022121 CMP (1)+,(1)+ ;ADD +4 TO RXVTR TO = TXVTR

```



```
1220 004410 000772  
1221 004412 063701 004436  
1222 004416 062737 000060 004434  
1223 004424 113720 004434  
1224 004430 000207  
1225 004432 000000  
1226 004434 000000  
1227 004436 000000  
1228 004440 023420  
1229 004442 001750  
1230 004444 000144  
1231 004446 000012  
1232 004450 000001  
1233 004452 040 040 040  
1234 004455 040 040  
1235  
1236 004460 104000  
1237 004462 013624  
1238 004464 004737 003372  
1239 004470 012637 001374  
1240 004474  
1241 004506 104000  
1242 004510 014124  
1243 004512 012737 177400 001362  
1244 004520 032737 000002 001374  
1245 004526 001413  
1246 004530 012737 177700 001362  
1247 004536 032737 000001 001374  
1248 004544 001403  
1249 004546 012737 177740 001362  
1250 004554 000207  
1251 004556 032737 000001 001374  
1252 004564 001773  
1253 004566 012737 177600 001362  
1254 004574 000767  
1255  
1256  
1257 004576 013737 177776 001336  
1258 004604 012737 000340 177776  
1259 004612 006237 001336  
1260 004616 006237 001336  
1261 004622 006237 001336  
1262 004626 042737 177740 001336  
1263 004634 013737 001336 001340  
1264 004642 011637 001342  
1265 004646 004537 003606  
1266 004652 001340  
1267 004654 013063  
1268 004656 000006  
1269 004660 004537 003606  
1270 004664 001342  
1271 004666 013115  
1272 004670 000006  
1273 004672 104000  
1274 004674 013016  
1275 004676 000000
```

BR SUBTNA
SUBTNB: ADD TENPWR,%1 ;RESTORE SUBTRACTED VALUE.
ADD #60,DIGIT ;CONVERT (DIGIT) TO ASCII
MOVB DIGIT,(0)+ ;MOVE ASCII CHAR TO DECVAL FIELD.
RTS %7 ;EXIT.
CNVCTR: OPEN
DIGIT: OPEN
TENPWR: OPEN
ADTENP: 10000.
1000.
100.
10.
1
DECVAL: .BYTE 040,040,040,040,040,040
;SUBROUTINE TO SET CHARACTER LENGTH PARAMETER
SETPAR: TYPE ;TYPE: SELECT PARAMETERS.
SELPAR
JSR PC,RDOCT ;GET INPUT
MOV (SP)+,SRT
CNVOA SRT,APARM,3
TYPE
PARMTS
TBIT1: MOV #177400,CARMSK ;SET CHARACTER MASK TO 8 BITS.
BIT #BIT1,SRT ;SEE IF SR BIT 1 IS SET.
BEQ STPARA ;BRANCH IF NOT SET.
MOV #177700,CARMSK ;CHANGE CHAR MASK TO 6 BITS.
BIT #BIT0,SRT ;SEE IF SR BIT0 IS SET.
BEQ PAREX ;BRANCH IF NOT SET.
MOV #177740,CARMSK ;CHANGE CHAR MASK TO 5 BITS.
RTS %7 ;EXIT.
STPARA: BIT #BIT0,SRT ;SEE IF SR BIT0 IS SET.
BEQ STPARA-2 ;BRANCH IF NOT SET.
MOV #177600,CARMSK ;CHANGE CHAR MASK TO 7 BITS.
BR PAREX
;ERROR TRAP HANDLER - TYPE TO AND FROM WHERE ERROR TRAP OCCURS
ERTP: MOV PSW,OLDPS ;SAVE OLDPS
MOV #PRTY7,PSW
ASR OLDPS
ASR OLDPS
ASR OLDPS
BIC #177740,OLDPS
MOV OLDPS,TOPC
MOV @%6,FROMPC
ERTPA: JSR %5,OACNV
TOPC
MTO
6
JSR %5,OACNV
FROMPC
MFROM
6
TYPE
MTERR
HALT

```

1276 004700 000137 001436          JMP      START
1277
1278          ;MAPVEC - MAP VECTOR VECTOR OR REPORT ERROR DEPENDING ON FMAP FLAG
MAPVEC: MOV      @%6, TOPC
1279 004704 011637 001340          POPSP2
1280 004710 022626          MOV      @%6, FROMPC
1281 004712 011637 001342          SUB      #4, TOPC
1282 004716 162737 000004 001340          TST     FMAP
1283 004724 005737 001350          BEQ     ERTPA          ;NOT MAPPING, REPORT ERROR
1284 004730 001746          MOV      TOPC, TXVTR      ;STORE VECTOR
1285 004732 013737 001340 001214          SUB      #4, TOPC
1286 004740 162737 000004 001340          MOV      TOPC, RXVTR
1287 004746 013737 001340 001210          CLR     FMAP
1288 004754 005037 001350          RTI
1289 004760 000002
1290
1291          ;FORMAD - FORM DEVICE AT ADDRESS
FORMAD: MOV      %1, RXCSR
1292 004762 010137 001200          ADD     #2, %1
1293 004766 062701 000002          MOV     %1, RXBUF
1294 004772 010137 001202          ADD     #2, %1
1295 004776 062701 000002          MOV     %1, TXCSR
1296 005002 010137 001204          ADD     #2, %1
1297 005006 062701 000002          MOV     %1, TXBUF
1298 005012 010137 001206          RTS     %7
1299 005016 000207
1300
1301          ;SUBROUTINE TO MAKE LINE CONNECTION.
LINCON: MOV      @RXCSR, RXCSRT
1302 005020 017737 174154 001370          BIT     #BIT13, RXCSRT      ;YES, IS CLEAR TO SEND UP
1303 005026 032737 020000 001370          BNE     LINEUP            ;YES CONNECTION IS MADE.
1304 005034 001046          LINCA: BIC     #146, @RXCSR    ;CLEAR IE BIT AND DTR, RQ TO SND
1305 005036 042777 000146 174134          TST     @RXBUF            ;CLEAR DONE FLAG
1306 005044 005777 174132          TYPE                    ;TYPE
1307 005050 104000          MAKCON                  ;'MAKE LINE CONNECTION'
1308 005052 014020          LINCBC: MOV     @RXCSR, RXCSRT
1309 005054 017737 174120 001370          BIT     #BIT14, RXCSRT    ;DID YOU RING
1310 005062 032737 040000 001370          BEQ     LINCBC            ;GO WAIT FOR RING
1311 005070 001771          BIS     #6, @RXCSR       ;SET DTR, RQ TO SND
1312 005072 052777 000006 174100          DELAY   10000            ;WAIT 10 SECONDS FOR
1313 005100 104016          ;CLEAR TO SEND
1314 005102 023420          MOV     @RXCSR, RXCSRT
1315 005104 017737 174070 001370          TST     @RXBUF            ;CLEAR DONE
1316 005112 005777 174064          BIT     #BIT13, RXCSRT    ;IS CLEAR TO SEND UP?
1317 005116 032737 020000 001370          BNE     LINCFC            ;YES. GO TO LINCFC
1318 005124 001003          ERRRX                    ;NO. PRINT ERROR MESSAGE
1319 005126 104015          LINCHM                  ;'CLEAR TO SEND NOT SET'
1320 005130 014146          BR      LINCA            ;START OVER AGAIN
1321 005132 000741          LINCFC: MOV     @RXCSR, RXCSRT
1322 005134 017737 174040 001370          TST     @RXBUF            ;CLEAR ALL FLAGS
1323 005142 005777 174034          TYPE                    ;AND DONE
1324 005146 104000          LINMAD                  ;TYPE MESSAGE
1325 005150 014176          LINEUP: RTS     5        ;CONNECTION IS MADE'
1326 005152 000205          ;SUBROUTINE TO OVERLAY <CRLF> IN DATA PATTERN (EVERY 72.ND CHAR)
1327          ;EXIT LINE CONNECTION ROUTINE WITH
1328 005154 012701 015512          OVRLAY: MOV     #OUTBUF, %1  ;GET OUTBUF ADDRESS
1329 005160 012702 000016          MOV     #14, %2           ;GET COUNTER
1330 005164 012711 105215          OVRLYA: MOV     #105215, (1) ;INSERT CR&LF
1331 005170 062701 000110          ADD     #72, %1           ;ADD OFFSET
  
```



```
1388 005456 012704 017462          MOV      #INBUF,%4          ;POINT R4 TO CALLED LINES RECEIVER
1389 005462 010437 001376          MOV      %4,INBUFP         ;DATA BUFFER & INIT. POINTER
1390 005466 012737 015656 001410  RISRDA: MOV      #BUFF,TBUFFP
1391 005474 013701 001404          MOV      CALLED,%1
1392 005500 016137 011216 001200  MOV      RCSR(1),RXCSR
1393 005506 112337 001360          MOVVB   (3)+,XMTDAT
1394 005512 112237 001356          MOVVB   (2)+,RECDAT        ;COMPARE TRANSMITTED DATA WITH DATA
1395 005516 104004                    DATCHK                       ;RECEIVED BY CALLED LINE
1396 005520 013701 001402          MOV      CALLER,%1
1397 005524 016137 011216 001200  MOV      RCSR(1),RXCSR
1398 005532 112437 001356          MOVVB   (4)+,RECDAT        ;COMPARE TRANSMITTED DATA WITH DATA
1399 005536 104004                    DATCHK                       ;RECEIVED BY CALLER
1400 005540 005237 001364          INC      CTRD
1401 005544 022737 000101 001364  CMP      #101,CTRD
1402 005552 001350                    BNE     RISRDA
1403 005554 000240          FINISH: NOP
1404 005556 013701 001404          MOV      CALLED,%1
1405 005562 004537 004224          JSR     5,FILL
1406 005566 015512                    OUTBUF  100
1407 005570 000144                    TYPE
1408 005572 104000                    ENDPAS
1409 005574 014117                    BIS     #BIT6,@TCSR(1)
1410 005576 052771 000100 011412  NOP
1411 005604 000240          RTI
1412 005606 000002          ;ERROR SERVICE ROUTINE
1413                    DCERR: BIT     #BIT15,@RBUF(0) ;TEST ERROR
1414 005610 032770 100000 011314  BEQ     RISRF
1415 005616 001402                    ERRRX  CSRADD
1416 005620 104015                    MOV     #OUTBUF,OTBUFP     ;SET OUTPUT BUFFER POINTER
1417 005622 013126                    MOV     #INBUF,INBUFP     ;SET INPUT BUFFER POINTER
1418 005624 012737 015512 001406  RISRF: MOV     #BUFF,BUFFP   ;SET INTERMEDIATE BUFFER POINTER
1419 005632 012737 017462 001376  MOV     #BUFF,TBUFFP     ;SET POINTER FOR CONFIG #2 TRANSMITTER
1420 005640 012737 015656 001400  BIT     #BIT14,RXCSTRT    ;CHECK RING INDICATOR
1421 005646 012737 015656 001410  BNE     RISREX            ;BRANCH IF RING
1422 005654 032737 040000 001370  JSR     7,DISCON          ;ERROR SET - NO RING
1423 005662 001005                    ERRRX  CSRADD
1424 005664 004737 006312          RTI
1425 005670 104015                    RISREX: CNVOA  LINE,TLINE,2
1426 005672 013126                    TYPE  ALINE
1427 005674 000002                    MOV     %0,CALLED
1428 005676                    JSR     PC,RDOCT          ;GET INPUT
1429 005710 104000                    MOV     (SP),MODEM       ;GET MODEM TYPE
1430 005712 014463                    BIC     #177773,MODEM    ;0=103,4=202
1431 005714 010037 001404          MOV     (SP)+,CONFIG
1432 005720 004737 003372          BIC     #177774,CONFIG
1433 005724 011637 001412          BNE     RISRFC           ;GO TO SERVICE FOR CONFIG 1 OR 2
1434 005730 042737 177773 001412  JSR     7,CONN           ;CONNECT LINE IF CONFIGURATION 0
1435 005736 012637 001332          TYPE  MESSAGE TO PRESS DATA
1436 005742 042737 177774 001332  BUTTON ON DATA PHONE
1437 005750 001042                    DELAY  10000            ;WAIT FOR CARRIER
1438 005752 004737 006326          ;10 SECONDS
1439 005756 104000                    TST    @RBUF(0)         ;READ BUFFER TO CLEAR DONE
1440 005760 014763
1441 005762 104016
1442 005764 023420
1443 005766 005770 011314
```

```

1444 005772 032770 020000 011216      BIT      #BIT13,@RCSR(0) ;TEST FOR CLEAR TO SEND
1445 006000 001004      BNE      RISRFB
1446 006002 104003      ERROR                       ;ERROR! DID NOT RECEIVE CLEAR TO SEND
1447                                       ;WITHIN TIME ALLOTTED (10 SEC.)
1448 006004 004737 006312      JSR      7,DISCON           ;DISCONNECT LINE
1449 006010 000002      RTI
1450 006012 016037 011412 001204 RISRFB: MOV      TCSR(0),TXCSR ;GET CALLED LINES TXCSR ADDRESS
1451 006020 004737 004460      JSR      7,SETPAR          ;LOAD USER PARAMETERS
1452 006024 104000      TYPE                       ;TYPE 'LINE CONNECTION'
1453 006026 014176      LINMAD
1454 006030      CNVOA   CONFIG,TCONFIG,2 ;MADE'
1455 006042 104000      TYPE
1456 006044 014225      ACONFIG
1457 006046 052770 000100 011412      BIS      #BIT6,@TCSR(0)
1458 006054 000002      RTI                          ;AND EXIT
1459
1460                                       ;HERE IF CONFIGURATION 1 OR 2
1461 006056 104000      RISRFC: TYPE                ;ASK USER WHICH LINE HE IS
1462 006060 014633      WRU                          ;DIALING ON
1463 006062 004737 003372      JSR      PC,RDOCT           ;GET INPUT
1464 006066 012601      MOV      (SP)+,%1           ;GET LINE #
1465 006070 042701 177740      BIC      #177740,%1         ;MASK UNUSED BITS
1466 006074 010137 001330      MOV      %1,LINE
1467 006100      CNVOA   LINE,URA,2
1468 006112 104000      TYPE                          ;REPORT LINE # ON TTY
1469 006114 014730      UR
1470 006116 006301      ASL      %1
1471 006120 010137 001402      MOV      %1,CALLER         ;SAVE CALLERS LINE #
1472 006124 004737 006326      JSR      7,CONN            ;CONNECT CALLED LINE
1473 006130 052771 000002 011216      BIS      #BIT1,@RCSR(1)    ;SET DTR ON CALLERS LINE
1474 006136 104000      TYPE                          ;TYPE MESSAGE TO PRESS DATA
1475 006140 014763      BUTTON                       ;ON DATA PHONE
1476 006142 104016      DELAY                       ;WAIT 10 SECONDS FOR CLEAR TO SEND
1477 006144 023420      10000.                       ;SET AT CALLED LINE
1478 006146 027071 011314 011314      CMP      @RBUF(0),@RBUF(1)  ;READ BUFFERS
1479 006154 032770 020000 011216      BIT      #BIT13,@RCSR(0) ;TEST FOR CLEAR TO SEND AT CALLED LINE
1480 006162 001007      BNE      RISRFF
1481 006164 104003      ERROR                       ;ERROR! CLEAR TO SEND NOT SET AT CALLED LINE
1482 006166 004737 006312      RISRFD: JSR      7,DISCON    ;DISCONNECT
1483 006172 042771 000006 011216      BIC      #6,@RCSR(1)       ;LINE
1484 006200 000002      RTI                          ;AND EXIT
1485 006202 022737 000002 001332 RISRFF: CMP      #2,CONFIG
1486 006210 001414      BEQ      RISRFG
1487 006212 022771 010000 011216      CMP      #BIT12,@RCSR(1) ;CHECK CARRIER AT CALLERS LINE
1488 006220 001003      BNE      RISRFE
1489 006222 104003      ERROR                       ;ERROR! NO CARRIER AT CALLERS LINE
1490 006224 000137 006166      JMP      RISRFD            ;GO DISCONNECT LINES
1491 006230 016137 011216 001200 RISRFE: MOV      RCSR(1),RXCSR
1492 006236 000137 006012      JMP      RISRFB            ;GO GET PAREMETERS AND ENABLE
1493                                       ;CALLED TRANSMITTER AND EXIT
1494
1495                                       ;HERE IF CONFIGURATION 2
1496 006242 032771 020000 011216 RISRFG: BIT      #BIT13,@RCSR(1) ;TEST CALLERS CLEAR TO SEND
1497 006250 001003      BNE      RISRFH
1498 006252 104003      ERROR                       ;ERROR! NO CTS AT CALLERS LINE
1499 006254 000137 006166      JMP      RISRFD            ;GO DISCONNECT LINE AND EXIT
    
```



```
1500 006260 016037 011216 001200 RISRFH: MOV RCSR(0),RXCSR
1501 006266 016137 011412 001204 MOV TCSR(1),TXCSR
1502 006274 004737 004460 JSR 7,SETPAR ;GO GET PARAMETERS FOR CALLERS
1503 ;TRANSMITTER AND CALLED RECEIVER
1504 006300 016137 011216 001200 MOV RCSR(1),RXCSR
1505 006306 000137 006012 JMP RISRFB
1506 ;
1507 ;SUBROUTINE TO DISCONNECT LINE R0 HAS LINE #
1508 006312 042770 000006 011216 DISCON: BIC #6,@RCSR(0)
1509 006320 005770 011216 TST @RCSR(0)
1510 006324 000207 RTS 7
1511 ;
1512 ;SUBROUTINE TO CONNECT LINE R0 HAS LINE #
1513 006326 052770 000006 011216 CONN: BIS #6,@RCSR(0) ;SET DTR, RQ TO SND
1514 006334 000207 RTS 7
1515 ;TRANSMITTER INTERRUPT COMMON HANDLER
1516 006336 000240 TISR: NOP
1517 006340 006300 ASL %0 ;R0 HAS LINE #
1518 006342 105770 011412 TSTB @TCSR(0) ;CHECK FOR DONE
1519 006346 100402 BMI TISRA ;BRANCH IF DONE
1520 006350 104003 ERROR ;ERROR! FALSE INTERRUPT
1521 006352 000002 TISRAA: RTI ;EXIT
1522 006354 005737 001332 TISRA: TST CONFIG ;THIS CONFIGURATIO 0?
1523 006360 001420 BEQ TISRC ;BRANCH IF YES
1524 006362 020037 001402 CMP %0,CALLER ;DID CALLER INTERRUPT
1525 006366 001015 BNE TISRC
1526 006370 117770 173014 011510 MOVSB @TBUFP,@TBUF(0) ;TRANSMIT
1527 006376 005237 001410 INC TBUFP ;STEP POINTER
1528 006402 022737 016022 001410 CMP #BUFP+100.,TBUFP
1529 006410 001003 BNE .+10
1530 006412 042770 000100 011412 BIC #BIT6,@TCSR(0)
1531 006420 000002 RTI
1532 006422 117770 172760 011510 TISRC: MOVSB @OTBUFP,@TBUF(0) ;TRANSMIT THE NEXT CHARACTER
1533 006430 005237 001406 INC OTBUFP ;STEP POINTER TO NEXT CHAR.
1534 006434 005737 001332 TST CONFIG ;WAS CONFIGURATION 0 SELECTED
1535 006440 001010 BNE TISRBB ;BRANCH IF CONFIG #1 OR #2
1536 006442 022737 017462 001406 CMP #OUTBUF+1000.,OTBUFP;HAVE 1000. CHARS. BEEN SENT
1537 006450 001340 BNE TISRAA ;EXIT IF NOT
1538 006452 012737 015512 001406 TISRBB: MOV #OUTBUF,OTBUFP ;RESET POINTER
1539 006460 000002 RTI ;AND EXIT
1540 ;
1541 006462 022737 015656 001406 TISRB: CMP #OUTBUF+100.,OTBUFP;HAVE 100. CHARS. BEEN SENT?
1542 006470 001330 BNE TISRAA ;EXIT IF NOT
1543 006472 042770 000100 011412 BIC #BIT6,@TCSR(0) ;DISABLE TRANSMITTER INTERRUPT
1544 006500 000764 BR TISRBB ;RESET POINTER AND EXIT
1545 ;
1546 ;*****
1547 ;PRGO - SINGLE CHARACTER LINE MODE TEST.
1548 ;*****
1549 006502 000240 PRGO: NOP ;BEGIN PRGO
1550 006504 104000 TYPE ;TYPE
1551 006506 013256 POTIT ;PROGRAM TITLE
1552 006510 104000 TYPE
1553 006512 013712 SELCAR
1554 006514 004737 003372 JSR PC,RDOCT ;GET INPUT
1555 006520 112601 MOVSB (SP)+,%1 ;GET USER SPECIFIED DATA
```

```
1556 006522 010137 015512      MOV      %1,OUTBUF      :AND
1557 006526 004537 004252      JSR      5,BMOVE       :LOAD
                               OUTBUF      :INTO
1558 006532 015512                OUTBUF+1                :OUTPUT
1559 006534 015513                999.                   :BUFFER
1560 006536 001747                JSR      7,OVRLAY       :OVER LAY CR,LF'S IN DATA
1561 006540 004737 005154                JSR      7,LDPRI       :LOAD PRIORITY LEVEL IN VECTOR+2
1562 006544 004737 010352                JSR      7,LDTVEC      :LOAD TRANSMITTER VECTORS
1563 006550 004737 010304                JSR      7,LDVECS      :LOAD RECEIVER VECTORS
1564 006554 004737 010240                MOV      #PRTY7,PSW     :SET PROCESSOR PRIORITY=7
1565 006560 012737 000340 177776        MOV      #140,%2       :SET IE
1566 006566 012702 000140                MOV      #RCSR,%1      :BIT IN
1567 006572 012701 011216                JSR      5,MOVIT       :ALL RECEIVERS
1568 006576 004537 010174                TYPE      :TYPE
1569 006602 104000                MAKCON      :'MAKE LINE CONNECTION'
1570 006604 014020                CLR      PSW           :SET PROCESSOR PRIORITY=0
1571 006606 005037 177776        PRG0A: WAIT           :WAIT
1572 006612 000001                BR      PRG0A         :HERE
1573 006614 000776
1574
:*****
1575 :PRG1 - SPECIAL BINARY COUNT PATTERN LINE MODE TEST.
1576 :*****
1577 PRG1: TYPE :TYPE PROGRAM TITLE.
1578 P1TIT
1579 MOV      #105215,OUTBUF :LOAD CRLF
1580 JSR      5,INFIL      :LOAD OUTPUT
1581 OUTBUF+2 :WITH BINARY
1582 1000.      :COUNT PATTERN
1583 MOV      #100,NUMBER
1584 JSR      7,LDPRI       :LOAD PRIORITY LEVEL IN VECTOR +2
1585 JSR      7,LDTVEC      :LOAD TRANSMITTER VECTORS
1586 JSR      7,LDVECS      :LOAD RECEIVER VECTORS
1587 MOV      #PRTY7,PSW     :SET PROCESSOR PRIORITY=7
1588 MOV      #140,%2       :GET IE BIT
1589 MOV      #RCSR,%1      :GET FIRST CSR ADDRESS
1590 JSR      5,MOVIT       :AND MOVE IT
1591 TYPE      :TYPE
1592 MAKCON      :'MAKE LINE CONNECTION'
1593 CLR      PSW           :SET PROCESSOR PRIORITY=0
1594 PRG1C: WAIT           :WAIT
1595 BR      PRG1C         :HERE
1596
:*****
1597 :PRG2-SPECIAL MESSAGE TRANSMIT ONLY THIS PROGRAM TRANSMITS
1598 :*****
1599 :THE MESSAGE 'A QUICK BROWN FOX JUMPED OVER THE LAZY DOGS
1600 :BACK 1234567890.'
1601
1602 PRG2: TYPE :TYPE PROGRAM
1603 P2TIT :TITLE
1604 JSR      5,LINSEL
1605 JSR      7,SETPAR      :GO SET PARAMETERS
1606 BIS      #BIT2,@RXCSR :SET REQUEST TO SEND
1607 PRG2A: JSR      5,LINCON :GO MAKE LINE CONNECTION
1608 PRG2B: MOV      #PRG2M,%2 :GET ADDRESS OF MESSAGE
1609 PRG2C: MOV      (2)+,%1 :GET FIRST CHARACTER
1610 CMP      %1,#1 :TERMINATOR CHARACTER
1611 BEQ      PRG2B :RESEND MESSAGE
```

```
1612 006762 032737 000100 001374 BIT #BIT6,SRT ;PARITY ENABLED
1613 006770 001402 BEQ +6
1614 006772 004737 003656 JSR 7,GENPAR ;GENERATE PARITY
1615 006776 004537 005020 JSR 5,LINCON ;CHECK LINE CONNECTION
1616 007002 010177 172200 MOV %1,@TXBUF ;LOAD BUFFER
1617 007006 105777 172172 TSTB @TXCSR ;AND WAIT FOR CHARACTER
1618 007012 100375 BPL -4 ;TO BE TRANSMITTED
1619 007014 000756 BR PRG2C ;GET NEXT CHARACTER.
1620
1621 ;*****
1622 ;PRG3-PROGRAM TO RECEIVE A MESSAGE.
1623 ;*****
1623 007016 104000 PRG3: TYPE ;TYPE PROGRAM
1624 007020 013441 P3TIT ;TITLE
1625 007022 004537 004072 JSR 5,LINSEL
1626 007026 004737 004460 JSR 7,SETPAR ;GET PARAMETERS
1627 007032 012706 001176 PRG3A: MOV #STKPTR-2,%6 ;REPOSITION STACK POINTER
1628 007036 052777 000004 172134 BIS #BIT2,@RXCSR ;SET REQUEST TO SEND
1629 007044 004537 005020 JSR 5,LINCON ;MAKE LINE CONNECTION
1630 007050 104006 STRXV ;SET RECEIVER INTERRUPT
1631 007052 007134 RINT3 ;TO THIS ADDRESS
1632 007054 104007 STTXV ;SET TRANSMITTER INTERRUPT
1633 007056 007346 TINT3 ;TO THIS ADDRESS
1634 007060 005037 007546 CLR WORDS
1635 007064 013700 001234 MOV TPVTR,%0
1636 007070 012720 007500 MOV #TPINT,(0)+ ;LOAD TELEPRINTER VECTOR
1637 007074 013710 001236 MOV TPLVL,(0) ;AND PRIORITY
1638 007100 012701 015512 MOV #OUTBUF,%1 ;GET BUF ADD
1639 007104 052737 100000 007544 BIS #BIT15,TFLAG ;SET BIT 15
1640 007112 004737 007732 JSR 7,TCRLF ;SEND CRLF
1641 007116 052777 000140 172054 BIS #140,@RXCSR ;ENABLE RECEIVER INTERRUPTS
1642 007124 005037 177776 CLR PSW
1643 007130 000001 WAIT ;DO
1644 007132 000776 BR -2 ;NOTHING
1645 007134 017737 172040 001370 RINT3: MOV @RXCSR,RXCSRT ;GET RXCSR DATA
1646 007142 100461 BMI ERR3A ;BRANCH IF ERROR
1647 007144 105737 001370 TSTB RXCSRT ;TEST
1648 007150 100064 BPL ERR3B
1649 007152 005237 007546 INC WORDS
1650 007156 017737 172020 007550 MOV @RXBUF,RXBUFT ;GET DATA
1651 007164 113711 007550 MOV RB,RXBUFT,(1)
1652 007170 005737 007550 TST RXBUFT
1653 007174 100455 BMI ERR3C
1654 007176 105777 170766 TSTB @SRPTR ;ECHO OPTION SELECTED
1655 007202 100405 BMI RINT3A
1656 007204 105777 171774 TSTB @TXCSR
1657 007210 100375 BPL -4
1658 007212 111177 171770 MOVB (1),@TXBUF ;ECHO CHARACTER
1659 007216 023727 007546 001604 RINT3A: CMP WORDS,#900. ;END OF BUFFER ALLOWED
1660 007224 001411 BEQ RINT3B ;YES EXIT
1661 007226 005737 007544 TST TFLAG ;IS THIS THE FIRST
1662 007232 100441 BMI RINT3E ;CHARACTER BRANCH IF YES.
1663 007234 121103 CMPB (1),%3 ;LAST CHARACTER RECEIVED
1664 007236 001404 BEQ RINT3B
1665 007240 122127 000203 CMPB (1)+,#203 ;CONTROL C
1666 007244 001401 BEQ RINT3B
1667 007246 000002 RTI ;EXIT
```

```
1668 007250 005037 007546          RINT3B: CLR      WORDS
1669 007254 042777 000140 171716    BIC      #140,@RXCSR ;DISABLE RECEIVER
1670 007262 012701 015513          MOV      #OUTBUF+1,%1 ;INITIALIZE BUFFER POINTER
1671 007266 010102          MOV      %1,%2
1672 007270 052777 000100 171706    BIS      #BIT6,@TXCSR ;ENABLE TRANSMITTER
1673 007276 052777 000100 171720    BIS      #BIT6,@TPS  ;ENABLE TELEPRINTER
1674 007304 000002          RTI
1675 007306 104015          ERR3A:  ERRRX
1676 007310 014353          LFAIL
1677 007312 042777 000140 171660    BIC      #140,@RXCSR ;DISABLE RECEIVER
1678 007320 000644          BR       PRG3A
1679 007322 104015          ERR3B:  ERRRX      ;TYPE
1680 007324 013135          RINTM    ;ERROR MESSAGE
1681 007326 000002          RTI      ;EXIT
1682 007330 104015          ERR3C:  ERRRX
1683 007332 014371          ROVER
1684 007334 000002          RTI
1685
1686 007336 005037 007544          RINT3E: CLR      TFLAG
1687 007342 112103          MOVB    (1)+,%3
1688 007344 000002          RTI
1689
1690 007346 017737 171632 001366    TINT3:  MOV      @TXCSR,TXCSRT ;GET TXCSR DATA
1691 007354 105737 001366          TSTB    TXCSRT   ;TEST
1692 007360 100016          BPL     TINT3B
1693 007362 112177 171620          MOVB    (1)+,@TXBUF ;TRANSMIT CHARACTER
1694 007366 005237 007546          INC     WORDS
1695 007372 121103          CMPB    (1),%3    ;ALL CHARACTERS TRANSMITTED
1696 007374 001431          BEQ     TINT3C
1697 007376 023727 007546 001604    CMP     WORDS,#900.
1698 007404 001425          BEQ     TINT3C
1699 007406 121127 000203          CMPB    (1),#203  ;= CONTROL C
1700 007412 001422          BEQ     TINT3C
1701 007414 000002          RTI     ;RETURN TO MAIN PROGRAM
1702 007416 017737 171602 001372    TINT3B: MOV      @TPS,TEMP   ;SAVE TELEPRINTER STATUS
1703 007424 005077 171574          CLR     @TPS     ;DISABLE INTERRUPT
1704 007430 105777 171570          TSTB    @TPS     ;WAIT FOR
1705 007434 100375          BPL     .-4      ;TELEPRINTER TO FINISH
1706 007436 104014          ERRTX   ;TYPE
1707 007440 013156          TINTM   ;ERROR MESSAGE
1708 007442 105777 171556          TSTB    @TPS     ;WAIT FOR TELEPRINTER
1709 007446 100375          BPL     .-4      ;TO FINISH
1710 007450 013777 001372 171546    MOV     TEMP,@TPS ;RESTORE TELEPRINTER STATUS
1711 007456 000002          RTI     ;EXIT
1712
1713 007460 042777 000100 171516    TINT3C: BIC      #BIT6,@TXCSR ;DISABLE INTERRUPT
1714 007466 032777 000100 171530    BIT     #BIT6,@TPS ;IS TTY ACTIVE
1715 007474 001421          BEQ     PRG3EX
1716 007476 000002          RTI
1717
1718
1719 007500 112277 171522          TPINT:  MOVB    (2)+,@TPB  ;TYPE CHARACTER
1720 007504 121203          CMPB    (2),%3    ;WAS THIS THE LAST CHAR.
1721 007506 001404          BEQ     TPINTA
1722 007510 121227 000203          CMPB    (2),#203  ;= CONTROL C
1723 007514 001401          BEQ     TPINTA
```

```
1724 007516 000002 RTI
1725 007520 042777 000100 171476 TPINTA: BIC #BIT6,@TPS ;DISABLE INTERRUPT
1726 007526 032777 000100 171450 BIT #BIT6,@TXCSR ;IS TRANSMITTER ACTIVE
1727 007534 001401 BEQ .+4
1728 007536 000002 RTI ;EXIT
1729 007540 000137 007032 PRG3EX: JMP PRG3A
1730 007544 000000 TFLAG: 0
1731 007546 000000 WORDS: 0
1732 007550 000000 RXBUFT: 0
1733 ;*****
1734 ;PRG4-SPECIAL MESSAGE TRANSMIT ONLY THIS PROGRAM TRANSMITS
1735 ;*****
1736 ;MESSAGE SPIRAL PATTERN
1737 ;
1738 007552 104000 PRG4: TYPE ;TYPE PROGRAM
1739 007554 013477 P4TIT ;TITLE
1740 007556 004537 004072 JSR 5,LINSEL
1741 007562 004737 004460 JSR 7,SETPAR ;GO SET PARAMETERS
1742 007566 052777 000004 171404 BIS #BIT2,@RXCSR ;SET REQUEST TO SEND
1743 007574 012737 000110 007730 MOV #72,COLMN ;INIT PAGE WIDTH
1744 007602 012703 000040 MOV #40,%3 ;SET LINE START CHAR
1745 007606 004537 005020 PRG4A: JSR 5,LINCON ;GO MAKE LINE CONNECTION
1746 007612 004737 007732 JSR 7,TCRLF
1747 007616 010302 PRG4B: MOV %3,%2 ;GET FIRST CHARACTER
1748 007620 110201 PRG4C: MOVB %2,%1 ;GET CHARACTER
1749 007622 120127 000136 CMPB %1,#136 ;TERMINATOR CHARACTER
1750 007626 001003 BNE PRG4D ;RESEND MESSAGE
1751 007630 012702 000040 MOV #40,%2
1752 007634 000771 BR PRG4C
1753 007636 032737 000100 001374 PRG4D: BIT #BIT6,SRT ;PARITY ENABLED
1754 007644 001402 BEQ .+6
1755 007646 004737 003656 JSR 7,GENPAR ;GENERATE PARITY
1756 007652 004537 005020 JSR 5,LINCON ;CHECK LINE CONNECTION
1757 007656 010177 171324 MOV %1,@TXBUF ;LOAD BUFFER
1758 007662 105777 171316 TSTB @TXCSR ;AND WAIT FOR CHARACTER
1759 007666 100375 BPL .-4 ;TO BE TRANSMITTED
1760 007670 005202 INC %2 ;SET FOR NEXT CHAR
1761 007672 005337 007730 DEC COLMN ;ALL COLUMNS PRINTED?
1762 007676 001350 BNE PRG4C ;NO, GET NEXT CHAR
1763 007700 012737 000110 007730 MOV #72,COLMN ;RESET COLUMN COUNTER
1764 007706 004737 007732 JSR 7,TCRLF
1765 007712 005203 INC %3 ;UPDATE LINE START CHAR
1766 007714 120327 000136 CMPB %3,#136 ;LAST IN SET
1767 007720 001336 BNE PRG4B ;NO
1768 007722 012703 000040 MOV #40,%3 ;YES, RESET
1769 007726 000733 BR PRG4B ;GET NEXT CHARACTER.
1770 007730 000000 COLMN: 0
1771 ;
1772 ;SEND CR LF
1773 ;
1774 007732 112777 000015 171246 TCRLF: MOVB #15,@TXBUF ;SEND CR,LF
1775 007740 105777 171240 TSTB @TXCSR
1776 007744 100375 BPL .-4
1777 007746 112777 000012 171232 MOVB #12,@TXBUF
1778 007754 105777 171224 TSTB @TXCSR
1779 007760 100375 BPL .-4
```



```
1836 010216 005300          DEC      %0          ;ALL DATA MOVED?
1837 010220 001375          BNE      MOVITA      ;NO. RETURN
1838 010222 012737 004576 000004  MOV      #ERTP,MACHER
1839 010230 012737 000040 000006  MOV      #40,MACHER+2
1840 010236 000205          RTS      5          ;RETURN
1841
1842          ;SUBROUTINE TO LOAD ALL VECTORS
1843 010240 012701 011606  LDVECS: MOV      #RISRO,%1
1844 010244 012702 011120          MOV      #VECTAB,%2
1845 010250 012703 000010          MOV      #10,%3
1846 010254 012704 000037          MOV      #31,%4
1847 010260 032712 000001  LDVECB: BIT      #BIT0,(2)          ;DOES THIS VECTOR EXIST
1848 010264 001002          BNE      LDVEC1      ;NO, SKIP LOADING
1849 010266 010172 000000  LDVEC1: MOV      %1,%(2)          ;LOAD VECTOR
1850 010272 060301          ADD      %3,%1
1851 010274 005722          TST      (2)+
1852 010276 005304          DEC      %4
1853 010300 001367          BNE      LDVECB
1854 010302 000207          RTS      7
1855
1856 010304 012701 012176  LDTVEC: MOV      #TISRO,%1
1857 010310 012702 011120          MOV      #VECTAB,%2
1858 010314 012703 000010          MOV      #10,%3
1859 010320 012704 000037          MOV      #31,%4
1860 010324 032712 000001  LDTVED: BIT      #BIT0,(2)          ;DOES THIS VECTOR EXIST
1861 010330 001003          BNE      LDVEC2      ;NO, SKIP LOADING
1862 010332 011200          MOV      (2),%0
1863 010334 010160 000004  LDVEC2: MOV      %1,%(0)
1864 010340 060301          ADD      %3,%1
1865 010342 005722          TST      (2)+
1866 010344 005304          DEC      %4
1867 010346 001366          BNE      LDTVED
1868 010350 000207          RTS      7
1869
1870          ;ROUTINE TO LOAD PRIORITY LEVEL 7 IN VECTOR +2
1871 010352 012701 011120  LDPRI: MOV      #VECTAB,%1          ;GET BASE VECTOR
1872 010356 012702 000340          MOV      #340,%2          ;GET LEVEL 7
1873 010362 012703 000037          MOV      #31,%3          ;LOAD COUNTER
1874 010366 032711 000001  LDPRIA: BIT      #BIT0,(1)          ;DOES THIS VECTOR EXIST
1875 010372 001003          BNE      LDPRIX      ;NO SKIP LOADING
1876 010374 011104          MOV      (1),%4          ;LOAD VECTOR +2
1877 010376 010264 000002  LDPRIX: MOV      %2,%(4)
1878 010402 005721          TST      (1)+          ;POINT TO NEXT VECTOR
1879 010404 005303          DEC      %3          ;DECREMENT COUNTER
1880 010406 001367          BNE      LDPRIA
1881 010410 000207          RTS      7
1882
1883
1884
1885
1886          ;*****
1887
1888          ;CHECK SWITCH REGISTER ROUTINE. CHECKS FOR ^G TO ALLOW CHANGING
1889          ;OF LOC 176. ROUTINE IS ENTERED AT CNTLU FOR START UP PURPOSES.
1890          ;WHEN A ^G IS GIVEN, THE PROGRAM ENTERS AT CKSWR. THE PROGRAM
1891          ;GETS CONTENTS OF SOFT. SWITCH REG., TYPES IT OUT, AND THEN SEEKS
```

```

1892 :NEW DATA FROM OPERATOR. ONCE DATA IS SUPPLIED, IT INSERTS THIS
1893 :DATA INTO THE SOFT. SWITCH REG. AND RESUMES OPERATION IN THE
1894 :MAIN PROGRAM. INCORRECT ENTRIES (SUCH AS 8,9,LETTERS) ARE DELETED
1895 :AND THE PROCESS RESTARTED. TYPING ^U ALLOWS THE PRESENT ENTRY
1896 :TO BE DELETED AND THE PROCESS RESTARTED.
1897 :
1898 :
1899 :*****
1900 :
1901 :
1902 :
1903 010412 CHGC4:
1904 010412 022737 000176 000170 CKSWR: CMP #SWREG,SRPTR ;SOFTWARE SW REG PRES?
1905 010420 001133 BNE OUT ;NO, GET OUT
1906 010422 105777 170572 TSTB @TKS ;YES, IS CHARACTER READY?
1907 010426 100130 BPL OUT ;IF NOT, GET OUT
1908 010430 017737 170566 001430 MOV @TKB,TIB ;STORE BUFFER
1909 010436 042737 177600 001430 BIC #177600,TIB ;STRIP OFF GARBAGE
1910 010444 022737 000007 001430 CMP #7,TIB ;IS IT A ^G
1911 010452 001116 BNE OUT ;IF NOT GET OUT
1912 010454 104000 TYPE ;ECHO ^G
1913 010456 015455 CNTG
1914 010460 005077 170542 CLR @TPB
1915 010464 104000 CNTLU: TYPE ;ALLOW SWR= TO BE TYPED
1916 010466 015463 SWR
1917 010470 017746 167474 MOV @SRPTR,-(SP) ;MOV CONTENTS OF SWR
1918 010474 004737 010730 JSR PC,TYPOC ;OCTAL TYPE OUT ROUTINE
1919 010500 022600 CMP (SP)+,R0 ;CORRECT STACK POINTER
1920 010502 104000 TYPE ;ALLOW NEW= TO BE TYPED
1921 010504 015473 NEW
1922 010506 005037 001426 CLR TEMPST ;CLEAR TEMP STORAGE LOC
1923 010512 012737 000007 001416 MOV #7,COUNT1 ;SET UP TO ACCEPT 7 CHAR
1924 010520 105777 170474 1$: TSTB @TKS ;IS CHARACTER THERE?
1925 010524 100375 BPL 1$ ;IF NOT, TRY AGAIN
1926 010526 117737 170470 001430 MOVB @TKB,TIB ;PICKUP CHARACTER
1927 010534 105777 170464 8$: TSTB @TPS ;CHECK PRINTER STATUS
1928 010540 100375 BPL 8$ ;NOT READY, TRY AGAIN
1929 010542 113777 001430 170456 MOVB TIB,@TPB ;PRINT IT
1930 010550 042737 177600 001430 BIC #177600,TIB ;STRIP OFF GARBAGE
1931 010556 122737 000025 001430 CMPB #25,TIB ;IS IT A ^U
1932 010564 001001 BNE 2$ ;BRANCH IF NOT
1933 010566 000736 3$: BR CNTLU ;START OVER
1934 010570 122737 000015 001430 2$: CMPB #15,TIB ;IS IT A <CR>
1935 010576 001006 BNE 4$ ;BRANCH IF NOT
1936 010600 104000 TYPE ;TYPEOUT <CR> AND <LF>
1937 010602 015510 SCRLF
1938 010604 022737 000007 001416 CMP #7,COUNT1 ;WAS <CR> FIRST CHAR
1939 010612 001033 BNE 7$ ;CHANGE SWREG IF NOT FIRST <CR>
1940 010614 122737 000060 001430 4$: CMPB #60,TIB ;IS IT LESS THAN 0
1941 010622 003004 BGT 5$ ;GO TO ? ROUTINE IF SO
1942 010624 122737 000067 001430 CMPB #67,TIB ;IS IT GREATER THAN 7
1943 010632 002003 BGE 6$ ;GO TO ? ROUTINE IS SO
1944 010634 104000 5$: TYPE ;SET UP FOR ? TYPEOUT
1945 010636 015503 QUEST
1946 010640 000752 BR 3$ ;START INPUT STRING OVER
1947 010642 006337 001426 6$: ASL TEMPST ;MULTIPLY BY TEN
  
```


2004 011102 002402
2005 011104 005204
2006 011106 000742
2007 011110 012605
2008 011112 012604
2009 011114 012603
2010 011116 000207
2011
2012
2013
2014
2015 011120 000301
2016 011122 000311
2017 011124 000321
2018 011126 000331
2019 011130 000341
2020 011132 000351
2021 011134 000361
2022 011136 000371
2023 011140 000401
2024 011142 000411
2025 011144 000421
2026 011146 000431
2027 011150 000441
2028 011152 000451
2029 011154 000461
2030 011156 000471
2031 011160 000501
2032 011162 000511
2033 011164 000521
2034 011166 000531
2035 011170 000541
2036 011172 000551
2037 011174 000561
2038 011176 000571
2039 011200 000601
2040 011202 000611
2041 011204 000621
2042 011206 000631
2043 011210 000641
2044 011212 000651
2045 011214 000661
2046
2047 000000
2048 000000
2049 011216 000037
2050
2051
2052
2053
2054 000000
2055 000000
2056 011314 000037
2057
2058
2059

BLT 6\$
INC R4
BR 2\$
6\$: MOV (SP)+,R5
MOV (SP)+,R4
MOV (SP)+,R3
RTS PC
:*****

:BR IF DONE
:INSURE LAST DIGIT ISN'T A BLANK
:GO DO THE LAST DIGIT
:RESTORE R5
:RESTORE R4
:RESTORE R3
:RETURN FROM INTERRUPT PC

:VECTOR ASSIGNMENT TABLE
VECTAB:

301
311
321
331
341
351
361
371
401
411
421
431
441
451
461
471
501
511
521
531
541
551
561
571
601
611
621
631
641
651
661

:LINE 0 VECTOR
:LINE 1 VECTOR
:LINE 2 VECTOR
:LINE 3 VECTOR
:LINE 4 VECTOR
:LINE 5 VECTOR
:LINE 6 VECTOR
:LINE 7 VECTOR
:LINE 10 VECTOR
:LINE 11 VECTOR
:LINE 12 VECTOR
:LINE 13 VECTOR
:LINE 14 VECTOR
:LINE 15 VECTOR
:LINE 16 VECTOR
:LINE 17 VECTOR
:LINE 20 VECTOR
:LINE 21 VECTOR
:LINE 22 VECTOR
:LINE 23 VECTOR
:LINE 24 VECTOR
:LINE 25 VECTOR
:LINE 26 VECTOR
:LINE 27 VECTOR
:LINE 30 VECTOR
:LINE 31 VECTOR
:LINE 32 VECTOR
:LINE 33 VECTOR
:LINE 34 VECTOR
:LINE 35 VECTOR
:LINE 36 VECTOR

:DL11-E REGISTER ADDRESSES

N=0
A=0
RCSR: .REPT 31.
RRCV \N,\A
N=N+10
A=A+1
.ENDR
N=0
A=0
RBUF: .REPT 31.
RBUF \N,\A
N=N+10
A=A+1

2340	015232	020065	044124	020105	
2341	015240	044514	042516	047040	
2342	015246	046525	042502	020122	
2343	015254	043117	042040	053105	
2344	015262	041511	020105	042101	
2345	015270	051104	051505	020123	
2346	015276	047524	041040	105	
2347	015303	040	047515	044504	.ASCII ' MODIFIED @'
2348	015310	044506	042105	020040	
2349	015316	020040	100		
2350	015321	045	054524	042520	MMOD2: .ASCII '%TYPE IN NEW RXCSR DEVICE ADDRESS @'
2351	015326	044440	020116	042516	
2352	015334	020127	054122	051503	
2353	015342	020122	042504	044526	
2354	015350	042503	040440	042104	
2355	015356	042522	051523	020040	
2356	015364	020040	100		
2357	015367	045	054524	042520	MMOD3: .ASCII '%TYPE IN 177777 TO CHANGE ANOTHER'
2358	015374	044440	020116	033461	
2359	015402	033467	033467	020040	
2360	015410	047524	041440	040510	
2361	015416	043516	020105	047101	
2362	015424	052117	042510	122	
2363	015431	040	042504	044526	.ASCII ' DEVICE ADDRESS @'
2364	015436	042503	040440	042104	
2365	015444	042522	051523	020040	
2366	015452	020040	100		
2367					:***** CHGCS *****
2368	015455	040	057040	020107	CNTG: .ASCII / ^G @/
2369	015462	100			
2370	015463	040	051440	051127	SWR: .ASCII / SWR= @/
2371	015470	020075	100		
2372	015473	040	047040	053505	NEW: .ASCII / NEW= @/
2373	015500	020075	100		
2374	015503	040	037440	040040	QUEST: .ASCII / ? @/
2375	015510	040045			SCRLF: .ASCII /%@/
2376					:*****
2377					.EVEN
2378	015512	000000			OUTBUF: OPEN
2379		017462			. =OUTBUF+1000.
2380	017462	000000			INBUF: OPEN
2381		021432			. =INBUF+1000.
2382		015656			BUFF=OUTBUF+100.
2383	021432	000001			DEND: .END

CONFIG	001332	674#	1363	1376	1435*	1436*	1455	1485	1522	1534
CONN	006326	1438	1472	1513#						
COUNT	001324	671#	1036*	1052*	1053	1117*	1121*	1125*	1129*	1135*
COUNT1	001416	704#	1923*	1938	1952*					
CRNUM	014112	912	2224#							
CRXTX	003030	957	960#							
CRXTXA	003102	960*	961*	969#						
CRXTXB	003104	956*	959*	970#						
CRXTXC	003110	963	972#							
CSB	014062	907	2219#							
CSRADD	013126	908	909	1417	1426	2130#				
CTRD	001364	688#	911	1178*	1181*	1372*	1381*	1382	1400*	1401
CWAS	014074	906	2221#							
DATCHK=	104004	540#	1380	1395	1399					
DCERR	005610	1342	1414#							
DECVAL	004452	1198	1233#							
DELAY =	104016	550#	1313	1441	1476					
DEND	021432	2383#								
DIGIT	004434	1216*	1219*	1222*	1223	1226#				
DISCON	006312	1424	1448	1482	1508#					
DISPLA	000174	597#	622							
DISPRE	000172	596#	622*							
DLCNT	003604	1072*	1074	1084#						
DLY	003544	669	1072#							
DLYA	003562	1076#	1081							
DLYB	003566	1077#	1078							
DLYC	003600	1075	1082#							
DOIT	004020	1119	1123	1127	1131	1132#				
DONE	004054	1138	1140#							
DTCHK	002470	659	902#							
DTCHKA	002566	904	916#							
DTERR	014001	1062	2210#							
ECDAT	003424	1041#	1042							
EHALT =	104010	544#	937	972						
EHLT	002456	663	896#							
EHLTA	002466	897	899#							
EIGHT	003710	1110	1116#							
EMTA	002312	852#								
EMTINT	002300	494	849#							
EMTTAB	001264	655#	854							
EMO	013176	933	968	2138#						
ENDPAS	014117	1409	1827	2225#						
ERR	002570	658	918#							
ERRA	002640	921	926#							
ERRB	002702	918*	919*	922*	923*	924*	934#			
ERRC	002710	927	937#							
ERRCNT	010172	1801*	1822*	1829#						
ERRD	002720	928*	929*	931	940#	964*	965*	967		
ERRE	002722	920*	925*	938	941#					
ERROR =	104003	539#	1345	1446	1481	1489	1498	1520	1814	1821
ERROR1=	104013	547#	908	914						
ERRRX =	104015	549#	1319	1416	1425	1675	1679	1682		
ERRTX =	104014	548#	1706							
ERR1	002612	666	922#							
ERR3A	007306	1646	1675#							
ERR3B	007322	1648	1679#							

ERR3C	007330	1653	1682#							
ERTP	004576	482	484	486	488	496	718	772	1257#	1838
ERTPA	004646	1265#	1284							
FILL	004224	1177#	1405							
FILLA	004232	1179#	1182							
FILL1	001422	706#	1969*	1979						
FINISH	005554	1384	1403#							
FIVE	003776	1115	1128#							
FMAP	001350	682#	752*	1283	1288*					
FNONE	001346	681#	725*	769*	774					
FORMAD	004762	751	1292#							
FROMPC	001342	679#	1264*	1270	1281*					
FTITLE	001344	680#	714*	720	724*	778*	845*			
GENPAR	003656	1109#	1614	1755	1808					
INBUF	017462	1355	1388	1419	2380#	2381				
INBUFP	001376	693#	1353*	1354*	1355	1389*	1419*			
INCPRG	002432	653	654	885#						
INDAT	003400	1035#	1064							
INFIL	004220	1176#	1580							
LDLINE	015024	1147	2314#							
LDPRI	010352	1562	1584	1871#						
LDPRIA	010366	1874#	1880							
LDPRIX	010402	1875	1878#							
LDTVEC	010304	1563	1585	1856#						
LDTVED	010324	1860#	1867							
LDVECB	010260	1847#	1853							
LDVECS	010240	1564	1586	1843#						
LDVEC1	010272	1848	1850#							
LDVEC2	010340	1861	1864#							
LFAIL	014353	1676	2258#							
LINCA	005036	1305#	1321							
LINCB	005054	1309#	1311							
LINCF	005134	1318	1322#							
LINCHM	014146	1320	1797	2232#						
LINCON	005020	1302#	1607	1615	1629	1745	1756			
LINE	001330	673#	1338*	1429	1466*	1468				
LINENO	001354	684#	726*	730*	747	759				
LINEUP	005152	1304	1326#							
LINMAD	014176	1325	1453	1800	2236#					
LINSA	004134	1157#	1160							
LINSEL	004072	1146#	1604	1625	1740	1786				
MACHER	000004	484#	718*	719*	727*	728*	772*	773*	1838*	1839*
MAKCON	014020	1308	1570	1592	1791	2213#				
MANUAL =	100000	509#								
MAPA	001534	730#	740	771						
MAPEND	001744	732	772#							
MAPERR	001766	776#								
MAPNE	001564	727	738#							
MAPOK	001574	737	741#							
MAPOKA	001706	758	762#							
MAPVEC	004704	490	1279#							
MDADR	012723	744	2103#							
MFROM	013115	1271	2128#							
MLINE	012715	748	768	2101#						
MMODD	015153	822	2331#							
MMODX	015131	814	2327#							

CZDLBCO DL11-E ON LINE TSET
CZDLBC.P11 19-JUL-79 15:06

MACY11 30A(1052) 19-JUL-79 15:10 PAGE 59
CROSS REFERENCE TABLE -- MACRO NAMES

SEQ 0057

CNVOA	554#	905	906	907	930	955	958	966	1170	1240	1428	1454	1467
ISR	561#	2080											
ISRT	567#	2085											
RBUF	577#	2061											
RRCV	573#	2054											
TBUF	585#	2075											
TXMT	581#	2068											

. ABS. 021432 000

ERRORS DETECTED: 0

,CZDLBC.LST/CRF/SOL/NL:TOC=CZDLBC.P11
RUN-TIME: 10 17 3 SECONDS
RUN-TIME RATIO: 91/31=2.9
CORE USED: 10K (19 PAGES)