

# TM11/TU10

DATA RELIABILITY (9 TRACK)  
MD-11-DZTMB-D

EP-DZTMB-D-DL-A


OCT 1976

COPYRIGHT ©1975

**digital**

FICHE 1 OF 1

Made in U.S.A.

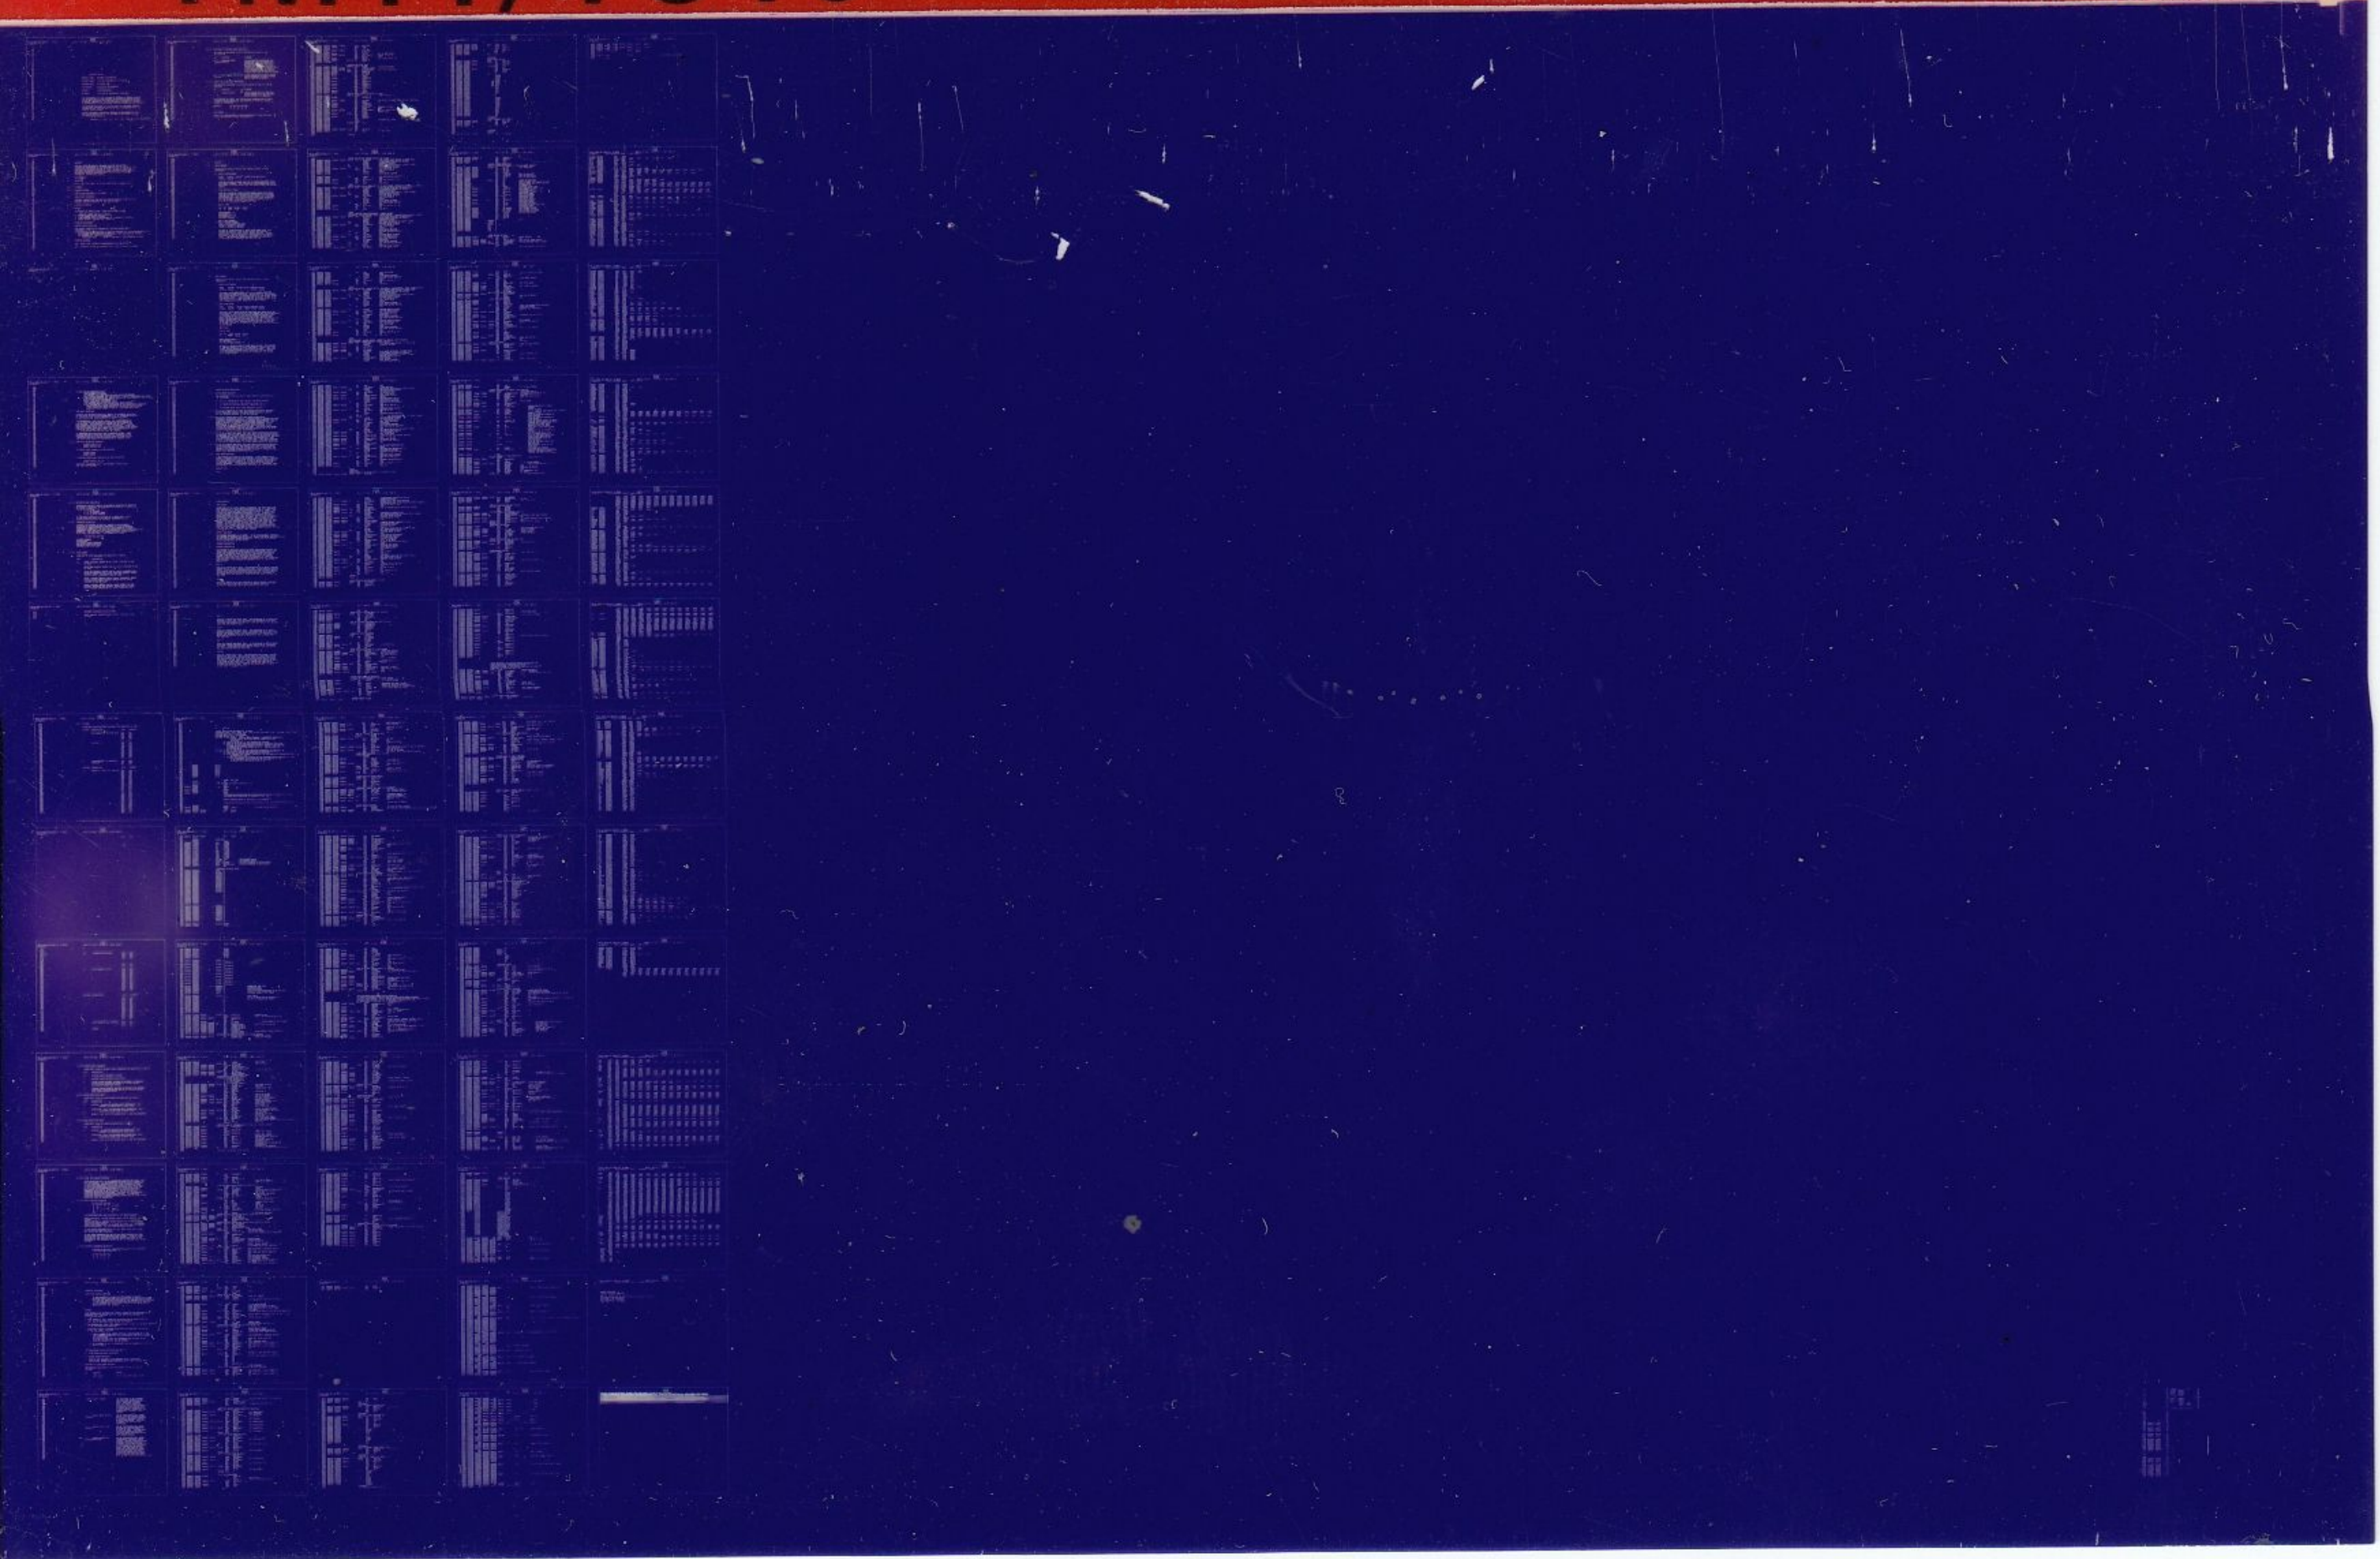



47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102

1. ABSTRACT

THE TM11 DATA RELIABILITY PROGRAM COLLECTS STATISTICAL INFORMATION PERTAINING TO THE DATA RELIABILITY OF THE TM11, TU10 WHEN RUN FOR EXTENDED PERIODS OF TIME. IT USES A NUMBER OF DIFFERENT PARAMETERS CONTROLLING DATA PATTERNS, RECORD LENGTHS, WRITING AND READING SEQUENCES AND STOPPING MODES (NONSTOP, START-STOP, RANDOM STALL DELAY).

2. REQUIREMENTS

2.1 EQUIPMENT

PDP-11 WITH TM11 AND 1 TO 8 TU10 TAPE UNITS (9 CHANNEL ONLY)

2.2 STORAGE

2.2.1 PROGRAM STORAGE

THE ROUTINE REQUIRES 4K OF MEMORY.

2.3 PRELIMINARY PROGRAMS

THE TM11 INSTRUCTION TEST AND TM11 DRIVE FUNCTION TIMER MUST RUN PROPERLY BEFORE ATTEMPTING TO USE THIS PROGRAM.

3. LOADING PROCEDURE

3.1 METHOD

PROCEDURE FOR NORMAL BINARY TAPES SHOULD BE FOLLOWED:

- 1. ABSOLUTE LOADER MUST BE IN MEMORY.
- 2. PLACE BINARY TAPE IN READER.
- 3. LOAD ADDRESS \*7500 (\* DETERMINED BY LOCATION OF LOADER)
- 4. PRESS "START" (PROGRAM WILL LOAD).

4. STARTING PROCEDURE

4.1 CONTROL SWITCH SETTINGS

FOR INITIAL OPERATION OF PROGRAM ALL SWITCHES SHOULD BE = 0 (OR DOWN).

\*\*\*IF SOFTWARE SWITCH REGISTER IS USED THE PROGRAM WILL ALLOW MODIFICATION OF THE SOFTWARE SWITCH REGISTER IMMEDIATELY AFTER THE START OF PROGRAM.

THE PROGRAM WILL TYPE THE FOLLOWING\*  
SWR=XXXXXX NEW= (REFER TO SECTION 5.1 FOR OPERATOR OPTIONS.)

4.2 STARTING ADDRESS

200 - BASIC TEST (AUTOMATIC PARAMETER AND UNIT SELECTION)

204 - OPERATOR CONTROLLED PARAMETER TEST (WITH 4K MEMORY AVAILABLE)

001

TM-11 DATA RELIABILITY 9 TRACK  
02TMB0.P11

MACY11 27(732) 10-SEP-76 12:08 PAGE 3

103

210 - " " " " " " 9K " " )

104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154

4.3 PROGRAM AND/OR OPERATOR ACTION  
LOAD PROGRAM INTO MEMORY  
SET DESIRED TU10 TAPE UNITS ON-LINE AND WRITE ENABLED  
LOAD STARTING ADDRESS 200 (204 OR 210 TO SELECT PARAMETERS AND UNITS)  
START PROGRAM-PROGRAM WILL BEGIN TESTING FOR LOAD ADDRESS OF 200 OTHERWISE  
SELECT TAPE UNITS (REFERENCE 4.3.1)  
SELECT PARAMETERS (REFERENCE 4.3.2)  
TYPE CARRIAGE RETURN AND PROGRAM WILL BEGIN TESTING.  
\*\*\*THE PROGRAM WILL ALLOW THE LOADING OF SOFTWARE SWITCH REGISTER  
AFTER PROGRAM HAS BEEN STARTED BY TYPING OUT THE FOLLOWING  
SWR=XXXXXX NEW= (REFER TO SECT 5.1 FOR OPERATOR ACTION).

4.3.1 TAPE UNIT SELECTION  
STARTING THE PROGRAM AT 200 WILL RESULT IN AUTOMATIC SELECTION  
OF THE UNITS TO BE TESTED (REFERENCE 4.3.1.2) OTHERWISE STARTING  
AT 204 OR 210 WILL ALLOW OPERATOR TO SELECT THE UNITS.  
THE PROGRAM WILL TYPE "SELECT UNITS". ANY CONFIGURATION OF  
1 TO 8 UNITS MAY BE SELECTED BY TYPING THE UNIT NUMBERS ON  
THE TELETYPE. ANY SEQUENCE OF NUMBERS MAY BE TYPED. AFTER  
EACH NUMBER IS TYPED A COMMA (,) WILL BE PRINTED. TYPING THE  
SAME UNIT NUMBER TWICE WILL CAUSE THAT UNIT NUMBER TO BE DELETED.  
TYPING ANY KEY OTHER THAN 0 THRU 7 WILL CAUSE A QUESTION MARK  
(?) TO BE PRINTED AND THAT KEY WILL BE IGNORED.  
TO TERMINATE UNIT SELECTION TYPE A CARRIAGE RETURN. WHEN  
CARRIAGE RETURN IS TYPED THE PROGRAM WILL CONTINUE TO THE  
"PARAMETER SELECTION" UNLESS NO UNITS WERE SELECTED AND IN  
THAT EVENT WILL RETURN TO THE BEGINNING OF "SELECT UNITS".

4.3.1.1 TAPE UNIT SELECTION EXAMPLES  
SELECT UNITS 3,4,5  
SELECT UNITS 5,3,4  
IN EITHER CASE, UNITS 3,4,5 ARE SELECTED.  
SELECT UNITS  
SELECT UNITS  
A CARRIAGE RETURN WAS TYPED WITH NO UNITS SELECTED.  
SELECT UNITS 1,9?,1,2  
ONLY UNIT 2 SELECTED, UNIT 1 WAS DELETED (TYPED TWICE)  
AND THE 9 WAS IGNORED.

155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210

4.3.1.2 AUTOMATIC UNIT SELECTION

STARTING AT 200 WILL RESULT IN AUTOMATIC SELECTION OF UNITS TO BE TESTED. A UNIT WILL BE SELECTED FOR TESTING IF IT MEETS THE FOLLOWING CRITERIA:

1. IT IS ON-LINE
2. IT IS NINE(9) TRACK
3. IT IS WRITE ENABLED

IF THE ABOVE CRITERIA IS NOT MEET BY A LEAST ONE(1) UNIT OPERATOR SELECTION WILL BE REQUIRED (REFERENCE 4.3.1).

4.3.2 PARAMETER SELECTION

STARTING THE PROGRAM AT 200 WILL RESULT IN AN AUTOMATIC SELECTION OF TEST PARAMETERS (REFERENCE 4.3.2.8) OTHERWISE STARTING AT ADDRESS 204 OR 210 WILL ALLOW OPERATOR TO SELECT PARAMETERS. THERE ARE FIVE TYPES OF PARAMETERS TO BE CONTROLLED BY THE OPERATOR. THEY INCLUDE: TEST NUMBER, PATTERN, RECORD LENGTH, WRITE MODE, AND READ MODE. THE PROGRAM WILL PRINT:

"TST PAT RLS WMO RMO"

TST=TEST NUMBER  
PAT=PATTERN  
RLS=RECORD LENGTH SEQUENCE  
WMO=WRITE START/STOP MODE  
RMO=READ START/STOP MODE

4.3.2.1 TEST NUMBER

THERE ARE 6 TESTS AVAILABLE FOR SELECTION (0 THRU 5).

TEST	DESCRIPTION
0	WRITE 1 RECORD, REPEAT ON ALL UNITS, CONTINUE TO END OF TAPE.
1	WRITE 256 RECORDS, REPEAT FOR ALL UNITS, CONTINUE TO END OF TAPE.
2	WRITE 256 RECORDS, REPEAT FOR ALL UNITS, BACKSPACE 256 RECORDS, REPEAT FOR ALL UNITS, READ 256 RECORDS, REPEAT FOR ALL UNITS, CONTINUE TO END OF TAPE.
3	WRITE 1 RECORD, REPEAT FOR ALL UNITS, BACKSPACE, REPEAT FOR ALL UNITS, READ 1 RECORD, REPEAT FOR ALL UNITS, CONTINUE TO END OF TAPE.
4	WRITE 1 RECORD, REPEAT FOR ALL UNITS, REPEAT FOR 256 RECORDS, BACKSPACE 256 RECORDS, REPEAT FOR ALL UNITS, READ 1 RECORD, REPEAT FOR ALL UNITS, REPEAT FOR 256

GO1

MACY11 27(732) 10-SEP-76 12:08 PAGE 6

TM-11 DATA RELIABILITY 9 TRACK  
DZTMBD.P11

211  
212  
213  
214  
215

RECORDS, CONTINUE TO END OF TAPE.

5 READ 1 RECORD, REPEAT FOR ALL UNITS, CONTINUE TO END  
OF TAPE.

4.3.2.2 PATTERN

THERE ARE 8 DATA PATTERNS AVAILABLE FOR SELECTION (0 THRU 7)

PATTERN	DESCRIPTION	DATA	CHANNELS
0	HALF FREQUENCY, OUTSIDE SKEW	010 004 010 004 ETC.	001 400 001 400 ETC.
1	SLIDING "I"	000 200 100 040 020 010 004 002 001 ETC.	040 004 010 020 100 001 400 002 200 ETC.
	HIGH FREQUENCY, ALTERNATING CHANNELS	274 274 ETC.	525 525 ETC.

PATTERN	DESCRIPTION	DATA	CHANNELS
3	THREE 0'S, THRU 1'S, THRU 0'S	037 037 037 300 300 300 076 076 076 201 201 201 174 174 174 003 003 003 370 370 370 007 007 007 360 360 360	703 703 703 054 054 054 523 523 523 244 244 244 531 531 531 242 242 242 135 135 135 602 602 602 174 174 174

216  
217  
218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240  
241  
242  
243  
244  
245  
246  
247  
248  
249  
250  
251  
252  
253  
254  
255  
256  
257  
258  
259  
260  
261  
262  
263  
264  
265  
266  
267  
268  
269  
270  
271



101

TM-11 DATA RELIABILITY 9 TRACK  
DZTMBD.P11

MACY11 27(732) 10-SEP-76 12:08 PAGE 8

272

ETC. ETC.

273  
274  
275  
276  
277  
278  
279  
280  
281  
282  
283  
284  
285  
286  
287  
288  
289  
290  
291  
292  
293  
294  
295  
296  
297  
298  
299  
300  
301  
302  
303  
304  
305  
306  
307  
308  
309  
310  
311  
312  
313  
314  
315  
316  
317  
318  
319  
320  
321  
322  
323

4	INCREMENTING PATTERN	000	040
		001	200
		002	002
		003	202
		.	.
		.	.
		377	777
		ETC.	ETC.

5	EACH CHANNEL 3 BITS	000	040
		000	040
		000	040
		200	004
		200	004
		200	004
		100	010
		100	010
		100	010
		040	020
		040	020
		040	020
		020	100
		020	100

PATTERN DESCRIPTION	DATA	CHANNELS
	020	100
	010	001
	010	001
	010	001
	004	400
	004	400
	004	400
	002	002
	002	002
	002	002
	001	200
	001	200
	001	200
	ETC.	ETC.

6	HIGH FREQUENCY ALL CHANNELS	377	777
		377	777
		ETC.	ETC.

7	RANDOM	?	?
---	--------	---	---

324  
325  
326  
327  
328  
329  
330  
331  
332  
333  
334  
335  
336  
337  
338  
339  
340  
341  
342  
343  
344  
345  
346  
347  
348  
349  
350  
351  
352  
353  
354  
355  
356  
357  
358  
359  
360  
361  
362  
363  
364  
365  
366  
367  
368  
369  
370  
371  
372  
373

4.3.2.3 RECORD LENGTH SEQUENCE

THERE ARE 4 TYPES OF RECORD LENGTH SEQUENCES FOR SELECTION (0 THRU 3)

RLS	DESCRIPTION
0	MINIMUM LENGTH RECORDS (4 BYTES)
1	MAXIMUM LENGTH RECORDS (1024 BYTES)
2	VARYING LENGTH RECORDS, MINIMUM TO MAXIMUM (1ST RECORD=4 BYTES, EACH SUCCESSIVE RECORD IS 4 BYTES LONGER UNTIL 256TH RECORD=1024 BYTES)
3	VARYING LENGTH RECORDS, MAXIMUM TO MINIMUM (1ST RECORD=1048 BYTES, EACH SUCCESSIVE RECORD IS 4 BYTES SHORTER UNTIL 256TH RECORD=4 BYTES)

4.3.2.4 WRITE START/STOP MODE

THERE ARE 3 TYPES OF WRITE MODES FOR SELECTION (0 THRU 2)

WMO	DESCRIPTION
0	NONSTOP - NO WAITING BETWEEN WRITE OPERATIONS. NEW COMMAND IS ISSUED WHEN CU READY SETS.
1	START/STOP - FULL STOP BETWEEN WRITE OPERATIONS. NEW COMMAND IS ISSUED WHEN TU READY SETS.
2	RANDOM - FULL STOP WITH RANDOM DELAY (1-256 MILLISECONDS)

4.3.2.5 READ START/STOP MODE

THERE ARE 3 TYPES OF MODES FOR SELECTION (0 THRU 2)

RMO	DESCRIPTION
0	NONSTOP - NO WAITING BETWEEN READ OPERATIONS. NEW COMMAND IS ISSUED WHEN CU READY SETS.
1	START/STOP - FULL STOP BETWEEN READ OPERATIONS. NEW COMMAND IS ISSUED WHEN TU READY SETS.
2	RANDOM - FULL STOP WITH RANDOM DELAY (1-256 MILLISECONDS)

374  
375  
376  
377  
378  
379  
380  
381  
382  
383  
384  
385  
386  
387  
388  
389  
390  
391  
392  
393  
394  
395  
396  
397  
398  
399  
400  
401  
402  
403  
404  
405  
406  
407  
408  
409  
410  
411  
412  
413  
414  
415  
416  
417  
418  
419  
420  
421  
422  
423  
424  
425  
426  
427

4.3.2.6 FINAL TEST SELECT APPROVAL

AFTER SELECTING RMO, IF ALL PARAMETERS SELECTED ARE LEGAL, "OK" WILL BE PRINTED. IF THE PARAMETERS SELECTED STILL CORRESPOND TO THE OPERATORS INTENTIONS HE MUST TYPE A CARRIAGE RETURN TO SAVE THE PARAMETERS. TYPING ANY OTHER KEY NOW, OR IN FACT AT ANY TIME DURING PARAMETER SELECTION TYPING AN ILLEGAL KEY WILL CAUSE THE PRESENT PARAMETERS TO BE DELETED AND A NEW PARAMETER SELECTION TO BE INITIATED. UP TO TEN SETS OF PARAMETER SELECTIONS CAN BE MADE. EACH SET WILL BE EXECUTED AFTER THE PREVIOUS SET REACHES END OF TAPE. TO TERMINATE PARAMETER SELECTION A SECOND CARRIAGE RETURN MUST BE TYPED AFTER SELECTING A SET OF PARAMETERS.

4.3.2.7 TEST SELECTION EXAMPLES

TST	PAT	RLS	WMO	RMO	
3	2	1	0	0	OK (CR)
3	K?				
0	0	2	2	2	OKX?
0	1	2	1	0	OK (CR)

(CR)

TWO PARAMETERS SETS WERE SELECTED BY THE ABOVE SEQUENCE

TEST3, PATTERN 2, MAXIMUM RECORD LENGTH, WRITE NONSTOP, AND READ NONSTOP.

TEST 0, PATTERN 1, VARYING RECORD LENGTH (MIN TO MAX), WRITE START/STOP, READ NONSTOP.

(NOTE: EVEN THOUGH TEST 0 IS A WRITE ONLY TEST, ALL PARAMETERS MUST BE SATISFIED.) (IN THIS CASE RMO HAS NO EFFECT)

IN THE SECOND PARAMETER SET A "K" WAS TYPED WHICH WAS ILLEGAL AND THE SET WAS REINITIALIZED.

IN THE THIRD PARAMETER SET AN "X" WAS TYPED INSTEAD OF A CARRIAGE RETURN AND THE PARAMETERS WERE IGNORED. AFTER AT LEAST ONE GOOD SET WAS SELECTED A CARRIAGE RETURN WAS TYPED AT THE BEGINNING OF THE PARAMETER SELECTION AND THE PROGRAM WOULD START TESTING.

4.3.2.8 AUTOMATIC PARAMETER SELECTION

STARTING AT 200 WILL CAUSE THE FOLLOWING TEST PARAMETERS TO BE SELECTED AUTOMATICALLY :

TST	PAT	RLS	WMO	RMO
3	6	1	1	1
4	0	2	2	2
2	7	2	2	2

428  
429  
430  
431  
432  
433  
434  
435  
436  
437  
438  
439  
440  
441  
442  
443  
444  
445  
446  
447  
448  
449  
450  
451  
452  
453  
454  
455  
456  
457  
458  
459  
460  
461  
462  
463  
464  
465  
466  
467  
468  
469  
470  
471  
472  
473  
474  
475  
476  
477  
478  
479  
480  
481  
482  
483

## 5.0 OPERATING PROCEDURE.

## 5.1 OPERATIONAL SWITCH SETTINGS

IF THE DIAGNOSTIC IS RUN ON A CPU WITHOUT A SWITCH REGISTER THEN A SOFTWARE SWITCH REGISTER IS USED WHICH ALLOWS THE USER THE SAME SWITCH OPTIONS AS THE HARDWARE SWITCH REGISTER. IF THE HARDWARE SWITCH REGISTER DOES NOT EXIST OR IF ONE DOES AND IT CONTAINS ALL ONES (177777) THEN THE SOFTWARE SWITCH REGISTER (LOC. 176) IS USED.

## CONTROL:

THIS PROGRAM ALSO SUPPORTS THE DYNAMIC LOADING OF THE SOFTWARE SWITCH REGISTER (LOC. 176) FROM THE TTY. THIS CAN BE ACCOMPLISHED BY DOING THE FOLLOWING:

- 1) TYPE CONTROL G (<↑G>); THIS WILL ALLOW THE TTY TO ENTER DATA INTO LOC. 176 AT SELECTED POINTS WITHIN THE PROGRAM.
- 2) THE MACHINE WILL THEN TYPE: SWR=XXXXXXNEW= (XXXXXX IS THE OCTAL CONTENTS OF THE SOFTWARE SWITCH REGISTER.)
- 3) AFTER THE ''NEW='' HAS BEEN TYPED THEN THE OPERATOR. CAN DO ONE OF THE FOLLOWING AT THE TTY:
  - A) TYPE A NUMBER TO BE LOADED INTO LOC. 176 FOLLOWED BY A <CR>. (ONLY NUMBERS BETWEEN 0-7 WILL BE ACCEPTED AND ONLY 6 NUMBERS WILL BE ALLOWED)  
IF A <CR> IS THE FIRST KEY DEPRESSED THE SOFTWARE SWITCH REGISTER CONTENTS WILL NOT BE CHANGED.
  - B) IF A CONTROL U (<↑U>) IS DEPRESSED THEN THE PROGRAM WILL SEND YOU BACK TO STEP 2.

THE OPERATIONAL SWITCH SETTINGS ARE USED TO:

- A. ALTER ERROR RECOVERY PROCEDURES
- B. DELETE ERROR PRINTOUTS
- C. CAUSE A TEST SEQUENCE TO BE REPEATED WITH A VARIATION THE PATTERN, RECORD LENGTH SEQUENCE, WRITE MODE, OR READ MODE

## 5.1.1 SWITCHES TO ALTER ERROR RECOVERY

THE FUNCTION PERFORMED IS WITH THE SWITCH IN THE "1" (OR UP) POSITION.

SW	FUNCTION	PURPOSE
3	PRINT AFTER	USE OF THIS SWITCH WILL CAUSE

484  
485  
486  
487  
488  
489  
490  
491  
492  
493  
494  
495  
496  
497  
498  
499  
500  
501  
502  
503  
504  
505  
506  
507  
508  
509  
510  
511  
512  
513  
514  
515  
516  
517  
518  
519  
520  
521

(U00010)PARITY ERRORS

THE DATA READ TO BE COMPARED WITH THE DATA WRITTEN AFTER A PARITY ERROR HAS OCCURRED  
NOTE: THE PARITY ERROR BIT SETTING IN THE STATUS REGISTER IS CAUSED BY THE LOGICAL 'OR' OF BOTH LATERAL (CHARACTER) AND LONGITUDINAL (CHANNEL) PARITY ERRORS.

4 DELETE READ RE-TRYS  
(000020)

USE OF THIS SWITCH WILL CAUSE DELETION OF THE NORMAL SEQUENCE OF TRYING TO RE-READ A RECORD AFTER A READ ERROR. THIS WOULD BE USEFUL FOR SCOPING READ OPERATIONS.

5 DELETE WRITE XIRG  
(000040)

USE OF THIS SWITCH WILL CAUSE RECORDS WITH WRITE ERRORS TO BE LEFT ON TAPE. THE READ PASS WITH DATA TYPEOUTS SELECTED WOULD BE USEFUL FOR DETERMINING WRITE ERROR ORIGINS.

6 WRITE STATISTICAL  
(0001000)RECOVERY

USE OF THIS SWITCH WILL CAUSE A BACKSPACE 2 RECORDS, SPACE FORWARD 1 RECORD, REWRITE RECORD SEQUENCE TO BE USED INSTEAD OF WRITE XIRG SO THAT THE RECORD WILL BE REWRITTEN ON APPROXIMATELY THE SAME AREA OF TAPE WHERE THE WRITE ERROR OCCURRED. THIS METHOD KEEPS THE INTER-RECORD GAP FROM GETTING LARGER. DATA IS WRITTEN OVER THE SAME SPOT ON TAPE TO TRY AND FIND BAD TAPE.

UNRECORDED COPY OF THIS DOCUMENT IS AVAILABLE TO THE PUBLIC AT THE NATIONAL ARCHIVES AT COLLEGE PARK, MARYLAND. FOR MORE INFORMATION CONTACT THE NATIONAL ARCHIVES AT COLLEGE PARK, MARYLAND.

5.1.2 SWITCHES TO CONTROL ERROR PRINTOUTS

THE FUNCTION PERFORMED IS WITH THE SWITCH IN THE "1" (OR UP) POSITION.

SW	FUNCTION	PURPOSE
13 (020000)	SUPPRESS ERROR PRINTOUT	THE STATISTICS CONCERNING THE NUMBER AND TYPES OF ERRORS WILL BE PRINTED WHEN THE TAPE UNIT REACHES END OF TAPE. FOR LONG PERIODS OF TESTING (OVERNIGHT, ETC) IT MAY BE SUFFICIENT TO RECEIVE THIS INFORMATION AND NOT HAVE A TYPEOUT EACH TIME AN ERROR OCCURRED.
8 (000400)	PRINT ERROR STATISTICS	AFTER COMPLETION OF EVERY RECORD LENGTH SEQUENCE INSTEAD OF AFTER END OF TAPE AS IS NORMAL.

5.1.3 SWITCH TO ALTER TEST PARAMETERS

THE FUNCTION PERFORMED IS WITH EACH SWITCH IN THE "1" (OR UP) POSITION.

SW	FUNCTION	PURPOSE
0	CHANGE PATTERN	AFTER COMPLETION OF A TEST SEQUENCE REPEAT WITH NEXT PATTERN. UNTIL PATTERN 7 IS REACHED.

THIS FEATURE IS USEFUL FOR TESTING MANY COMBINATIONS OF TEST PATTERNS WITHOUT REQUIRING THE OPERATOR TO TYPE IN A LARGE NUMBER OF PARAMETERS.

EXAMPLE:           TST PAT RLS WMO RMO  
                  3   2   0   0   0  
                  4   6   0   0   0

WITH SW0=1

TEST 3 WILL BE EXECUTED 6 TIMES (PATTERNS 2-7) AND THEN TEST 4 WILL BE EXECUTED 2 TIMES (PATTERNS 6,7)

6060  
6061  
6062  
6063  
6064  
6065  
6066  
6067  
6068  
6069  
6070  
6071  
6072  
6073  
6074  
6075  
6076  
6077  
6078  
6079  
6080  
6081  
6082  
6083  
6084  
6085  
6086  
6087  
6088  
6089  
6090  
6091  
6092  
6093  
6094  
6095  
6096  
6097  
6098  
6099  
6100  
6101  
6102  
6103  
6104  
6105  
6106  
6107  
6108  
6109  
6110  
6111  
6112  
6113  
6114  
6115  
6116  
6117

6. ERRORS

6.1 WRITE ERRORS

THE FOLLOWING ERROR TYPEOUTS ARE POSSIBLE DURING A WRITE OPERATION.

A. WRITE STATUS ERROR

COMD	STATUS	RECORD	LENGTH EXPECTED	ACTUAL
XXXXXX	XXXXXX			

THIS WILL OCCUR IF ERROR (BIT 15 OF COMMAND REGISTER) SETS ON A WRITE COMMAND. THE CONTENTS OF THE COMMAND AND STATUS REGISTERS IS PRINTED ALONG WITH THE RECORD NUMBER AND RECORD LENGTH.

B. XIRG WRITTEN 4 TIMES

THIS WILL OCCUR IF A WRITE STATUS ERROR CANNOT BE ELIMINATED IN 4 ATTEMPTS AT RE-WRITING THE RECORD WITH EXTENDED INTERRECORD GAP. NOT POSSIBLE DURING TEST 0 OR 1 AS THESE ARE "WRITE ONLY" TESTS AND IT IS NOT ABSOLUTELY NECESSARY FOR THE RECORDS TO BE WRITTEN PROPERLY. SETTING SWITCH 5 TO A "1" WILL DELETE "WRITE WITH XIRG".

C. END OF TAPE

DRV	PAT	MODE	RECORD	LENGTH
0	7	SSTP	1276	MAX

WRITE ERRORS = 5  
RECOVERED AT 1 = 3  
RECOVERED AT 3 = 1  
PERMANENT BADSPOT = 1

DRV = UNIT NUMBER  
PAT = PATTERN NUMBER  
MODE = WRITE START/STOP MODE  
RECORD = NUMBER OF RECORDS  
LENGTH = LENGTH OF RECORDS

ON UNIT 0, USING PATTERN 7, WRITE MODE START/STOP, 1276 RECORDS OF MAXIMUM (1024 BYTES) LENGTH WERE WRITTEN. DURING THAT TIME 5 WRITE STATUS ERRORS OCCURRED, 3 WERE RECOVERED ON THE 1ST RE-WRITE, 1 RECOVERED ON THE 3RD RE-WRITE. THE REMAINING ERROR NOT RECOVERED IS CONSIDERED TO BE CAUSED BY A PERMANENT BAD SPOT ON TAPE.





671  
672  
673  
674  
675  
676  
677  
678  
679  
680  
681  
682  
683  
684  
685  
686  
687  
688  
689  
690  
691  
692  
693  
694  
695  
696  
697  
698  
699  
700  
701  
702  
703  
704  
705  
706  
707  
708  
709  
710  
711  
712  
713  
714  
715  
716  
717  
718  
719  
720  
721  
722  
723  
724  
725

## 6.3 ERROR RECOVERY PROCEDURES

## 6.3.1 WRITE ERROR RECOVERY

THE PROCEDURE TO RECOVER FROM A WRITE ERROR IS DETERMINED BY THE FOLLOWING:

- A. IS IT A "WRITE ONLY" TEST OR WILL THE DATA BE READ?
- B. IS "WRITE STATISTICAL RECOVERY" SELECTED (SW 6=1)?
- C. IS "DELETE WRITE WITH XIRG" SELECTED (SW 5=1)?

6.3.1.1 IF IT IS A "WRITE ONLY" TEST AND "WRITE STATISTICAL RECOVERY" IS NOT SELECTED (SW 6=0) THE WRITE ERROR IS SIMPLY COUNTED AND THE PROGRAM PROCEEDS TO THE NEXT RECORD.

6.3.1.2 IF IT IS A "WRITE ONLY" TEST AND "WRITE STATISTICAL RECOVERY" IS SELECTED (SW 6=1), A WRITE ERROR IS COUNTED AND THEN A RECOVERY SEQUENCE (BACKSPACE 2 RECORDS, SPACE FORWARD 1 RECORD, REWRITE RECORD) IS ENTERED. THIS RECOVERY SEQUENCE WILL BE REPEATED UP TO 7 TIMES IF THE WRITE ERROR PERSISTS. IF A WRITE ERROR IS NOT ELIMINATED AFTER THE 8TH ATTEMPT IT IS COUNTED AS A PERMANENT BAD SPOT ON TAPE. STATISTICS ARE SAVED TO INDICATE HOW MANY TIMES THE REWRITE SEQUENCE HAD TO BE REPEATED TO RECOVER FROM EACH WRITE ERROR.

6.3.1.3 IF IT IS A "WRITE AND READ" TEST AND "WRITE STATISTICAL RECOVERY" IS SELECTED (SW 6=1) AND "WRITE WITH XIRG" IS NOT DELETED (SW 5=0) THE PROGRAM WILL FIRST ATTEMPT TO DO A "WRITE STATISTICAL RECOVERY". IF A PERMANENT BAD SPOT IS ENCOUNTERED THE PROGRAM WILL THEN ATTEMPT TO RECOVER WITH A "WRITE WITH XIRG". FAILURE TO RECOVER AT THIS POINT SHOULD RESULT IN A READ ERROR DURING THE READ PASS.

6.3.1.4 IF IT IS A "WRITE AND READ" TEST AND "WRITE STATISTICAL RECOVERY" IS NOT SELECTED (SW 6=0) AND "WRITE WITH XIRG" IS NOT DELETED (SW 5=0) THE PROGRAM WILL TRY TO RECOVER ONLY BY REWRITING THE RECORD WITH EXTENDED INTERRECORD GAP. FAILURE TO RECOVER SHOULD RESULT IN A READ ERROR DURING READ PASS.

## 6.3.2 READ ERROR RECOVERY

A READ ERROR CAN OCCUR FOR TWO REASONS: STATUS ERROR OR DATA ERROR. A PROPER COUNT IS TAKEN FOR EACH TYPE OF ERROR. RECOVERY OF A READ ERROR WILL CONSIST OF TRYING TO RE-READ THE RECORD UP TO TWO MORE TIMES (UNLESS SW 4=1 TO DELETE READ RE-TRYS FOR SCOPING PURPOSES). IF THE ERROR PERSISTS IT IS CONSIDERED "NON-RECOVERABLE" AND THE PROGRAM WILL CONTINUE WITH THE NEXT RECORD.

## 7. RESTRICTIONS

NONE

726  
727  
728  
729  
730  
731  
732  
733  
734  
735  
736  
737  
738  
739  
740  
741  
742  
743  
744  
745  
746  
747  
748  
749  
750  
751  
752  
753  
754  
755  
756  
757  
758  
759  
760  
761  
762  
763  
764  
765  
766  
767  
768  
769  
770  
771  
772  
773  
774  
775  
776  
777  
778  
779  
780  
781

## 8. MISCELLANEOUS

## 8.1 TAPE LENGTH

SINCE EACH OF THE TESTS DEPEND ON REACHING THE "EOT" REFLECTOR FOR TERMINATING IT COULD BE ADVANTAGEOUS TO USE A "SHORT" TAPE. THIS WOULD ALLOW FOR LESS TIME TO RUN A SERIES OF TESTS WHILE VARYING THE TEST PARAMETERS (REFERENCE 5.1.3). HOWEVER, THIS IS NOT INTENDED TO IMPLY THAT CONSTANTLY CHANGING THE TEST PARAMETERS CONSTITUTES A MORE DIFFICULT TEST OF DATA RELIABILITY. THE LENGTH OF TIME UNDER TEST IS MORE LIKELY TO SUPPLY THAT. IN ANY EVENT, IF A "SHORT" TAPE IS DESIRED, JUST PLACE AN "EOT" REFLECTIVE STRIP APPROXIMATELY 50 FEET DOWN TAPE FROM THE "BOT" MARKER. SO THAT THE TAPE IS STILL USEFUL AS A "LONG" TAPE ANOTHER "BOT" MARKER COULD BE PLACED A SHORT DISTANCE (APPROXIMATELY 10 FEET) FARTHER DOWN ON TAPE. THIS WOULD EFFECTIVELY GIVE YOU TWO TAPES. CARE MUST BE EXERCISED WHEN MOUNTING THE TAPE TO POSITION IT AT THE PROPER "BOT" MARKER.

## 8.2 MEMORY AVAILABLE

THE PROGRAM REQUIRES 4K OF MEMORY. IF 8K IS AVAILABLE, STARTING THE PROGRAM AT ADDRESS 200 OR 210 WILL EXPAND THE WRITE AND READ BUFFERS SO THAT THE MINIMUM LENGTH RECORDS WILL BE 8 BYTES AND MAXIMUM LENGTH RECORDS WILL BE 2048 BYTES.

## 9. PROGRAM DESCRIPTION

## 9.1 GENERAL DESCRIPTION

THE PROGRAM IS DESIGNED AROUND TWO MAIN SUBROUTINES "WRITE" AND "READ" AND A SERIES OF MINOR SUBROUTINES FOR MANIPULATING UNIT SELECTION, HANDLING ERROR STATISTICS, AND RECORD POSITIONING. IF MORE THAN ONE UNIT IS SELECTED THE UNIT WITH THE LOWEST NUMBER IS SELECTED FIRST AND WHEN THE SEQUENCE IS COMPLETED THEN THE NEXT LOWEST UNIT NUMBER IS SELECTED UNTIL ALL UNITS HAVE BEEN SELECTED. THIS PROCESS IS REPEATED UNTIL ALL UNITS REACH END OF TAPE.

## 9.2 TEST 0

THIS IS A "WRITE ONLY" TEST. THE PROCEDURE IS TO WRITE 1 RECORD, REPEAT FOR ALL UNITS, CONTINUE UNTIL EOT. WRITE MODE OF NONSTOP (WMO=0) WILL NOT BE AN EFFECTIVE SELECTION FOR THIS TEST BECAUSE THE WRITE ROUTINE IS EXITED AFTER EACH RECORD TO DETERMINE IF ANY OTHER UNITS ARE SELECTED. READ MODE (RMO) HAS NO EFFECT ON THIS TEST.

## 9.3 TEST 1

THIS IS A "WRITE ONLY" TEST SIMILAR TO TEST 0 EXCEPT A SEQUENCE OF 256 RECORDS IS WRITTEN ON EACH UNIT BEFORE CHANGING TO THE NEXT UNIT. READ MODE (RMO) HAS NO EFFECT ON THIS TEST.

782  
783  
784  
785  
786  
787  
788  
789  
790  
791  
792  
793  
794  
795  
796  
797  
798  
799  
800  
801  
802  
803  
804  
805  
806  
807  
808  
809  
810  
811  
812  
813  
814  
815  
816

## 9.4 TEST 2

THIS IS A "WRITE AND READ" TEST. THE PROCEDURE IS TO WRITE 256 RECORDS ON EACH UNIT, THEN BACKSPACE 256 RECORDS ON EACH UNIT, THEN READ 256 RECORDS ON EACH UNIT, AND THEN REPEAT THE SEQUENCE UNTIL ALL UNITS ARE AT EOT.

## 9.5 TEST 3

THIS IS A "WRITE AND READ" TEST. THE PROCEDURE IS TO WRITE 1 RECORD, BACKSPACE, READ 1 RECORD AND REPEAT FOR EACH UNIT, THEN REPEAT THE SEQUENCE UNTIL ALL UNITS ARE AT EOT. WRITE MODE OR READ MODE OF NONSTOP (WMO=0 OR RMO=0) WILL NOT BE EFFECTIVE FOR THIS TEST.

## 9.6 TEST 4

THIS IS A "WRITE AND READ" TEST. IT IS SIMILAR TO TEST 2 EXCEPT UNITS ARE CHANGED BETWEEN EACH RECORD DURING WRITE, BACKSPACE, AND READ. WRITE MODE OR READ MODE OF NONSTOP (WMO=0 OR RMO=0) WILL NOT BE EFFECTIVE FOR THIS TEST.

## 9.7 TEST 5

THIS IS A "READ ONLY" TEST. THE PROCEDURE IS TO READ 1 RECORD, REPEAT FOR ALL UNITS, AND CONTINUE UNTIL ALL UNITS ARE AT EOT. THE MAIN PURPOSE OF THIS TEST IS TO PROVE COMPATIBILITY AMONG TAPE UNITS. A TAPE THAT IS WRITTEN ON ONE UNIT SHOULD BE ABLE TO BE READ ON ANY OTHER UNIT. TEST PARAMETERS THAT SELECT PATTERN AND RECORD LENGTH SEQUENCE MUST BE THE SAME AS THOSE USED TO WRITE THE DATA ON TAPE. ANY OF THE OTHER TESTS (0 THRU 4) CAN BE USED TO GENERATE THE DATA.

```

817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872

```

10. LISTING

```

%
.TITLE TM-11 DATA RELIABILITY 9 TRACK
;COPYRIGHT 1970, 1971, 1972, 1973, 1976 DIGITAL EQUIPMENT CORP., MAYNARD, MASS. 01754
;REVISED SEPT 1971, J.RODENHISER
;REVISED AUGUST 1972, J. LACEY
;REVISED TO REV. B SEPT., 1973 BY BRUCE BURGESS - DIAGNOSTIC ENGINEERING
THE FOLLOWING ADDITIONS AND/OR CORRECTIONS MAKE
UP REV. B :
(A) CODE TO COVER ACT-11 AND MAGTAPE DDP OPTIONS
(B) SECTION TO PRINT OUT GOOD AND BAD DATA (EXPECTED AND ACTUAL)
ON READ STATUS ERRORS CAUSED BY PARITY ERRORS. THIS SECTION
IS ENABLED BY SETTING SW<03> TO A '1'. SEE SECTION 5.1.1
OF THE DOCUMENT.
;REVISED TO REV. D MAR., 1976 BY SAM CARPENTER-DIAGNOSTIC ENGINEERING
(A) MODIFIED TO SUPPORT SOFTWARE SWITCH REGISTER
(B) ALSO SUPPORTS THE DYNAMIC LOADING OF THE SOFTWARE SWITCH REGISTER FROM TTY
BY PRESSING A CNTL G
(C) PROGRAM WILL ALLOW THE LOADING OF THE SOFTWARE SWITCH REGISTER AT START
IF NO HARDWARE SWITCH REGISTER IS AVAILABLE OR IF THE
HARDWARE SWITCH REGISTER CONTAINS ALL 1'S.

```

```

R0=%0
R1=%1
R2=%2
R3=%3
R4=%4
R5=%5
SP=%6
PC=%7

```

.ENABL ABS, AMA

=0

;TRAP CATCHER IN UNUSED LOCATIONS 0-476

=34

TRAP34

=46

ENDADR

=52

40000

\*\*\*\*\*

;SOFTWARE SWITCH REGISTER IS LOCATED AT LOC. 176

;BEFOR STARTING REFER TO SECTION 5.1 OF DOCUMENT

\*\*\*\*\*

=176

SWREG: .WORD 0

;SOFTWARE SWITCH REGISTER

=200

JMP AUTOST

JMP MEM4K





```

985 001462 000413
986 001464 022626
987 001466 012737 000004 000526
988 001474 012737 002000 000524
989 001502 012737 015616 000532
990 001510 000411
991 001512 012737 000010 000526
992 001520 012737 004000 000524
993 001526 012737 017616 000532
994
995
996
997
998
999 001534 012737 000006 000004
1000 001542 012777 010000 176732
1001 001550 005037 000540
1002 001554 005037 000546
1003 001560 012700 000200
1004 001564 105777 176712
1005 001570 100036
1006 001572 123737 000041 000004
1007 001600 001426
1008 001602 013777 000540 176672
1009 001610 012702 000024
1010 001614 032777 000100 176656
1011 001622 001003
1012 001624 005302
1013 001626 003372
1014 001630 000412
1015 001632 032777 000020 176640
1016 001640 001006
1017 001642 032777 000004 176630
1018 001650 001002
1019 001652 050037 000546
1020 001656 105237 000541
1021 001662 006200
1022 001664 001346
1023
1024
1025 001666 012702 012731
1026 001672 104404
1027 001674 013702 000526
1028 001700 104426
1029 001702 013702 000524
1030 001706 104426
1031 001710 005737 000546
1032 001714 001012
1033 001716 013701 000042
1034 001722 001405
1035 001724 012702 013051
1036 001730 104404
1037 001732 000137 003224
1038 001736 000137 002122
1039
1040

```

```

NXMRET: BR OVER4K ;BR IF YES
CMP (SP)+,(SP)+ ;POP THE STACK
MOV #4,MINLEN
MOV #1024,MAXLEN
MOV #BUFFER+1024.,RBUF
BR TU.SEL ;GO SELECT DRIVES
OVER4K: MOV #8,MINLEN
MOV #2048,MAXLEN
MOV #BUFFER+2048.,RBUF
;DETERMINE DRIVES TO BE TESTED.
;A DRIVE WILL BE TESTED IF:
; 1. IT CAN BE SELECTED
; 2. IT IS 9 TRACK
; 3. IT IS WRITE ENABLED
TU.SEL: MOV #6,R4 ;SET TRAP CATCHER
MOV #10000,RMTC ;PWR CLR
CLR DRVSEL ;CLEAR DRIVE TABLE
CLR MSBITS
MOV #200,R0 ;R0=DRIVE 0
TSTB RMTC
BPL IDSELF ;BR IF NO CU RDY
CMPB R4,R4 ;DDP ON MAGTAPE?
BEQ NO.SEL ;IF YES - SKIP DRIVE 0
NXT.TU: MOV DRVSEL,RMTC ;SELECT A DRIVE
MOV #20,R2 ;SETUP R2 FOR WAIT LOOP
USSTST: BIT #100,RMTC ;DOES DRIVE EXIST?
BNE USS.OK ;BR IF YES
DEC R2 ;KILL SOME TIME
BGT USSTST
BR NO.SEL ;DRIVE IS NON-EXISTENCE
USS.OK: BIT #20,RMTC ;IS THIS DRIVE 7 OR 9 CHN?
BNE NO.SEL ;BR IF 7 CHN.
BIT #4,RMTC ;IS WRITE LOCK ON?
BNE NO.SEL ;BR IF YES
BIS R0,MSBITS ;PUT DRIVE INTO TABLE
NO.SEL: INCB DRVSEL+1 ;INC. THE DRIVE NUMBER
ASR R0 ;HAS ALL DRIVES BEEN TESTED FOR EXISTENCE?
BNE NXT.TU ;BR IF NO

;TYPE-OUT NAME OF PROGRAM AND MIN. AND MAX. RECORD LENGTHS.
IDSELF: MOV #MSG10A,R2
TOP
MOV MINLEN,R2 ;PRINT MIN. LENGTH
DECPRT
MOV MAXLEN,R2 ;PRINT MAX. LENGTH
DECPRT
TST MSBITS ;WAS ANY DRIVES SELECTED?
BNE ZS ;BR IF YES
MOV R4,R1 ;IS THERE A MONITOR?
BEQ IS ;BRANCH IF NO
MOV #MSG10C,R2 ;INDICATE THAT NO DRIVES ARE
TOP ;AVAILABLE!!
JMP RENDADR ;RETURN TO THE MONITOR
IS: JMP START1 ;NO--GO HAVE OPERATOR SELECT DRIVES

;TYPE-OUT THE DRIVE/S TO BE TESTED

```



1041	001742	012702	013026		25:	MOV	#MSG10B,R2	
1042	001746	104404				TOP		
1043	001750	105037	013616			CLRB	BUFFER	
1044	001754	012701	013616			MOV	#BUFFER,R1	
1045	001760	005000				CLR	R0	;SET R0 TO DRIVE 0
1046	001762	012702	000200			MOV	#200,R2	;SET R2 TO DRIVE 0
1047								
1048								
1049	001766	105021				CLRB	(R1)+	;SET EOM
1050	001770	112721	000040			MOVB	#',(R1)+	;SPACE
1051	001774	030237	000546		LOOPER:	BIT	R2,MSBITS	;DID THIS DRIVE NUMBER EXIST?
1052	002000	001405				BEQ	\$ZEROS	;BR IF NO
1053	002002	110011				MOVB	R0,(R1)	;YES--SAVE THE NUMBER
1054	002004	152721	000060			BISB	#'0,(R1)+	;MAKE IT ASCII
1055	002010	112721	000054			MOVB	#',,(R1)+	;COMMA
1056	002014	000241			\$ZEROS:	CLC		;POSITION DRIVE BIT
1057	002016	006002				ROR	R2	
1058	002020	005200				INC	R0	;UPDATE DRIVE NUMBER
1059	002022	020027	000007			CMP	R0,#7	;LAST
1060	002026	003762				BLE	LOOPER	;BR IF NO
1061	002030	105011				CLRB	(R1)	;SET EOM
1062	002032	112741	000100			MOVB	#'a,-(R1)	;CR & LF
1063	002036	012702	013616			MOV	#BUFFER,R2	;TYPE THE DRIVE/S SELECTED
1064	002042	104404				TOP		
1065	002044	000137	003040			JMP	EXECUT	;GO START TESTING
1066								
1067	002050	012737	000004	000526		;MODIFY RECORD LENGTHS AND BUFFER AREAS FOR 4K OF MEMORY		
1068	002056	012737	002000	000524	MEM4K:	MOV	#4.,MINLEN	
1069	002064	012737	015616	000532		MOV	#1024.,MAXLEN	
1070	002072	000411				MOV	#BUFFER+1024.,RBUF	
1071						BR	START	
1072	002074	012737	000010	000526		;MODIFY RECORD LENGTHS AND BUFFER AREAS FOR 8K OF MEMORY		
1073	002102	012737	004000	000524	MEM8K:	MOV	#8.,MINLEN	
1074	002110	012737	017616	000532		MOV	#2048.,MAXLEN	
1075	002116	005037	000536			MOV	#BUFFER+2048.,RBUF	
1076	002122	012706	000500		START:	CLR	ATST	;NOT AUTO START
1077	002126	104432			START1:	MOV	#STACK,SP	;INITIALIZE STACK
1078	002130	022737	000176	000512		SUSWR		;CHECK FOR HARDWARE SWITCH REGISTER
1079	002136	001002				CMP	#SWREG,SWR	
1080	002140	004737	011762			BNE	IS	
1081	002144	012737	123456	007332	IS:	JSR	PC,CNTLU	;PRIME RANDOM
1082	002152	012737	176543	007334		MOV	#123456,LONUM	;NUMBER GENERATOR
1083	002160	012702	012347			MOV	#176543,HINUM	
1084	002164	104404				MOV	#MSG1,R2	
1085	002166	005037	000546			TOP		;PRINT 'SELECT DRIVES'
1086	002172	104400			SELDRV:	CLR	MSBITS	;CLEAR SELECTED DRIVE INDICATOR
1087	002174	122737	000015	001314		WAITKY		
1088	002202	001010				CMPB	#15,CHARIN	;WAS CHARACTER A CARRIAGE RETURN?
1089	002204	005737	000546			BNE	SEL01	;NO
1090	002210	001744				TST	MSBITS	;YES, WERE ANY DRIVES SELECTED
1091	002212	005737	000536			BEQ	START1	;NO
1092	002216	001454				TST	ATST	;YES--IS AUTO SWITCH SET?
1093	002220	000137	003040			BEQ	SELTST	;NO--GO SELECT TESTS
1094	002224	122737	000070	001314	SEL01:	JMP	EXECUT	;YES--GO START TESTING
1095	002232	003404				CMPB	#70,CHARIN	;IS CHARACTER A VALID NUMBER 0-7?
1096	002234	122737	000060	001314		BLE	SEL02	;NO, PRINT "?"
						CMPB	#60,CHARIN	;IS CHARACTER A VALID NUMBER 0-7?

```

1097 002242 003407
1098 002244 105777 176250
1099 002250 100375
1100 002252 012777 000077 176242
1101 002260 000424
1102
1103 002262 142737 000270 001314
1104 002270 105137 001314
1105 002274 012700 000200
1106
1107
1108 002300 105237 001314
1109 002304 001402
1110 002306 006200
1111 002310 000773
1112 002312 130037 000546
1113 002316 001003
1114 002320 150037 000546
1115 002324 000402
1116 002326 140037 000546
1117 002332 105777 176162
1118 002336 100375
1119 002340 012777 000054 176154
1120 002346 000711
1121
1122 002350 012702 012370
1123 002354 104404
1124 002356 005037 001316
1125 002362 012700 001326
1126 002366 104400
1127 002370 122737 000015 001314
1128 002376 001005
1129 002400 005737 001316
1130 002404 001412
1131 002406 000137 003040
1132 002412 122737 000066 001314
1133 002420 003404
1134 002422 122737 000060 001314
1135 002430 003404
1136 002432 012702 012342
1137 002436 104404
1138 002440 000752
1139 002442 013704 001314
1140 002446 000304
1141 002450 006104
1142 002452 006104
1143 002454 006104
1144 002456 006104
1145 002460 042704 107777
1146 002464 104430
1147
1148 002466 104400
1149 002470 122737 000070 001314
1150 002476 003755
1151 002500 122737 000057 001314
1152 002506 002351

SEL2: BLE VALID ;YES
      TSTB @TPS
      BPL -4
      MOV #'?,@TPB ;PRINT '?'
      BR VAL4
;HAVE VALID DRIVE NUMBER
VALID: BICB #270,CHARIN ;MASK OUT NUMBER
      COMB CHARIN
      MOV #200,RO ;INITIALIZE BIT POSITION FOR DRIVE 0

VAL1: INCB CHARIN ;+1 TO DRIVE SELECT
      BEQ VAL2 ;HAVE DRIVE OF EQUAL TO ZERO
      ASR RO ;MOVE BIT POSITION TO NEXT DRIVE
      BR VAL1 ;TRY AGAIN
VAL2: BITB RO,MSBITS ;COMPARE DRIVE SELECT WITH PREVIOUS SELECTED
      BNE VAL3
      BISB RO,MSBITS ;DRIVE WASN'T PREVIOUSLY SET, SO SET IT NOW.
      BR VAL4
VAL3: BICB RO,MSBITS ;DRIVE WAS SET, CLEAR IT.
VAL4: TSTB @TPS
      BPL -4
      MOV #'',@TPB ;PRINT COMMA
      BR SELDRV ;RETURN TO WAIT FOR NEXT KEY
;HAVE DRIVES SELECTED-NOW GET TEST SELECTION
SELTST: MOV #MSG2,R2
      TOP ;PRINT 'SELECT TESTS'
      CLR NUMTST ;CLEAR TEST NUMBERS SELECTED
      MOV #TSTTBL,RO ;INITIALIZE TEST TABLE POINTER
SELT1: WAITKY
      CMPB #15,CHARIN ;WAS CHARACTER A CARRIAGE RETURN?
      BNE SELT2
      TST NUMTST ;WERE ANY TESTS SELECTED?
      BEQ SELT3 ;NO
      JMP EXECUT ;YES, EXECUTE TESTS
SELT2: CMPB #66,CHARIN ;IS CHARACTER A VALID NUMBER 0-5
      BLE SELT3 ;NO
      CMPB #60,CHARIN ;IS CHARACTER A VALID NUMBER 0-5
      BLE SELPAT ;YES
SELT3: MOV #MSG0,R2
      TOP
SELPAT: BR SELT1 ;RETURN TO WAIT FOR TEST SELECT
      MOV CHARIN,R4 ;ROTATE TEST NUMBER INTO POSITION
      SWAB R4
      ROL R4
      ROL R4
      ROL R4
      BIC #107777,R4
      SP3 ;TYPE 3 SPACES
;HAVE VALID TEST SELECTED, NOW GET SELECTED PATTERN
      WAITKY
      CMPB #70,CHARIN ;IS CHARACTER A VALID NUMBER 0-7
      BLE SELT3 ;NO
      CMPB #57,CHARIN ;IS CHARACTER A VALID NUMBER 0-7
      BGE SELT3 ;NO

```

```

1153 002510 000337 001314 SWAB CHARIN ;MOVE PATTERN SELECT INTO POSITION
1154 002514 006137 001314 ROL CHARIN
1155 002520 042737 170777 001314 BIC #170777,CHARIN
1156 002526 053704 001314 BIS CHARIN,R4 ;COMBINE PATTERN WITH TEST
1157 002532 104430 SP3
1158
1159 ;WAIT FOR RECORD LENGTH SEQUENCES SELECTION
1160 002534 104400 SELRLS: WAITKY
1161 002536 122737 000060 001314 CMPB #60,CHARIN ;IS CHARACTER=0
1162 002544 001424 BEQ SELR3 ;YES, RLS=MIN
1163 002546 122737 000061 001314 CMPB #61,CHARIN ;IS CHARACTER=1
1164 002554 001003 BNE SELR1
1165 002556 052704 000020 BIS #20,R4 ;SET RLS=MAX
1166 002562 000415 BR SELR3
1167 002564 122737 000062 001314 SELR1: CMPB #62,CHARIN ;IS CHARACTER=2
1168 002572 001003 BNE SELR2
1169 002574 052704 000040 BIS #40,R4 ;SET RLS=MIN-MAX
1170 002600 000406 BR SELR3
1171 002602 122737 000063 001314 SELR2: CMPB #63,CHARIN ;IS CHARACTER=3
1172 002610 001310 BNE SELT3
1173 002612 052704 000060 BIS #60,R4 ;SET RLS=MAX-MIN
1174 002616 104430 SELR3: SP3
1175 ;WAIT FOR WRITE MODE SELECTION
1176 002620 104400 WAITKY
1177 002622 122737 000060 001314 CMPB #60,CHARIN
1178 002630 001415 BEQ SELW2 ;SET WMO=NONSTOP
1179 002632 122737 000061 001314 CMPB #61,CHARIN
1180 002640 001003 BNE SELW1
1181 002642 052704 000004 BIS #4,R4 ;SET WMO=START-STOP
1182 002646 000406 BR SELW2
1183 002650 122737 000062 001314 SELW1: CMPB #62,CHARIN
1184 002656 001265 BNE SELT3
1185 002660 052704 000010 BIS #10,R4 ;SET WMO=RANDOM
1186 002664 104430 SELW2: SP3
1187 ;WAIT FOR READ MODE SELECTION
1188 002666 104400 WAITKY
1189 002670 122737 000060 001314 CMPB #60,CHARIN
1190 002676 001415 BEQ SELRM2 ;SET RMO=NONSTOP
1191 002700 122737 000061 001314 CMPB #61,CHARIN
1192 002706 001003 BNE SELRM1
1193 002710 052704 000001 BIS #1,R4 ;SET RMO=START-STOP
1194 002714 000406 BR SELRM2
1195 002716 122737 000062 001314 SELRM1: CMPB #62,CHARIN
1196 002724 001242 BNE SELT3
1197 002726 052704 000002 BIS #2,R4 ;SET RMO=RANDOM
1198 002732 104430 SELRM2: SP3
1199
1200 ;HAVE ALL PARAMETERS
1201 002734 012702 012445 MOV #MSG6,R2
1202 002740 104404 TOP ;PRINT "OK"
1203 002742 104400 WAITKY ;WAIT FOR CARRIAGE RETURN
1204 002744 122737 000015 001314 CMPB #15,CHARIN
1205 002752 001402 BEQ .+6
1206 002754 000137 002432 JMP SELT3
1207 002760 105777 175534 TSTB @TPS
1208 002764 100375 BPL .-4

```

```

1209 002766 012777 000012 175526      MOV      #12, JTPB
1210 002774 105777 175520      TSTB    JTPB
1211 003000 100375      BPL     -4
1212 003002 012777 000040 175512      MOV     #40, JTPB
1213 003010 010420      MOV     R4, (0)+
1214 003012 005237 001316      INC     NUMTST      ;+1 TO TEST COUNT
1215 003016 022737 000012 001316      CMP     #10, NUMTST ;EQUAL TO TEN YET
1216 003024 001402      BEQ     SELOK1      ;YES
1217 003026 000137 002366      JMP     SELT1       ;NO, ACCEPT NEXT SET
1218 003032 012702 012420      SELOK1: MOV    #MSG5, R2
1219 003036 104404      TOP
1220
1221      ;EXECUTE SELECTED TEST
1222 003040 005037 000632      EXECUT: CLR    MODES      ;INITIALIZE MODES
1223 003044 012737 001326 001322      MOV     #TSTTBL, TSTEX
1224 003052 017737 176244 001320      EXEC:  MOV    JSTEX, PARAM ;GET TEST PARAMETERS
1225 003060 013700 001320      EXEC1: MOV    PARAM, R0
1226 003064 042700 007777      BIC     #7777, R0
1227 003070 010037 001324      MOV     R0, TEST
1228 003074 001463      BEQ     TEST0
1229 003076 022700 010000      CMP     #10000, R0
1230 003102 001504      BEQ     TEST1
1231 003104 022700 020000      CMP     #20000, R0
1232 003110 001525      BEQ     TEST2
1233 003112 022700 030000      CMP     #30000, R0
1234 003116 001571      BEQ     TEST3
1235 003120 022700 040000      CMP     #40000, R0
1236 003124 001402      BEQ     +6
1237 003126 000137 004142      JMP     TEST5
1238 003132 000137 003620      JMP     TEST4
1239
1240      ;RETURN HERE AFTER COMPLETION OF TEST
1241 003136 104434      DONE:  CKSWR      ?CHECK FOR CNTL G
1242 003140 012702 013560      MOV     #MSG26, R2
1243 003144 104404      TOP
1244 003146 032777 000001 175336      BIT     #1, JSWR      ;IS SW 0=1 TO REPEAT TEST WITH ALL PATTERNS
1245 003154 001413      BEQ     DONE1        ;NO
1246 003156 013700 001320      MOV     PARAM, R0
1247 003162 042700 170777      BIC     #170777, R0
1248 003166 022700 007000      CMP     #7000, R0    ;REACHED PATTERN ?
1249 003172 001404      BEQ     DONE1        ;YES
1250 003174 062737 001000 001320      ADD     #1000, PARAM ;NO, +1 TO PATTERN
1251 003202 000726      BR     EXEC1         ;REPEAT TEST
1252 003204 005337 001316      DONE1: DEC    NUMTST
1253 003210 001011      BNE     DOAGN
1254 003212 013701 000042      MOV     #42, R1
1255 003216 001002      BNE     ENDADR
1256 003220 000000      HALT
1257 003222 104434      CKSWR
1258 003224 004711      ENDADR: JSR    PC, (1) ;FINISHED ALL TESTS
1259 003226 000240      NOP
1260 003230 000240      NOP
1261 003232 000240      NOP
1262 003234 062737 000002 001322      DOAGN: ADD    #2, TSTEX
1263 003242 000703      BR     EXEC         ;DO NEXT TEST
1264      ;TEST0

```

```

1265 :WRITE ONE RECORD, CHANGE DRIVES, GO TO EOT
1266 003244 052737 000002 000632 TEST0: BIS #2, MODES ;EXIT WRITE EVERY RECORD, NO READ PASS
1267 003252 104420 CLRALL ;CLEAR ERROR COUNTERS AND REWIND
1268 003254 104416 GENPAT ;GENERATE PATTERN
1269 003256 104410 TO: RSFDRV ;RESET DRIVE SELECTION TO LOWEST NUMBER
1270 003260 104414 TOA: MVCTRS ;RESTORE DRIVE COUNTERS
1271 003262 032737 000040 000632 BIT #40, MODES ;IS THIS DRIVE AT EOT?
1272 003270 001002 BNE TOB ;YES, SKIP WRITE
1273 003272 104402 WRITIT ;WRITE
1274 003274 104406 SVCTRS ;SAVE DRIVE COUNTERS
1275
1276 003276 104422 TOB: CHGDRV ;ANY MORE DRIVES SELECTED?
1277 003300 000767 BR TOA ;YES
1278 003302 004737 004734 JSR PC, ALLEOT ;ARE ALL DRIVES AT EOT?
1279 003306 000763 BR TO ;NO
1280 003310 000137 003136 JMP DONE ;YES, EXIT
1281
1282 :TEST1
1283 003314 052737 000001 000632 :WRITE RECORD LENGTH SEQUENCE, GO TO NEXT DRIVE, CONTINUE TO EOT ON ALL DRIVES.
1284 003322 104420 TEST1: BIS #1, MODES ;EXIT WRITE AFTER RLS, NO READ PASS
1285 003324 104416 CLRALL ;CLEAR ERROR COUNTERS AND REWIND
1286 003326 104410 GENPAT ;GENERATE PATTERN
1287 003330 104414 T1: RSFDRV ;RESET DRIVE SELECTION TO LOWEST NUMBER
1288 003332 032737 000040 000632 T1A: MVCTRS ;RESTORE DRIVE COUNTERS
1289 003340 001002 BIT #40, MODES ;IS THIS DRIVE AT EOT?
1290 003342 104402 BNE T1B ;YES, SKIP WRITE
1291 003344 104406 WRITIT ;WRITE
1292 003346 104422 SVCTRS ;SAVE DRIVE COUNTERS
1293 003350 000767 T1B: CHGDRV ;ANY MORE DRIVE SELECTED?
1294 003352 004737 004734 BR T1A ;YES
1295 003356 000763 JSR PC, ALLEOT ;ARE ALL DRIVES AT EOT?
1296 003360 000137 003136 BR T1 ;NO
1297 JMP DONE ;YES EXIT
1298
1299 :TEST2
1300 :WRITE A RECORD LENGTH SEQUENCE, CHANGE DRIVES, CHANGE DRIVES, CONTINUE TO EOT ON ALL DRIVES
1301 003364 052737 000005 000632 :BACKSPACE, CHANGE DRIVES, READ, TEST2: BIS #5, MODES ;EXIT WRITE AFTER RLS, DO READ PASS
1302 003372 104420 CLRALL ;CLEAR ERROR COUNTERS AND REWIND
1303 003374 104416 GENPAT ;GENERATE PATTERN
1304 003376 104410 T2: RSFDRV ;SET DRIVE SELECTION TO LOWEST NUMBER
1305 003400 104414 T2A: MVCTRS ;RESTORE DRIVE COUNTERS
1306 003402 032737 000040 000632 BIT #40, MODES ;IS THIS DRIVE AT EOT?
1307 003410 001002 BNE T2B ;YES, SKIP WRITE
1308 003412 104402 WRITIT ;WRITE
1309 003414 104406 SVCTRS ;SAVE DRIVE COUNTERS
1310 003416 104422 T2B: CHGDRV ;ANYMORE DRIVERS SELECTED?
1311 003420 000767 BR T2A ;YES
1312 003422 104414 T2C: MVCTRS ;RESTORE DRIVE COUNTERS
1313 003424 032737 000020 000632 BIT #20, MODES ;IS THIS READ AT EOT?
1314 003432 001003 BNE T2D ;YES, SKIP BACKSPACE
1315 003434 004737 011030 JSR PC, GOBKWD ;BACKSPACE
1316 003440 104406 SVCTRS ;SAVE DRIVE COUNTERS
1317 003442 104422 T2D: CHGDRV ;ANY MORE DRIVES SELECTED?
1318 003444 000766 BR T2C ;YES
1319 003446 104414 T2E: MVCTRS ;RESTORE DRIVE COUNTERS
1320 003450 032737 000020 000632 BIT #20, MODES ;IS THIS READ AT EOT

```

1321	003456	001001			BNE	T2F		:YES, SKIP READ
1322	003460	104424				READIT		:READ
1323	003462	104406			T2F:	SVCTRS		:SAVE DRIVE COUNTERS
1324	003464	104422				CHGDRV		:ANYMORE DRIVES SELECTED?
1325	003466	000767			BR	T2E		:YES
1326	003470	004737	004734		JSR	PC,ALLEOT		:ARE ALL DRIVES AT EOT?
1327	003474	000740			BR	T2		:NO
1328	003476	000137	003136		JMP	DONE		:YES EXIT
1329								
1330								
1331								:TEST3
1332	003502	052737	000006	000632				:WRITE ONE RECORD, CHANGE DRIVES, BACKSPACE, CHANGE DRIVES, READ, CHANGE DRIVES
1333	003510	104420			TEST3:	BIS	#6, MODES	:EXIT WRITE EVERY RECORD, DO READ PASS
1334	003512	104416					CLRALL	:CLEAR ERROR COUNTERS AND REWIND
1335	003514	104410			T3:		GENPAT	:GENERATE PATTERN
1336	003516	104414			T3A:		RSFDRV	:SET DRIVE SELECTION TO LOWEST NUMBER
1337	003520	032737	000040	000632			MVCTRS	:RESTORE DRIVE COUNTERS
1338	003526	001002			BIT	#40, MODES		:IS THIS DRIVE AT EOT?
1339	003530	104402			BNE	T3B		:YES, SKIP WRITE
1340	003532	104406					WRITIT	:WRITE
1341	003534	104422			T3B:		SVCTRS	:SAVE DRIVE COUNTERS
1342	003536	000767					CHGDRV	:ANY MORE DRIVES SELECTED
1343					BR	T3A		:YES
1344	003540	104414			T3C:		MVCTRS	:RESTORE DRIVE COUNTERS
1345	003542	032737	000020	000632	BIT	#20, MODES		:IS THIS DRIVE AT EOT
1346	003550	001002			BNE	T3D		:YES, SKIP BACKSPACE
1347	003552	004737	011030		JSR	PC,GOBKWD		:BACKSPACE
1348	003556	104406			T3D:		SVCTRS	:SAVE DRIVE COUNTERS
1349	003560	104422					CHGDRV	:ANY MORE DRIVES SELECTED?
1350	003564	000766			BR	T3E		:GO
1351	003566	104414			T3E:		MVCTRS	:RESTORE DRIVE COUNTERS
1352	003568	032737	000020	000632	BIT	#20, MODES		:IS THIS DRIVE AT EOT?
1353	003574	001001			BNE	T3F		:YES, SKIP READ
1354	003576	104424					READIT	:READ
1355	003600	104406			T3F:		SVCTRS	:SAVE DRIVE COUNTERS
1356	003602	104422					CHGDRV	:ANY MORE DRIVES SELECTED
1357	003604	000767			BR	T3E		:YES
1358	003606	004737	004734		JSR	PC,ALLEOT		:ARE ALL DRIVES AT EOT?
1359	003612	000740			BR	T3		:NO
1360	003614	000137	003136		JMP	DONE		:YES, EXIT
1361								
1362								
1363								:TEST4
1364								:WRITE RECORD, CHANGE DRIVES, REPEAT FOR RECORD LENGTH SEQUENCE
1365	003620	052737	000006	000632				:READ RECORD, CHANGE DRIVES, REPEAT FOR RLS
1366	003626	104416			TEST4:	BIS	#6, MODES	:EXIT WRITE EVERY RECORD, DO READ PASS
1367	003630	032777	000014	175464			GENPAT	:GENERATE PATTERN
1368	003636	001006			BIT	#14, STSTEX		
1369	003640	042737	000007	000632	BNE	T4		
1370	003646	052737	000005	000632	BIC	#7, MODES		
1371	003654	104420			BIS	#5, MODES		:EXIT WRITE AFTER RLS, DO READ PASS
1372	003656	104410			T4:		CLRALL	:CLEAR ERROR COUNTERS AND REWIND
1373	003660	104414			T4A:		RSFDRV	:SET DRIVE SELECTION TO LOWEST NUMBER
1374	003662	013737	000612	000614	T4B:		MVCTRS	:RESTORE DRIVE COUNTERS
1375	003670	104406					RECORD,WRRECR	:SAVE RECORD
1376	003672	104422			MOV		SVCTRS	:SAVE DRIVE COUNTERS
							CHGDRV	:ANYMORE DRIVES SELCTED?

# E03

TM-11 DATA RELIABILITY 9 TRACK  
DZTM8D.P11

MACY11 27(732) 10-SEP-76 12:08 PAGE 30

1377	003674	000771				BR	T4B	:YES
1378	003676	042737	000010	000632		BIC	#10, MODES	:CLEAR RLS END
1379	003704	104410			T4C:	RSFDRV		:SET DRIVE SELECTION TO LOWEST NUMBER
1380	003706	104414			T4D:	MVCTRS		:RESTORE DRIVE COUNTERS
1381	003710	032737	000040	000632		BIT	#40, MODES	:IS DRIVE AT EOT
1382	003716	001010				BNE	T4E	:YES, SKIP WRITE
1383	003720	013737	000614	000550		MOV	WRRECR, SVRECR	:SAVE START OF RLS
1384	003726	104402					WRITIT	:WRITE
1385	003730	013737	000550	000614		MOV	SVRECR, WRRECR	:RESTORE START OF RLS
1386	003736	104406					SVCTRS	:SAVE DRIVE COUNTERS
1387	003740	104422			T4E:	CHGDRV		:ANYMORE DRIVES SELECTED?
1388	003742	000761				BR	T4D	:YES
1389	003744	032737	000010	000632		BIT	#10, MODES	:ARE WE AT END OF RLS
1390	003752	001007				BNE	T4G	:YES
1391	003754	104414			T4F:	MVCTRS		:RESTORE DRIVE COUNTERS
1392	003756	032737	000040	000632		BIT	#40, MODES	:ARE WE AT EOT?
1393	003764	001747				BEQ	T4C	:NO
1394	003766	104422					CHGDRV	:ANYMORE DRIVES SELECTED?
1395	003770	000771				BR	T4F	:YES
1396	003772	104410			T4G:	RSFDRV		:SET DRIVE SELECTION TO LOWEST NUMBER
1397	003774	104414			T4H:		MVCTRS	:RESTORE DRIVE COUNTERS
1398	003776	032737	000020	000632		BIT	#20, MODES	:IS THIS DRIVE AT EOT?
1399	004004	001002				BNE	T4J	:YES, SKIP BACKSPACE
1400	004006	004737	011030			JSR	PC, GOBKWD	:BACKSPACE
1401	004012	104406			T4J:	SVCTRS		:SAVE DRIVE COUNTERS
1402	004014	104422					CHGDRV	:ANY MORE DRIVES SELECTED?
1403	004016	000766				BR	T4H	:YES
1404	004020	104410			T4K:	RSFDRV		:SET DRIVE SELECTION TO LOWEST NUMBER
1405	004022	104414			T4L:	MVCTRS		:RESTORE DRIVE COUNTERS
1406	004024	032737	000020	000632		BIT	#20, MODES	:IS THIS READ AT EOT?
1407	004032	001025				BNE	T4N	:YES, SKIP READ
1408	004034	023737	000616	000612		CMP	LASRCR, RECORD	:HAVE WE READ LAST RECORD WRITTEN?
1409	004042	001421				BEQ	T4N	:YES
1410	004044	013737	000616	000550		MOV	LASRCR, SVRECR	:SAVE LAST RECORD
1411	004052	032737	000003	001320		BIT	#3, PARAM	:IS READ MODE NONSTOP?
1412	004060	001405				BEQ	T4M	:YES
1413	004062	013737	000612	000616		MOV	RECORD, LASRCR	
1414	004070	005237	000616			INC	LASRCR	:+1 TO LAST RECORD WRITTEN
1415	004074	104424			T4M:	READIT		:READ
1416	004076	013737	000550	000616		MOV	SVRECR, LASRCR	:RESTORE LAST RECORD WRITTEN
1417	004104	104406					SVCTRS	:SAVE DRIVE COUNTERS
1418	004106	104422			T4N:	CHGDRV		:ANYMORE DRIVES SELECTED?
1419	004110	000744				BR	T4L	:YES
1420	004112	104414			T4P:	MVCTRS		:RESTORE DRIVE COUNTERS
1421	004114	023737	000616	000612		CMP	LASRCR, RECORD	:ARE WE AT END OF RLS?
1422	004122	001336				BNE	T4K	:NO
1423	004124	104422					CHGDRV	:ANYMORE DRIVES SELECTED?
1424	004126	000771				BR	T4P	:YES
1425	004130	004737	004734			JSR	PC, ALLEOT	:ARE ALL DRIVES AT EOT?
1426	004134	000650				BR	T4A	:NO
1427	004136	000137	003136			JMP	DONE	:YES, EXIT
1428								
1429								
1430								
1431								
1432	004142	052737	000002	000632		TESTS:	BIS #2, MODES	

: TESTS  
: READ ONLY  
: RANDOM PATTERN INVALID EXCEPT FOR SPECIFIC CASES  
: TESTS: BIS #2, MODES

# F03

TM-11 DATA RELIABILITY 9 TRACK  
DZTMBO.P11

MACY11 27(732) 10-SEP-76 12:08 PAGE 31

1433	004150	104420					CLRALL	:CLEAR ERROR COUNTERS AND REWIND
1434	004152	104416					GENPAT	:GENERATE PATTERN
1435	004154	012737	177777	004422	TS:	MOV	#-1,TSFLAG	:ENABLE EXIT FROM WRITE ROUTINE
1436	004162	104402					WRITIT	:ENTER WRITE ONLY TO INITIALIZE RECORD SEQUENCE
1437	004164	032737	000010	000632		BIT	#10,MODES	:ARE WE AT END OF RLS?
1439	004172	001402				BEQ	T5A	:YES
1439	004174	004737	005554			JSR	PC,TESINC	:SEE IF RECORD LENGTH SHOULD BE CHANGED
1440	004200	013737	000612	004424	T5A:	MOV	RECORD,TSINC	
1441	004206	005037	000612			CLR	RECORD	
1442	004212	052737	000010	000632	T5B:	BIS	#10,MODES	:INDICATE AT START OF RLS
1443	004220	104410					RSFDRV	:SET DRIVE SELECTION TO LOWEST DRIVE NUMBER
1444	004222	104414			T5C:		MVCTRS	:RESTORE DRIVE COUNTERS
1445	004224	032737	000020	000632		BIT	#20,MODES	:IS THIS DRIVE AT EOT
1446	004232	001007				BNE	T5D	:YES
1447	004234	013737	000612	000616		MOV	RECORD,LASRCR	
1448	004242	063737	004424	000616		ADD	TSINC,LASRCR	:CURRENT RECORD + SEQUENCE LENGTH
1449	004250	104406					SVCTRS	:SAVE DRIVE COUNTERS
1450	004252	104422			T5D:		CHGDRV	:ANYMORE DRIVES?
1451	004254	000762				BR	T5C	:YES
1452	004256	104410					RSFDRV	:SET DRIVE SELECTION TO LOWEST NUMBER
1453	004260	104414			T5E:		MVCTRS	:RESTORE DRIVE COUNTERS
1454	004262	032737	000020	000632		BIT	#20,MODES	:IS THIS DRIVE AT EOT?
1455	004270	001021				BNE	T5G	:YES
1456	004272	013737	000616	000550		MOV	LASRCR,SVRECR	:SAVE END OF RLS RECORDS
1457	004300	032737	000003	001320		BIT	#3,PARAM	:IS READ MODE NONSTOP
1458	004306	001405				BEQ	T5F	:YES GO TO END RLS
1459	004310	013737	000612	000616		MOV	RECORD,LASRCR	:NEXT TO BE READ
1460	004316	005237	000616			INC	LASRCR	:+1 EXIT READ AFTER ONE RECORD
1461	004322	104424			T5F:		READIT	:READ
1462	004324	013737	000550	000616		MOV	SVRECR,LASRCR	:RESTORE END RECORD
1463	004332	104406					SVCTRS	:SAVE DRIVE COUNTERS
1464	004334	104422			T5G:		CHGDRV	:ANY MORE DRIVES?
1465	004336	000750				BR	T5E	:YES
1466	004340	004737	004734			JSR	PC,ALLEOT	:ALL AT EOT?
1467	004344	000402				BR	T5H	:NO
1468	004346	000137	003136			JMP	DONE	:YES EXIT
1469	004352	104410			T5H:		RSFDRV	:SET DRIVE SELECTION TO LOWEST NUMBER
1470	004354	104414			T5J:		MVCTRS	:RESTORE DRIVE COUNTERS
1471	004356	023737	000612	000616		CMP	RECORD,LASRCR	:ARE WE AT END OF RLS?
1472	004364	001003				BNE	TSK	:NO
1473	004366	042737	000010	000632		BIC	#10,MODES	:YES
1474	004374	104422			T5K:		CHGDRV	:ANYMORE DRIVES SELECTED?
1475	004376	000766				BR	TSJ	:YES
1476	004400	032737	000010	000632		BIT	#10,MODES	:AT END OF RLS?
1477	004406	001324				BNE	T5E	:NO
1478	004410	004737	004734			JSR	PC,ALLEOT	:ALL DRIVES AT EOT?
1479	004414	000657				BR	T5	:NO
1480	004416	000137	003136			JMP	DONE	:YES, EXIT
1481	004422	000000			TSFLAG:	0		
1482	004424	000000			TSINC:	0		
1483								
1484								:SAVE DRIVE RECORD AND ERROR COUNTERS
1485	004426	004737	004462		SVCTR:	JSR	PC,CTRDEX	
1486	004432	012021			SVC1:	MOV	(0)+(1)+	
1487	004434	022700	000634			CMP	#DRVADR,RO	
1488	004440	001374				BNE	SVC1	



1489	004442	000207							
1490									
1491	004444	004737	004462						
1492	004450	012120							
1493	004452	022700	000634						
1494	004456	001374							
1495	004460	000207							
1496									
1497	004462	012700	000570						
1498	004466	012701	000634						
1499	004472	063701	000556						
1500	004476	063701	000556						
1501	004502	011101							
1502	004504	000207							
1503									
1504	004506	104410							
1505	004510	004737	004676						
1506	004514	004737	005042						
1507	004520	104406							
1508	004522	104422							
1509	004524	000771							
1510	004526	052737	000010	000632					
1511	004534	005037	004422						
1512	004540	000207							
1513									
1514	004542	005037	000556						
1515	004546	012737	000200	000554					
1516	004554	033737	000546	000554					
1517	004562	001006							
1518	004564	005237	000556						
1519	004570	000241							
1520	004572	006037	000554						
1521	004576	000766							
1522	004600	013737	000556	000552					
1523	004606	000337	000552						
1524	004612	052737	060000	000552					
1525	004620	032777	001000	173664					
1526	004626	001403							
1527	004630	052737	004000	000552					
1528	004636	000207							
1529									
1530									
1531									
1532	004640	005237	000556						
1533	004644	000241							
1534	004646	006037	000554						
1535	004652	001004							
1536	004654	104410							
1537	004656	062716	000002						
1538	004662	000207							
1539	004664	033737	000554	000546					
1540	004672	001762							
1541	004674	000741							
1542									
1543									
1544	004676	105777	173600						

```

;RESET DRIVE COUNTERS BACK INTO PROGRAM
MVCTR: JSR PC,CTRDEX
MV1: MOV (1)+,(0)+
CMP #DRVADR,R0
BNE MV1
RTS PC

;SET UP POINTERS FOR MOVE AND SAVE COUNTERS
CTRDEX: MOV #WRCHEK,R0
MOV #DRVADR,R1
ADD CDRIVE,R1
ADD CDRIVE,R1
MOV @R1,R1
RTS PC

;CLEAR ALL DRIVE COUNTERS
CLRAL: JSR RSFDRV
CLR1: JSR PC,REWIND
JSR PC,CLRTBL
SVCTRS
CHGDRV
CLR1
BR #10,MODES ;AT END OF RLS
BIS CLR TSFLAG
RTS PC

;RESET DRIVE SELECTION TO LOWEST NUMBER
RSFDR: CLR CDRIVE ;START WITH DRIVE 0
MOV #200,CDRVBT ;BIT FOR DRIVE 0
RSF1: BIT MSBITS,CDRVBT ;IS DRIVE SELECTED?
BNE RSF2 ;YES
INC CDRIVE ;NO + 1 TO DRIVE
CLC
ROR CDRVBT ;ROTATE DRIVE BIT
BR RSF1 ;REPEAT
RSF2: MOV CDRIVE,COMAND
SWAB COMAND
BIS #60000,COMAND ;800 BPI, 9 TRACK
BIT #1000,@SWR ;TEST PARITY SELECTED
BEQ .+10 ;ODD
BIS #4000,COMAND ;EVEN
RTS PC

;SELECT NEXT DRIVE IN SEQUENCE
;+1 WORD TO EXIT ADDRESS IF LAST DRIVE TESTED
CHGDR: INC CDRIVE ;+1 TO DRIVE NUMBER
CLC
ROR CDRVBT ;MOVE MASK BIT OVER 1 PLACE
BNE CHG1 ;BRANCH IF MORE DRIVES SELECTED
RSFDRV ;RESET DRIVE SELECT TO LOWEST NUMBER
ADD #2,@SP ;+ 2 TO SKIP OVER FIRST EXIT
RTS PC
CHG1: BIT CDRVBT,MSBITS
BEQ CHGDR
BR RSF2

;REWIND DRIVE TO BOT
REWIND: TSTB @MTC
    
```

# H03

TM-11 DATA RELIABILITY 9 TRACK  
DZTMBD.P11

MACY11 27(732) 10-SEP-76 12:08 PAGE 33

```

1545 004702 100375          BPL      .-4          ;WAIT FOR CONTROL UNIT
1546 004704 013777 000552 173570  MOV     COMAND,AMTC ;SELECT DRIVE
1547 004712 006077 173562  ROR     AMTS
1548 004716 103375          BCC     .-4          ;WAIT FOR TU READY
1549 004720 052777 000016 173554  BIS     #16,AMTC    ;REWIND
1550 004726 004737 005066  JSR     PC,GOWAIT
1551 004732 000207          RTS     PC          ;EXIT
1552
1553 004734 104410          ;ARE ALL DRIVES AT END OF TAPE
1554 004736 104414  ALLEOT: RSFDRV
1555 004740 032737 000060 000632  ALL1:  MVCTRS
1556 004746 001403          BIT     #60,MODES ;AT EOT?
1557 004750 104422          BEQ     ALLEOS     ;NO
1558 004752 000771          BR      ALL1       ;DONE ALL DRIVES?
1559 004754 000427          BR      ALL3       ;NO
1560 004756 032777 000400 173526  ALLEOS: BIT     #400,JSWR ;TEST SWITCH 8 TO EXIT AT END OF SEQUENCE
1561 004764 001425          BEQ     ALL2       ;NO, GO TO EOT
1562 004766 032737 000010 000632  BIT     #10,MODES ;AT END OF SEQUENCE
1563 004774 001421          BEQ     ALL2       ;NO, EXIT, DON'T DUMP ERROR COUNTERS
1564
1565 004776 104410          ;DUMP ERROR COUNTERS ON ALL DRIVES
1566 005000 104414  CTRDMP: RSFDRV
1567 005002 005737 004422  MVCTRS
1568 005006 001006          TST     TSFLAG
1569 005010 004737 006112          BNE     CTRD1     ;DUMP READ ONLY
1570 005014 032737 000004 000632  JSR     PC,ENDT1
1571 005022 001402          BIT     #4,MODES ;READ PASS SELECTED?
1572 005024 004737 010264          BEQ     CDMEND    ;NO
1573 005030 104422          CTRD1: JSR     PC,RNDTP1
1574 005032 000762          CDMEND: CHGDRV   ;DONE ALL DRIVES
1575 005034 062716 000002          BR      CTRDMP+2 ;NO
1576 005040 000207          ALL3:  ADD     #2,(6) ;INCREMENT RETURN POINT
1577  ALL2:  RTS     PC
1578
1579 005042 012700 000570          ;CLEAR READ AND WRITE TABLES
1580 005046 005020  CLRTBL: MOV     #WRCHK,RO
1581 005050 020027 000632  CLRT1: CLR     (0)+
1582 005054 001374          CMP     RO,#MODES
1583 005056 042737 000070 000632  BNE     CLRT1
1584 005064 000207          BIC     #70,MODES
1585          RTS     PC
1586 005066 012777 000200 173414  ;INTERRUPT ENABLE, GO, WAIT FOR INTERRUPT
1587 005074 012777 005130 173432  GOWAIT: MOV     #200,ACC ;SET PRIORITY LEVEL 4
1588 005102 012737 000001 005116  MOV     #GW1,AMTV  ;SET INTERRUPT RETURN
1589 005110 052777 000101 173364  MOV     #1,WAIT1
1590 005116 000001          BIS     #101,AMTC ;INTERRUPT ENABLE, GO
1591 005120 012777 000340 173362  WAIT1: WAIT     ;WAIT FOR INTERRUPT
1592 005126 000207          MOV     #340,ACC ;RESTORE PRIORITY LEVEL 7
1593 005130 012737 000001 005116  RTS     PC        ;EXIT
1594 005136 000002          GW1:  MOV     #1,WAIT1
1595          RTI
1596          ;RETURN FROM INTERRUPT
1597
1598 005140 005737 000612          ;WRITE RECORD SECTION
1599 005144 001031  WRITI: TST     RECORD ;IS THIS THE FIRST RECORD
1600 005146 013737 000524 000542  BNE     NOINCR   ;NO, SKIP SET UP OF RECORD LENGTH AND BLOCK INCREMENT
1600 005154 012737 177774 000564  MOV     MAXLEN,STRLEN
          MOV     #-4.,BLKINC

```

1601	005162	032737	000020	001320		BIT	#20,PARAM	
1602	005170	001006				BNE	W1	
1603	005172	013737	000526	000542		MOV	MINLEN,STRLEN	
1604	005200	012737	000004	000564		MOV	#4, BLKINC	
1605	005206	013737	000542	000626	W1:	MOV	STRLEN,WRTLEN	
1606	005214	032737	000040	001320		BIT	#40,PARAM	; DOES RECORD LENGTH CHANGE?
1607	005222	001002				BNE	NOINCR	; YES
1608	005224	005037	000564			CLR	BLKINC	; NO
1609	005230	013737	000612	000614	NOINCR:	MOV	RECORD,WRRECR	
1610	005236	005737	004422			TST	TSFLAG	
1611	005242	001401				BEQ	.+4	
1612	005244	000207				RTS	PC	; EXIT WRITE ROUTINE IF TEST 5
1613	005246	005037	000562			CLR	WRPASS	
1614	005252	013777	000552	173222	STRTOP:	MOV	COMAND,AMTC	; SELECT UNIT
1615	005260	105777	173216			TSTB	AMTC	
1616	005264	100375				BPL	.-4	; WAIT FOR CU READY
1617	005266	006077	173206			ROR	AMTS	; WAIT FOR TU READY
1618	005272	103375				BCC	.-4	
1619	005274	013777	000626	173202	NONSTP:	MOV	WRTLEN,ABC	; SET BYTE COUNT
1620	005302	005477	173176			NEG	ABC	
1621	005306	013777	000530	173172		MOV	WBUF,ACA	; SET CURRENT ADDRESS
1622	005314	052777	000004	173160		BIS	#4,AMTC	; WRITE
1623	005322	004737	005066			JSR	PC,GOWAIT	; INTERRUPT ENABLE, GO, WAIT FOR DONE
1624					; RETURN	HERE	AFTER INTERRUPT	
1625	005326	017737	173146	000566		MOV	AMTS,STATRD	; SAVE STATUS
1626	005334	005777	173142			TST	AMTC	
1627	005340	100542				BMI	ERROR	; HAVE ERROR FLAG, CHECK FOR EOT
1628	005342	005737	000562			TST	WRPASS	; WAS THIS A RECOVERY PASS
1629	005346	001410				BEQ	TSTSTP	; NO
1630	005350	013700	000562			MOV	WRPASS,RO	; YES
1631	005354	006300				ASL	RO	
1632	005356	062700	000570			ADD	#WRCHEK,RO	
1633	005362	005210				INC	ARO	; +1 TO APPROPRIATE RECOVERY PASS COUNTER
1634	005364	005037	000562			CLR	WRPASS	
1635	005370	032737	000014	001320	TSTSTP:	BIT	#14,PARAM	; IS WRITE MODE NONSTOP?
1636	005376	001023				BNE	STOPOP	; NO
1637	005400	005737	000562			TST	WRPASS	; YES
1638	005404	001333				BNE	NONSTP	
1639	005406	004737	005554			JSR	PC,TESINC	; CHANGE RECORD LENGTH
1640	005412	032737	000001	000632		BIT	#1,MODES	; EXIT AFTER RLS?
1641	005420	001405				BEQ	W10	; NO
1642	005422	032737	000010	000632		BIT	#10,MODES	; YES, ARE WE AT END OF RLS?
1643	005430	001721				BEQ	NONSTP	; NO
1644	005432	000207				RTS	PC	; YES
1645	005434	032737	000002	000632	W10:	BIT	#2,MODES	; EXIT EVERY RECORD?
1646	005442	001714				BEQ	NONSTP	; NO
1647	005444	000207				RTS	PC	; YES
1648	005446	032737	000010	001320	STOPOP:	BIT	#10,PARAM	; IS WRITE MODE RANDOM?
1649	005454	001414				BEQ	W11	; NO
1650					; RANDOM	STALL	DELAY	
1651	005456	004737	007160		RANSTP:	JSR	PC,RANGEN	
1652	005462	052737	177400	007330		BIS	#177400,RANDOM	
1653	005470	012704	177470		RAN1:	MOV	#-200.,R4	; DELAY 1 MILLISECOND
1654	005474	005204				INC	R4	
1655	005476	001376				BNE	.-2	
1656	005500	005237	007330			INC	RANDOM	

```

1657 005504 001371          BNE      RAN1
1658 005506 005737 000562  W11:  TST      WRPASS
1659 005512 001257          BNE      STRTOP
1660 005514 004737 005554  JSR      PC, TESINC
1661 005520 032737 000001 000632  BIT      #1, MODES      ;EXIT AFTER RLS?
1662 005526 001405          BEQ      W12            ;NO
1663 005530 032737 000010 000632  BIT      #10, MODES     ;YES, ARE WE AT END OF RLS?
1664 005536 001645          BEQ      STRTOP        ;NO
1665 005540 000207          RTS      PC            ;YES
1666 005542 032737 000002 000632  W12:  BIT      #2, MODES     ;EXIT EVERY RECORD?
1667 005550 001640          BEQ      STRTOP        ;NO
1668 005552 000207          RTS      PC            ;YES
1669          ;SEE IF RECORD LENGTH SHOULD BE CHANGED
1670 005554 005237 000612          TESINC: INC      RECORD    ;+1 TO RECORD COUNT
1671 005560 042737 000010 000632  BIC      #10, MODES     ;NOT END OF RLS UNLESS SET BELOW
1672 005566 005737 000564          TST      BLKINC
1673 005572 001416          BEQ      TSINC2
1674 005574 063737 000564 000626  ADD      BLKINC, WRTLEN
1675 005602 023737 000626 000526  CMP      WRTLEN, MINLEN ;RECORD LENGTH TOO SHORT?
1676 005610 002404          BLT      RESETL        ;YES, RESET
1677 005612 023737 000626 000524  CMP      WRTLEN, MAXLEN ;RECORD LENGTH TOO LONG?
1678 005620 003403          BLE      TSINC2        ;NO
1679 005622 013737 000542 000626  RESETL: MOV      STRLEN, WRTLEN ;YES, RESET
1680 005630 105737 000612          TSINC2: TST      RECORD    ;IS RECORD A MULTIPLE OF 256
1681 005634 001003          BNE      TSINC3        ;NO
1682 005636 052737 000010 000632  BIS      #10, MODES     ;INDICATE AT END OF RLS
1683 005644 000207          TSINC3: RTS      PC
1684
1685
1686          ;HAVE AN ERROR FLAG DURING WRITE OPERATION
1687          ;IF ERROR IS CAUSED BY END OF TAPE FLAG DUMP WRITE ERROR COUNTERS
1688          ;FOR ALL OTHER ERRORS: PRINT COMMAND AND STATUS REGISTERS AND RECORD NUMBER
1689          ;IF READ PASS IS SELECTED, TRY TO RECOVER BY WRITING WITH XIRG.
1690 005646 104434          ERROR: CKSWR          ;CHECK FOR CNTL G
1691 005650 032737 175600 000566  BIT      #175600, STATRD ;AT EOT?
1692 005656 001510          BEQ      ENDTAP        ;YES
1693 005660 005737 000562          TST      WRPASS
1694 005664 001002          BNE      ERR1          ;FIRST ERROR?
1695 005666 005237 000570          INC      WRCHEK        ;YES, + 1 TO WRITE ERROR
1696 005672 032777 020000 172612  ERR1:  BIT      #20000, JSWR ;TYPE ALL ERRORS?
1697 005700 001010          BNE      TESREC        ;NO
1698 005702 012702 012452          MOV      #MSG7, R2
1699 005706 104404          TOP          ;PRINT ERROR
1700 005710 013737 000626 000544  MOV      WRTLEN, LENGTH
1701 005716 004737 011140          JSR      PC, PRS
1702 005722 032777 000100 172562  TESREC: BIT      #100, JSWR ;PRINT STATUS, COMMAND, RECORD, LENGTH
1703 005730 001410          BEQ      TESRC1        ;RECOVER STATISTICALLY SELECTED?
1704 005732 005237 000562          INC      WRPASS        ;NO
1705 005736 022737 000010 000562  CMP      #8, WRPASS     ;+1 TO WRITE RECOVER
1706 005744 001020          BNE      STRC1         ;HAVE WE TRIED TO WRITE RECOVER 8 TIMES?
1707 005746 005237 000610          INC      PERMBS        ;NO
1708 005752 032737 000004 000632  TESRC1: BIT      #4, MODES ;YES, TO PERMANENT BADSPOT?
1709 005760 001402          BEQ      +6            ;IS READ PASS SELECTED?
1710 005762 004737 010610          JSR      PC, XRGREC    ;NO
1711 005766 005037 000562          CLR      WRPASS
1712 005772 032737 002000 000566  BIT      #2000, STATRD

```

1713	006000	001037	
1714	006002	000137	005506
1715	006006	004737	010206
1716	006012	004737	010206
1717	006016	032777	000040 172454
1718	006024	001402	
1719	006026	000137	005252
1720	006032	012777	177777 172444
1721	006040	013777	000552 172434
1722	006046	052777	000010 172426
1723	006054	004737	005066
1724	006060	042777	000016 172414
1725	006066	052777	000004 172406
1726	006074	000137	005252
1727			
1728	006100	005237	000612
1729	006104	052737	000040 000632
1730	006112	012702	013450
1731	006116	104404	
1732	006120	012702	012500
1733	006124	104404	
1734			
1735	006126	104434	
1736	006130	013737	000552 011314
1737	006136	000337	011314
1738	006142	142737	000170 011314
1739			
1740	006150	052737	000260 011314
1741	006156	004737	011316
1742	006162	104430	
1743	006164	013737	001320 011314
1744	006172	000337	011314
1745	006176	006037	011314
1746	006202	042737	000170 011314
1747	006210	052737	000260 011314
1748	006216	004737	011316
1749	006222	013737	001320 011314
1750	006230	042737	177763 011314
1751	006236	012702	013201
1752	006242	022737	000004 011314
1753	006250	001002	
1754	006252	012702	013155
1755	006256	022737	000010 011314
1756	006264	001002	
1757	006266	012702	013167
1758	006272	104404	
1759	006274	013702	000612
1760	006300	104426	
1761	006302	013737	001320 011314
1762	006310	042737	177717 011314
1763	006316	012702	013231
1764	006322	022737	000020 011314
1765	006330	001002	
1766	006332	012702	013240
1767	006336	022737	000040 011314
1768	006344	001002	

```

BNE      ENDTAP
JMP      W11
STREC1: JSR      PC, BACK1
        JSR      PC, BACK1      ;BACKSPACE 2 RECORDS
        BIT      #40, QMTC
        BEQ      .+6
        JMP      STRTOP
        MOV      #-1, QBC
        MOV      COMAND, QMTC
        BIS      #10, QMTC
        JSR      PC, GOWAIT      ;SPACE FORWARD 1 RECORD
        BIC      #16, QMTC
        BIS      #4, QMTC      ;CHANGE FROM SPACE TO WRITE
        JMP      STRTOP
;DRIVE IS AT EOT
ENDTAP: INC      RECORD
        BIS      #40, MODES      ;INDICATE DRIVE AT EOT
ENDT1:  MOV      #MSG24, R2
        TOP
        MOV      #MSG8, R2
        TOP
;DUMP WRITE ERRORS
WRDMP:  CKSWR
        MOV      COMAND, CHAR
        SWAB     CHAR
        BICB     #170, CHAR
        BIS      #260, CHAR
        JSR      PC, OCTP      ;PRINT DRIVE NUMBER
        SP3
        MOV      PARAM, CHAR
        SWAB     CHAR
        ROR      CHAR
        BIC      #170, CHAR
        BIS      #260, CHAR
        JSR      PC, OCTP      ;PRINT PATTERN NUMBER
        MOV      PARAM, CHAR
        BIC      #177763, CHAR
        MOV      #MSG14, R2
        CMP      #4, CHAR
        BNE     .+6
        MOV      #MSG12, R2
        CMP      #10, CHAR
        BNE     .+6
        MOV      #MSG13, R2
        TOP
        MOV      RECORD, R2      ;PRINT WRITE MODE
        DECPRT      ;PRINT RECORD NUMBER
        MOV      PARAM, CHAR
        BIC      #177717, CHAR
        MOV      #MSG17, R2
        CMP      #20, CHAR
        BNE     .+6
        MOV      #MSG18, R2
        CMP      #40, CHAR
        BNE     .+6

```

1769	006346	012702	013213		MOV	#MSG15,R2	
1770	006352	022737	000060	011314	CMP	#60,CHAR	
1771	006360	001002			BNE	.+6	
1772	006362	012702	013222		MOV	#MSG16,R2	
1773	006366	104404			TOP		;PRINT RECORD LENGTH SEQUENCE
1774	006370	012702	013247		MOV	#MSG19,R2	
1775	006374	104404			TOP		
1776	006376	013702	000570		MOV	WRCHEK,R2	
1777	006402	104426			DECPRT		;PRINT "WRITE ERRORS="
1778	006404	012700	000572		MOV	#WRCHEK+2,RO	
1779	006410	112737	000060	013310	MOVB	#60,MSG20+17	
1780	006416	105237	013310	WRTD1:	INCB	MSG20+17	;PRINT STATISTICAL RECOVERY
1781	006422	005710			TST	RO	
1782	006424	001405			BEQ	WRTD2	
1783	006426	012702	013271		MOV	#MSG20,R2	
1784	006432	104404			TOP		
1785	006434	011002			MOV	(0),R2	
1786	006436	104426			DECPRT		;RECOVERED AT X
1787	006440	005720		WRTD2:	TST	(0)+	;JUST INCREMENTING
1788	006442	020027	000610		CMP	RO,#WRCHEK+20	
1789	006446	001363			BNE	WRTD1	
1790	006450	005737	000610		TST	PERMBS	
1791	006454	001001			BNE	.+4	;SKIP PRINT IF = 0
1792	006456	000207			RTS	PC	
1793							
1794							
1795	006460	012702	013313		MOV	#MSG20A,R2	
1796	006464	104404			TOP		
1797	006466	013702	000610		MOV	PERMBS,R2	;PRINT "PERMANENT BADSPOT"
1798	006472	104426			DECPRT		
1799	006474	000207			RTS	PC	
1800							;GENERATE DATA PATTERN
1801	006476	013702	000530	GENPA:	MOV	WBUF,R2	;INITIALIZE BUFFER
1802	006502	013737	001320	006610	MOV	PARAM,GP1	;CHECK PARAMETERS FOR PATTERN SELECTED
1803	006510	042737	170777	006610	BIC	#170777,GP1	
1804	006516	001435			BEQ	PAT0	
1805	006520	022737	001000	006610	CMP	#1000,GP1	
1806	006526	001437			BEQ	PAT1	
1807	006530	022737	002000	006610	CMP	#2000,GP1	
1808	006536	001457			BEQ	PAT2	
1809	006540	022737	003000	006610	CMP	#3000,GP1	
1810	006546	001461			BEQ	PAT3	
1811	006550	022737	004000	006610	CMP	#4000,GP1	
1812	006556	001501			BEQ	PAT4	
1813	006560	022737	005000	006610	CMP	#5000,GP1	

M03

TM-11 DATA RELIABILITY 9 TRACK  
DZTMBD.P11

MACY11 27(732) 10-SEP-76 12:08 PAGE 38

1814	006566	001510		
1815	006570	022737	006000	006610
1816	006576	001402		

BEQ	PATS
CMP	#6000,GP1
BEQ	.+5

1817	006600	000137	007140
1818	006604	000137	007124
1819	006610	000000	
1820			
1821			
1822	006612	012722	002010
1823	006616	023702	000532
1824	006622	001373	
1825	006624	000207	
1826			
1827			
1828	006626	012700	006654
1829	006632	012022	
1830	006634	023702	000532
1831	006640	001001	
1832	006642	000207	
1833	006644	022700	006676
1834	006650	001370	
1835	006652	000765	
1836	006654	100000	
1837	006656	020100	
1838	006660	004020	
1839	006662	001004	
1840	006664	000001	
1841	006666	040200	
1842	006670	010040	
1843	006672	002010	
1844	006674	000402	
1845			
1846			
1847			
1848	006676	012722	136274
1849	006702	023702	000532
1850	006706	001373	
1851	006710	000207	
1852			
1853			
1854	006712	012700	006740
1855	006716	012022	
1856	006720	023702	000532
1857	006724	001001	
1858	006726	000207	
1859	006730	022700	006762
1860	006734	001370	
1861	006736	000765	
1862	006740	140037	
1863	006742	100476	
1864	006744	001574	
1865	006746	003770	
1866	006750	017760	
1867	006752	037300	
1868	006754	076201	
1869	006756	174003	
1870	006760	170007	
1871			
1872			

```

JMP PAT7
JMP PAT6
GP1: 0
:PATTERN 0
:HALF FREQUENCY OUTSIDE SKEW
PAT0: MOV #2010,(2)+ ;(010)(004)
      CMP RBUF,R2
      BNE PAT0
      RTS PC
:PATTERN 1
:SLIDING 1 BIT (ISOLATED BIT)
PAT1: MOV #P1T,R0
PAT1A: MOV (0)+,(2)+
      CMP RBUF,R2
      BNE +4
      RTS PC
P1T:  100000
      20100
      4020
      1004
      1
      40200
      10040
      2010
      402

:PATTERN 2
:HIGH FREQUENCY EVERY OTHER TRACK
PAT2: MOV #136274,(2)+ ;(274)(274)
      CMP RBUF,R2
      BNE PAT2
      RTS PC
:PATTERN 3
:THREE 0'S, THREE 1'S, THREE 0'S.
PAT3: MOV #P3T,R0
PAT3A: MOV (0)+,(2)+
      CMP RBUF,R2
      BNE +4
      RTS PC
P3T:  140037
      100476
      1574
      3770
      17760
      37300
      76201
      174003
      170007

:PATTERN 4
:INCREMENTING PATTERN (0-377)

```



1873 006762 105037 007006  
 1874 006766 113722 007006  
 1875 006772 105237 007006  
 1876 006776 023702 000532  
 1877 007002 001371  
 1878 007004 000207  
 1879 007006 000000

PAT4: CLR8 P4A  
 P4: MOV8 P4A,(2)+  
 INCB P4A  
 CMP RBUF,R2  
 BNE P4  
 RTS PC  
 P4A: 0

1883 007010 012700 007036  
 1884 007014 012022  
 1885 007016 023702 000532  
 1886 007022 001001  
 1887 007024 000207  
 1888 007026 022700 007124  
 1889 007032 001370  
 1890 007034 000765  
 1891 007036 000000  
 1892 007040 100000  
 1893 007042 100200  
 1894 007044 040100  
 1895 007046 020100  
 1896 007050 020040  
 1897 007052 010020  
 1898 007054 004020  
 1899 007056 004010  
 1900 007060 002004  
 1901 007062 001004  
 1902 007064 001002  
 1903 007066 000401  
 1904 007070 000001  
 1905 007072 000000  
 1906 007074 100200  
 1907 007076 040200  
 1908 007100 040100  
 1909 007102 020040  
 1910 007104 010040  
 1911 007106 010020  
 1912 007110 004010  
 1913 007112 002010  
 1914 007114 002004  
 1915 007116 001002  
 1916 007120 000402  
 1917 007122 000401

:PATTERN 5  
 :EACH TRACK 3 BITS  
 PAT5: MOV #PST,R0  
 PAT5A: MOV (0)+,(2)+  
 CMP RBUF,R2  
 BNE +4  
 RTS PC  
 CMP #PAT6,R0  
 BNE PAT5A  
 BR PAT5  
 PST: 0

100000  
 100200  
 40100  
 20100  
 20040  
 10020  
 4020  
 4010  
 2004  
 1004  
 1002  
 401  
 1  
 0  
 100200  
 40200  
 40100  
 20040  
 10040  
 10020  
 4010  
 2010  
 2004  
 1002  
 402  
 401

1918  
 1919  
 1920 007124 012722 177777  
 1921 007130 023702 000532  
 1922 007134 001373  
 1923 007136 000207  
 1924  
 1925  
 1926  
 1927  
 1928 007140 004737 007160

:PATTERN 6  
 :HIGH FREQUENCY ALL TRACKS  
 PAT6: MOV #-1,(2)+  
 CMP RBUF,R2  
 BNE PAT6  
 RTS PC

:PATTERN 7  
 :RANDOM  
 PAT7: JSR PC,RANGEN

```

1929 007144 013722 007330
1930 007150 023702 000532
1931 007154 001371
1932 007156 000207
1933
1934
1935 007160 010037 007336
1936 007164 010137 007340
1937 007170 010237 007342
1938 007174 010337 007344
1939 007200 013700 007332
1940 007204 013701 007334
1941 007210 012703 000007
1942 007214 005002
1943 007216 006300
1944 007220 006101
1945 007222 006102
1946 007224 005303
1947 007226 001373
1948 007230 063700 007332
1949 007234 005501
1950 007236 063701 007334
1951 007242 005502
1952 007244 062700 001057
1953 007250 005501
1954 007252 005502
1955 007254 062701 047401
1956 007260 005502
1957 007262 062702 000006
1958 007266 060200
1959 007270 005501
1960 007272 010037 007330
1961 007276 010037 007332
1962 007302 010137 007334
1963 007306 013700 007336
1964 007312 013701 007340
1965 007316 013702 007342
1966 007322 013703 007344
1967 007326 000207
1968 007330 000000
1969 007332 000000
1970 007334 000000
1971 007336 000000
1972 007340 000000
1973 007342 000000
1974 007344 000000
1975
1976
1977
1978 007346 005737 000612
1979 007352 001003
1980 007354 013737 000542 000630
1981 007362 012737 177775 000560
1982 007370 013777 000552 171104
1983 007376 105777 171100
1984 007402 100375

```

```

MOV RANDOM,(2)+
CMP RBUF,R2
BNE PAT7
RTS PC
:RANDOM NUMBER GENERATOR
:EXIT WITH RANDOM NUMBER IN LOCATION NAMED "RANDOM"
RANGEN: MOV RO,SVO ;SAVE REGISTERS
MOV R1,SV1
MOV R2,SV2
MOV R3,SV3
MOV LONUM,RO ;SET UP LOW DIGIT
MOV HINUM,R1 ;SET UP HIGH DIGIT
MOV #7,R3 ;SET UP SHIFT COUNT
CLR R2
RANG1: ASL RO ;SHIFT RO LEFT AND
ROL R1 ;ROTATE CARRY INTO LSB OF R1 AND
ROL R2 ;ROTATE CARRY OUT OF R1 INTO R2
DEC R3 ;DECREMENT R3
BNE RANG1 ;CONTINUE SHIFT LOOP
ADD LONUM,RO ;ADD NUMBER TO MAKE X 129
ADC R1 ;PROPAGATE CARRY
ADD HINUM,R1 ;ADD NUMBER TO MAKE X 129
ADC R2 ;PROPAGATE CARRY
ADD #1057,RO ;ADD LOW CONSTANT
ADC R1 ;PROPAGATE CARRY
ADC R2 ;PROPAGATE CARRY
ADD #47401,R1 ;ADD HIGH CONSTANT
ADC R2 ;PROPAGATE CARRY
ADD #6,R2 ;ADD HIGH CONSTANT
ADD R2,RO ;RE-PRIME RO WITH HIGH DIGIT
ADC R1 ;PROPAGATE CARRY
MOV RO,RANDOM ;SAVE RANDOM NUMBER
MOV RO,LONUM ;PUT RO BACK IN LONUM
MOV R1,HINUM ;PUT R1 BACK IN HINUM
MOV SVO,RO ;RESTORE REGISTERS
MOV SV1,R1
MOV SV2,R2
MOV SV3,R3
RTS PC ;EXIT

RANDOM: 0
LONUM: 0
HINUM: 0
SVO: 0
SV1: 0
SV2: 0
SV3: 0

:READ RECORD SECTION
READ1: TST RECORD ;FIRST RECORD?
BNE $R1 ;NO
MOV STRLEN,READLN ;SET INITIAL READ LENGTH
$R1: MOV #-3,RDPASS ;INITIALIZE READ PASS COUNTER
RDSTPD: MOV COMAND,DMTC
TSTB DMTC
BPL .-4 ;WAIT FOR CONTROL UNIT READY

```

1985	007404	006077	171070		ROR	QMTS	
1986	007410	103375			BCC	-4	;WAIT FOR TAPE UNIT READY
1987	007412	013700	000532		READGO: MOV	RBUF, R0	
1988	007416	013701	000630		MOV	READLN, R1	
1989	007422	105020			RG1: CLR	(0)+	;CLEAR READ BUFFER
1990	007424	005301			DEC	R1	
1991	007426	001375			BNE	RG1	
1992	007430	013777	000630	171046	MOV	READLN, QBC	;SET BYTE COUNT
1993	007436	005477	171042		NEG	QBC	
1994	007442	013777	000532	171036	MOV	RBUF, QCA	;SET CURRENT ADDRESS
1995	007450	013777	000552	171024	MOV	COMAND, QMTC	
1996	007456	052777	000002	171016	BIS	#2, QMTC	
1997	007464	004737	005066		JSR	PC, GOWAIT	
1998					;RETURN HERE AFTER INTERRUPT		
1999	007470	017737	171004	000566	MOV	QMTS, STATRD	
2000	007476	005777	171000		TST	QMTC	;ANY STATUS ERRORS
2001	007502	100504			BMI	RDERRO	;YES
2002					;CHECK FOR DATA ERRORS		
2003	007504	013700	000532		MOV	RBUF, R0	
2004	007510	013701	000530		MOV	WBUF, R1	
2005	007514	013702	000630		MOV	READLN, R2	
2006	007520	022021			SRS: CMP	(0)+, (1)+	;CHECK FOR PROPER DATA TRANSFER
2007	007522	001045			BNE	DATERR	;HAVE DATA ERROR
2008	007524	162702	000002		SUB	#2, R2	;CHECKED ALL TRANSFERS?
2009	007530	001373			BNE	SRS	;NO
2010	007532	032737	000003	001320	RTSSTP: BIT	#3, PARAM	
2011	007540	001007			BNE	RDSTPC	
2012	007542	004737	010136		JSR	PC, RDINCR	;INCREMENT FOR NEXT BLOCK
2013	007546	023737	000612	000616	CMP	RECORD, LASRCR	
2014	007554	001316			BNE	READGO	
2015	007556	000207			RTS	PC	;EXIT READIT
2016	007560	032737	000002	001320	RDSTPC: BIT	#2, PARAM	;IS READ MODE RANDOM?
2017	007566	001414			BEQ	RDSTP	;NO
2018	007570	004737	007160		RNRDRS: JSR	PC, RANGEN	
2019	007574	052737	177400	007330	BIS	#177400, RANDOM	
2020	007602	012704	177470		RNDS1: MOV	#-200., R4	;DELAY 1 MILLISECOND
2021	007606	005204			INC	R4	
2022	007610	001376			BNE	-2	
2023	007612	005237	007330		INC	RANDOM	
2024	007616	001371			BNE	RNDS1	
2025	007620	004737	010136		RDSTP: JSR	PC, RDINCR	
2026	007624	023737	000612	000616	CMP	RECORD, LASRCR	;DONE LAST RECORD?
2027	007632	001256			BNE	RDSTPD	;NO
2028	007634	000207			RTS	PC	;YES EXIT
2029					;HAVE DATA ERROR		
2030	007636	032777	020000	170646	DATERR: BIT	#20000, QSWR	;TYPE ALL READ ERRORS?
2031	007644	001014			BNE	DATER1	;NO
2032	007646	012702	012622		MOV	#MSG9A, R2	
2033	007652	104404			TOP		
2034	007654	013737	000630	000544	MOV	READLN, LENGTH	
2035	007662	004737	011140		JSR	PC, PRS	
2036	007666	014102			MOV	-(1), R2	;PRINT EXPECTED DATA
2037	007670	104412				OCTPRT	
2038	007672	014002			MOV	-(0), R2	
2039	007674	104412				OCTPRT	;PRINT ACTUAL DATA
2040	007676	022737	177775	000560	DATER1: CMP	#-3, RDPASS	

2041	007704	001002			BNE	.+6		
2042	007706	005237	000622		INC	DAERRS	;+1 TO DATA ERRORS	
2043	007712	000464			BR	RTSR1		
2044					:STATUS INDICATES AN ERROR, CHECK FOR EOT			
2045	007714	104434			RDERR0:	CKSWR	;CHECK FOR CNTL G	
2046	007716	032737	175600	000566	BIT	#175600,STATRD	;IS ERROR LEGITIMATE OR EOT?	
2047	007724	001552			BEQ	RNDTAP	;HAVE EOT	
2048	007726	032777	020000	170556	BIT	#20000,JSWR	;TYPE ALL READ ERRORS?	
2049	007734	001044			BNE	RTSREC	;NO	
2050	007736	012702	012575		MOV	#MSG9,R2		
2051	007742	104404				TOP	;PRINT ERROR	
2052	007744	013737	000630	000544	MOV	READLN,LENGTH		
2053	007752	004737	011140		JSR	PC,PRTS		
2054	007756	032777	010000	170514	BIT	#10000,AMTS	;STATUS ERROR DUE TO PARITY	
2055							ERROR?	
2056	007764	001430			BEQ	RTSREC	;BRANCH IF NOT	
2057	007766	032777	000010	170516	BIT	#10,JSWR	;SEE IF USER WANTS DATA COMPARE!	
2058	007774	001424			BEQ	RTSREC	;BRANCH IF NOT	
2059	007776	013700	000530		MOV	WBUF,R0	;PICK UP STARTING ADDRESS OF	
2060							WRITE BUFFER	
2061	010002	013701	000532		MOV	RBUF,R1	;PICK UP STARTING ADDRESS OF	
2062							READ BUFFER	
2063	010006	013702	000630		MOV	#READLN,R2	;PICK UP RECORD LENGTH IN BYTES	
2064	010012	022021		1\$:	CMP	(R0)+,(R1)+	;COMPARE WHAT SHOULD HAVE BEEN	
2065							WRITTEN WITH WHAT WAS!!	
2066	010014	001004			BNE	2\$	;BRANCH IF NOT THE SAME	
2067	010016	162702	000002		SUB	#2,R2	;DROP OFF A WORD FROM RECORD	
2068							LENGTH	
2069	010022	001406			BEQ	3\$	;BRANCH IF ALL OF RECORD DATA	
2070							CHECKS	
2071	010024	000772			BR	1\$	;GO TO COMPARE NEXT BYTE	
2072	010026	014002		2\$:	MOV	-(R0),R2	;PICK UP THE DATA VALUE THAT	
2073							SHOULD HAVE BEEN WRITTEN	
2074	010030	104412			OCTPRT		;PRINT EXPECTED VALUE OF	
2075							WRITTEN DATA	
2076	010032	014102			MOV	-(R1),R2	;PICK UP THE DATA VALUE THAT	
2077							WAS WRITTEN	
2078	010034	104412			OCTPRT		;PRINT ACTUAL VALUE OF THE	
2079							DATA READ	
2080	010036	000403			BR	RTSREC	;CONTINUE WITH TESTING	
2081	010040	012702	013077	3\$:	MOV	#MSG100,R2	;INDICATE RECORD DATA COMPARES	
2082							DESPITE THE PARITY ERROR	
2083							;CAUSING THE READ STATUS ERROR	
2084	010044	104404				TOP		
2085					:+ 1 TO RDERRS IF FIRST ERROR PASS			
2086	010046	104434			RTSREC:	CKSWR	;CHECK FOR CNTL G	
2087	010050	022737	177775	000560	CMP	#-3,RDPASS		
2088	010056	001002			BNE	.+6		
2089	010060	005237	000620		INC	RDERRS	;+1 TO STATUS ERRORS	
2090	010064	032777	000020	170420	RTSR1:	BIT	#20,JSWR	;DELETE READ RETRYS (SW 4)?
2091	010072	001011			BNE	RPASS3	;YES	
2092	010074	005237	000560		INC	RDPASS	;DONE ALL RE-READS?	
2093	010100	001404			BEQ	RPASS1	;YES	
2094	010102	004737	010206		JSR	PC,BACK1	;NO, BACKSPACE TAPE	
2095	010106	000137	007370		JMP	RDSTPD	;GO AGAIN	
2096	010112	005237	000624		RPASS1:	INC	NRREAD	;+1 TO NONRECOVERABLE READ

2097	010116	012737	177775	000560	RPASS3: MOV	#-3, RDPASS	
2098	010124	032737	002000	000566	BIT	#2000, STATRD	; AT EOT?
2099	010132	001054			BNE	RNDTP1	; YES, TYPE "EOT"
2100	010134	000631			BR	RDSTP	
2101							
2102							
2103	010136	005237	000612		:SET UP	POINTERS FOR NEXT RECORD	
2104	010142	005737	000564		RDINCR: INC	RECORD	
2105	010146	001416			TST	BLKINC	
2106					BEQ	RESTR1	
2107	010150	063737	000564	000630	;RECORD	LENGTH IS CHANGING, COUNT IT	
2108	010156	023737	000630	000526	ADD	BLKINC, READLN	
2109	010164	002404			CMP	READLN, MINLEN	; IS LENGTH LESS THAN MINIMUM
2110	010166	023737	000630	000524	BLT	RESTR1	; NO
2111	010174	003403			CMP	READLN, MAXLEN	; IS LENGTH GREATER THAN MAXIMUM?
2112	010176	013737	000542	000630	BLE	RESTR1	; NO
2113	010204	000207			RESTR1: MOV	STRLEN, READLN	; RESET INITIAL LENGTH
2114					RESTR1: RTS	PC	
2115	010206	006077	170266		:BACKSPACE	ONE RECORD	
2116	010212	103375			BACK1: ROR	AMTS	
2117	010214	012777	177777	170262	BCC	.-4	; WAIT FOR TAPE UNIT READY
2118	010222	013777	000552	170252	MOV	#-1, JBC	; COUNT 1 RECORD
2119	010230	052777	000012	170244	MOV	COMAND, AMTC	; SELECT DRIVE
2120	010236	004737	005066		BIS	#12, AMTC	; ISSUE BACKSPACE
2121	010242	042777	000016	170232	JSR	PC, GOWAIT	
2122	010250	000207			BIC	#16, AMTC	
2123					RTS	PC	
2124	010252	004737	010136		:DRIVE HAS	REACHED EOT IN READ MODE	
2125	010256	052737	000020	000632	RNDTAP: JSR	PC, RDINCR	
2126	010264	012702	013514		BIS	#20, MODES	; INDICATE AT EOT
2127	010270	104404			RNDTP1: MOV	#MSG25, R2	
2128	010272	012702	012500			TOP	
2129	010276	104404			MOV	#MSG8, R2	
2130						TOP	
2131	010300	104434			:DUMP	ERROR COUNTERS	
2132	010302	013737	000552	011314	READMP: CKSWR		; CHECK FOR CNTL G
2133	010310	000337	011314		MOV	COMAND, CHAR	
2134	010314	142737	000170	011314	SWAB	CHAR	
2135	010322	052737	000260	011314	BICB	#170, CHAR	
2136	010330	004737	011316		BIS	#260, CHAR	
2137	010334	104430			JSR	PC, OCTP	; PRINT DRIVE NUMBER
2138	010336	013737	001320	011314	SP3		
2139	010344	000337	011314		MOV	PARAM, CHAR	
2140	010350	006037	011314		SWAB	CHAR	
2141	010354	042737	000170	011314	ROR	CHAR	
2142	010362	052737	000260	011314	BIC	#170, CHAR	
2143	010370	004737	011316		BIS	#260, CHAR	
2144					JSR	PC, OCTP	; PRINT PATTERN NUMBER
2145	010374	013737	001320	011314	MOV	PARAM, CHAR	
2146	010402	042737	177774	011314	BIC	#177774, CHAR	
2147	010410	012702	013201		MOV	#MSG14, R2	
2148	010414	022737	000001	011314	CMP	#1, CHAR	
2149	010422	001002			BNE	.-6	
2150	010424	012702	013155		MOV	#MSG12, R2	
2151	010430	022737	000002	011314	CMP	#2, CHAR	
2152	010436	001002			BNE	.-6	

2153	010440	012702	013167	
2154	010444	104404		
2155	010446	013702	000612	
2156	010452	104426		
2157	010454	013737	001320	011314
2158	010462	042737	177717	011314
2159	010470	012702	013231	
2160	010474	022737	000020	011314
2161	010502	001002		
2162	010504	012702	013240	
2163	010510	022737	000040	011314
2164	010516	001002		
2165	010520	012702	013213	
2166	010524	022737	000060	011314
2167	010532	001002		
2168	010534	012702	013222	
2169	010540	104404		
2170	010542	012702	013343	
2171	010546	104404		
2172	010550	013702	000620	
2173	010554	104426		
2174	010556	012702	013373	
2175	010562	104404		
2176	010564	013702	000622	
2177	010570	104426		
2178	010572	012702	013414	
2179	010576	104404		
2180	010600	013702	000624	
2181	010604	104426		
2182	010606	000207		
2183				
2184				
2185				
2186				
2187				
2188				
2189				
2190	010610	104434		
2191	010612	012737	177774	000562
2192	010620	032777	000040	167664
2193	010626	001036		
2194	010630	004737	010206	
2195	010634	105777	167642	
2196	010640	100375		
2197	010642	013777	000552	167632
2198	010650	052777	000014	167624
2199	010656	013777	000626	167620
2200	010664	005477	167614	
2201	010670	013777	000530	167610
2202	010676	006077	167576	
2203	010702	103375		
2204	010704	004737	005066	
2205				
2206				
2207	010710	017737	167564	000566
2208	010716	005777	167560	

```

MOV      #MSG13,R2
TOP
;PRINT READ MODE
MOV      RECORD,R2
DECPRT
;PRINT RECORD NUMBER
MOV      PARAM,CHAR
BIC      #177717,CHAR
MOV      #MSG17,R2
CMP      #20,CHAR
BNE      .+6
MOV      #MSG18,R2
CMP      #40,CHAR
BNE      .+6
MOV      #MSG15,R2
CMP      #60,CHAR
BNE      .+6
MOV      #MSG16,R2
TOP
;PRINT RECORD LENGTH SEQUENCE
MOV      #MSG21,R2
TOP
MOV      RDERRS,R2
DECPRT
MOV      #MSG22,R2
TOP
MOV      DAERRS,R2
DECPRT
MOV      #MSG23,R2
TOP
MOV      NRREAD,R2
DECPRT
RTS      PC
    
```

```

;WRITE RECOVERY UTILIZING EXTENDED INTERRECORD GAP
;USED AFTER EVERY 7 REWRITES OR AFTER
;EACH WRITE ERROR IF STATISTICAL RECOVERY NOT SELECTED
;USED ONLY IF READ PASS SELECTED
XRGREC: CKSWR
MOV      #-4,WRPASS
;CHECK FOR CNTL G
;COUNT 4 REWRITES
XRG0:   BIT      #40,SWR
;DELETE WRITE XIRG (SW 5)
BNE      XRG0CD
;YES
JSR      PC,BACK1
TSTB    #MTC
BPL      .-4
MOV      COMAND,#MTC
;WRITE XIRG
BIS      #14,#MTC
;SET BYTE COUNT
MOV      WRTLEN,#BC
NEG      #BC
MOV      WBUF,#CA
;SET CURRENT ADDRESS
ROR      #MTC
;WAIT FOR TU READY
BCC     #-4
JSR      PC,GOWAIT

;RETURN HERE AFTER INTERRUPT
MOV      #MTC,STATRD
;SAVE STATUS
TST      #MTC
    
```

```

2209 010722 100403
2210 010724 005037 000562 XRGRCO: CLR XRG5 ;HAVE ERROR FLAG, CHECK FOR EOT
2211 010730 000207 XRGRCO: RTS WRPASS ;EXIT WRITE XIRG
2212 010732 032737 175600 000566 XRG5: BIT #175600,STATRD
2213 010740 001771 XRGRCO: BEQ XRGRCO ;ONLY EOT, EXIT
2214 010742 005237 000562 XRGRCO: INC WRPASS ;DONE 4 XIRG
2215 010746 001324 XRGRCO: BNE XRG0
2216 ;PRINT STATUS AFTER 4 XIRG ERRORS
2217 010750 012702 012452 XRGRCO: MOV #MSG7,R2
2218 010754 104404 XRGRCO: TOP ;PRINT WRITE STATUS ERROR
2219 010756 013737 000626 000544 XRGRCO: MOV WRTLEN,LENGTH
2220 010764 004737 011140 XRGRCO: JSR PC,PRTS ;PRINT STATUS, COMMAND, RECORD, LENGTH
2221 010770 012702 013127 XRGRCO: MOV #MSG11,R2
2222 010774 104404 XRGRCO: TOP ;PRINT "XIRG WRITTEN 4 TIMES"
2223 010776 032737 002000 000566 XRGRCO: BIT #2000,STATRD
2224 011004 001701 XRGRCO: BEQ XRGREC
2225 011006 042777 000016 167466 XRGRCO: BIC #16,AMTC
2226 011014 052777 000006 167460 XRGRCO: BIS #6,AMTC ;WRITE AN EOF
2227 011022 004737 005066 XRGRCO: JSR PC,GOWAIT
2228 011026 000207 XRGRCO: RTS PC
2229
2230 ;GO BACKWARD ON TAPE X RECORDS
2231 011030 013737 000612 000616 GOBKWD: MOV RECORD,LASRCR
2232 011036 013737 000614 000612 GOBKWD: MOV WRRECR,RECORD
2233 011044 001003 GOBKWD: BNE GOB1 ;IS NEW RECORD=0
2234 011046 004737 004676 GOBKWD: JSR PC,REWIND ;YES,REWIND
2235 011052 000207 GOBKWD: RTS PC ;EXIT
2236 011054 013777 000616 167422 GOBKWD: MOV LASRCR,ABC ;SET BYTE COUNT TO DIFFERENCE
2237 011062 163777 000614 167414 GOBKWD: SUB WRRECR,ABC ;BETWEEN LASRCR AND WRRECK
2238 011070 005477 167410 GOBKWD: NEG ABC
2239 011074 013777 000552 167400 GOBKWD: MOV COMAND,AMTC
2240 011102 105777 167374 GOBKWD: TSTB AMTC ;WAIT FOR CU READY
2241 011106 100375 GOBKWD: BPL -4
2242 011110 006077 167364 GOBKWD: ROR AMTS ;WAIT FOR TU READY
2243 011114 103375 GOBKWD: BCC -4
2244 011116 042777 000016 167356 GOBKWD: BIC #16,AMTC
2245 011124 052777 000012 167350 GOBKWD: BIS #12,AMTC
2246 011132 004737 005066 GOBKWD: JSR PC,GOWAIT
2247 011136 000207 GOBKWD: RTS PC
2248
2249
2250
2251 ;PRINT COMMAND, STATUS, RECORD NUMBER, LENGTH
2252 011140 012702 012645 PRTS: MOV #MSG9B,R2
2253 011144 104404 PRTS: TOP
2254 011146 017702 167330 PRTS: MOV AMTC,R2
2255 011152 104412 PRTS: OCTPRT
2256 011154 013702 000566 PRTS: MOV STATRD,R2
2257 011160 104412 PRTS: OCTPRT
2258 011162 013702 000612 PRTS: MOV RECORD,R2
2259 011166 005202 PRTS: INC R2
2260 011170 104426 PRTS: DECPRT
2261 011172 013702 000544 PRTS: MOV LENGTH,R2
2262 011176 104426 PRTS: DECPRT
2263 011200 000207 PRTS: RTS PC
2264 011202 104434 PRTS: CKSWR ;CHECK FOR CNTL G

```

```

2265          :PRINT OCTAL VALUE IN REGISTER 2
2266 011204 012737 000060 011314 OCTPR: MOV #'0,CHAR ;INITIALIZE 1ST NUMBER AS 0
2267 011212 005702          TST R2 ;IS VALUE POSITIVE
2268 011214 100003          BPL OCT1 ;YES PRINT 0
2269 011216 012737 000061 011314          MOV #'1,CHAR ;NO PRINT 1
2270 011224 004737 011316          OCT1: JSR PC,OCTP
2271 011230 006102          ROL R2
2272 011232 006102          ROL R2
2273 011234 012737 177773 011312          MOV #-5,OCT ;COUNT 5 DIGITS
2274 011242 006102          OCT2: ROL R2
2275 011244 006102          ROL R2
2276 011246 006102          ROL R2
2277 011250 010237 011314          MOV R2,CHAR ;SAVE DIGIT
2278 011254 042737 177770 011314          BIC #177770,CHAR ;CLEAR OTHER BITS
2279 011262 052737 000060 011314          BIS #60,CHAR ;MAKE ASCII DIGIT
2280 011270 006002          ROR R2
2281 011272 004737 011316          JSR PC,OCTP ;PRINT
2282 011276 006102          ROL R2
2283 011300 005237 011312          INC OCT ;+1 TO DIGIT COUNT
2284 011304 001356          BNE OCT2 ;NOT DONE
2285 011306 104430          SP3
2286 011310 000207          RTS PC ;EXIT
2287 011312 000000          OCT: 0
2288 011314 000000          CHAR: 0
2289 011316 105777 167176          OCTP: TSTB @TPS
2290 011322 100375          BPL -4 ;WAIT FOR READY
2291 011324 013777 011314 167170          MOV CHAR,@TPB ;PRINT
2292 011332 000207          RTS PC
2293          :PRINT DECIMAL VALUE IN REGISTER 2
2294 011334 012737 177773 011512          DECPR: MOV #-5,DIGCNT
2295 011342 012737 011520 011516          MOV #DECPNT+2,DECPNT
2296 011350 012737 000040 011514          MOV #40,ZERO
2297 011356 012737 177777 011510          TYPT1: MOV #-1,DIGIT
2298 011364 005237 011510          TYPT2: INC DIGIT
2299 011370 167702 000122          SUB @DECPNT,R2
2300 011374 100373          BPL TYPT2
2301 011376 067702 000114          ADD @DECPNT,R2
2302 011402 004737 011430          JSR PC,DECOUT
2303 011406 005237 011512          INC DIGCNT
2304 011412 001002          BNE TYPT3
2305 011414 104430          SP3
2306 011416 000207          RTS PC
2307 011420 062737 000002 011516          TYPT3: ADD #2,DECPNT
2308 011426 000753          BR TYPT1
2309 011430 005737 011510          DECOUT: TST DIGIT
2310 011434 001010          BNE DEC1
2311 011436 022737 177777 011512          CMP #-1,DIGCNT
2312 011444 001404          BEQ DEC1
2313 011446 013737 011514 011510          MOV ZERO,DIGIT
2314 011454 000406          BR DEC2
2315 011456 012737 000060 011514          DEC1: MOV #60,ZERO
2316 011464 052737 000060 011510          BIS #60,DIGIT
2317
2318 011472 105777 167022          DEC2: TSTB @TPS
2319 011476 100375          BPL -4
2320 011500 013777 011510 167014          MOV DIGIT,@TPB

```



```

2321 011506 000207
2322 011510 000000
2323 011512 000000
2324 011514 000040
2325 011516 011520
2326 011520 023420
2327 011522 001750
2328 011524 000144
2329 011526 000012
2330 011530 000001
2331
2332 011532 105777 166756
2333 011536 100375
2334 011540 105777 166754
2335 011544 100375
2336 011546 117777 166744 166746
2337 011554 117737 166736 001314
2338 011562 042737 000200 001314
2339 011570 000207
2340
2341 011572 012702 011602
2342 011576 104404
2343 011600 000207
2344 011602 020057 020040 057
2345 011610
2346
2347 011610 142777 000177 166702
2348 011616 112237 011710
2349 011622 121237 011710
2350 011626 001001
2351 011630 000207
2352 011632 121227 000100
2353 011636 001406
2354 011640 105777 166654
2355 011644 100375
2356 011646 112277 166650
2357 011652 000763
2358 011654 105777 166640
2359 011660 100375
2360 011662 112777 000215 166632
2361 011670 105777 166624
2362 011674 100375
2363 011676 112777 000212 166616
2364 011704 005202
2365 011706 000745
2366 011710 000000
2367 011712 022737 000176 000512
2368 011720 001035
2369 011722 105777 166566
2370 011726 100032
2371 011730 017737 166562 001314
2372 011736 042737 177600 001314
2373 011744 022737 000007 001314
2374 011752 001020
2375 011754 012702 013565
2376 011760 104404

RTS PC
DIGIT: 0
DIGCNT: 0
ZERO: 40
DECPNT: +2
10000.
1000.
100.
10.
1.

;KEYBOARD INPUT
WAITK: TSTB @TKS ;WAIT FOR KEY
BPL -4
TSTB @TPS ;WAIT FOR TELEPRINTER READY
BPL -4
MOV @TKB,@TPB ;ECHO CHARACTER
MOV @TKB,CHARIN ;SAVE IT
BIC #200,CHARIN
RTS PC ;EXIT

;TYPE 3 SPACES
SP3X: MOV #SP3A,R2
TOP
RTS PC
SP3A: .ASCII ;/ /;
.EVEN

;TELETYPE OUTPUT PACKAGE
TO: BICB #177,@TPS ;CLEAR TELETYPE FLAGS
MOV (2)+,EOMK ;SAVE MESSAGE DELIMITER
TOP1: CMPB @R2,EOMK ;IS CHARACTER THE SECOND MESSAGE DELIMITER?
BNE +4 ;NO
RTS PC ;YES, EXIT
CMPB @R2,#'a ;IS CHARACTER AN a WHICH INDICATES A CARRIAGE RET.
BEQ TOP2 ;YES
TSTB @TPS ;NO, WAIT FOR TELETYPE READY
BPL -4
MOV (2)+,@TPB ;PRINT CHARACTER
BR TOP1

TOP2: TSTB @TPS
BPL -4
MOV #215,@TPB ;CR
TSTB @TPS
BPL -4
MOV #212,@TPB ;LF
INC R2
BR TOP1

EOMK: 0
CKSWRR: CMP #SWREG,SWR ;SOFTWARE SWITCH REG PRESENT
BNE OUT ;NO, GET OUT
TSTB @TKS ;YES, WAIT FOR
BPL OUT ;READY, GET CHARACTER
MOV @TKB,CHARIN ;AND STRIP OFF
BIC #177600,CHARIN ;THE GARBAGE
CMP #7,CHARIN ;IS IT A <IG>
BNE OUT
MOV #SCNTG,R2
TOP

```

2377	011762	012702	013573		CNTLU:	MOV	#SMSWR,R2		
2378	011766	104404				TOP			
2379	011770	017702	166516			MOV	ASWR,R2		
2390	011774	104412				OCTPRT			
2381	011776	012702	013603			MOV	#SMNEW,R2		
2382	012002	104404				TOP			
2383	012004	005037	012206			CLR	ASTEMPST		
2384	012010	004737	012016			JSR	PC,SREAD		;GO READ A LINE
2385	012014	000207			OUT:	RTS	PC		;RETURN TO MAIN BODY OF PROGRAM
2386									
2387	012016	005037	012206		SREAD:	CLR	TEMPST		
2388	012022	012737	000007	012210		MOV	#7,COUNT		
2389	012030	104400			1\$:	WAITKY			
2390	012032	042737	177600	001314		BIC	#177600,CHARIN		;STRIP OFF GARBAGE
2391	012040	122737	000025	001314		CMPB	#25,CHARIN		;IS IT A TU?
2392	012046	001002				BNE	2\$		;BRANCH IF NOT
2393	012050	005726			3\$:	TST	(SP)+		;POP THE STACK
2394	012052	000743				BR	CNTLU		;START OVER
2395	012054	122737	000015	001314	2\$:	CMPB	#15,CHARIN		;IS IT A <CR>?
2396	012062	001011				BNE	4\$		;BRANCH IF NOT
2397	012064	012702	013613			MOV	#SMCRLF,R2		;DO CRLF
2398	012070	104404				TOP			
2399	012072	022737	000007	012210		CMP	#7,COUNT		;WAS IT FIRST CHARACTER
2400	012100	001036				BNE	7\$		;CHANGE SWR IF NOT FIRST ONE
2401	012102	005726			8\$:	TST	(SP)+		;POP THE STACK
2402	012104	000743				BR	OUT		;GET OUT
2403	012106	122737	000060	001314	4\$:	CMPB	#60,CHARIN		
2404	012114	003004				BGT	5\$		
2405	012116	122737	000067	001314		CMPB	#67,CHARIN		
2406	012124	002004				BGE	6\$		
2407	012126	012702	012342		5\$:	MOV	#MSGO,R2		
2408	012132	104404				TOP			
2409	012134	000745				BR	3\$		;START OVER IF NOT LEGAL CHARACTER
2410	012136	006337	012206		6\$:	ASL	TEMPST		
2411	012142	006337	012206			ASL	TEMPST		
2412	012146	006337	012206			ASL	TEMPST		
2413	012152	142737	000060	001314		BICB	#60,CHARIN		;GET NITTY-GRITTY
2414	012160	153737	001314	012206		BISB	CHARIN,TEMPST		
2415	012166	005337	012210			DEC	COUNT		;ONLY WANT 6 DIGITS
2416	012172	001755				BEQ	5\$		
2417	012174	000715				BR	1\$		
2418	012176	013777	012206	166306	7\$:	MOV	TEMPST,ASWR		;CHANGE SWITCH REGISTER CONTENTS
2419	012204	000736				BR	8\$		
2420									
2421	012206	000000			TEMPST:	0			
2422	012210	000000			COUNT:	0			
2423									
2424	012212	013746	000006		SUSWRR:	MOV	AS#,-(SP)		;SAVE VECTORS
2425	012216	013746	000004			MOV	AS#,-(SP)		
2426	012222	012737	012242	000004		MOV	#1\$,AS#4		;SET UP FOR TIMEOUT
2427	012230	022777	177777	166254		CMP	#-1,ASWR		;REFERENCE HARDWARE SWITCH REGISTER
2428	012236	001402				BEQ	2\$		
2429	012240	000404				BR	3\$		
2430	012242	022626			1\$:	CMP	(SP)+,(SP)+		;ADJUST STACK
2431	012244	012737	000176	000512	2\$:	MOV	#SWREG,SWR		;POINT TO SOFTWARE SWITCH REG
2432	012252	012637	000004		3\$:	MOV	(SP)+,AS#4		;RESTORE VECTORS

2433	012256	012637	000006
2434	012262	000207	
2435			
2436			
2437	012264	011666	000002
2438	012270	162716	000002
2439	012274	013646	
2440	012276	062716	105704
2441	012302	013607	
2442	012304	011532	
2443	012306	005140	
2444	012310	011610	
2445	012312	004426	
2446	012314	004542	
2447	012316	011204	
2448	012320	004444	
2449	012322	006476	
2450	012324	004506	
2451	012326	004640	
2452	012330	007346	
2453	012332	011334	
2454	012334	011572	
2455	012336	012212	
2456	012340	011712	
2457		104400	
2458		104402	
2459		104404	
2460		104406	
2461		104410	
2462		104412	
2463		104414	
2464		104416	
2465		104420	
2466		104422	
2467		104424	
2468		104426	
2469		104430	
2470		104432	
2471		104434	
2472			
2473	012342	037457	020100 057
2474	012347	057	051500 046105
2475	012354	041505	020124 047125
2476	012362	052111	020123 027440
2477	012370	040057	051524 020124
2478	012376	040520	020124 046122
2479	012404	020123	046527 020117
2480	012412	046522	040117 027440
2481	012420	046457	054101 052040
2482	012426	051505	051524 051440
2483	012434	046105	041505 042524
2484	012442	040104	057
2485	012445	057	047440 027513
2486	012452	040057	051127 052111
2487	012460	020105	052123 052101
2488	012466	051525	042440 051122

```

MOV      (SP)+, @#6
RTS      PC

:TRAP HANDLER
TRAP34: MOV      @SP, 2(6)
          SUB      #2, @SP
          MOV      @6)+, -(6)
          ADD      #TABLE-104400, @SP
          MOV      @6)+, PC

TABLE:   WAITK
          WRITI
          TO
          SVCTR
          RSFDR
          OCTPR
          MVCTR
          GENPA
          CLRAL
          CHGDR
          READI
          DECPR
          SP3X
          SUSWRR
          CKSWRR

WAITKY=104400
WRITIT=104402
TOP=104404
SVCTRS=104406
RSFDRV=104410
OCTPRT=104412
MVCTRS=104414
GENPAT=104416
CLRALL=104420
CHGDRV=104422
READIT=104424
DECPRT=104426
SP3=104430
SUSWR=104432
CKSWR=104434

:TEXT MESSAGES
MSG0:    .ASCII
MSG1:    .ASCII
MSG2:    .ASCII
MSG5:    .ASCII
MSG6:    .ASCII
MSG7:    .ASCII

```

```

;/?@ /;
;@SELECT UNITS /;

;@TST PAT RLS WMO RMO@ /;

;/MAX TESTS SELECTED@/;

;/ OK/;
;@WRITE STATUS ERROR@/;

```





2601	013573	057	051500	051127	\$MSWR: .ASCII ;/QSWR= /;
2602	013600	020075	057		
2603	013603	057	047040	053505	\$MNEW: .ASCII ;/ NEW= /;
2604	013610	020075	057		
2605	013613	057	027500		\$MCRLF: .ASCII ;/Q/;
2606					.EVEN
2607					
2608	013616	013616			BUFFER: . ;WRITE BUFFER BEGINS HERE
2609					
2610	000001				.END

























M05

TM-11 DATA RELIABILITY 9 TRACK  
DZTMBD.P11

CROSS REFERENCE TABLE -- PERMANENT SYMBOLS

MACY11 27(732) 10-SEP-76 12:08 PAGE 66

ERRORS DETECTED: 0  
DEFAULT GLOBALS GENERATED: 0

\*DZTMBD.DZTMBD.SEQ/SOL/CRF/DS:ERFZ/EN:ABS=DSKM:DZTMBD.P11  
RUN-TIME: 7 15 3 SECONDS  
RUN-TIME RATIO: 57/27=2.0  
CORE USED: 9K (17 PAGES)

N05.

Spooler runtime 9 Seconds, 43 KCS, 246 disk reads, 4 disk writes, 64 pages  
Date 14-Oct-76 13:14:27 Monitor IPC-0 0070 (103) \*\*\*\*\*  
0001111111111111111111111111111111111110  
00000001111111111222222222233333333344444444445555555555666666666677777777778888888888999999999900000000001111111112222222222333312  
\*\*\*\*\*  
0001111111111111111111111111111111111110  
900000001111111112222222222333333333344444444445555555555666666666677777777778888888888999999999900000000001111111112222222222333312