



digital

CATACAL

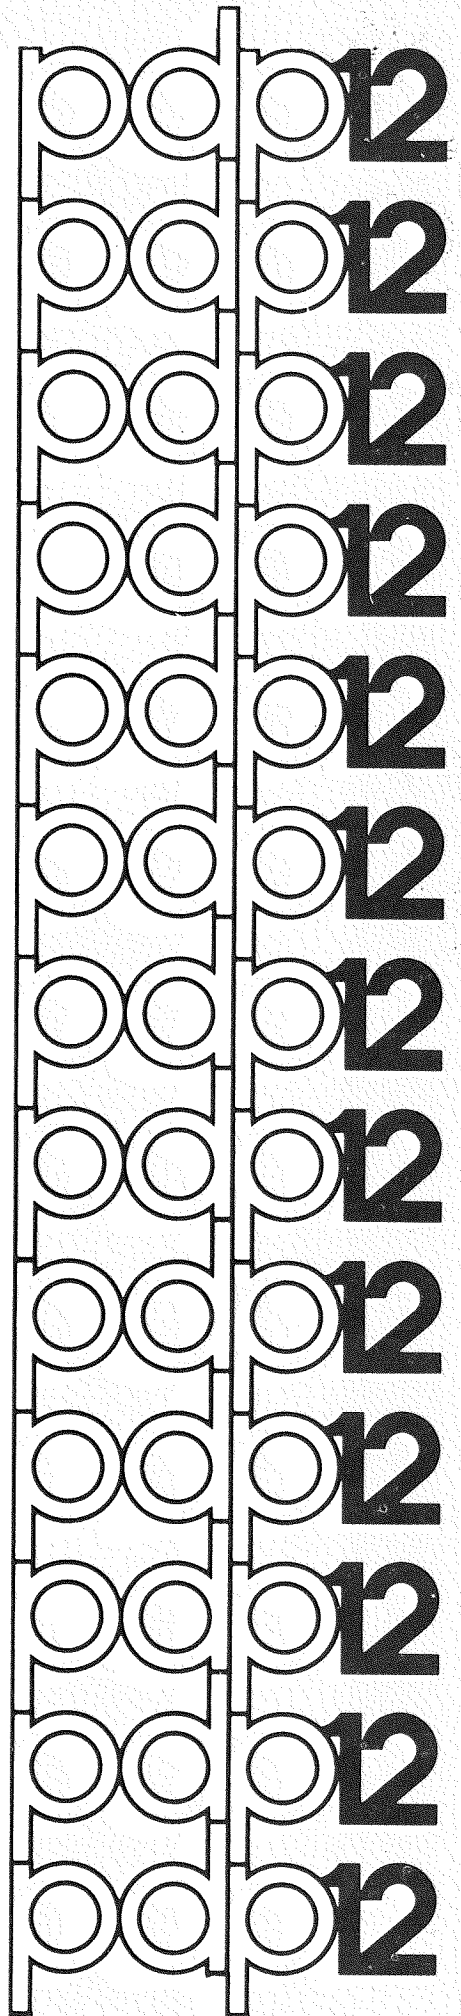

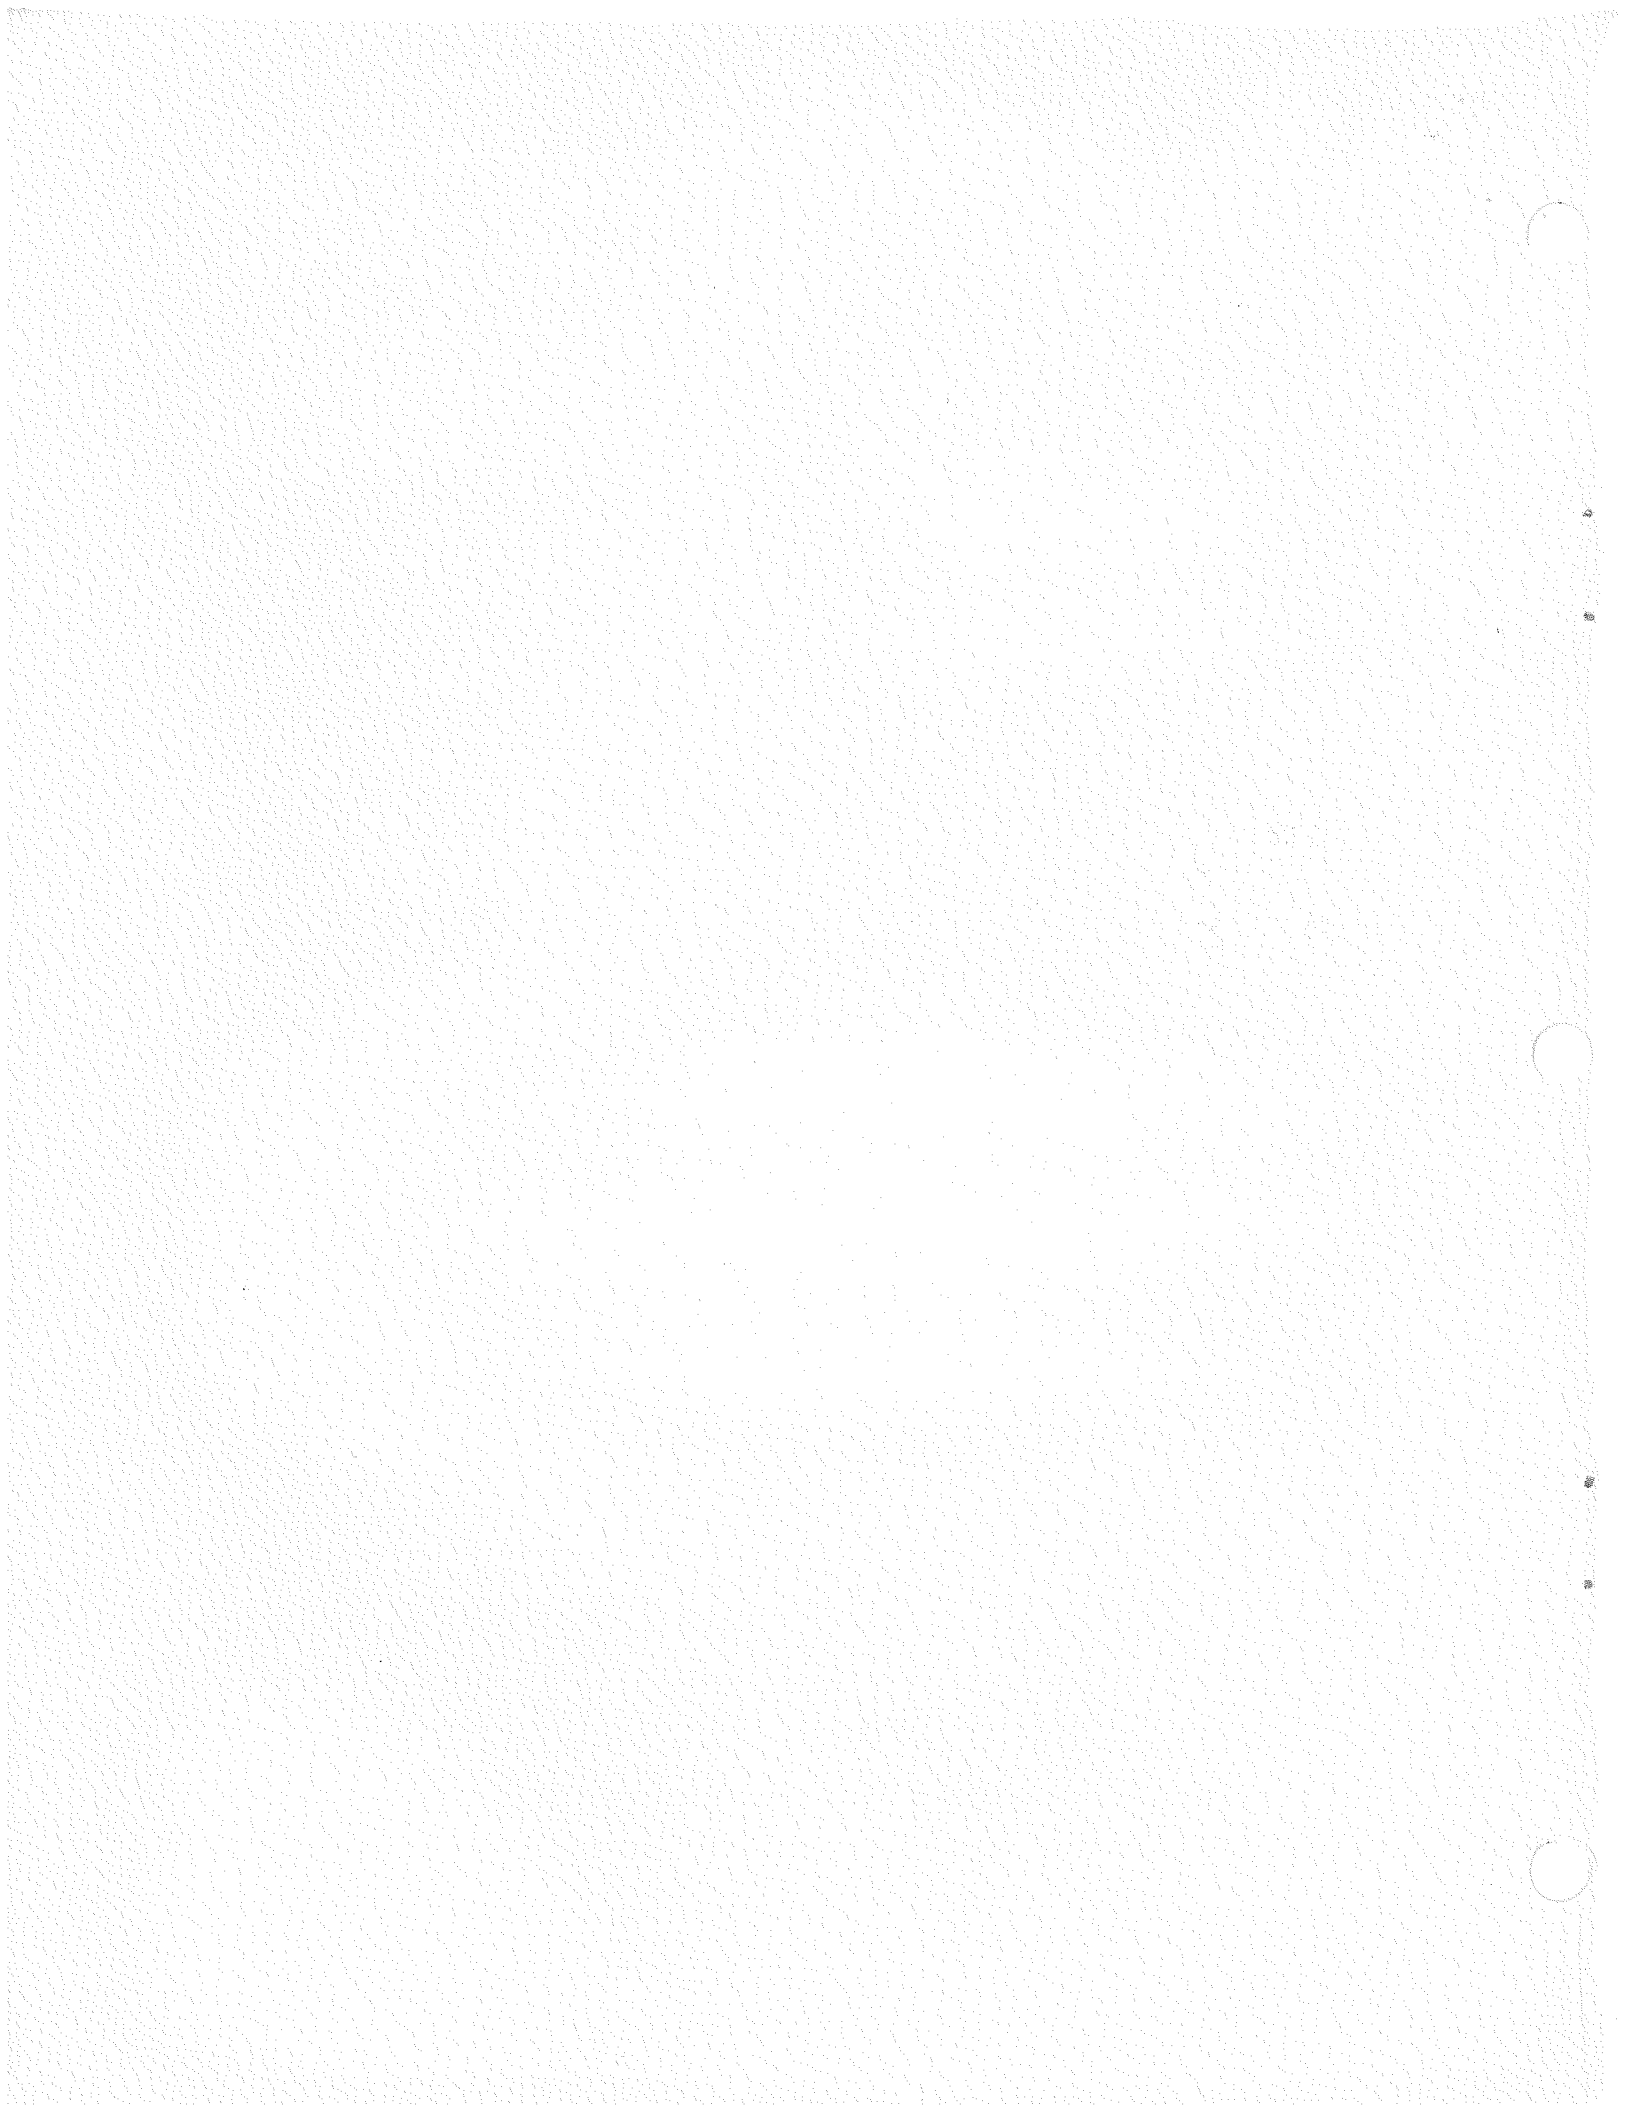

CATACAI ADDENDUM
ASSEMBLING CATACAI
DEC-12- JW1A-DL
JULY, 1970

The CATALCAL program is supplied to the user in both source and binary on the tape. To generate a new binary file if the source program is modified, use the following procedure.

1. Load a DIAL-MS tape on unit 0. Load unit 1 with either a DIAL-V2 or DIAL-MS system tape. If another tape unit is available, mount the tape containing the CLEARSYM and CATALCAL source programs there. If only two tape units are available, place the source programs on unit 0 (with PIP if necessary), in order to reduce the assembly time.
2. Type → ZE↓ to clear the binary Working Area of unit 1.
3. Type → AS↓ CLEARSYM . CLEARSYM is a two word program which produces a clean symbol table.

0000
SAVSYM 1

4. Type → AS CAT2, 0↓ . Error messages generated at this time should be ignored. Press the RETURN key to terminate the assembly after the errors have all been printed to suppress printing of the symbol table.
5. Type → ZE↓ . This clears the binary working Area on unit 1.
6. Type → LI CAT3, 0↓ . If no listing is desired, use the AS command. Any errors generated now are real and must be corrected.
7. Type → LI CAT2, 0↓ . Because the symbol table produced is the same as the one generated in step 6, printing may be suppressed with the RETURN key after it has started to be printed.
8. Type → SB CAT23, 0↓ . This saves the binary output from the two previous assemblies.
9. Type → ZE↓ .
10. Two versions of the Floating Point Package are supplied. If the machine has the EAE option, CATLE should be used in the following steps and CATALCAL will be generated. If the machine does not have this option, CAT2 should be used to generate CATALCAL.
11. Type → AB CAT1, 0↓ .
12. Type → AB CAT23, 0↓ .
13. Type → SB CATALCAL, 00↓ . A binary file of CATALCAL (E) has now been generated and command → LO CATALCAL, 0↓ will cause load and execute.

DEC-12-UW1A-D
1st Printing May 1970

Copyright © 1970 by Digital Equipment Corporation

The material in this handbook, including but not limited to instruction times and operating speeds, is for information purposes and is subject to change without notice.

The following are trademarks of Digital Equipment Corporation, Maynard, Massachusetts:

DEC	PDP
FLIP CHIP	FOCAL
DIGITAL	COMPUTER LAB

For additional copies, order DEC-12-UW1A-D from Digital Equipment Corporation, Program Library, Maynard, Mass. 01754. Price \$5.00

TABLE OF CONTENTS

	<u>Page</u>
Chapter 1 USING CATALAC	
1.1 Introduction	1-1
1.2 Hardware Requirements	1-1
1.3 Initial Starting Procedure	1-2
1.4 Inputting Data	1-3
1.5 Stopping and Restarting CATALAC	1-3
Chapter 2 CATALAC COMMANDS	
2.1 Introduction	2-1
2.2 Scope Channel	2-1
2.3 AVERAGE	2-2
2.4 TIME	2-4
2.5 TAPE I/O	2-5
2.6 PAPERTAPE	2-6
2.7 CALCULATE	2-7
2.8 ALTER	2-9
2.9 COPY	2-10
2.10 XINVERT	2-10
2.11 YINVERT	2-10
2.12 SCALE	2-10
2.13 MULTIPLY	2-11
2.14 SMOOTH	2-11
2.15 CURSORS	2-12
2.16 INTEGRATE	2-12
2.17 STRIP	2-14
2.18 DIFFERENTIATE	2-14
2.19 PLOT	2-15
2.20 SUBTRACT	2-16
2.21 ADD	2-16
2.22 SWAP	2-16
2.23 SQUEEZE	2-17
2.24 MODIFY	2-17
2.25 OUTPUT	2-18
2.26 RESTART	2-18
2.27 DIAL	2-18
Chapter 3 CATALAC EXAMPLE	3-1
APPENDIX A COMMAND SUMMARY	A-1
APPENDIX B ASSEMBLING CATALAC	B-1

CHAPTER 1 USING CATALAC

1.1 Introduction

CATALAC is a box-car averager for data acquisition at rates from 35 seconds/point to 250 microseconds point¹. Any analytical instrument or experiment supplying data within those limits can be interpreted easily and quickly using CATALAC's many facilities.

Initially, CATALAC accepts analog data from the interfaced analytical instruments, averages the information, and displays the averaged data on the PDP-12 oscilloscope. The scientist can then interpret the data as required by his experiment in seconds using any of CATALAC's data handling commands. Thus, a sloping baseline can be aligned, a spectrum can be scaled, many integrations can be performed, and two spectra can be compared simultaneously, each operation requiring only a single command.

An X-Y recorder can be interfaced parallel to a scope channel of the computer if hard copy results are desired.

CATALAC is supplied in two versions -- CATALAC and CATALALE. The only difference between the two is that the latter version uses EAE (Extended Arithmetic Element) for greater calculating speed.

1.2 Hardware Requirements

The minimum configuration for using CATALAC is:

PDP-12A computer with 8K of core memory and KW12A clock

An X-Y Analog Recorder is recommended for hard copy.

The program does not require, but will support, a high speed reader/punch.

¹If a faster sampling rate is required, the Signal Averager program, DEC-12-YZAA, can be used to collect the data and CATALAC can be used to interpret the supplied information. The TISA program, DEC-12-UW3A, accepts asynchronous data which also can be manipulated by CATALAC.

1.3 Initial Starting Procedure;

Each time the PDP-12 computer is to be used to run CATALAC, the following procedure must be performed.

1. Mount the CATALAC tape on tape unit 0. (Unit 0 is indicated by setting the tape channel indicator to 8). Mount a scratch or library tape on unit 1.
2. Set the switches on the tape units to REMOTE and WRITE ENABLE.
3. Set the mode switch to LINC mode and press the I/O PRESET key on the computer console.
4. Set the Left Switches to 0701 and the Right Switches to 7300.
5. Press the DO console switch.
6. When the tape has stopped moving, press the START 20 key.
7. Press LINE FEED, type

LO CATALAC,0

or

LO CATALAC,0

and press the RETURN key. Either program may be loaded. If only one program is to be used at all times, the other may be removed permanently from the tape.

Refer to the LAP6-DIAL Programmer's Reference Manual, DEC-12-SE2B-D, for additional information on operating procedures.

CATALAC indicates it has been successfully loaded into the computer by typing the message

CALACAL LIVES!

TITLE:

Commentary of any length may be typed in after TITLE. The information is not stored with the data on tape and is used only to supply a titled paper copy record of data operations performed. Type CTRL/A¹ to exit from the title phase. A command may now be issued (refer to Chapter 2).

¹CTRL/A is typed by pressing down the CTRL (control) key and then the letter key (A in this case) in the same manner as a character requiring the SHIFT key is typed.

1.4 Inputting Data

Most calculations are performed with the Floating Point Package (refer to Floating Point System Manual, DEC-08-YQYB-D), but final array results are single precision (12 bit) integers, normally scaled to the range $0-10000_{10}$. When a numeric value is requested, most conventional formats are acceptable. Thus, for example, the decimal value 10 may be entered as 10.0, 10, 1E1, or .1E+02, etc., as described in the above manual. After a numeric value has been typed in response to a command, any character except 0 to 9, E, or . will terminate input for that entry. A space is recommended as the terminator. (Pressing RETURN does not automatically generate a LINE FEED.) In response to questions, only Y or N are acceptable answers. Any other response generates a question mark on the Teletype and is ignored. No terminator is required after a Y or N response.

In all cases, striking RUBOUT before a terminator will delete all input up to the preceding terminator to allow the correct value to be entered. A RUBOUT during decimal input echoes as an exclamation mark and during octal input as a question mark on the Teletype.

If, during scope display, a command unacceptable to CATALAC is typed, a ? is printed on the Teletype and the program returns to the same scope display.

At all times when using CATALAC, it is strongly recommended that any data, both raw and interpreted, that may possibly be used at a later time be saved on tape (see TAPE I/O, section 2.5) to prevent accidental elimination from the display channel, because most commands replace the previous contents on the scope.

1.5 Stopping and Restarting CATALAC

If an operation must be halted immediately, press the console STOP switch. This should not be used haphazardly; if arrays were being modified the data will be lost. Routines requiring input parameters or initial dialogue can be halted during that stage and before the input is complete. To restart CATALAC after an emergency stop, set the MODE switch to 8 mode, set STOP switch to run position, and press I/O PRESET and then START 400 key. A new CATALAC command can be issued when the display is restarted. If the START 20 key is pressed instead of START 400, the program starts at the beginning as described in Section 1.3.

CHAPTER 2 CATACAL COMMANDS

2.1 Introduction

After starting CATACAL (refer to Section 1.3), a scope channel should be designated to accommodate the incoming data which is loaded into the computer's memory area directly from an analog input channel, the Teletype keyboard, the high-speed or Teletype reader, or storage on LINctape. Any of CATACAL's commands can then be used to interpret the data. For example, the baseline can be linearized and the resulting spectrum integrated.

Each CATACAL command is described in this chapter. The values requested, acceptable ranges, formulas used and available options for each are included in the discussion. After each command is completed, the correct spectrum is displayed (except the MODIFY command). Another command may be issued at that time.

2.2 Scope Channel

The scope on the PDP-12 provides three viewing channels:

- channel 1 - assigned by user
- channel 2 - assigned by user
- channel 3 - channels 1 & 2 simultaneously

Data supplied from the associated instrument or from LINctape is assigned to channel 1 by typing the number 1 on the Teletype; similarly data is assigned to channel 2 by typing the number 2 on the Teletype. The choice of channels 1 or 2 determines which data will be used. If a number between 4 and 9 is typed, channel 1 is assumed. Typing Ø produces a response of question mark on the Teletype.

Each channel can accommodate up to 2000 data points. A channel may be assigned to accommodate data when a new spectrum is being collected or when another CATACAL command has been completed by typing 1 or 2. The present contents of that channel are displayed on the scope. When new data is assigned to a channel which already contains data, it replaces the old data.

¹Teletype is the registered trademark of the Teletype Corporation.

Channel 3 permits the user to view the data in channels 1 and 2 together. When channel 3 is being used, analog knobs 0 and 1 control the X and Y offset for channel 2 to allow comparison of data sets. It can be viewed at any time between commands, but should be followed by a 1 or 2 before calling a command. If left at channel 3, the next command assumes channel 2.

Most of the remaining CATALAL commands are called by typing at least the first two letters of its name and a colon after the termination of the preceding command. Refer to Appendix A for a summary of the commands.

2.3 AVERAGE

The AVERAGE command implements time averaged analog input from the associated instrument. The parameters of the scan are specified on the Teletype in response to AVERAGE's questions and then that operation is performed. The data collected is displayed on the channel specified before the AVERAGE command was initiated.

To collect data, proceed as follows.

1. Prepare the analog instrument for the experiment.
2. Specify a scope channel number (1 or 2) to accommodate the data.
3. Type AV: indicating an averaging operation is to be performed.
4. The Teletype asks

CHANNEL=

requesting the analog channel number (octal) to which the instrument is connected. Type in the analog channel number on the AD12 used by this experiment and press RETURN. Note that digits other than 0-7 will serve as terminators.

5. The Teletype will respond with the message

NO. POINTS=

Type in the number of points to be collected in the scan where 0<POINTS<2048 and then press the SPACE bar.

6. The next question is

SEC /SCAN=

Type in a value for the length in seconds of each scan where SEC/SCAN= seconds/point x points/scan. Remember that a minimum of 0.25 millisecond/point is required. Press the SPACE bar. If the resultant rate is too high [(SEC/SCAN/NO. POINTS) < 0.25 msec], the routine restarts, asking for

NO. POINTS=

7. The program now asks for the desired external sense line (0-15₈), and its state, which is to be used to trigger each scan. In response to

SENSE:

type the octal value of the desired sense line if the desired state is +3 volts. If the desired state is 0 volts, enter the sum of the sense line plus 20₈. Sense line 15 is used by the Teletype. All unconnected sense lines are held at +3 volts.

8. The next question is

DELAY (SEC)=

asking for the delay from receipt of the trigger pulse to the start of data acquisition for each scan. Values from 0 to 20 seconds are legal; resolution is 10 milliseconds. Press the SPACE bar after typing the value.

9. The message

NO. OF SCANS=

is asked last and the reply must be in the range 1<SCANS<2048. Type in the value and press the SPACE bar. Input will begin with the arrival of the first trigger pulse.

10. Activate the instrument to begin the experiment. The AVERAGE command will now collect the data according to the specified parameters.

The AVERAGER implements two display routines of its own, totally separate from the main scope routine of CATACAL. (This was necessary because of internal timing and intermediate data structure peculiar to the AVERAGER.)

During data acquisition, the value for each point in the current scan is displayed as soon as it is available. Note that the X axis is not scaled to the number of points; thus, if less than 512 points were requested, the trace will wrap-around such that the 513th point will be displayed at the first location, the 514th at the second location, etc.

Bit 0 of the Right Switches can be set to 1 at any time during the run to interrupt the run when the current scan has been completed. The number of scans completed to that time is indicated by the message

NO. SCANS=

and the data are displayed on the scope. To diminish flicker, only one-fourth of the collected points are displayed. The Y axis can be doubled at this time by typing M; type D to halve the Y axis. By typing S, another message,

MORE SCANS?

is printed. Reply with Y if more scans are desired. Type N to terminate scanning with the specified parameters. This sequence of messages is repeated until the number of scans requested in step 9 have been performed or until bit 0 is set to 0. If bit 0 = 0, the collected data is displayed only after all the scans are collected.

2.4 TIME

The constant corresponding to the computer's memory cycle time used to determine timing accuracy for averaging during data acquisition may be reset. The AVERAGE routine may be calibrated as follows.

1. Call the MODIFY routine. Refer to section 2.24.
2. Place 7402 in location 4307 to stop when completed. This routine appears as follows on the Teletype. (The underlined data is typed in by the user.)

```
MO:  
4307=4430:7402C  
R400
```

The display is restored.

3. Call the AVERAGER by typing AV: then use the values CHANNEL 0, 1000 POINTS, 16 SEC/SCAN, 15 for SENSE to allow the keyboard to initiate (trigger) the run, 0 for DELAY, and 10 for NO. SCANS. Set bit 0 of Right Switches to 0.
4. Time the program from when the keyboard is struck to when the computer halts, approximately 160 seconds later. Call this value T. The memory cycle time, MCT, is then determined by

$$MCT = T \times \frac{1.6 \times 10^{-6}}{16 \times 10} = T \times 10^{-8} \text{ sec.}$$

1.6 microseconds is the value assumed by CATACAL. Restart the display by pressing the START 400 switch as described in Section 1.5.

5. Enter the desired value by typing TI: and supplying the value of MCT after the message

MCT(SEC)=

6. Call the MODIFY routine and replace the correct value in location 4307. Once calibrated, the new value for MCT should be entered as in step 5 above each time CATACAL is loaded from the DIAL system, if the AVERAGER is to be used.

2.5 TAPE I/O

LINtape provides the PDP-12 with large data storage capabilities, each tape block holding 256 single precision data points. When the system has been properly started, a LINtape on any tape unit can be used to store any collected data, either when it is collected initially by AVERAGE or after it has been manipulated by any of the CATACAL commands. Similarly, any stored single precision (12 bit) data can be retrieved from LINtape at any time. Both data storage and retrieval use the same command, as follows:

1. Type TA: to call the TAPE routine.
2. The Teletype responds with

BLK1, U,M, (Ø=W):

This statement requests the following information when data is to be retrieved from tape: the first tape block number (octal) where the data starts, the number of the tape unit (Ø-7) holding the tape, and the mode of operation. Type in the three requested parameters, separated by a comma or space. If a non-octal (not Ø-7) digit is supplied for block number, Ø is assumed; however, data can not be read or written on LINtape block Ø. To request that block will merely repeat the question. Remember that each LINtape contains 777₈ blocks. The mode for data retrieval is READ and is indicated by typing the number 1 for that parameter.

If data is to be stored on tape, either immediately after collection via AVERAGE or after interpretation, the parameters requested are the same as above, except that the mode of operation is Ø for WRITE. When the tape WRITE operation is completed, the data is redisplayed. If the exact location of stored data or of empty blocks is not known, use the MAGSPY program to determine it. (Refer to DEC-12-UZSA-D). It is the user's responsibility to space the data files properly.

3. When the tape parameters have been accepted by the computer for a READ operation only,

NO. POINTS=

is printed on the Teletype. Type the number of points to be retained for this spectrum and press RETURN. Any number of points up to 2047 can be read in (mode=1), not including those to be skipped.

4. The final message is

PTS. TO SKIP=

If some points are to be skipped before the desired portion of the spectrum, type that value now and press RETURN. Type 0 if no points are to be skipped. Up to 2047 points can be skipped during a tape READ operation. The tape READ operation is then performed after step 4. If a value greater than 2047 is typed in step 3 or 4, 2047 is assumed. If, during TAPE I/O, the program halts at location 3717, a checksum error has occurred due to a hardware malfunction or tape error. The program can be restarted by pressing the START 400 switch as described in Section 1.5. The transfer can be retried, if desired.

2.6 PAPER TAPE

Data may be input to the computer from papertape via the high or low speed reader. The data¹ may have been punched directly by the analog instrument or may have been prepared by the CATALAC command OUTPUT. The procedure for inputting data from tape is as follows.

1. Type PA: to call the routine.
2. Answer the message

NO. POINTS=

with a value less than 2048, not including skipped points.

3. The next request is for

PTS TO SKIP=

Type in the number of points to be skipped from the start of the tape before data is retained (less than 2048) and press the SPACE bar.

¹CATALAC will accept data in USA-ASCII format with and without spaces and/or non-numeric characters before a numeric value (each number must be properly terminated, as described in Section 1.4).

4. Two parameters are requested by

YRANGE & MIN:

The range on the Y axis should be at least as large as the difference between the largest and smallest values on the tape. Type the Y-range, a comma, and the minimum value, which should be no larger than the smallest Y value in the data. Press the SPACE bar.

5. The last question is

TTY I/O?

Answer Y if the data is coming from the low-speed reader. A reply of N will start the high-speed reader. Prepare the reader before replying because the tape will be read in immediately after the reply.

2.7 CALCULATE

Spectra can also be calculated from the Teletype keyboard. CATALAC requests information on the peaks, the number of points, and baseline. The spectrum resulting from this calculation is displayed on the presently active channel. The CALCULATE procedure is as follows:

1. Call the routine by typing CA:
2. After the Teletype has printed the message

ABSORPTION 'DIPS'?

reply with Y if the spectrum is to be generated with dips; reply with N if it is to be generated with peaks.

3. The next message is

WIDTHS EQUAL?

Type Y if all peak (or dip) widths are to be entered as equal; type N if unequal widths are to be entered (as specified in step 8 below).

4. Observe the Teletype for the message

CUTOFF AT 8*WIDTH?

If interaction from a peak that is more than eight times the halfwidth away from its position (or crest) is to be ignored, type Y. A considerable saving in time is gained for narrow width, multipeak spectrums if Y is typed. Note that all peak widths must be less than $1/4x(X\text{ RNG})$ (step 7) for this option. A response of N will include all interaction and impose no limits on widths.

Note that the messages in steps 2 through 4 are only asked for once each time CATALAC is loaded.

5. Respond to the next message

NO. POINTS=

with a number less than 2048 and press the SPACE bar. Note that both channels 1 and 2 are affected by this value; thus, if the CALCULATE operation is using channel 1, only that number of points will be available for display of the data in channel 2.

6. After the message

NO. PEAKS=

type the desired number of peaks, in the range $0 < \text{PEAKS} < 42$.

7. More data is requested by

X RNG, X1, INT.MPLR, BASE, LOR. FR. (θ -1) :

The first three parameters allow the user to define any coordinate grid in which to contain the calculated data. These parameters scale the data to a 500×1000 point grid for compact integer storage. This does, however, impose a minimum on resolution, especially for peak position and width, defined as $X \text{ RNG}/500$. Type in the parameters: X range, initial X location, multiplier which is the Y axis scaler, the location of the base line on the scaled Y axis, and the Lorentzian fraction where θ is a 100% Gaussian fit and 1 is a complete Lorentzian fit. The fraction must be in the range 0.0 to 1.0 . A value of 1 for INT.MPLR implies a range of 0 to 1000 on the Y axis, a value of 10 implies a range of 0 to 100 , etc. Base and peak heights should then fall within this scaled range. Peak positions should be in the range $X1$ to $X1 + X \text{ RNG}$. A negative X RNG is legal; e.g., for $X1=500$ and $X \text{ RNG} = -500$, the X axis runs from 500 on the left to 0 on the right.

8. The dimensions of each peak requested next by the message

HGT, H-WIDTH, POS:

are height, half width at half height, and position on the scaled X axis. Type in each value followed by a comma or space and then press RETURN after the parameters for each peak. Thus, a two peak spectrum may include the data:

678,5,35
789,4,50

If the equal widths option (step 3) is being used, enter a width for the first peak only. That value will be assumed for all other peaks.

9. After all the necessary data has been typed in, the computer indicates it is busy performing the calculation by the message

COOL IT.

on the Teletype. Do not type any key on the Teletype during the few seconds required for the computation; the keyboard is "dead". When calculated, the spectrum described by steps 2 through 8 is displayed on the scope.

After a display channel has been selected and data has been brought into the computer's memory, any of the following commands may be issued. Any number of them may be requested and in any order. After the data has been interpreted by any of the available commands, it can be stored on tape for later use.

2.8 ALTER

The parameters specified by the most recent CALCULATE command may be modified by an ALTER command. The command is implemented as follows:

1. Type AL: to call the ALTER routine.
2. The message

PK,PA,VL:

is printed on the Teletype, requesting the peak index number where the first peak typed in during CALCULATE is 1, the second is 2, etc., the parameter index where height is 1, half-width is 2, and position is 3, a comma or space, and the new value for that parameter. Type the peak number, a comma or space, the parameter index, and the new value. Press the SPACE bar. All parameters except X RNG and X1 may be altered. The equal widths option has no effect at this time; any width may be altered. Consider the following sequence:

PK,PA,VL: 12,3,674

This series will center the twelfth peak at location 674 on the scaled X axis.

Other spectral parameters may be modified by typing one of the sequences listed below and then the new value in response to the above message.

<u>Sequence</u>	<u>Parameter to be Modified</u>
Ø,1:	intensity multiplier
Ø,2:	baseline
Ø,3:	Lorentzian fraction
N,Ø:	print parameters for peak N
Ø,Ø:	print all parameters

The last two sequences exit to the display without recalculating the spectrum.

3. Type Ø,-1: when all alterations have been made and the resulting spectrum is to be calculated and then displayed.
4. The computer indicates it is recalculating the spectrum by printing the message

COOL IT.

on the Teletype. When it is completed, the new spectrum is displayed.

2.9 COPY

The contents of the currently displayed channel can be copied into another channel, leaving the two with identical data, by typing CO:.. This is particularly useful if the manipulated data is to be compared with the original data.

2.10 XINVERT

The left to right X axis relationship of the displayed array can be inverted by typing XI:..

2.11 YINVERT

Each Y value of the displayed channel is subtracted from 1ØØØ and the differences stored in that channel, thus effectively inverting the Y axis by the command YI:..

2.12 SCALE

If, when data is displayed on the scope, the maximum and minimum points "wrap-around" because they are out of the scope's range or if

the range is smaller than desired, SCALE may be used to bring the Y data into the range $0 < Y < 1000$. The scaling parameters used, original minimum value, original maximum value, and multiplier, are printed on the Teletype after the computation, as, for example:

```
MIN= -54
MAX= 75
MPY= 7.752
```

where

$$MPY = \frac{1000}{(MAX-MIN)} \quad \text{and} \quad Y_i = (Y_i - MIN) \times MPY$$

2.13 MULTIPLY

Data may be scaled to an arbitrary range other than the 0 to 1000 range assumed by the SCALE routine. The MULTIPLY routine is used mainly in spectrum stripping when a standard and/or background spectrum is to be subtracted from a raw data set after appropriate scaling.

The command is used as follows.

1. Type MU: to call the MULTIPLY routine.
2. The parameter

MIN=

is then requested. This value is to be subtracted from each data point before MPY is applied, as

$$Y_i = (Y_i - MIN) \times MPY$$

The final data should be in the range -2047 to 2047. Values outside of this range are truncated to these limits. Final values less than -5 or greater than 1019 will "wrap-around" when displayed.

3. When

MPY=

is printed, type in the desired multiplier.

2.14 SMOOTH

Collected data can be smoothed by an 11 point least squares curve fit routine via the SMOOTH command. The new spectrum is displayed on the

scope. The first and last five points are not altered. (This routine is a modification of DECUS 5/8-69.)

2.15 CURSORS

Typing CU: will display two movable bright dots, referred to as cursors, on the scope to be used to implement the INTEGRATE and STRIP commands¹ by delimiting the data points to be modified. The two cursors are controlled by four analog channel knobs as follows.

<u>CURSOR</u>	<u>analog channel knob</u>	<u>direction of movement</u>
	4	horizontal
left	5	vertical
	6	horizontal
right	7	vertical

When the two dots appear on the display initially, knobs 4 and 5 must always position one of them to the left of the other.

The decimal values of the location of the cursors are displayed at the top of the screen in the order 4,5,6,7. A grid of $500_{10} \times 1000_{10}$ on the scope is assumed. The actual range extends slightly beyond, but the data points should be within that range.

Typing CU: a second time will remove the cursors from the scope.

Note that the cursors can be used to inspect peak amplitudes, valleys, widths, etc., by positioning them appropriately and noting the displayed values.

2.16 INTEGRATE

The INTEGRATE command provides two options:

1. Integrate the data between the cursors by using them to set a pivot or baseline, print out the area, and leave the data array unchanged.

¹A very slight distortion may occur on the scope when the cursors are used to delimit a portion of the spectrum at the extrema of the Xaxis.

2. Integrate all data using the cursors (extrapolated) to define a pivot line and store a scaled running integral in the data array, then print out a scale down multiplier.

The data is defined as lying on a 500 x 1000 grid, independent of the total number of points in the array. The area at a given point, j, is expressed as

$$A_j = \sum_{i=s}^j (X_{i+1} - X_i) [(Y_{i+1} - P_{i+1}) + (Y_i - P_i)] / 2$$

where $X_0=0, X_n=500$ and s is the starting point which is equal to the X value of the left cursor for option 1 or is equal to 0 for option 2. Similarly, $j=x$ value of the right cursor and P_j is the value of the pivot line at that point.

An integration is performed as follows.

1. Type CU: and position the cursors as required for the desired option (refer to section 2.15).
2. Type IN: to call the routine.
3. The message

SCAN INT'L?

is printed. Type Y if a running integral (option 2) is desired; type N if a partial integral and area printout (option 1) are desired.

If, when the routine is first called, the message

BAD X POINTS!

is printed, the left-right relationship of the cursors has been inverted. The display is restarted to allow correct positioning. When corrected, type IN: to call the routine again.

2.17 STRIP

Three options are available for altering portions of the displayed spectrum.

1. Replace the data between the cursors with the best straight line.
2. Subtract a sloping baseline from all data points.

3. Subtract a straight line interpolated between the cursors from the data between the cursors.

The STRIP command is implemented as follows:

1. Type CU: and position the cursors as explained below.
2. Type ST: to call the STRIP program.¹
3. The message

STRIP PEAK?

is printed on the Teletype and the two dots are displayed on the scope. If some of the data points are to be replaced by the best straight line, position the left dot at the first data point to be replaced, and the right dot at the last data point to be replaced. Then type Y and the delimited portion of the spectrum is replaced by a straight line. The STRIP program is exited. Continue with another CATAL operation. If one of the other STRIP operations is desired, type a response of N.

4. A reply of N generates the message

FULL BASE?

If a (sloping) baseline is to be subtracted from all the data points, the two dots should have been positioned on the scope with the desired slope and amplitude. The dots need not be on the data curve nor on the X axis extrema because they are extrapolated. Type Y and the new display will appear. If a straight line is to be subtracted from some data points, i.e., partial baseline restoration is desired, type N.

If, when the STRIP routine is called, the message

BAD X POINTS!

is printed, it means that the left and right dots have been inverted. The original display with the cursors appears. Correct the dots by adjusting the knobs; then call the routine again.

2.18 DIFFERENTIATE

The derivative curve of a spectrum is computed by the DIFFERENTIATE command.² Derivatives to a depth of at least six can be calculated for some spectra with minimal distortion of the data. These are

¹If STRIP is called without calling CURSORS first, stop and restart the program (refer to section 1.5) and call the CURSORS and then STRIP routines.

²Note that the DIFFERENTIATE function is called by typing DE:

produced, not by adjacent point differences, but by the following procedure.

$$Y = Y_{i+2} - Y_{i-2}$$

with

$$Y_1 \equiv Y_2 \equiv Y_3 \quad \text{and} \quad Y_{n-2} \equiv Y_{n-1} \equiv Y_n$$

If multi-depth derivatives are desired, scaling and smoothing are suggested before each level to reduce quantization error or "stairsteps" that result from integer arithmetic. It may also be necessary to strip out the first and last five points if they interfere with scaling (they are unaffected by smoothing).

2.19 PLOT

Any displayed spectrum can be plotted on an X-Y recorder interfaced to a scope channel for a hard copy of that spectrum using the PLOT command. The size and rate of the plot are controlled by the user; the pen is controlled by relay \emptyset .

To generate a plot of the presently displayed spectrum, proceed as follows:

1. Type PL: to call the plotting routine.
2. The first message printed on the Teletype is

LINE PLOT?

Type Y if a line plot is desired or type N if a point plot is preferred.

3. The plotting routine is now waiting for the user to calibrate an area on the X-Y recorder. A small dot appears on the scope and will make the same movements as the plotter pen. The speed for drawing the axes, as well as for the actual plotting, is controlled by knob 3 of the analog channel controls and may be adjusted at any time while using the PLOT command. Turning knob 3 clockwise increases the rate of plotting; turning it counterclockwise decreases the rate. The axes are calibrated by typing the following letters to perform the indicated operations.

<u>Letter</u>	<u>Operation</u>
X	locates maximum X co-ordinate
Y	locates maximum Y co-ordinate
O	returns pen to X-Y origin

TEXT UNDER THIS LINE IS READER'S COPY
NEXT LINE UP THIS LINE IS READER'S COPY

The pen on the X-Y recorder should be set initially to the origin. Type X and then manually reposition the pen to the desired maximum X coordinate. After the X_{max} position has been determined, type Y. Set the pen to the maximum Y coordinate ($X_{max} Y_{max}$) similarly. The axes have now been determined for the plot. Type O to move the pen automatically back to the origin ($X_0 Y_0$).

4. The axes and quadrant markers of the graph may now be marked off on the plot if desired. Type M to mark off the frame and quadrants. Knob 3 controls the pen speed.
5. When the axes have been marked, the spectrum is ready to be plotted. Type G to initiate the plot. As before, analog channel knob 3 is used to adjust the plotting speed.

Any characters other than X, Y, O, M or G during this sequence produce a question mark on the Teletype and are ignored.

6. When the spectrum has been plotted, the following message is printed.

PLOTTER OFF?

The plotter should be turned off or set to standby and then Y typed. If the plotter is not turned off, the pen will start to move wildly in its effort to follow the scope analog signals when the display starts.

2.20 SUBTRACT

Using the SUBTRACT command, data in the displayed channel will be subtracted from data in the other channel. The result will appear in the displayed channel. The spectrum in the displayed channel will be lost; therefore, the TAPE I/O command is suggested before using this command if that data is to be used later.

2.21 ADD

The two channels can be averaged and the result seen in the displayed channel by issuing an ADD command. As with SUBTRACT, the data in the displayed channel will be lost when the ADD command is executed.

2.22 SWAP

The data currently in channel 1 can be placed in channel 2 and the

data in channel 2 placed in channel 1 with the SWAP command. This facility is especially useful with ADD and SUBTRACT.

2.23 SQUEEZE

The SQUEEZE command compresses the data array by a factor of 2 by averaging adjacent data points. It is recommended that this command be used immediately after data input (TAPE I/O, COMPUTER or AVERAGE) because the number of points is halved for each issuance of this command. If the current channel was 1 or 2, only that channel is affected, but if both channels were being displayed (3 was typed during display), both are halved. The purpose of this command is to reduce the number of points in order to diminish flicker and allow faster smoothing, scaling, etc.

2.24 MODIFY

The CATACAL program itself can be modified by a routine that is similar to ODT-8 (DEC-8-COCO-D) to make changes in core locations. After calling the MODIFY routine, any of the following can be performed in a logical sequence. Each must begin at the left margin.

open location	Type the location (octal) and press the SPACE bar. The contents of that location are printed followed by a colon.
change contents	After the present contents of a location have been printed, type the new contents and the letter C to enter the correction and press the SPACE bar.
inspect next location	After pressing the SPACE bar, type N. The next location and its contents can be printed followed by a colon.
reinspect same	After pressing the SPACE bar, the contents of the last location opened can be printed again by typing S.
transfer control to any location	Type R and the location and press the SPACE bar. Execution of the program will continue from that location.

Pressing RUBOUT at any time will terminate the operation and restart the routine.

2.25 OUTPUT

Collected data can be listed and/or output on paper tape by using the OUTPUT command. After calling the routine, the question

TTY I/O?

is asked. A response of Y implies the Teletype punch, and a response of N implies the high-speed punch. Be sure the device is prepared before responding to the question. The format is 10 columns of four digit integers.

2.26 RESTART

The CATACAL program can be restarted from the beginning at any time. The message

CATACAL LIVES!

is printed. This command is equivalent to pressing the START 20 key as described in Section 1.5.

2.27 DIAL

An exit from CATACAL and a return to DIAL are performed by typing DI:¹. Any DIAL commands can be issued at this time, including calling another program from the tape. Refer to the DIAL Manual, DEC-12-SE2B-D.

¹DIAL refers to LAP6-DIAL.

CHAPTER 3

CATACAL EXAMPLE

The printout on the left side of the page is an actual CATACAL sequence. The commentary on the right was added to indicate the operation performed. Underlined information on the left is that typed in by the user.

<u>LO</u> CATACALE, <u>0</u>	LOAD CATACALE
CATACAL LIVES!	PROGRAM IS READY
TITLE: <u>DEM01</u>	NAME THIS SEQUENCE "DEM01"
OK, HIT ME!	READY FOR A COMMAND. CHANNEL 1 IS ASSUMED.
<u>1CA</u> : ABSORPTION 'DIPS'? <u>N</u> WIDTHS EQUAL? <u>N</u> CUTOFF AT 8* <u>WIDTH</u> ? <u>Y</u>	CALCULATE SPECTRUM WITH PEAKS UNEQUAL WIDTHS CONSIDER INTERACTION
NO. POINTS= <u>1000</u> NO. PEAKS= <u>5</u> X RNG, X1, INT.MPLR, BASE, LOR. FR. (<u>0</u> -1): <u>1000,0,1,0,0</u> HGT, H-WIDTH, POS: <u>100,5,100</u> <u>200,5,200</u> <u>300,10,300</u> <u>400,15,400</u> <u>500,15,500</u>	1000 POINTS 5 PEAKS PARAMETERS FOR SPECTRUM
COOL IT CO: <u>IAL</u> : PK,PA,VL:1,1,500 PK,PA,VL:2,2,100 PK,PA,VL:3,3,800 PK,PA,VL: <u>0,-1</u>	SPECTRUM COMPUTED COPY DATA ONTO CHANNEL 2 ALTER SPECTRUM ON CHANNEL 1 ALTER HEIGHT OF FIRST PEAK TO 500 CHANGE HALF WIDTH OF PEAK 2 TO 10 CENTER THIRD PEAK AT LOCATION 800 ALL THE CHANGES REQUIRED
COOL IT 1TA: BLK1, U, M(<u>0</u> =W): <u>200,1,0</u> 2TA: BLK1, U, M(<u>0</u> =W): <u>210,1,0</u> 1TA: BLK1, U, M(<u>0</u> =W): <u>210,1,1</u>	SPECTRUM COMPUTED PUT CHANNEL 1 DATA ONTO LINCTAPE STARTING AT BLOCK 200 UNIT 1 PUT CHANNEL 2 DATA ONTO LINCTAPE STARTING AT BLOCK 210 OF UNIT 1 GET DATA FROM LINCTAPE READ OFF UNIT 1 STARTING WITH BLOCK 210 READ 1000 POINTS SKIP FIRST 20 POINTS HALVE DATA POINTS ON CHANNEL 1 DISPLAY CURSORS (POSITION CURSORS) INTEGRATE CHANNEL 1 PARTIAL INTEGRAL REQUESTED AREA UNDER CURVE SMOOTH DATA
NO. POINTS= 1000 PTS. TO SKIP= <u>020</u> <u>1SQ</u> : <u>1CU</u> : <u>1IN</u> : SCAN INT'L? <u>N</u> AREA= 0.110309E+06 <u>SM</u> :	

CO:
CU:
ST:
STRIP PEAK?N
FULL BASE?Y
SC:

MIN=- 52
MAX= 1029
MPY= 0.925
MU:

MIN=0
MPY=.5
21AD:
OU:
TTY I/O?N
2AV:
CHANNEL=1

NO. POINTS=10000
SEC/SCAN =10
SENSE=15

DELAY (SEC)=10
NO. SCANS=3

NO. SCANS=1

MORE SCANS?N

3121MO:
4307=4030:7402C
R400
AV:
CHANNEL= 0

NO. POINTS= 10000
SEC/SCAN= 16
SENSE=15
DELAY (SEC)=0
NO. SCANS=10

1TI:
MCT(SEC)=1.72E-6

MO:
4307=7402:4430C
R400
I2SW
SU:
IPL:
LINE PLOT?Y
OXYOM

G
PLOTTER OFF?Y

RE:

CATACAL LIVES!

TITLE:DEMO2

OK,HIT ME!

COPY DATA INTO CHANNEL 2
DISPLAY CURSORS (POSITION CURSORS)
STRIP OUT A

(SLOPING) BASELINE
SCALE DATA

PARAMETERS USED

SCALE DATA TO ANOTHER RANGE

WITH THIS MINIMUM AND THIS
MULTIPLIER (AXIS IS HALVED)
ADD DATA IN CHANNEL 2 TO CHANNEL 1
OUTPUT THIS DATA
ON HIGH-SPEED PUNCH
ACQUIRE DATA IN DISPLAY CHANNEL 2
INPUT FROM CHANNEL 1:

10000 POINTS,
10 SECONDS/SCAN,
TRIGGER VIA TELETYPE, START WHEN
KEY IS PRESSED,
10 SECOND DELAY,
3 SCANS MAXIMUM. TYPE A KEY.
(BIT 0 SET)
1 SCAN COMPLETED
S IS TYPED BUT NOT ECHOED
NO MORE SCANS DESIRED

MODIFY THE PROGRAM
LOCATION TO BE MODIFIED
START PROGRAM AT LOCATION 400
CALL AVERAGER TO TIME MEMORY CYCLE
USE THESE PARAMETERS (BIT 0=0)

TIME THE PROGRAM FROM WHEN THE
KEYBOARD IS STRUCK TO WHEN
COMPUTER HALTS.
CHANGE TIME OF THIS PROGRAM
SET CONSTANT TO 1.72 MICROSECONDS

RESTORE ORIGINAL CONTENTS
TO MODIFIED LOCATION
START PROGRAM AT LOCATION 400
VIEW AND THEN SWAP CHANNELS
SUBTRACT CHANNEL 2 FROM CHANNEL 1
PLOT SPECTRUM ON X-Y RECORDER
LINE PLOT
CALIBRATE AXES THEN MARK BOX
AND QUADRANTS
PLOT
DONE PLOTTING

RESTART CATACALE

PROGRAM IS READY

NAME THIS SEQUENCE "DEMO2"

READY FOR A COMMAND

PA:
NO. POINTS= 600
PTS TO SKIP=0
YRANGE & MIN: 400.0

TTY I/O?N

XI:

YI:

DE:

DI:

READ IN FROM PAPER TAPE:
600 POINTS
START WITH FIRST POINT
400 POINTS ON Y AXIS
WITH MIN. VALUE OF 0
VIA HIGH SPEED READER
INVERT LEFT-RIGHT RELATIONSHIP
ON X AXIS
INVERT Y AXIS
CALCULATE FIRST DERIVATIVE OF
DISPLAYED DATA
EXIT TO DIAL

APPENDIX A
COMMAND SUMMARY

At least the first two characters of a command must be typed before colon is typed.

INPUT-OUTPUT COMMANDS

TAPE: Read or write LINtape
AVERAGE: Accept time averaged analog data
PAPERTAPE: Input data from paper tape or keyboard
OUTPUT: Print/punch paper tape
PLOT: Plot data on X-Y analog recorder

PROCESSING COMMANDS

CALCULATE: Calculate Lorentzian and/or Gaussian spectrum
ALTER: Alter parameters input by previous CALCULATE command
COPY: Copy CDC into NDC
XINVERT: Invert X axis
YINVERT: Invert Y axis
SCALE: Scale to range of $\delta-1000$
MULTIPLY: Scale to arbitrary range
SMOOTH: Apply eleven point digital filter
CURSORS: Set up two cursors on scope
INTEGRATE: Integrate between cursors or running integration (preceded by CURSOR command)
STRIP: Strip out data or baseline (preceded by CURSOR command)
DERIVATIVE: Form differences (derivatives)
SUBTRACT: Subtract CDC from NDC; results in CDC
ADD: Add NDC to CDC; results in CDC
SWAP: Swap CDC and NDC
SQUEEZE: Average adjacent points of displayed channels

SPECIAL COMMANDS

MODIFY: ODT-like core modifier
TIME: Set machine cycle time constant to calibrate AVERAGER
RESTART: Restart program
DIAL: Exit to DIAL Editor

CDC = currently displayed channel
NDC = non-displayed channel

APPENDIX B

ASSEMBLING CATALAC

of error sheet inside front cover

The CATALAC program is supplied to the user in both source and binary on the tape. To generate a new binary file if the source program is modified, use the following procedure.

1. Load a DIAL-MS tape on unit 0. Load unit 1 with either a DIAL-V2 or DIAL-MS system tape. If another tape unit is available, mount the tape containing the CLEARSYM and CATALAC source programs there. If only two tape units are available, place the source programs on unit 0 (with PIP if necessary), in order to reduce the assembly time.
2. Type `+ZE` to clear the binary Working Area of unit 1.
3. Type `+AS CLEARSYM`. CLEARSYM is a two word program which produces a clean symbol table.

```
0000  
SAVSYM 1
```
4. Type `+AS CAT2,0`. Error messages generated at this time should be ignored. Press the RETURN key to terminate the assembly after the errors have all been printed to suppress printing of the symbol code.
5. Type `+ZE`. This clears the binary Working Area on unit 1.
6. Type `+LI CAT3,0`. If no listing is desired, use the AS command. Any errors generated now are real and must be corrected.
7. Type `+LI CAT2,0`. Because the symbol table produced is the same as the one generated in step 6, printing may be suppressed with the RETURN key after it has started to be printed.
8. Type `+SB CAT23,0`. This saves the binary output from the two previous assemblies.
9. Type `+ZE`.
10. Two versions of the Floating Point Package are supplied. If the machine has the EAE option, CATLE should be used in the following steps and CATALE will be generated. If the machine does not have this option, CAT2 should be used to generate CATALAC.
11. Type `+AB CAT1,0`.
12. Type `+AB CAT23,0`.
13. Type `+SB CATALAC,0P`. A binary file of CATALAC(E) has now been generated and the command `+LO CATALAC,0` will cause load and execute.

INDEX

ADD	2-16	RESTART	2-18
ALTER	2-9	Restarting CATACAL	1-3
Analog channel Knobs	2-12	RUBOUT	1-3
AVERAGE	2-2		
		SCALE	2-10
CALCULATE	2-7	Scope Channels	2-1
CATACALE	1-1	SMOOTH	2-11
Command Call	2-2	SQUEEZE	2-17
Command Summary	A-1	Starting Procedure	1-2
COPY	2-10	Stopping CATACAL	1-3
CURSORS	2-12	STRIP	2-13
		SUBTRACT	2-16
DIAL	2-18	SWAP	2-16
DIFFERENTIATE	2-14		
		TAPE I/O	2-5
Example	3-1	Terminators	1-3
		TIME	2-4
Format	1-3	Title	1-2
Hardware Requirements	1-1	XINVERT	2-10
		YINVERT	2-10
Inputting Data	1-3		
INTEGRATE	2-12		
Introduction	1-1		
LINctape	2-5		
MODIFY	2-17		
MULTIPLY	2-11		
OUTPUT	2-18		
PAPERTAPE	2-16		
PLOT	2-15		

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53

/CATACAL I
/THE COMPUTER OF AVERAGE TRANSIENTS AND
/CALCULATOR OF LORENTZIAN AND/OR GAUSSIAN
/SPECTRA FOR COMPARISON. THE PROGRAM USES PDP-8
/CODE ALMOST EXCLUSIVELY EXCEPT FOR THAT NECESSARY
/TO IMPLEMENT THE PDP-12 HARDWARE.

/WRITTEN BY G.W. DULANEY, DIG.EQ.CORP., FEB., 1970,
/USING MANY OF THE CONCEPTS AND CODE AS WAS IN
/LORCAP, MADCAP PACKAGES (DECUS #8-237).

FIXMRI CALL=4400 /USED TO CALL SUBR'S INDIRECTLY
FIXMRI FADD=1000
FIXMRI FSUB=2000
FIXMRI FMPY=3000
FIXMRI FDIV=4000
FIXMRI FGET=5000
FIXMRI FPUT=6000
FIXMRI FLOT=7000
FEXT=0000

0000
6201 CDF=6201
6131 CLGK=6131
6132 CLLR=6132
6133 CLAB=6133
6134 CLEN=6134
6135 CLSA=6135
6136 CLBA=6136
6137 CLCA=6137
0014 ATR=0014
0015 RTA=0015
0100 SAM=0100
0140 DIS=0140
1740 DSC=1740
0002 PDP=0002
6141 LINC=6141
0516 RSH=0516
0517 LSW=0517
0500 IOB=0500
0600 LIP=0600
0640 LDF=0640
0416 STD=0416
0453 IBE=0453
0440 SNS=0440
0005 QAC=0005
0340 SCR=0340
0400 SXL=0400
0300 FOR=0300
0240 ROL=0240
1600 BSE=1600
0455 CLZ=0455

54

1100
1000
1000
4000
0702
0701
0700
0706
0704
0705
0707
0703
0004
0003
0023
0001
0006
0024

ADA=1100
ADD=1000
LDA=1000
STC=4000
RDE=0702
RCG=0701
RDC=0700
WRI=0706
WRC=0704
WCG=0705
CHK=0707
MTB=0703
ESF=0004
TAC=0003
TMA=0023
AXO=0001
DJR=0006
SFA=0024

FIXTAB

4424
4423
4430
4433
4434
4407
4425
4427
4435
4432
5467

/SHORT HAND SUBR. CALLS
FIXT# JMS I FIXER
FLOATE JMS I FLOTER
INITARE JMS I INIT
HEDITE# JMS I HEADR1
HEDITE# JMS I HEADR2
ENTRE# JMS I 7
GETNO# JMS I READXY
RDITY# JMS I TELRED
ASK# JMS I QUERY
CRLFDS JMS I CRTLPD
DISPLAY# JMS I DISM2 /COMMON EXIT TO DISPLAY

/THE FOLLOWING ARE USED TO CALL CERTAIN
/OPERATIONS WHILE IN INTERPRETER MODE.

0001
0002
0003
0004
0005
0006
0007
0010

SQUARE# 1
SQROOT# 2
NEGATE# 3
READ# 4
OUTPUT# 5
HEDITE# 6
FNOR# 7
EXPONE# 10

/NEGATE FL. PT. AC
/READ FP#: IGNORE NON=NUMERICS
/PRINT FAC, IN E FORMAT
/PRINT HEADING WITH 'HEADER2'
/NORMALIZE C(FAC)
/FORM EXP(FAC); RESULT IN FAC

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

```

102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155

/ THESE DEFINE X-Y DAC RANGE AND PLOTTER
/ LIMITS AS USED BY THIS PRGM.
AXR=764 /X RANGE=500(10)
AYR=764 /Y RANGE=500(10)
AXL=6 /LOWER X LIMIT=6
AYL=7406 /LOWER Y LIMIT=-250(10)

/ THESE ARE USED BY 'MARKER' TO SET
/ UP QUADRANT COORDINATES NEEDED.
AX1=AXL*175 /1ST X QUAD. =131(10)
AX2=AXL*372 /2ND " =256(10)
AX3=AXL*567 /3RD " =381(10)
AY1=AYL*175 /1ST Y QUAD. =-125(10)
AY2=AYL*372 /2ND " =0
AY3=AYL*567 /3RD " =125(10)

BUF1=0 /STARTING ADDR. =1 OF FIRST BUFFER
DLBUF=4000 /ARRAY SIZE OR OFFSET
PTABST=DIAGLOG /START OF PARA ARRAY

FIELD 0
%5
XDIS, 0 /CURRENT X COORDINATE FOR DISPLAY
7200 /START OUTPUT CONTROLLER
5600 /START INTERPRETER

XIND, 0 /AUTO-INDEX REGISTERS
YIND, 0
ZIND, 0
AUTO, 0 /USED FOR TEMPORARY WORK.

%20
POP /IN CASE DUM-DUM STARTS IN LINC MODE
JMP I ,01
START

FLOTER, FLOATR /SUBROUTINE TABLE
FIXER, FIXR /FLOAT C(IAC) INTO FAC
READY, READER /FIX C(FAC) INTO AC AND LOG'N 45
HOLD, STALL /INPUT A FB #
TELRED, MODTTI /RC CLOCK DELAY SUBR.
INIT, INITI2 /GET & PRINT CHAR. ON ASR
OUT, SELECT /INITIALIZE STORAGE POINTERS
CTRLFD, MODCR /ISSUE CR-LF
HEADR1, HEDER1 /OUTPUT STRIPPED ASCII ADDR. AFTER JMS
HEADR2, HEDER2 /DITTO! NO ADDRESS
QUERY, ASKER /ACCEPT Y OR N IN ANSWER TO QUESTION
PENUP, UPEN /CLOSE RELAY ONE TO LIFT PEN
PENDN, DNPN /OPEN " TO DROP PEN

```

```

156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196

0063
0063 1134
0064 1435
0065 1124
0066 1213
0067 0421
0070 1717
0071 1557
0072 1171
0073 1166
0074 0000
0075 7600
0076 1163
0077 1174
0100 1775
0101 2751
0102 0000
0103 0000
0104 0006
0105 7406
0106 0764
0107 0764
0110 0000
0111 4000
0112 0000

DISMOV,
IOASK, ASKIO
ADCON, ADCONV
XSET, XSETUP
DISM2, BEGDIS
PPSET, SETPP
ADINX, ADOMX
MPYR, MPYRI
XMPY, XMPYI
NPTS,
PARPTR, PTABST
HUNDRD, HUNDRD
FLORF, FLORF
FGASF, FLGASF
XI, XI
LORFR,
GASFR,
XLIM,
YLIM,
XRNG,
YRNG,
YONE,
OFFSET,
YDIS,

*63
RESET
/ASK WHICH I/O DEVICE TO USE
/ADC SUBR, FOR GENERAL USE
/COMPUTE X AXIS INCREMENT FOR DISPLAY
/BEGIN OF SCOPE DISPLAY ROUTINE
/INITIALIZE CALCIN PARA POINTERS
/SET UP X DISPLAY COORD'S
/SCALE FACTOR FOR CALCIN OF Y INTEN. VALUES
/SIMILARLY FOR X
/NUMBER OF POINTS
/START OF PARA STORAGE TABLE
/FLOATING 100(10)
/LORENTZIAN FRACTION
/GAUSSIAN "
/LEFT X VALUE FOR CALCIN
/LOR. PERCENT
/GAUSS "
/MIN. X FOR DISPLAY
/SAME FOR Y
/X DISPLAY RANGE
/" FOR Y
/STARTING INDEX=1 FOR Y ARRAY
/ARRAY OFFSET
/CURRENT DISPLAY COORD, FOR Y

XNC,
TXSM,

XNC AND TXSM HAVE ASSUMED DECIMAL
/POINT AFTER BIT 11 OF HI ORDER WORD.
/DOUBLE PRECISION VALUE FOR X
/INCREMENT FOR DISPLAY
/IS CURRENT DOUBLE PREG.
/VALUE FOR X DISPLAY.

/THESE 4 LOC'NS ARE USED BY AVERAGER
0
/NO. OF SCANS
0
/MULTIPLEXOR CHANNEL
0
/NO. OF SAMPLES PER PT. (2'S COMP.)
0
/EXPONENT FACTOR REDUCES ADC SUM

```

LINE NO.	CATALOG	PAL10	VI41	15-APR-70	1101	PAGE 5
197						
198						
199						
200						
201						
202						
203						
204						
205						
206						
207						
208						
209						
210						
211						
212						
213						
214						
215						
216						
217						
218						
219						
220						
221						
222						
223						
224						
225						
226						
227						
228						
229						
230						
231						
232						
233						
234						
235						
236						
237						
238						
239						
240						
241						
242						
243						
244						

TABLE OF CONSTANTS, COUNTERS, & TEMP. LOCINS.
 /THIS IS USED TO AVOID TRUNCATION
 /WHEN FIXING THE FAC TO AN INTEGER.

HALF,	0	2000	0
NEG4,	-4		
RM77,	77		
K1000,	1000		
PCTR,	0		
CNTR,	0		
LNCTR,	0		
MCTR,	0		
TEMP,	0		
TEMP1,	0		
TEMP2,	0		
TEMP3,	0		
MIN,	0		
MAX,	0		
MODE,	0		
BLOCK,	0		
PKS,	0		
PARI,	0		
PIND1,	0		
PIND2,	0		
PIND3,	0		
FTEM1,	0		
CLTM,	0		
DLATH,	0		
FTEM2,	0		
LOORD,	0		
TMXP,	0		
TMCTR,	0		
TEMP,	0		
XMIN,	0		
YMIN,	0		
XSCLFC,	0		
YSCLFC,	0		

245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294

/CATACAL I
/PAGE ONE! MAIN CALLING ROUTINE AND
/DISPLAY LOOP PLUS SMALL SUBR'S.

0400
0400 PDP
0401 DCA IOSWT
0402 JMP BEGDIS=1 /SA=400 TO RE-ENTER DISPLAY
0403 CLA CLL /CLR I/O SWITCH FOR LOW SPD
0404 DCA IOSWT /CATACAL LIVES!+TITLE
0405 HEDIT1
0406 HD1
0407 RDTTY /READ IN TEXT UNTIL CTRL/A
0408 TAD MALT /IS ENTERED, THEN GO ON TO INPUT
0409 SEA CLA
0410 JMP I=3
0411 DCA BLOCK /CLEAR FOR BLOCK ONE
0412 DCA MODE /NO CURSORS
0413 IAC
0414 DCA NPTS /SET # PTS TO ONE FOR INITIAL COMMAND
0415 HEDIT2 /OK, HIT ME!
0416 CALL PENUP /BE SURE PLOTTER PEN IS UP
0417
0420
0421
0422
0423
0424
0425
0426
0427
0430
0431
0432
0433
0434
0435
0436
0437
0440
0441
0442
0443
0444
0445
0446
0447
0450
0451
0452
0453

*400

START,

BEGDIS,

SCRIPT,

STYN;

/NORMAL EXIT POINT FROM ROUTINES
/CLEAR FOR EXP, FORMATTED OUTPUT
/KNOCK DOWN TTY FLAG
/WANT CURSORS?
/YES
/IS A SWITCH USED TO SWAP BLOCKS
/IS Y AXIS OFFSET IF BLOCK#2
/BLOCK#1(I.E., WANT BUFFER 2)?
/YES, SET BIT 0 FOR CHANNEL 2
/BLOCK 1?
/YES, ADD ARRAY OFFSET
/GET CHAR, FROM TTY?
/YES, GO GET REST AND DECODE.

CALL XSET
DCA 62
CRLF0
KCC
TAD MODE
SEA CLA
CALL DSPTS
DCA TEMP
DCA TEMP1
TAD BLOCK
SEA CLA
STL RAR
DCA XDIS
TAD BLOCK
SEA CLA
TAD OFFSET
TAD YONE
DCA YIND
TAD NPTS
CIA CNTR
DCA TXSM+1
KSF
SKP I INTRP
JMP I INTRP
CDF 10

6201
4466
3062
4432
6032
1143
7640
4721
3135
3136
1144
7640
7130
3005
1144
7640
1111
1110
3011
1074
7041
3132
3116
6031
7410
5722
6211

296	0454	1411	SCPLOP,	TAD I YIND	/GET Y VALUE (0-1000)
297	0455	7110	CLL RAR		/DIVIDE FOR DISPLAY
298	0456	1105	TAD YLIM		/ADD LOWER LIMIT
299	0457	1136	TAD TEMP1		
300	0460	6141	LINC		
301	0461	0145	DIS XDIS		
302	0462	0002	PDP CLL		
303	0463	7300	CLA XNC*1		/INCR. X DISPLAY SUM
304	0464	1114	TAD TXSM*1		
305	0465	1116	TAD TXSM*1		
306	0466	3116	DCA TXSM*1		
307	0467	7004	RAL		
308	0470	1005	TAD XDIS		
309	0471	1113	TAD XNC		
310	0472	3005	DCA XDIS		
311	0473	2132	ISE CNTR		/MORE PTS?
312	0474	5294	JMP SCPLOP		/YES
313	0475	6201	CDF 0		
314	0476	7240	STA		
315	0477	1144	TAD BLOCK		
316	0500	7750	SPA SNA CLA		/BLOCK #=2?
317	0501	5226	JMP SCPLNT		/NO, CONTINUE WITH CDA
318	0502	2135	ISE TEMP		/IS SWITCH SET FOR BUFFER 1?
319	0503	5307	JMP :+4		/NO
320	0504	3005	DCA XDIS		/YES CLEAR X AND Y OFFSET
321	0505	3136	DCA TEMP1		
322	0506	5242	JMP STYN*1		/AND RETURN TO SKIP
323	0507	7240	STA		
324	0510	3135	DCA TEMP		
325	0511	7001	IAC		
326	0512	4465	CALL ADCON		/GET A NEW Y OFFSET
327	0513	7010	RAR		/DIVIDE BY 2
328	0514	3136	DCA TEMP1		
329	0515	4465	CALL ADCON		/GET NEW X OFFSET
330	0516	7130	STL RAR		/DIVIDE BY 2, LEAVE BIT 0 SET
331	0517	3005	DCA XDIS		
332	0520	5241	JMP STYN		/AND RETURN TO GET ARRAY OFFSET
333	0521	3324	DISPTS		
334	0522	2000	SERVIS		/DECODE KBD CHAR'S AND ACT
335	0523	7577	-201		/-CTRL/A

DSPTS,
INTRP,
MALT,

```

336 0524 0000
337 0525 7200
338 0526 1044
339 0527 7750
340 0530 5351
341 0531 1044
342 0532 1354
343 0533 7450
344 0534 5352
345 0535 7500
346 0536 5344
347 0537 3356
348 0540 4755
349 0541 2356
350 0542 5340
351 0543 5352
352 0544 7300
353 0545 1045
354 0546 7710
355 0547 7046
356 0550 7050
357 0551 3045
358 0552 1045
359 0553 5724
360 0554 7765
361 0555 6200
362
363
364
365 0556 0000
366 0557 3045
367 0560 1366
368 0561 3044
369 0562 3046
370 0563 4765
371 0564 5756
372 0565 6600
373 0566 0013
374
375 0567 1040
376 0570 4423
377 0571 5772
378 0572 5601

FIXR, 0
CLA 44
TAD 44
SPA SNA CLA
JMP DONE=1
TAD 44
TAD M13
SNA
JMP DONE
SMA
JMP LRG
DCA FLOATR
CALL DIV1
ISZ FLOATR
JMP =2
JMP DONE
CLA CLL
TAD 45
SPA CLA
CMA RTL
CMA RAR
DCA 45
JMP I FIXR
M13, -13
DIV1, 6200

LRG,
DONE,
M13,
DIV1,

FLOATR, 0
DCA 45
TAD P13
DCA 44
DCA 46
CALL FPNORM
JMP I FLOATR
FPNORM, 6600
P13, 13

INTFLT, TAD 40
FLOATR
JMP I =1
5601

/THIS SUBR. TRUNCATES FAC TO INTEGER
/AND LEAVES IT IN THE AC & LOC'N 45,
/EXPO.<1?
/YES; TRUNCATE TO ZERO
/EXPO.<13?
/NO, IS TOO LARGE
/USE FLOATR AS TEMP REG,
/IS FAC ROTATE RIGHT; LEAVE
/FRACTION AS C(46)

/WAS IT NEG.?
/YES; SET AC=7775
/IF =3777;IF =,=4001

/USED TO GET FLOAT THRU INTERPRETER

```

379 /THIS IS A SHORT DEBUG AND CORE MODIFIER ROUTINE
 380 /THE RETURN LOCATION IS SPECIFIED BY
 381 /TYPING 'R' THEN RETURN LOC'N.
 382 /TYPE 'N' TO OPEN NEXT LOCATION; TYPE 'C'
 383 /AFTER A CORRECTION TO ENTER IT;
 384 /AND TYPE 'S' TO REOPEN LAST LOCATION USED,
 385 /'RUBOUT' WILL TERMINATE ANY OPERATION
 386 /THEN RESTART ROUTINE.
 387

388 *200 /NOTE: OUT OF SEQUENCE,
 389 STRTIT, JMS MODCR /GET A LOCATION TO OPEN
 390 JMS OCTIN
 391 JMP I=2 /GET A NUMBER>0?
 392 SEA GOTIT /YES
 393 TAD LSCHR /IS LAST CHARACTER READ
 394 TAD MEN /WAS IT 'N'?
 395 SNA NLOC /YES
 396 JMP NLOC /WAS IT 'S'?
 397 TAD MES /YES
 398 SNA NLOC*1 /WAS IT 'R'?
 399 JMP NLOC*1 /NO, IGNORE IT
 400 IAC /YES; GET EXIT LOC'N
 401 SEA CLA /IF ERROR, RESTART
 402 JMP STRTIT /MUST BE NONZERO ADDR.
 403 JMS MODCR /HAS OK
 404 JMP I VALU /EXIT TO THERE,
 405

410 NLOC, ISZ LSLOC /GET CONTENTS OF OPEN LOC'N
 411 TAD LSLOC /PRINT IT
 412 JMS OCTOUT
 413 SKP
 414 DCA LSLOC
 415 TAD EQUAL
 416 CALL OUT
 417 TAD I LSLOC
 418 JMS OCTOUT
 419 TAD COLON
 420 CALL OUT
 421 JMS OCTIN /GET CORRECTION
 422 JMP STRTIT
 423 CLA
 424 TAD LSCHR
 425 TAD MSEE
 426 SEA CLA /HAS LAST CHAR. A 'C'?
 427 JMP STRTIT /NO, RESTART.
 428 TAD VALU /YES
 429 DCA I LSLOC /STORE CORRECTION
 430 JMP STRTIT
 431

```

/CATACALI
432 0252 0000
433 0253 7104
434 0254 3355
435 0255 1126
436 0256 3351
437 0257 1355
438 0260 7006
439 0261 7004
440 0262 3355
441 0263 1355
442 0264 0345
443 0265 1337
444 0266 4431
445 0267 2351
446 0270 5257
447 0271 5652
448
449
450 0272 0000
451 0273 7200
452 0274 3354
453 0275 3351
454 0276 4356
455 0277 3353
456 0300 1353
457 0301 1341
458 0302 7540
459 0303 5323
460 0304 1342
461 0305 7510
462 0306 5323
463 0307 3355
464 0310 1354
465 0311 7106
466 0312 7004
467 0313 1355
468 0314 3354
469 0315 2351
470 0316 1351
471 0317 1126
472 0320 7740
473 0321 5333
474 0322 5276
475 0323 7200
476 0324 1353
477 0325 1340
478 0326 7650
479 0327 5333
480 0330 2272
481 0331 1354
482 0332 5672
483 0333 1350
484 0334 4431
485 0335 5672

OCTOUT, 0
  CLL RAL
  DCA DTEM
  TAD NEG4
  DCA NCNTR
  TAD DTEM
  RTL
  RAL
  DCA DTEM
  TAD DTEM
  AND MS7
  TAD AS260
  CALL OUT
  ISZ NCNTR
  JMP SETIT
  JMP I OCTOUT

SETIT,
  /CAME WITH OCTAL # IN ACJ
  /ROTATE 1ST DIGIT INTO LINK
  /MASK RIGHTMOST 3 BITS
  /PRINTED 4 DIGITS?
  /NO
  /YES, WE'RE DONE.

OCTIN, 0
  CLA VALU
  DCA NCNTR
  JMS MODTTI
  DCA LSCHR
  TAD LSCHR
  TAD MN7
  SMA SEA
  JMP FNISH
  TAD P7H0
  SPA
  JMP FNISH
  DCA DTEM
  TAD VALU
  CLL RTL
  RAL DTEM
  TAD DTEM
  DCA VALU
  ISZ NCNTR
  TAD NCNTR
  TAD NEG4
  SEA SMA CLA
  JMP BAD
  JMP GTCHR

GTCHR,
  JMS MODTTI
  DCA LSCHR
  TAD LSCHR
  TAD MN7
  SMA SEA
  JMP FNISH
  TAD P7H0
  SPA
  JMP FNISH
  DCA DTEM
  TAD VALU
  CLL RTL
  RAL DTEM
  TAD DTEM
  DCA VALU
  ISZ NCNTR
  TAD NCNTR
  TAD NEG4
  SEA SMA CLA
  JMP BAD
  JMP GTCHR

FNISH,
  CLA
  TAD LSCHR
  TAD MRBT
  SNA CLA
  JMP :+4
  ISZ OCTIN
  TAD VALU
  JMP I OCTIN
  TAD QUEST
  CALL OUT
  JMP I OCTIN

BAD,
  CALL OUT
  JMP I OCTIN
  
```


574 /THE FOLLOWING TABLE OF COORD'S IS STRUCTURED
 575 /THUSLY: 1ST WORD=STATUS, BIT 0=1 MEANS
 576 /X COORD, FOLLOWS, BIT 1=1 Y COORD, FOLLOWS,
 577 /BOTH SET MEANS X THEN Y COORD'S FOLLOW,
 578 /BIT 11 DESCRIBES PEN STATUS: =0
 579 /LEAVE PEN AS IS, AND =1 RAISE PEN.
 580
 581
 582
 583
 584
 585
 586
 587

PX=4000;PY=2000;PU=1

0661 0661 CORTAB, .

/THESE DRAW A BOX STARTING FROM AXES ORIGIN
 PX+PY+PU /GO TO AXES ORIGIN

0662 6001
 0663 0001
 0664 7401
 0665 4000
 0666 0777
 0667 2000
 0670 0377
 0671 4000
 0672 0001
 0673 2000
 0674 7401

PX /GO TO RIGHT
 AXL+AXR+5
 PY /GO TO TOP
 AYL+AYR+5
 PX /GO TO LEFT TOP
 AXL+5
 PY /GO TO AXES ORIGIN
 AYL+5

/THESE DRAW TICS ON X AXIS

0675 4001
 0676 0006
 0677 2000
 0700 7404
 0701 6001
 0702 0203
 0703 7401
 0704 2000
 0705 7404
 0706 6001
 0707 0400
 0710 7401
 0711 2000
 0712 7404
 0713 6001
 0714 0575
 0715 7401
 0716 2000
 0717 7404
 0720 6001
 0721 0772
 0722 7401
 0723 2000
 0724 7404

PX+PU
 AXL
 PY
 AYL=2
 PX+PY+PU
 AX1
 AYL=5
 PY
 AYL=2
 PX+PY+PU
 AX2
 AYL=5
 PY
 AYL=2
 PX+PY+PU
 AX3
 AYL=5
 PY
 AYL=2
 PX+PY+PU
 AXR+AXL
 AYL=5
 PY
 AYL=2

588
 589
 590
 591
 592
 593
 594
 595
 596
 597
 598
 599
 600
 601
 602
 603
 604
 605
 606
 607
 608
 609
 610
 611
 612
 613
 614
 615
 616
 617
 618
 619
 620
 621
 622
 623
 624
 625

722	1055	0277	QUES,	277	/?	
723	1056	7447	YES,	-331	/=Y	
724	1057	0013	NO,	331=316	/Y=N	
725	1060	0021	MGEE,	330=307	/X=G	
726	1061	7772	MEM,	307=315	/G=M	
727	1062	7776	MOH,	315=317	/M=O	
728	1063	1364	PTPLT,	PNTRPLT		
729	1064	0630	MARKR,	MARKER		
730	1065	1335	PLTXIT,	PLTINT		
731						
732						
733						
734	1066	0000	ASKER,	0	/SUBR. ACCEPTS ONLY 'Y' OR 'N' FROM	
735	1067	4427		ROTTY	/ASR. GIVES '?' IF NOT. SETS AC=1	
736	1070	1256		TAD YES	/FOR 'N' ANSWER. AC=0 FOR 'Y'	
737	1071	7450		SNA		
738	1072	5666		JMP I ASKER	/=0 FOR YES	
739	1073	1257		TAD NO		
740	1074	7640		SEA CLA		
741	1075	5300		JMP .+3		
742	1076	7001		IAC	/=1 FOR NO	
743	1077	5666		JMP I ASKER		
744	1100	1255		TAD QUES		
745	1101	4431		CALL OUT		
746	1102	5267		JMP ASKER+1		
747						
748	1103	0000	STALL,	0		
749	1104	7300		CLA CLL		
750	1105	1322		TAD SET		
751	1106	7650		SNA CLA	/WANT FAST CLOCK?	
752	1107	1130		TAD K1000	/NO SET FOR 1KC	
753	1110	1323		TAD K3100	/IF SKIPPED SET FOR 10KC	
754	1111	3317		DCA CCLDR		
755	1112	7125		STL IAC RAL	/GET VARIABLE COUNT FROM CHAN 3	
756	1113	4465		CALL ADCON	/TIMES 4	
757	1114	1130		TAD K1000	/INSERT DELAY TIME	
758	1115	7106		CLL RTL		
759	1116	4721		CALL CLKSET		
760	1117	0000	CCLDR,	0		
761	1120	5703		JMP I STALL		
762	1121	4343	CLKSET,	SETCLK		
763	1122	0000	SET,	0		
764	1123	3100	K3100,	3100		
765						
766	1124	0000	ADCONV,	0	/FORM SAM N1 CHANNEL IN AC	
767	1125	1333		TAD CSAM		
768	1126	3330		DCA .+2		
769	1127	6141		LINC		
770	1130	0000	0	0	/LEAVE RESULT IN AC	
771	1131	0002	PDP	JMP I ADCONV		
772	1132	5724				
773	1133	0100	CSAM,	SAM		

774	1134	0000	RESET,	0		/RESET DISPLAY COORD'S
775	1135	7200		CLA	TAD YDIS	
776	1136	1112		LINC		
777	1137	6141		DIS	XDIS	
778	1140	0145		PDP		
779	1141	0002		CLA		
780	1142	7200		JMP I	RESET	
781	1143	5734				
782						
783						
784						
785	1144	0000	UPPEN,	0		/THESE TWO SUBR'S OPEN AND CLOSE RELAY 1
786	1145	4426		CALL	HOLD	
787	1146	7001		IAC		
788	1147	6141		LINC		
789	1150	0014		ATR		
790	1151	0002		PDP		
791	1152	4426		CALL	HOLD	
792	1153	5744		JMP I	UPPEN	
793						
794	1154	0000	DNPEN,	0		
795	1155	4426		CALL	HOLD	
796	1156	6141		LINC		
797	1157	0014		ATR		
798	1160	0002		PDP		
799	1161	4426		CALL	HOLD	
800	1162	5754		JMP I	DNPEN	
801						
802	1163	0007	HNDRO,	FLTG	100.0	
	1164	3100				
	1165	0000				
803	1166	0000	XMPYI,	01010		
	1167	0000				
	1170	0000				
804	1171	0000	MPYRI,	01010		
	1172	0000				
	1173	0000				
805	1174	0000	FLLORF,	01010		
	1175	0000				
	1176	0000				

```

806            1200            *1200            /OUTPUT 10 INCHES OF LOR=TRLR.
807            0000            LEADER. 0
808            4432            CRLF0
809            1211            TAD LNUM
810            3131            DCA PTR
811            1203            TAD C200
812            1204            CALL OUT
813            4431            ISZ PTR
814            2131            JMP I-3
815            5204            JMP I LEADER
816            5600            LNUM,
817            7634            C200,
818            0200           
819           
820            XSETUP. 0
821            0000            STA
822            7240            TAD NPTS
823            1074            FLOAD
824            4423            ENTR XSCFLC
825            4407            FLOT XRNG
826            6171            FPUT XSCFLC
827            7106            FDIV XSCFLC
828            4171            FPUT XSCFLC
829            6171            FEY
830            0000            TAD 44
831            1044            SZA SMA CLA
832            7740            JMP GTR
833            5237            DCA XNC
834            3113            TAD 45
835            1045            CLL RAL
836            7104            ISZ 44
837            2044            SKP RAR
838            7410            CLL RAR
839            7110            JMP .04
840            5242            FIXT
841            4424            DCA XNC
842            3113            TAD 46
843            1046            DCA XNC*1
844            3114            JMP I XSETUP
845            5613           
846           
847            GTR.
848           
849           
850           
851           
852           
853           
854           
855           
856           
857           
858           
859           
860           
861           
862           
863           
864           
865           
866           
867           
868           
869           
870           
871           
872           
873           
874           
875           
876           
877           
878           
879           
880           
881           
882           
883           
884           
885           
886           
887           
888           
889           
890           
891           
892           
893           
894           
895           
896           
897           
898           
899           
900           
901           
902           
903           
904           
905           
906           
907           
908           
909           
910           
911           
912           
913           
914           
915           
916           
917           
918           
919           
920           
921           
922           
923           
924           
925           
926           
927           
928           
929           
930           
931           
932           
933           
934           
935           
936           
937           
938           
939           
940           
941           
942           
943           
944           
945           
946           
947           
948           
949           
950           
951           
952           
953           
954           
955           
956           
957           
958           
959           
960           
961           
962           
963           
964           
965           
966           
967           
968           
969           
970           
971           
972           
973           
974           
975           
976           
977           
978           
979           
980           
981           
982           
983           
984           
985           
986           
987           
988           
989           
990           
991           
992           
993           
994           
995           
996           
997           
998           
999           
1000           
  
```

/FOLLOWING ROUTINE COMPUTES
 /X DISPLAY INCREMENT SCALED
 /TO THE NO. OF PTS., NPTS.

/LEAVES X UNITS/PY IN FAC
 /AND XSCFLC.

/WAS FAC<1?
 /NO

/YES, CLEAR INTEGER PART
 /ASSUMES FACTOR IS ALWAYS
 /0.25 OR GREATER, IRAL FOR SIGN BIT
 /WAS C(44)--1?

/NO, WAS 0
 /YES, DIVIDE BY 2

845	1244	4307	JMS DATYP		
846	1245	4434	HEDIT2	/PTS. TO SKIP:	
847	1246	4425	GETNO		
848	1247	4424	FIXT		
849	1250	7040	CMA PCTR	/KEEP AS ONE'S COMP.	
850	1251	3131	DCA PCTR	/Y RANGE AND MIN.I	
851	1252	4433	HEDIT1		
852	1253	5352	DIHDI		
853	1254	4425	GETNO		
854	1255	4324	JMS YSVAL		
855	1256	4407	ENR	/READ MINIMUM Y	
856	1257	0004	READ		
857	1260	6166	FPUT YMIN		
858	1261	0000	FEXT		
859	1262	4464	CALL IOASK	/LOW SPEED I/O?	
860	1263	6014	RFC		
861	1264	4430	INITAR		
862	1265	4407	ENR	/READ A Y VALUE	
863	1266	0004	READ		
864	1267	2166	FSUB YMIN		
865	1270	3174	FMPY YSCLFC		
866	1271	1123	FADD HALF		
867	1272	0000	FEXT		
868	1273	4424	FIXT		
869	1274	6211	ODF 10		
870	1275	3411	DCA I YIND		
871	1276	6201	ODF 0		
872	1277	2131	ISZ PCTR	/KEEPING THIS POINT?	
873	1300	5264	JMP XYSCAL-1	/NO, RE-INIT, TO IGNORE PTS.	
874	1301	7240	STA	/AFTER FIRST SKIP, ALWAYS SKIP	
875	1302	3131	DCA PCTR		
876	1303	2132	ISZ CNTR		
877	1304	5265	JMP XYSCAL		
878	1305	3056	DCA IOSNT	/CLEAR I/O SWITCH	
879	1306	5467	DISPLAY	/EXIT FOR DISPLAY	
880					
881	1307	0000	0		
882	1310	4433	HEDIT1		
883	1311	5133	HD2	/NO. PTS=	
884	1312	4425	GETNO		
885	1313	4424	FIXT		
886	1314	7041	CIA		
887	1315	1111	TAD OFFSET		
888	1316	7710	SPA CLA	/LESS THAN ARRAY SIZE?	
889	1317	5310	JMP DATYP+1	/NO. TRY AGAIN	
890	1320	1045	TAD 45		
891	1321	3074	DCA NPTS		
892	1322	4466	CALL XSET	/SET X DISPLAY INCREMENT	
893	1323	5707	JMP I DATYP		

```

894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940

1324 0000
1325 4407
1326 3123
1327 6174
1330 7107
1331 4174
1332 6174
1333 0000
1334 5724

0
ENTR HALF
FMPY YSCLFC
FLOT YRNG
FDIV YSCLFC
FPUT YSCLFC
FEXT
JMP I YSVAL

/ DATA RANGE IN FAC ON ENTRY
/ FIND YRNG/D.R.=YSCLFC
/ AND LEAVE FACTOR IN FAC

PLTINT, INITAR
1335 4430
1336 4436
1337 4466
1340 7001
1341 3133
1342 6211
1343 1411
1344 6201
1345 7110
1346 1105
1347 3112
1350 1364
1351 1133
1352 4765
1353 3133
1354 4471
1355 2132
1356 5342
1357 4436
1360 4433
1361 5170
1362 4435
1363 5467
1364 0000
1365 1600

CALL PENUP
CALL XSET
IAC LNCTR
DCA LNCTR
CDF 10
TAD I YIND
CDF 0
CLL RAR
TAD YLIM
DCA YDIS
TAD PNTPLT
TAD LNCTR
CALL PLTMOV
DCA LNCTR
CALL ADINX
ISE CNTR
JMP PLTLOP
CALL PENUP
HEdit1
HD6
ASK
DISPLAY
0
PNTPLT,
PLTMOV, PLTING.

/ INCREMENTAL X-Y ANALOG PLOTTING ROUTINE
/ RAISE PEN
/ SET SWITCH FOR 1 ST PT ONLY
/ SET UP Y VALUE

/=0 FOR LINE PLOT1 =1 FOR POINT
/ MOVE PEN
/ CLEAR 1 ST PT SWITCH
/ INCR. X DISPLAY SUM
/ MORE PTS?
/ YES
/ LIFT PEN * EXIT
/ DONE. IS PLOTTER OFF?
/ IGNORE RESPONSE

YFLIP,
FLY,
INITAR
CDF 10
TAD I YIND
CIA
TAD YRNG
TAD YRNG
DCA I ZIND
ISE CNTR
JMP FLY
DISPLAY

/ INVERT Y AXIS
/ Y(I)=2*YRNG-Y(I)

```


1041	1535	4430	INITAR	
1042	1536	1141	TAD MIN	/SCALE DATA AFTER SUB'G MIN Y.
1043	1537	7041	CIA	
1044	1540	6211	CDF 10	
1045	1541	1411	TAD I YIND	
1046	1542	6201	CDF 0	
1047	1543	4423	FLOAT	
1048	1544	4407	ENTR YSCLFC	
1049	1545	3174	FADD HALF	/CORRECT FOR TRUNCATION.
1050	1546	1123	FEXT	
1051	1547	0000	FIXT	
1052	1550	4424	CDF 10	
1053	1551	6211	DCA I ZIND	
1054	1552	3412	ISE CNTR	
1055	1553	2132	JMP SKL	
1056	1554	5336	DISPLAY	
1057	1555	5467	YSVAL	
1058	1556	1324		
1059				
1060				
1061	1557	0000	/LOADS CURRENT XDIS AND READYS NEXT.	
1062	1560	7300	ADDMX, 0	
1063	1561	1116	CLA CLL	/GET LOW ORDER
1064	1562	7104	TAD TXSM+1	/PUT BIT 0 IN 11 FOR ROUNDOFF
1065	1563	7204	CLA RAL	/GET HIGH ORDER
1066	1564	1115	TAD TXSM	
1067	1565	1104	TAD XLIM	
1068	1566	3005	DCA XDIS	/IS CURRENT X DISPLAY VALUE,
1069	1567	1116	TAD TXSM+1	/FOR NEXT TIME! GET FRACTIONS
1070	1570	1114	TAD XNC+1	
1071	1571	3116	DCA TXSM+1	
1072	1572	7004	RAL	/PUT OVERFLOW IN BIT 11
1073	1573	1115	TAD TXSM	/GET INTEGER PARTS
1074	1574	1113	TAD XNC	
1075	1575	3115	DCA TXSM	
1076	1576	5757	JMP I ADDMX	
1077				

```

1078
1079
1080
1081
1082
1083
1084
1085
1086
1087
1088
1089
1090
1091
1092
1093
1094
1095
1096
1097
1098
1099
1100
1101
1102
1103
1104
1105
1106
1107
1108
1109
1110
1111
1112
1113
1114
1115
1116
1117
1118
1119

1600
1601
1602
1603
1604
1605
1606
1607
1610
1611
1612
1613
1614
1615
1616
1617
1620
1621
1622
1623
1624
1625
1626
1627
1630
1631
1632
1633
1634
1635
1636
1637
1640
1641
1642

1315
7041
1005
3131
1316
7041
1112
3136
1131
7510
7041
3134
1136
7510
7041
1134
1134
3134
1134
7450
5307
7041
3133

PLTINC, 0
SMA
JMP ,*3
CALL DISMOV
JMP PLEXT
SNA CLA
JMP GSCAN
CALL PENUP
CALL DISMOV
CALL PENUP
CALL PENUP
CALL PENDN
JMP PLEXT

/IS AC NEG?
/NO
/YES, USE FAST JUMP
/WAS AC>0?
/NO, USE INCREMENTER
/YES! GO TO COORD'S AND WAIT

/THEN PUT PEN DOWN

GSCAN,
TAD OLDX
CIA
TAD XDIS
DCA PCTR
TAD OLDY
CIA
TAD YDIS
DCA TEMP1
TAD PCTR
SPA
CIA
DCA MCTR
TAD TEMP1
SPA
CIA
TAD MCTR
DCA MCTR
TAD MCTR
SNA
JMP PLEXT
CIA
DCA LNC1R

*1600
/ENTER WITH CONTROL VALUE IN AC:
/NEG=SCOPE,0=INCREMENT, & POS=FIRST
/POINT (FOR PLOTTING ONLY, NOT SCOPE)
/OR MAKE A POINT PLOT.

/IS AC NEG?
/NO
/YES, USE FAST JUMP
/WAS AC>0?
/NO, USE INCREMENTER
/YES! GO TO COORD'S AND WAIT

/THEN PUT PEN DOWN

/IS OLD X
/IS DELTA X
/IS OLD Y
/IS DELTA Y
/IS ABS. VALUE OF DX
/NOW HAVE ABS(DY)
/ADD ABS(DX)
/ABS(DX)+ABS(DY)=# OF MOVES=MCTR
/IS MCTR>0?
/NO, NO MOVES TO MAKE, EXIT.

```

1120	1643	4407	ENTR				
1121	1644	7134	FLOT MCTR				
1122	1645	6160	FPUT TEMFP				
1123	1646	7315	FLOT OLDX				
1124	1647	6163	FPUT XMIN				
1125	1650	7316	FLOT OLDY				
1126	1651	6166	FPUT YMIN				
1127	1652	7131	FLOT PCTR				
1128	1653	4100	FDIV TEMFP				
1129	1654	6171	FPUT XSCLFC				
1130	1655	7136	FLOT TEMPI				
1131	1656	4160	FDIV TEMFP				
1132	1657	6174	FPUT YSCLFC				
1133	1660	0000	FEXT				
1134	1661	2714	ISE I CSET				
1135	1662	4407	ENTR	SCANIT,			
1136	1663	5163	FGET XMIN				
1137	1664	1171	FADD XSCLFC				
1138	1665	6163	FPUT XMIN				
1139	1666	1123	FADD HALF				
1140	1667	0000	FEXT				
1141	1670	4424	FIXT				
1142	1671	3005	DCA XDIS				
1143	1672	4407	ENTR				
1144	1673	5166	FGET YMIN				
1145	1674	1174	FADD YSCLFC				
1146	1675	6166	FPUT YMIN				
1147	1676	1123	FADD HALF				
1148	1677	0000	FEXT				
1149	1700	4424	FIXT				
1150	1701	3112	DCA YDIS				
1151	1702	4463	CALL DISMOV				
1152	1703	4426	CALL HOLD				
1153	1704	2133	ISE LNCYR				
1154	1705	5262	JMP SCANIT				
1155	1706	3714	DCA I CSET				
1156	1707	1005	TAD XDIS	PLEXT,			
1157	1710	3315	DCA OLDX				
1158	1711	1112	TAD YDIS				
1159	1712	3316	DCA OLDY				
1160	1713	5600	JMP I PLTNG				
1161	1714	1122	SET	CSET,			
1162	1715	0000	0	OLDX,			
1163	1716	0000	0	OLDY,			
1164	1717	0000	0	SETPP,			
1165	1720	3147	DCA PIND1				
1166	1721	1147	TAD PIND1				
1167	1722	7001	IAC				
1168	1723	3150	DCA PIND2				
1169	1724	1150	TAD PIND2				
1170	1725	7001	IAC				
1171	1726	3151	DCA PIND3				
1172	1727	5717	JMP I SETPP				

/# MOVES

/DELTA X

/X UNITS/MOVE

/DELTA Y

/Y UNITS/MOVE

/USE FAST CLOCK CYCLE

/TRUNCATE XPOS TO NEAREST INTEGER

/DO SAME FOR Y,

/MOVE PEN TO NEW COORD'S

/WAIT FOR FAST CLOCK CYCLE

/MORE MOVES?

/YES.

/RESTORE FOR SLOW CLOCK

/SET UP PARA TABLE POINTERS

/VALUE FOR PIND1 IS IN AC


```

1219
1220
1221
1222
1223
1224
1225
1226
1227
1228
1229
1230
1231
1232
1233
1234
1235
1236
1237
1238
1239
1240
1241
1242
1243
1244
1245
1246
1247
1248
1249
1250
1251
1252
1253
1254
1255
1256
1257
1258
1259
1260
1261
1262
1263
1264

2000
2001
2002
2003
2004
2005
2006
2007
2010
2011
2012
2013
2014
2015
2016
2017
2020
2021
2022
2023
2024
2025
2026
2027
2030
2031
2032
2033
2034
2035
2036
2037
2040
2041
2042
2043
2044
2045
2046
2047
2050
2051
2052
2053
2054

SERVIS,
*2000
KRB
TLS
TSF
JMP I-1
TAD M300
SPA SNA
JMP NMCHK
CLL RTL
RTL
RTL
DCA TEMP
ROTTY
TAD M300
SPA SNA
JMP INVAL
TAD TEMP
CIA
DCA TEMP
DCA TEMP1
TAD CHTAB
DCA AUTO
ROTTY
TAD M272
SNA
JMP CHLOP
TAD RUBIT
SZA CLA
JMP MRRED
CLA
TAD ERRO
CALL OUT
DISPLAY
ISZ TEMP1
TAD I AUTO
SNA INVAL
JMP INVAL
TAD TEMP
SZA CLA
JMP CHLOP
TAD TEMP1
TAD JUMPTB
DCA TEMP
TAD I TEMP
DCA TEMP
JMP I TEMP

/DISPLAY INTERRUPT SERVICE ROUTINE
/PRINT LAST CHAR,
/WAS IT A LETTER?
/NO, MAY BE NEW BLOCK #
/GET NEXT CHAR
/LETTER?
/NO, ERROR
/KEEP 6-BIT PR AS 2'S COMP.
/SET UP SEARCH TABLE
/GET MORE INPUT
/WAS IT A COLON?
/YES, LOOKUP JUMP ADDR,
/RUBOUT?
/NO, GET MORE
/OUTPUT '9'
/AND EXIT TO DISPLAY
/GET 6 BIT PAIR
/END OF TABLE?
/YES, INVALID COMMAND
/GET A MATCH?
/NO, TRY NEXT ENTRY
/YES, GET TABLE POINTER
/FORM JUMP ADDR.
/AND GO THERE

```

/SET UP BLOCK PARAMETER, 0=BUFFER 1, 1=BUFFER 2
 /AND 2= BOTH BUFFERS W/OFFSETS FOR 2

TAD M261 /<261?
 SPA INVAL /YES
 DCA BLOCK /KEEP IT TEMPORARILY
 STA CLL RAL
 TAD BLOCK />?
 SMA SZA CLA /YES, SET TO 0
 DCA BLOCK /EXIT TO DISPLAY W/O CR-LF

JMP I CDISPL
 ERRQ, 277
 M300, -300
 M261, 300-261
 M272, -272
 RUBIT, 272-377
 CDISPL, SCPINT=1
 CHTAB, DCTAB=1
 JUMPTB, JMPTB=1

/JUMP ADDR, TABLE FOR 'SERVIS' I

STRIPR
 SHOT11
 INTEG
 CALPRT
 LORCL4
 SUBTRT
 FPOUT
 CALBRT
 SCALY
 SWAPBL
 START
 ISDIG
 TAPHAN
 ANINPT
 CALSET
 STRYIT
 SQUEZE
 ADDTWO
 DERIV
 DILST
 XFLIP
 YFLIP
 COPY
 CURSR
 MULP

JMPTB, 3254
 2076 3025
 2100 3400
 2101 2243
 2102 2200
 2103 2361
 2104 1400
 2105 1000
 2106 1453
 2107 3000
 2110 0403
 2111 1244
 2112 3613
 2113 4003
 2114 4193
 2115 0200
 2116 4663
 2117 3156
 2120 4600
 2121 4011
 2122 4726
 2123 1366
 2124 4752
 2125 3170
 2126 4761

1311	2127	2324	/ST-RIP
1312	2130	2315	/SM=00TH
1313	2131	1116	/INTEGRATE
1314	2132	0114	/ALTER
1315	2133	0301	/CALCULATE
1316	2134	2325	/SUBTRACT CDA FROM OTHER
1317	2135	1725	/OUTPUT
1318	2136	2014	/PL=0T
1319	2137	2303	/SCALE
1320	2140	2327	/SW=AP
1321	2141	2205	/RE-START
1322	2142	2001	/PAPE TAPE INPUT
1323	2143	2401	/TAPE I/O
1324	2144	0126	/AVERAGER INPUT
1325	2145	2411	/TIME CALIBRATION
1326	2146	1517	/MODIFIER ROUTINE
1327	2147	2321	/SQ=UEEZE DATA DENSITY
1328	2150	0104	/ADD OTHER TO CDA
1329	2151	0405	/DERIVATIVE FORMATION
1330	2152	0411	/DIAL EXIT
1331	2153	3011	/X=INVERT
1332	2154	3111	/Y=INVERT
1333	2155	0317	/COPY CDA INTO OTHER
1334	2156	0325	/CURSORS
1335	2157	1525	/MULTIPLY (SCALE) CDA
1336	2160	0000	/END TABLE
1337			
1338			
1339			
1340	2161	0000	RECALC, 0
1341	2162	4470	CALL PPSET
1342	2163	4407	ENTR I PIND1
1343	2164	7547	FLOT I PIND1
1344	2165	4160	FDIV TEMFP
1345	2166	0000	FEXT
1346	2167	4776	CALL NEWMP
1347	2170	3547	DCA I PIND1
1348	2171	7001	IAC
1349	2172	1151	TAD PIND3
1350	2173	2135	ISE TEMP
1351	2174	5362	JMP RECALC+1
1352	2175	5761	JMP I RECALC
1353	2176	0762	NORMAT

USED TO RESCALE HGTS FOR NEW INT, MPYR,

HAS OLD MPYR

MULT BY NEW MPYR

MORE PEAKS?

YES

```

1353
1354
1355
1356
1357
1358
1359
1360
1361
1362
1363
1364
1365
1366
1367
1368
1369
1370
1371
1372
1373
1374
1375
1376
1377
1378
1379
1380
1381
1382
1383
1384
1385
1386
1387
1388
1389
1390

2200
2201
2202
2203
2204
2205
2206
2207
2210
2211
2212
2213
2214
2215
2216
2217
2220
2221
2222
2223
2224
2225
2226
2227
2230
2231
2232
2233
2234
2235
2236
2237
2240
2241
2242

*2200
CALL .*1
DIALOG
CALL GETVAR
HEDIT2
IAC
DCA TEM3
TAD PK3
DCA TEM2
TAD PPRPTR
CALL PPSET
CALL HGT
TAD WIDSWT
TAD TEM3
SNA CLA
JMP .*3
CALL WID
JMP .*3
TAD I WIDONE
DCA I PIND2
DCA TEM3
CALL POS
CRLF0
TAD PIND3
IAC TEM2
ISE TEM2
JMP NUPEEK
CALL CLARR
JMP I CALCY
CLRR
WIDSWT, 0
WIDONE, PTABST.*1
GETVAR, VARGET
CALCY, YCALC
DUMPIT, PARDMP
PKOMP, PEKOMP

LORCL4,
NUPEEK,
GCAL,
CLARR,
WIDSWT,
WIDONE,
GETVAR,
CALCY,
DUMPIT,
PKOMP,

/CALL INITIAL DIALOG
/GET SCALING VARIABLES, ETC,
/'HGT', HALF-WIDTH, POSITIONI,
/IS SWITCH FOR FIRST PEAK

/FIRST PEAK OR UNEQUAL WIDTHS?
/NO

/GET FIRST WIDTH AND PUT INTO
/OTHER PEAKS
/CLEAR SWITCH AFTER FIRST PEAK

/CLEAR ARRAY STORAGE

/IS SET BY INITIAL DIALOG ROUTINE
/ADDRESS FOR FIRST WIDTH

```


1391							
1392							
1393	2243	4433	CALPRT, HEDIT1	/PEAK, PARA, VALUEI			
1394	2244	5315	HD21				
1395	2245	4425	GETNO				
1396	2246	4424	FIXT				
1397	2247	7510	SPA	/PEAK #<0?			
1398	2250	5243	JMP CALPRT	/YES, NO GOOD			
1399	2251	7104	CLL RAL				
1400	2252	1045	TAD 45				
1401	2253	1351	TAD MINS				
1402	2254	3136	DCA TEMP1				
1403	2255	1145	TAD PKS	/3*PKS-3=PK INDEX #			
1404	2256	1045	TAD 45				
1405	2257	7740	SHA SZA CLA	/PK NO, > NO, PKS?			
1406	2260	5243	JMP CALPRT	/YES, IGNORE			
1407	2261	1045	TAD 45				
1408	2262	3135	DCA TEMP				
1409	2263	4425	GETNO				
1410	2264	4424	FIXT				
1411	2265	7510	SPA	/PARA #<0?			
1412	2266	5232	JMP GCAL	/YES, EXIT TO CALC SPECTRUM			
1413	2267	1135	TAD TEMP				
1414	2270	7650	SNA CLA	/BOTH ENTRIES = 0?			
1415	2271	5641	JMP I DUMPI1	/YES, SIGNALS ALL PARA DUMP			
1416	2272	1045	TAD 45				
1417	2273	7450	SNA	/PARA #>0?			
1418	2274	5642	JMP I PKDMP	/YES, SIGNALS PEAK PARA DUMP			
1419	2275	1351	TAD MINS				
1420	2276	7740	SHA SZA CLA	/PARA #>3?			
1421	2277	5243	JMP CALPRT	/YES, ILLEGAL TRY AGAIN			
1422	2300	1136	TAD TEMP1				
1423	2301	7510	SPA	/PK #>0?			
1424	2302	5314	JMP P123	/NO, GET MPYR, BASE, OR LOR FR			
1425	2303	1075	TAD PARPTR	/=POINTER TO HGT PARA			
1426	2304	4470	CALL PRSET				
1427	2305	1045	TAD 45				
1428	2306	1355	TAD PSTAB				
1429	2307	3135	DCA TEMP				
1430	2310	1335	TAD I TEMP				
1431	2311	3135	DCA TEMP				
1432	2312	4535	CALL TEMP				
1433	2313	5243	JMP CALPRT	/NOW, GET SUBR FOR INPUT			

1434 /CATACALI 2314 7240
 1435 2315 1045
 1436 2316 7640
 1437 2317 5337
 1438 2320 4407
 1439 2321 5472
 1440 2322 6160
 1441 2323 0004
 1442 2324 6472
 1443 2325 0000
 1444 2326 1145
 1445 2327 3135
 1446 2330 1075
 1447 2331 4754
 1448 2332 4407
 1449 2333 7146
 1450 2334 4160
 1451 2335 0000
 1452 2336 5346
 1453 2337 1045
 1454 2340 1351
 1455 2341 7640
 1456 2342 5345
 1457 2343 4752
 1458 2344 5243
 1459 2345 4425
 1460 2346 4753
 1461 2347 3146
 1462 2350 5243
 1463 2351 7775
 1464 2352 2754
 1465 2353 0762
 1466 2354 2161
 1467 2355 2355
 1468 2356 0771
 1469 2357 4532
 1470 2360 4714
 1471
 1472 2361 4773
 1473 2362 1105
 1474 2363 7104
 1475 2364 1411
 1476 2365 7041
 1477 2366 1413
 1478 2367 3412
 1479 2370 2132
 1480 2371 5362
 1481 2372 5467
 1482 2373 3014

STA
 TAD 45
 SZA CLA
 JMP GTP2
 ENTR
 FGET I MPYR
 FPUT TEMF
 READ
 RPUT I MPYR
 FEFT
 TAD PKS
 DCA TEMP
 TAD PARPTR
 CALL NUCALC
 ENTR
 FLOT PAR1
 FDIV TEMF
 FEFT
 JMP PR17
 TAD 45
 TAD MINS
 SZA CLA
 JMP .03
 CALL LGFRAC
 JMP CALPRT
 GETNO
 CALL NUMP
 DCA PAR1
 JMP CALPRT
 .03
 MINS, GLFRAC
 LGFRAC, NORMAT
 NUMP, NORMAT
 NUCALC, RECALC
 PSTAB, .
 HGT, WIDTH
 HGT, WIDTH
 POSTN
 SUBTRT, CALL INTSP
 TAD YLIM
 CLL RAL
 TAD I YIND
 CIA
 YAD I AUTO
 DCA I ZIND
 ISE CNTR
 JMP SUBTRT+1
 DISPLAY
 SPINIT
 INTSP, INTSP

/WANT MPYR?
 /NO, GET BASE OR LOR FR
 /KEEP OLD VALUE
 /GET NEW
 /UPDATE OLD HGT'S & BASE1
 /RESCALE HGTS
 /WANT NEW BASE?
 /YES
 /NO, GET NEW LOR, FR.
 /SCALE IT.
 /SUBTRACT GDA FROM OTHER BUFFER
 /USE -2*YLIM FOR OFFSET
 /GET CDA
 /SUBTRACT FROM OTHER
 /RESTORE IN CDA
 /MORE POINTS?
 /YES
 /EXIT TO DISPLAY

```

1483 /CATACALI
1484
1485
1486
1487
1488
1489
1490
1491
1492
1493
1494
1495
1496
1497
1498
1499
1500
1501
1502
1503
1504
1505
1506
1507
1508
1509
1510
1511
1512
1513
1514
1515
1516
1517
1518
1519
1520
1521
1522
1523
1524
1525
1526
1527
1528
1529
1530
1531
1532
1533
1534
1535
1536
1537

2400
2401
2402
2403
2404
2405
2406
2407
2410
2411
2412
2413
2414
2415
2416
2417
2420
2421
2422
2423
2424
2425
2426
2427
2430
2431
2432
2433
2434
2435
2436
2437
2440
2441
2442
2443
2444
2445
2446
2447
2450
2451
2452
2453
2454
2455
2456
2457
2460
2461
2462

*2400
/COMPUTES LORENTZIAN AND/OR GAUSSIAN 'DIPS'
/COOL IT'
HEDIT1
H023
INITAR
CALL XSET
DCA FTEM2
DCA FTEM2*1
DCA FTEM2*2
TAD PKS
DCA TEM2
DCA YSCLFC
DCA YSCLFC*1
DCA YSCLFC*2
CALL LOADX
TAD PARPTR
CALL PPSET
TAD I PIND2
SPA
CIA
CLL RTL
RAL
DCA TEMP
TAD TEMP
CIA
TAD I PIND3
CIA
TAD TXSM
SPA CLA
JMP NXPK
TAD TEMP
TAD I PIND3
CIA
TAD TXSM
SMA CLA
JMP NXPK
CALL CALBEG
TAD LORPR
SNA CLA
JMP ALLGS
ENTR
FADD TEMF
FPUT FTEM1
FLOT I PIND1
FMPY XMIN
FDIV FTEM1
FMPY I FLORF
FADD YSCLFC
FPUT
FEXT
TAD GASFR
SNA CLA
JMP NXPK

YCALC,
NUPNT,
YCLC,
STRCL,

/GET XSCLFC (X DIS, UNITS/PT)
/USED AS TEMP REGS

/CHECK FOR PEAK IN RANGE OF X
/WAS RANGE NEG?
/YES, MAKE WIDTH POS

/IS 8 * WIDTH

/GET POSITION = 8 * W

/SUBTRACT FROM CURRENT X
/IS POS -8*W<X
/YES, IGNORE THS PEAK
/GET P*8*W

/IS P*8*W>X
/YES, IGNORE THIS PK
/GET W**2 AND (P-X)**2

/ANY LOR, CONTRIBUTION?
/NO
/YES, COMPUTE IT
/GET (P-X)**2*W**2
/TEMP STORE
/GET HGT
/GET H*W**2
/GET H*W**2/((P-X)**2*W**2)
/SCALE BY LOR, FR.
/ADD TO CURRENT SUM FOR THIS PT

/ANY GAUSS, CONTRIBUTION?
/NO

SPCJ=JMP STRCL /DEFINE IT FOR INIT. DIALOG
5242
5243
5244
5245
5246
5247
5248
5249
5250
5251
5252
5253
5254
5255
5256
5257
5258
5259
5260
5261
5262
5263
5264
5265
5266
5267
5268
5269
5270
5271
5272
5273
5274
5275
5276
5277
5278
5279
5280
5281
5282
5283
5284
5285
5286
5287
5288
5289
5290
5291
5292
5293
5294
5295
5296
5297
5298
5299
5300
5301
5302
5303
5304
5305
5306
5307
5308
5309
5310
5311
5312
5313
5314
5315
5316
5317
5318
5319
5320
5321
5322
5323
5324
5325
5326
5327
5328
5329
5330
5331
5332
5333
5334
5335
5336
5337

```

```

1538 /CATACAL I
1539 2463 4407
1540 2464 5160
1541 2465 4163
1542 2466 3123
1543 2467 0003
1544 2470 0010
1545 2471 6160
1546 2472 7547
1547 2473 3160
1548 2474 3500
1549 2475 1174
1550 2476 6174
1551 2477 0000
1552 2500 1151
1553 2501 7001
1554 2502 2137
1555 2503 5216
1556 2504 4424
1557 2505 7041
1558 2506 1146
1559 2507 6211
1560 2510 3411
1561 2511 6201
1562 2512 4471
1563 2513 2132
1564 2514 5207
1565 2515 5467
1566 2516 2705
1567 2517 3600
1568
1569 2520 4433
1570 2521 5256
1571 2522 4407
1572 2523 7106
1573 2524 4473
1574 2525 0005
1575 2526 5901
1576 2527 0005
1577 2530 5472
1578 2531 0005
1579 2532 7146
1580 2533 4472
1581 2534 0005
1582 2535 5477
1583 2536 0005
1584 2537 0000
1585 2540 4434
1586 2541 1145
1587 2542 3131
1588 2543 5350

ALLGS, ENTR TEMFP
        FGET TEMFP
        FDIV XMIN
        FMPY HALF
        NEGATE
        EXPON
        FPUT TEMFP
        FLOT I PIND1
        FMPY TEMFP
        FMPY I PGASF
        FADD YSCLFC
        FPUT YSCLFC
        FEXT
        TAD PIND3
        IAC
        ISZ TEM2
        JMP YCLC
        FIXT
        CIA
        TAD PAR1
        CDF 10
        DCA I YIND
        CDF 0
        CALL ADINX
        ISZ CNTR
        JMP NUPNT
        DISPLAY
        XLOAD
        CALBEG, BEGCAL

NXPX, TAD PIND3

BSCHNG, TAD PAR1
        CDF 10
        DCA I YIND
        CDF 0
        CALL ADINX
        ISZ CNTR
        JMP NUPNT
        DISPLAY
        XLOAD
        CALBEG, BEGCAL

PARDMP, HEDIT1
        H020B
        ENTR
        FLOT XRNG
        FDIV I XMPY
        OUTPUT
        FGET I X1
        OUTPUT
        FGET I MPYR
        OUTPUT
        FLOT PAR1
        FDIV I MPYR
        OUTPUT
        FGET I FLORF
        OUTPUT
        FEXT
        HEDIT2
        TAD PKS
        DCA PCTR
        JMP PKPRNT

/GET -(X-P)**2/(2*W**2)**Z
/GET EXP(-Z)

/GET H*EXP(-Z)
/SCALE BY GAUSS, FRACTION
/ADD TO SUM

/RESET PARA PTRS,

/ANOTHER PEAK?
/YES
/NO, FORM INTEGER FROM SUM
/SUBTRACT FROM BASELINEJ CHANGE
/TO INOP, FOR PEAK SPECTRA,

/STORE INTEGER RESULT

/INCREMENT TXSM
/MORE POINTS?
/YES
/EXIT

/X RANGE, X1, INT,MPYR,BASE,LOR FRI

/HGT, H-WIDTH,POSI

/SET TO PRINT ALL PEAKS
/STARTING FROM FIRST PEAK

```

1589						
1590						
1591						
1592	2544	7240	PEKDMP, STA			
1593	2545	3131	DCA PCTR		/SET TO PRINT ONLY ONE PEAK	
1594	2546	4432	CRLF0			
1595	2547	1136	TAD TEMP1		/GET PEAK INDEX	
1596	2550	1075	TAD PARPTR		/OUTPUT CURRENT PARA'S IN INPUT UNITS	
1597	2551	4470	CALL PPSET			
1598	2552	4407	ENTR			
1599	2553	7547	FLOT I PIND1			
1600	2554	4472	FDIV I MPYR			
1601	2555	0005	OUTPUT			
1602	2556	7550	FLOT I PIND2			
1603	2557	4473	FDIV I XMPY			
1604	2560	0005	OUTPUT			
1605	2561	7551	FLOT I PIND3			
1606	2562	4473	FDIV I XMPY			
1607	2563	1501	FADD I X1			
1608	2564	0005	OUTPUT			
1609	2565	0000	FEXT			
1610	2566	4432	CRLF0			
1611	2567	7001	IAC			
1612	2570	1151	TAD PIND3			
1613	2571	2131	ISZ PCTR		/MORE PEAKS?	
1614	2572	5351	JMP PKPRNT*1		/YES	
	2573	5467	DISPLAY			

```

1615
1616
1617
1618
1619
1620
1621
1622
1623
1624
1625
1626
1627
1628
1629
1630
1631
1632
1633
1634
1635
1636
1637
1638
1639
1640
1641
1642
1643
1644
1645
1646
1647
1648
1649
1650
1651
1652
1653
1654
1655
1656
1657
1658
1659
1660
1661
1662
1663
1664

2600
0000
1045
7700
5206
4660
7240
3261
4407
3277
6163
0000
4424
3262
4407
7045
6166
5163
2166
6163
3163
6166
1274
6160
2271
4160
2163
1263
6160
5266
3166
1160
6160
5163
4160
1044
1302
0000
1262
1044
3044

FLEXPO. 0
TAD 45
SMA CLA
JMP ,03
CALL NEGIT
STA SINE
DCA SINE
ENTR
FMPY LG2E
FPUT XMIN
FEXT
FIXT
DCA FLAG2
ENTR
FLOT 45
FPUT YMIN
FGET XMIN
FSUB YMIN
FPUT XMIN
FMPY XMIN
FPUT YMIN
FADD D
FPUT TEMFP
FGET C
FDIV TEMFP
FSUB XMIN
FADD A
FPUT TEMFP
FGET B
FMPY YMIN
FADD TEMFP
FPUT TEMFP
FGET XMIN
FDIV TEMFP
FADD 44
FADD ONE
FEXT
TAD FLAG2
TAD 44
DCA 44

*2600
/THIS IS AN EXPONENTIATION ROUTINE
/IDENTICAL TO THAT USED BY FLOATING
/POINT PKG WITH EXTENDED FUNCTIONS.
/THE ONLY DIFFERENCES ARE IN THE USE
/OF TEMPORARY STORAGE AND THE 'FIX'
/AND 'FLOAT' OPERATIONS.

/NEG. EXPO?
/NO
/YES
/KEEP SIGN OF EXPO

```

1665
 1666
 1667
 1668
 1669
 1670
 1671
 1672
 1673
 1674
 1675
 1676
 1677
 1678
 1679
 1680
 1681
 1682
 1683
 1684
 1685
 1686
 1687
 1688
 1689
 1690
 1691
 1692
 1693
 1694
 1695
 1696
 1697
 1698
 1699
 1700
 1701
 1702
 1703
 1704
 1705

2650 2261
 2651 5600
 2652 4407
 2653 6163
 2654 5302
 2655 4163
 2656 0000
 2657 5600

ISZ SINE
 JMP I FLEXPO
 ENTR XMIN
 FPUT XMIN
 FGET ONE
 FDIV XMIN
 FEFT
 JMP I FLEXPO

/HAD NEG, EXPO

NEGIT, 6000
 SINE, 0
 FLAG2, 0
 A, 0004
 2372
 1402
 B, 7774
 2157
 5157
 0012
 5434
 0343
 0007
 2566
 5341
 0001
 2705
 2435
 ONE, 0001
 2000
 0000

2660 6000
 2661 0000
 2662 0000
 2663 0004
 2664 2372
 2665 1402
 2666 7774
 2667 2157
 2670 5157
 2671 0012
 2672 5434
 2673 0343
 2674 0007
 2675 2566
 2676 5341
 2677 0001
 2700 2705
 2701 2435
 2702 0001
 2703 2000
 2704 0000

/UPDATE CURRENT X FOR 'YCALC'

XLOAD, 0
 ENTR FTEM2
 FGET XSCLFC
 FADD XLOAD
 FPUT XLOAD
 FEFT
 DCA 44
 JMP I XLOAD

2705 0000
 2706 4407
 2707 5155
 2710 1171
 2711 6155
 2712 0000
 2713 3044
 2714 5705

Line No.	Code	Description	Value
1706			
1707			
1708			
1709			
1710			
1711			
1712			
1713			
1714			
1715			
1716			
1717			
1718			
1719			
1720			
1721			
1722			
1723			
1724			
1725			
1726			
1727			
1728			
1729			
1730			
1731			
1732			
1733			
1734			
1735			
1736			
1737			
1738			
1739			
1740			
1741			
1742			
1743			
1744			
1745			
1746			
1747			
1748			
1749			
1750			
1751			
1752			
1753			

VARGET, 0
 CALL GETPTS
 HEDIT1
 HD20A
 GETNO
 FIXT
 CIA
 DCA PKS
 HEDIT2
 ENTR
 READ
 FPUT XSCLFC
 FLOT XRNG
 FOIV XSCLFC
 FPUT I XMPY
 READ 0004
 FPUT I X1
 READ I MPYR
 READ 0004
 FMPY I MPYR
 FADD HALF
 FEXT
 FIXT
 DCA PAR1
 JMS GLFRAC
 JMP I VARGET
 GETPTS,
 X11,

/CALLED BY LORCL4 TO GET VARIABLES
 /GET # PTS
 /'NO. OF PEAKS'

 /KEEP AS 2'S COMP
 /XRNG,X1.INT,MPYR,,BASE,LOR.FR,I

/GET INT, MULTIPLIER

 /GET BASELINE
 /SCALE IT

/PAR1=BASELINE
 /GET LOR. FRACTION; SET G.F. AND PERCENTS

/GET LORENTEZION FRACTION

/FIND GAUSSIAN FRACTION

/SET GAUSS PERCENT

/AND LOR. PERCENT

0
 ENTR
 READ
 FPUT I FLORF
 NEGATE
 FADD ONE
 FPUT I FGASF
 FMPY I HUNDRD
 FEXT
 FIXT
 DCA GASFR
 TAD GASFR
 CIA
 TAD PK100
 OCA LORFR
 JMP I GLFRAC
 PK100, 144

2715 0000
 2716 4750
 2717 4433
 2720 5250
 2721 4425
 2722 4424
 2723 7041
 2724 3145
 2725 4434
 2726 4487
 2727 0004
 2730 6171
 2731 7106
 2732 4171
 2733 6473
 2734 0004
 2735 6501
 2736 0004
 2737 6472
 2740 0004
 2741 3472
 2742 1123
 2743 0000
 2744 4424
 2745 3146
 2746 4354
 2747 3715
 2750 1307
 2751 0000
 2752 0000
 2753 0000

 2754 0000
 2755 4407
 2756 0004
 2757 6477
 2760 0003
 2761 1302
 2762 6500
 2763 3476
 2764 0000
 2765 4424
 2766 3103
 2767 1103
 2770 7041
 2771 1374
 2772 3102
 2773 5754
 2774 0144


```

1754
1755
1756
1757
1758
1759
1760
1761
1762
1763
1764
1765
1766
1767
1768
1769
1770
1771
1772
1773
1774
1775
1776
1777
1778
1779
1780
1781
1782
1783
1784
1785
1786
1787
1788
1789
1790
1791
1792
1793
1794
1795
1796

3000
4214
1013
3010
3003
3004
3005
3006
3007
3010
3011
3012
3013
0000
4430
1011
1333
3030
7040
1132
1333
3034
3035
3036
3037
3040
3041
3042
3043
3044
0000

+3000
JMS SPINIT
TAD AUTO
DCA XIND
TAD I XIND
DCA TEMP
TAD I ZIND
DCA I AUTO
TAD TEMP
DCA I YIND
ISE CNTR
JMP SWLOOP
DISPLAY

SPINIT, 0
INITAR
TAD BLOCK
SNA CLA
TAD OFFSET
TAD YONE
DCA AUTO
COF 10
JMP I SPINIT

/MODIFIED DECUS 5/8-69 (LESQ11)
INITAR
TAD YIND
TAD PL13
DCA TEM2
CMA
TAD CNTR
TAD PL13
DCA CNTR
TAD MINS
DCA TEMP
TAD COTAG
DCA TEMP1
FLOAT
ENTR
FPUT XMIN
FPUT YMIN
FEXT

/SWAP THE TWO BUFFERS
/SPECIAL INIT. ROUTINE
/MORE POINTS?
/YES
/NO, EXIT

```


1935							
1936	3254	4200	STRIPR,	JMS SETSTR			
1937	3255	4433		HEDIT1	/STRIP PEAK?		
1938	3256	5327		HD25			
1939	3257	4435		ASK			
1940	3260	7640		SAZ CLA			
1941	3261	5267		JMP STRBS			
1942	3262	4311	STRPK,	JMS YSTEP	/GET NEW Y		
1943	3263	3411		DCA I YIND			
1944	3264	2132		ISZ CNTR			
1945	3265	5262		JMP STRPK			
1946	3266	5467		DISPLAY			
1947	3267	4434	STRBS,	HEDIT2	/FULL BASE STRIP?		
1948	3270	4435		ASK			
1949	3271	7640		SAZ CLA			
1950	3272	5275		JMP ,=3	/NO		
1951	3273	4430		INITAR			
1952	3274	4704		CALL EXTRP			
1953	3275	4311	REMOV,	JMS YSTEP			
1954	3276	7041		CIA			
1955	3277	1411		TAD I YIND	/SUB: FROM Y		
1956	3300	3412		DCA I ZIND			
1957	3301	2132		ISZ CNTR			
1958	3302	5275		JMP REMOV			
1959	3303	5467		DISPLAY			
1960	3304	5074	EXTRP,	EXTRAP			
1961							
1962	3305	0000	TPNT,	0	/TABLE OF LAST ADC COORD'S		
1963	3306	0000		0			
1964	3307	0000		0			
1965	3310	0000		0			
1966							
1967	3311	0000	YSTEP,	0	/COMPUTE Y VALUE		
1968	3312	6201		COF 0			
1969	3313	4407		ENTR			
1970	3314	5166		FGET YMIN			
1971	3315	1174		FADD YSCLFC			
1972	3316	6166		FPUT YMIN			
1973	3317	1123		FADD HALF			
1974	3320	0000		FEXT			
1975	3321	4424		FIXT			
1976	3322	6211		COF 10			
1977	3323	5711		JMP I YSTEP			

```

1978
1979
1980 3324 0000
1981 3325 7344
1982 3326 3140
1983 3327 1376
1984 3330 3013
1985 3331 7107
1986 3332 3137
1987 3333 1137
1988 3334 4465
1989 3335 1130
1990 3336 7110
1991 3337 3005
1992 3340 1104
1993 3341 7041
1994 3342 1005
1995 3343 1377
1996 3344 7510
1997 3345 7200
1998 3346 3413
1999 3347 2137
2000 3350 1137
2001 3351 4465
2002 3352 7110
2003 3353 3112
2004 3354 1105
2005 3355 7041
2006 3356 1112
2007 3357 7104
2008 3360 1377
2009 3361 3413
2010 3362 2137
2011 3363 1375
2012 3364 3134
2013 3365 4463
2014 3366 2134
2015 3367 5365
2016 3370 2140
2017 3371 5333
2018 3372 4774
2019 3373 5724
2020 3374 5000
2021 3375 7700
2022 3376 3304
2023 3377 0004

DISPTS, 0
STA CLL RAL /-2
DCA TEM3 /SET UP STORAGE TABLE
TAD DPTR /SET 4 AS FIRST CHANNEL
DCA AUTO
CLL IAC RTL
DCA TEM2
TAD TEM2
CALL ADCON /MAKE ADC ON CHAN'S 4 THEN 6
TAD K1000 /ADD 512 TO GET RESULT
CLL RAR /SUBTRACT XLIM
DCA XD'IS /CORRECT FOR HARDWARE HYSTERESIS
TAD XLIM /RESULTK0?
CIA XD'IS /YES, SET IT=0
TAD FUDGE /KEEP RESULT
SPA /INCR. CHAN
CLA /ADC ON CHAN'S 5 THEN 7
DCA I AUTO /SUB. YLIM
ISE TEM2
TAD TEM2
CALL ADCON /FOR HYSTERESIS
CLL RAR /KEEP IT
DCA YD'IS /SET DELAY COUNTER
TAD YLIM /REFRESH DISPLAY
CIA YD'IS /NEED 2ND PT THIS TIME?
CLL RAL /YES
TAD FUDGE /DISPLAY CURSOR VALUES IN DECIMAL
DCA I AUTO /GOT IT! EXIT
ISE TEM2
TAD DCT /STORAGE ADDR.
DCA MCTR
CALL DISMOV
ISE MCTR
JMP I-2
ISE TEM3
JMP NXPT
CALL DISCUR
JMP I DISPTS
DISCUR, CRD'IS
DCT, -100
DPTR, TPNT=1
FUDGE, 4

```

/CATACALI

2024	3400				
2025	3401	JMS RDY			
2026	3402	CALL CURSET			
2027	3403	STA			
2028	3404	TAD XSCFLC			
2029	3405	DCA XSCFLC			
2030	3406	HEDIT1	/SCAN INT'L?		
2031	3407	HD15			
2032	3410	ASK CLA			
2033	3411	JMP PTINT	/NO, BETWEEN CURSORS		
2034	3412	CALL SETLY			
2035	3413	ENTR			
2036	3414	FGET INTEG*1	/GET A LARGE NEG # TO START		
2037	3415	FPUT FTEM1			
2038	3416	FGET CMPINT*3	/GET LRG POS: #		
2039	3417	FPUT FTEM2			
2040	3420	FEXT			
2041	3421	JMS RDY	/PREPARE TO SCAN DATA		
2042	4323				
2043					
2044					
2045					
2046	4345		/THIS LOOP COMPUTES TOTAL INTEGRAL (SUM)		
2047	1045	JMS SCASM	/TO FIND A SCALE DOWN FACTOR!		
2048	7700	TAD 45	/STRIP BASELINE AND ADD ADJ. Y'S		
2049	5232	SMA CLA			
2050	4407	JMP PT1	/IS CURRENT SUM<CURRENT MIN?		
2051	5160	ENTR	/NO		
2052	6155	FGET TEMFP	/YES, SO KEEP IT AS MIN.		
2053	0000	FPUT FTEM2			
2054	4407	FEXT			
2055	3433	ENTR	/CHECK MAX VALUE		
2056	3434	FGET TEMFP			
2057	3435	FSUB FTEM1			
2058	3436	FEXT			
2059	3437	TAD 45			
2060	9245	SPA CLA	/IS CURRENT SUM>CURRENT MAX?		
2061	4407	JMP PT2	/NO		
2062	3442	ENTR			
2063	3443	FGET TEMFP			
2064	3444	FPUT FTEM1			
2065	3445	FEXT			
2066	2132	ISE CNTR	/MORE POINTS?		
	5222	JMP FNTOT	/YES		

FNTOT,

PT1,

PT2,

/CATACALI
 2067 3447 4407 ENTR
 2068 3450 5152 FGET FTEM1 /FIND INTEGRAL RANGE.
 2069 3451 2155 FSUB FTEM2 /DIV BY 2 SINCE DATA RNG=2*DISP RNG
 2070 3452 3123 FMPY HALF /COMPUTE SCALE=DOWN FACTOR
 2071 3453 6152 FPUT FTEM1 /SCALE MIN VALUE
 2072 3454 7107 FLOT YRNG /GET NEW MULT'R INCLUDING SCL-DN
 2073 3455 4152 FDIV FTEM1
 2074 3456 6152 FPUT FTEM1
 2075 3457 3155 FMPY FTEM2
 2076 3460 6155 FPUT FTEM2
 2077 3461 5152 FGET FTEM1
 2078 3462 3171 FMPY XSCLFC
 2079 3463 6171 FPUT XSCLFC
 2080 3464 0000 FEXT
 2081 3465 4323 JMS RDY

/THIS LOOP COMPUTES AND STORES
 /SCALED DOWN INTEGRAL VALUE AT EACH POINT,
 /GET INTEGRAL-BASELINE

CMPINT, FIXT
 3466 4345 CDF 10
 3467 4424 DCA I ZIND /MORE POINTS?
 3470 6211 ISZ CNTR /YES
 3471 3412 JMP CMPINT /PUT N-1 VALUE INTO NTH
 3472 2132 TAD 49 /Y MULT'D BY'
 3473 5266 DCA I ZIND
 3474 1045 CDF 0
 3475 3412 HEDIT1
 3476 6201 HD5+6
 3477 4433 ENTR
 3500 5165 FGET XSCLFC
 3501 4407 FDIV HALF
 3502 5171 OUTPUT
 3503 4123 FEXT
 3504 0005 DISPLAY
 3505 0005 CURSET, SETSTR
 3506 5467 SETLY, EXTRAP
 3507 3200
 3510 5074

PTINT, JMS SCASM /INTEGRATES BETWEEN CURSORS
 ISZ CNTR /AND PRINTS AREA; NO CHANGE
 JMP ,=2 /IN DATA ARRAY
 HEDIT2 /AREA=

3511 4345 ENTR TEMFF
 3512 2132 OUTPUT
 3513 5311 FEXT
 3514 4434 DISPLAY
 3515 4407 TPNT+1
 3516 5160
 3517 0005
 3520 0000
 3521 5467
 3522 3306

LEFY,


```

2115
2116 3523 0000
2117 3524 4430
2118 3525 2132
2119 3526 4423
2120 3527 4407
2121 3530 6160
2122 3531 7141
2123 3532 6166
2124 3533 0000
2125 3534 5723
2126
2127 3535 0000
2128 3536 4430
2129 3537 6211
2130 3540 3411
2131 3541 2132
2132 3542 5340
2133 3543 6201
2134 3544 5735
2135
2136 3545 0000
2137 3546 6211
2138 3547 1411
2139 3550 1411
2140 3551 6201
2141 3552 4423
2142 3553 4407
2143 3554 2166
2144 3555 6163
2145 3556 5174
2146 3557 1166
2147 3560 6166
2148 3561 0003
2149 3562 1163
2150 3563 3171
2151 3564 1160
2152 3565 6160
2153 3566 2155
2154 3567 0000
2155 3570 7040
2156 3571 1011
2157 3572 5011
2158 3573 5745
RDY,
0
INITAR
ISZ CNTR
FLOAT
ENTR
FPUT TEMFP
FLOT MIN
FPUT YMIN
FEXT
JMP I RDY
/CLEAR TEMFP
/SET LEFT Y
CLRR,
0
INITAR
CDF 10
DCA I YIND
ISZ CNTR
JMP I -2
CDF 0
JMP I CLRR
SCASM,
0
CDF 10
TAD I YIND
TAD I YIND
CDF 0
FLOAT
ENTR YMIN
FPUT XMIN
FGET YSCLFC
FADD YMIN
FPUT YMIN
NEGATE
FADD XMIN
FMPY XSCLFC
FADD TEMFP
FPUT TEMFP
FSUB FTEM2
FEXT
CMA
TAD YIND
DCA YIND
JMP I SCASM
/SUBTRACT PIVOT VALUE
/KEEP THIS
/INCR. PIVOT VALUE
/KEEP FOR NEXT POINT
/SUBTRACT FROM PT SUM
/FAC*(I+1)*Y(I)-P(I+1)-P(I)
/SCALE DOWN
/SUBTRACT MIN VALUE
/RESET Y POINTER

```

2159	/CATACALI	3600			
2160		3600	BEGCAL, 0	*3600	/CALLED BY YCALC
2161		3601	ENTR		
2162		3602	FLOT I PIND3		
2163		3603	FSUB FTEM2		/POS -X
2164		3604	SQUARE		
2165		3605	FPUT TEMFP		/(P-X)**2
2166		3606	FLOT I PIND2		/WIDTH
2167		3607	SQUARE		
2168		3610	FPUT XMIN		/W**2
2169		3611	FEXT		
2170		3612	JMP I BEGAL		
2171					
2172		3613	TAPHAN, HEDIT4		/BLK 1, UNIT, & MODE1
2173		3614	THDI		
2174		3615	CALL INOCT		/OCTAL INPUT ROUTINE
2175		3616	JMP I-4		/ERROR RETURN
2176		3617	SNA I-5		/BLOCK 0 NOT ALLOWED
2177		3620	JMP I-5		
2178		3621	DCA STBLK		
2179		3622	GETNO		/UNIT
2180		3623	FIXT		
2181		3624	AND MK7		
2182		3625	CLL RAR		/PUT BIT 11 IN LINK
2183		3626	TAD CXOB		/ADD HIGH BITS TO SET XOB
2184		3627	DCA XOBL		
2185		3630	RTL		/GET UNIT BIT INTO BIT 8
2186		3631	RTL		
2187		3632	DCA TEM3		/SAVE AS U*10
2188		3633	GETNO		/MODE
2189		3634	FIXT		
2190		3635	SEA CLA		/WRITE?
2191		3636	TAD CRDC		/NO, IS READ
2192		3637	TAD CMRC		
2193		3640	TAD TEM3		/ADD IN UNIT BIT*10
2194		3641	DCA WRTP		/SET INSTRUCTION
2195		3642	INITAR		
2196		3643	TAD 45		/CHECK MODE AGAIN
2197		3644	SNA CLA		/HAS 'WRITE'
2198		3645	JMP TAP1		/GET # PTS
2199		3646	CALL GTNPT		/# TO SKIP
2200		3647	HEDIT2		
2201		3650	GETNO		
2202		3651	FIXT		
2203		3652	TAD M256		/>256 WORDS TO SKIP?
2204		3653	SPA TAP1		/NO, PROCEED
2205		3654	JMP TAP1		/YES, BUMP START BLK
2206		3655	ISE STBLK		
2207		3656	DCA 45		
2208		3657	TAD 45		
2209		3660	JMP I-6		/AND CHECK AGAIN
2210		3661	CLA IAC		/FIND CORE ADDRESS
2211		3662	TAD YIND		
2212		3663	DCA TEMP		

2213	3664	6211	CDP 10		
2214	3665	7240	STA		
2215	3666	3137	DCA TEM2		
2216	3667	1045	TAD 45		
2217	3670	1074	TAD NPPTS		
2218	3671	1353	TAD M256		
2219	3672	7510	SPA		
2220	3673	5302	JMP BLK10	/ANOTHER BLK?	
2221	3674	3140	DCA TEM3	/NO, PROCEED	
2222	3675	7240	STA	/YES	
2223	3676	1137	TAD TEM2	/DECR. BLK CNTR	
2224	3677	3137	DCA TEM2		
2225	3700	1140	TAD TEM3		
2226	3701	5271	JMP SBPTB		
2227	3702	7200	CLA		
2228	3703	1135	TAD TEM	/SET TAPE REGISTERS	
2229	3704	6141	LINC		
2230	3705	0023	TMA 20		
2231	3706	1020	LDA 20		
2232	3707	1020	1020		
2233	3710	0001	AXO		
2234	3711	0000	Ø		
2235	3712	0000	Ø	/WILL CONTAIN INSTRUCTION	
2236	3713	0003	TAC	/IS CURRENT TAPE BLOCK	
2237	3714	0002	POP		
2238	3715	7101	IAC CLL	/TRANSFER OK?	
2239	3716	7440	SEA	/NO	
2240	3717	7402	HLT	/INCR. TAPE BLOCK	
2241	3720	2312	ISE STBLK	/CHECK MODE OR # TO SKIP	
2242	3721	1045	TAD 45	/HAD PTS TO SKIP?	
2243	3722	7450	SNA MRBKS	/NO, WAS WRITE, OR HAD NO PTS TO SKIP	
2244	3723	5337	JMP MRBKS	/SET UP SHIFT COUNTER	
2245	3724	1353	TAD H256		
2246	3725	3136	DCA TEMP1		
2247	3726	1045	TAD 45		
2248	3727	1011	TAD YIND	/GET # TO SKIP	
2249	3730	3011	DCA YIND	/RESET POINTER	
2250	3731	1411	TAD I YIND	/SHIFT BUFFER DOWN	
2251	3732	3412	DCA I BIND		
2252	3733	2136	ISE TEMP1		
2253	3734	5331	JMP :-3		
2254	3735	1045	TAD 45	/RESET CORE ADDRESS	
2255	3736	7041	CIA		
2256	3737	1352	TAD P256		
2257	3740	1135	TAD TEMP		
2258	3741	3135	DCA TEM		
2259	3742	3045	DCA 45		
2260	3743	2137	ISE TEM2	/MORE BLOCKS?	
2261	3744	5302	JMP BLK10	/YES	
2262	3745	5467	DISPLAY		

```

2263
2264
2265
2266
2267
2268
2269
2270
2271
2272
2273
2274
2275
2276
2277
2278
2279
2280
2281
2282
2283
2284
2285
2286
2287
2288
2289
2290
2291

3746 0272      INOCT, OCTIN
3747 1307      GTNPT, DATYP
3750 1020      CX08, 1020
3751 0007      MK7, 7
3752 0400      P256, 400
3753 7400      M256, -400
3754 0704      CHRC, WRC
3755 7774      CRDC, RDC=MRC

INITIZ, 0 /SETS UP A COUNTER=NPTS, INITIALIZES
          CLA CLL /X,Y, & Z ARRAY STARTING LOC'NS.
          TAD NPTS
          CIA CNTR
          DCA CNTR
          TAD BLOCK
          SEA CLA /BUFFER 1?
          TAD OFFSET /NO, ADD ARRAY OFFSET
          DCA YIND
          TAD NPTS /X ARRAY BEGINS AFTER Y'IS
          TAD YIND
          DCA XIND
          TAD YIND
          DCA ZIND /AUXILIARY AUTO REG. FOR Y ARRAY
          DCA TXSM /CLEAR X DISPLAY SUM
          DCA TXSM+1
          JMP I INITIZ
3756 0000
3757 7300
3760 1074
3761 7041
3762 3132
3763 1144
3764 7640
3765 1111
3766 1110
3767 3011
3770 1074
3771 1011
3772 3010
3773 1011
3774 3012
3775 3115
3776 3116
3777 5756

```

2292	4000	4000	*4000	V141	15-APR-70	1101	PAGE 51
2293	0000	0000	0				
2294	4001	0000	0				
2295	4002	0000	0				
2296	4003	4433	0				
2297	4004	5177	0				
2298	4005	4751	ANINPT,				
2299	4006	5205	HD7				
2300	4007	3120	CALL GETOCT				
2301	4010	5220	JMP ,=1				
2302	4011	6141	DCA MCHAN				
2303	4012	1020	JMP AGO				
2304	4013	0020	LINC				
2305	4014	0004	LDA 20				
2306	4015	0643	20				
2307	4016	0701	ESF				
2308	4017	7300	LDF 3				
2309	4020	4433	RCC				
2310	4021	5133	7300				
2311	4022	4425	HEDIT4				
2312	4023	4424	H02				
2313	4024	3140	GETNO				
2314	4025	1140	FIXT				
2315	4026	7112	DCA TEM3				
2316	4027	3074	TAD TEM3				
2317	4030	4466	CLL RTR				
2318	4031	1140	DCA NPTS				
2319	4032	3074	CALL XSET				
2320	4033	4433	TAD TEM3				
2321	4034	5204	DCA NPTS				
2322	4035	4407	HEDIT4				
2323	4036	7074	H0B				
2324	4037	6163	ENTR				
2325	4040	0004	FLOT NPTS				
2326	4041	4163	FPUT XMIN				
2327	4042	6163	READ XMIN				
2328	4043	0000	FPUT XMIN				
2329	4044	1346	FEXT				
2330	4045	1044	TAD PK14				
2331	4046	7550	TAD 44				
2332	4047	5220	SPA SNA				
2333	4050	3044	JMP AGO				
2334	4051	7133	DCA 44				
2335	4052	3045	STL IAC RTR				
2336	4053	4424	DCA 45				
2337	4054	3121	FIXT				
2338	4055	1121	DCA AVSUM				
2339	4056	4423	TAD AVSUM				
2340	4057	1044	FLOAT				
2341	4060	3122	TAD 44				
			DCA EXPFC				

/THIS IS THE AVERAGER INPUT ROUTINE
/DUMMY CELL FOR LINC JUMP IN ROUTINE AVGMR
/BETA REG'S FOR CHRDIS

/CHANNEL=

/OCTAL INPUT

/SUPER KLUDGE TO BOOTSTRAP DIAL INTO CORE

/I/O PRESET

/MUST BE AT LOC'N 40171:
/NO. POINTS=

/TEMP'LY SET TO # PTS/4
/GET 4*X DISP. INCREMENT

/SEC/SCAN=

/=TIME PER POINT (SEC)

2342	4061	ENTR			
2343	4062	FPUT YMIN			
2344	4063	FGET XMIN			
2345	4064	FDIR CYCTM			
2346	4065	FSUB NCY			
2347	4066	FDIR YMIN			
2348	4067	FADD FUGGY			
2349	4070	FMPY HALF			
2350	4071	FEXT			
2351	4072	FIXT			
2352	4073	SMA			
2353	4074	JMP AGO			
2354	4075	CLL RAL			
2355	4076	DCA CLTM			
2356	4077	TAD 46			
2357	4100	SPA CLA			
2358	4101	ISE CLTM			
2359	4102	HEDIT2			
2360	4103	CALL GETOCT			
2361	4104	JMP :=1			
2362	4105	TAD ISXL			
2363	4106	DCA I CSXL			
2364	4107	HEDIT2			
2365	4110	ENTR			
2366	4111	READ			
2367	4112	FMPY I HUNDRD			
2368	4113	FEXT			
2369	4114	FIXT			
2370	4115	CIA			
2371	4116	SMA			
2372	4117	CLA			
2373	4120	DCA DLATM			
2374	4121	HEDIT2			
2375	4122	GETNO			
2376	4123	FIXT			
2377	4124	CIA			
2378	4125	DCA PCTR			
2379	4126	DCA RUN			
2380	4127	CRLF0			
2381	4130	INITAR			
2382	4131	TAD NPYS			
2383	4132	CLL CHA RAL			
2384	4133	DCA TEMP			
2385	4134	CDF I0			
2386	4135	DCA I YIND			
2387	4136	ISE TEMP			
2388	4137	JMP :=2			
2389	4140	CDF 0			
2390	4141	TAD DILST*2			
2391	4142	LINC			
2392	4143	ESF			
2393	4144	PDP I			
2394	4145	JMP I ESRNMR			

```

/-# SAMPLES PER PT
/# SECS PER PT
/FAC=TOTAL # CY'S NEEDED PER PT/3
/OVERHEAD CY'S PER PT/3
/DIV BY :=# SAMPLES/PT:=#CY'S/SAMPLE
/OVERHEAD CY'S PER SAMPLE/3 IN LOOP 'ADDUP'
/FAC:=# DELAY CY'S NEEDED PER SAMPLE/6
/RESULT MUST BE NEG.
/TOO FAST!!
/ROUNDOFF1
/SENSE1
/FORM INSTRUCTION
/DELAY TIME(SEC)=
/IS :=100*SEC AS ENTERED
/NO. SCANS=
/CLEAR THAT ARRAY,
/EXECUTE I/O PRESET

```

2397	4146	0014	PK14,	14	
2398	4147	0212	CSXL,	AVLOP=3	
2399	4150	0400	ISXL,	SXL	
2400	4151	0272	GETOCT,	OCTIN	
2401	4152	4200	ESRMR,	AVGMR	
2402					
2403					
2404	4153	4433	CALSET,	HEDIT1	/SPECIAL ROUTINE TO RESET
2405	4154	5362	HDSP		/MACHINE CYCLE TIME FOR
2406	4155	4407	ENR		/ACCURATE CALIBRATION.
2407	4156	0004	READ		
2408	4157	3364	FMPY FK3		
2409	4160	6367	FPUT CYCTM		/3*CYCLE TIME
2410	4161	0000	FEXT		
2411	4162	4432	CRLF		
2412	4163	5467	DISPLAY		/EXIT
2413	4164	0002	FLTG 3.0		
	4165	3000			
	4166	0000			
2414					
2415	4167	7757	CYCTM,	/NEXT 3 CONSTANTS SET TIMING FOR AVERAGER	
2416	4170	2410	FLTG	4.8E-6	/IS 3* MACHINE CYCLE TIME
	4171	3730			
2417	4172	0004	FUGCY,	FLTG 12.333	/IS # CYCLES IN LOOP 'ADDUP' /3
	4173	3052			
	4174	4774			
2418	4175	0005	NCY,	FLTG 16.450	/IS # OVERHEAD CYCLES PER PT /3
	4176	2034			
	4177	6315			

2419	4200	*4200	CLA CLL		
2420	4201	7300	TAD EXPFC		
2421	4202	1122	TAD ISCR		
2422	4203	1337	DCA HIORD+1		
2423	4204	3254	TAD KSAM		
2424	4205	1341	TAD MCHAN		
2425	4206	1120	DCA GTAD		
2426	4207	3232	INITAR		
2427	4208	4430	LINC		
2428	4209	6141	STC 1		
2429	4210	4001	SXL 0		
2430	4211	0400	6000 :=1	/SKIP IF EXT. LEVEL 0 IS +3V	
2431	4212	6212	POP	/LINC JMP :=1	
2432	4213	0002	TAD DLATH		
2433	4214	0002	SN1 :=3		
2434	4215	1153	JMS SETCLK		
2435	4216	7450	5100		
2436	4217	5222	CPF 10		
2437	4220	4343	TAD AVSUM	/THIS ROUTINE TAKES ADD	
2438	4221	5100	DCA LNCTR	/SAMPLES, -AVSUM IN #, IN A TIME	
2439	4222	6211	DCA HIORD	/PER SAMPLE VARIED BY CLTM	
2440	4223	1121	TAD CLTM	/BASE TIME PER SAMPLE=50 USEC.	
2441	4224	3153	DCA TMCTR	/OVERHEAD/PT=77.8=80,2 USEC	
2442	4225	3253	LINC		
2443	4226	3155	SAM		
2444	4227	1152	POP	/MAKE ALL RESULTS POS.	
2445	4230	3157	TAD K1000	/STORED AS DOUBLE PREC. INTEGER	
2446	4231	6141	CLL	/LOORD OVERFLOW SETS LINK	
2447	4232	0100	TAD LOORD		
2448	4233	0002	DCA LOORD	/ADD SOME TIME BETWEEN SAMPLES	
2449	4234	1150	RAL	/DIVIDE BY NO. SAMPLES	
2450	4235	7100	TAD HIORD		
2451	4236	1155	DCA HIORD		
2452	4237	3155	ISE TMCTR		
2453	4240	7004	JMP :=1		
2454	4241	1253	ISE LNCTR		
2455	4242	3253	JMP ADDUP		
2456	4243	2157	TAD LOORD		
2457	4244	5243	LINC		
2458	4245	2133	SCR 14		
2459	4246	5227	LDA 20		
2460	4247	1155	0		
2461	4250	6141	0		
2462	4251	0354	0		
2463	4252	1020	0		
2464	4253	0000	0		
2464	4254	0000	0		


```

2465 /CATACALI 4255 0005
2466 4256 1120
2467 4257 7400
2468 4260 0161
2469 4261 0005
2470 4262 0241
2471 4263 0475
2472 4264 6267
2473 4265 1620
2474 4266 0001
2475 4267 0002
2476 4270 7100
2477 4271 1411
2478 4272 3412
2479 4273 7004
2480 4274 1411
2481 4275 3412
2482 4276 2132
2483 4277 5223
2484 4300 6201
2485 4301 2117
2486 4302 7604
2487 4303 7710
2488 4304 4740
2489 4305 2131
2490 4306 5207
2491 4307 4430
2492 4310 4407
2493 4311 7117
2494 4312 6160
2495 4313 0000
2496 4314 6211
2497 4315 1411
2498 4316 3046
2499 4317 1411
2500 4320 3045
2501 4321 6201
2502 4322 1342
2503 4323 3044
2504 4324 4407
2505 4325 0007
2506 4326 4160
2507 4327 1123
2508 4330 0000
2509 4331 4424
2510 4332 6211
2511 4333 3412
2512 4334 2132
2513 4335 5314
2514 4336 5467
2515 4337 0337
2516 4340 4400
2517 4341 0100
2518 4342 0027

/IS NO OF SCANS TAKEN
/CHECK BIT 0
/WANT TO INTERRUPT?
/YES, CALL DISPLAY ROUTINES
/INCR. COUNTER, MORE SCANS?
/YES.
/NO, WE'RE FINISHED.
/PREPARE TO NORMALIZE THE 24
/BIT STORAGE DOWN TO 12 BITS
/BY DIVIDING BY NO. OF SCANS

DVID,
/GET LOW ORDER BITS OF 1ST WORD

ISCR,
LOOK,
KSAM,
P27,

QAC
ADA 20
-400
DIS 20 1
QAC
ROL 1
QLZ 20
6000 .+3
BSE 20
1
PDP
CLL
TAD I YIND
DCA I ZIND
RAL
TAD I YIND
DCA I ZIND
ISE CNTR
JMP COSUM
CDF 0
ISE RUN
LAS
SPA CLA
CALL LOOK
ISE PTR
JMP AVLOP
INITAR
ENTR
FLOT RUN
FPUT TEMFP
FEXT
CDF 10
TAD I YIND
DCA 46
TAD I YIND
DCA 45
CDF 0
TAD P27
DCA 44
ENTR
FNOR
FDIV TEMFP
FADD HALF
FEXT
FIXT
CDF 10
DCA I ZIND
ISE CNTR
JMP DIVO
DISPLAY
SCR=1
LOOKER
SAM
P27,

```

/GET 12 BITS FROM MQ

```

2519 /CATACALI
2520 4343 0000
2521 4344 3376
2522 4345 6133
2523 4346 1374
2524 4347 6132
2525 4350 7200
2526 4351 1376
2527 4352 6133
2528 4353 6135
2529 4354 7200
2530 4355 1375
2531 4356 6134
2532 4357 7200
2533 4360 1743
2534 4361 6132
2535 4362 6131
2536 4363 7410
2537 4364 5367
2538 4365 4463
2539 4366 5362
2540 4367 6135
2541 4370 7300
2542 4371 6132
2543 4372 2343
2544 4373 5743
2545 4374 0100
2546 4375 0300
2547 4376 0000

```

```

SETCLK, 0
DCA CNTS
CLAB
TAD KK100
CLLR
CLA
TAD CNTS
CLAB
CLSA
CLA
TAD KK300
CLEN
CLA
TAD I SETCLK
CLLR
CLSK
SKP
JMP ,=3
CALL DISMOV
JMP ,=4
CLSA
CLA CLL
CLLR
ISE SETCLK
JMP I SETCLK
KK100, 100
KK300, 300
CNTS, 0

```

/REFRESH DISPLAY

2548	/CATACALI	4400	*4400		
2549	LOOKER,	4400	0000		
2550		4401	6032	KCC	
2551		4402	4433	HEDIT1	/NO. OF SCANS=
2552		4403	5223	HD9	
2553		4404	7125	STL IAC RAL	/*3
2554		4405	3062	DCA 62	
2555		4406	1117	TAD RUN /IS NO. OF COMPLETED SCANS	
2556		4407	4423	FLOAT	
2557		4410	1044	TAD 44	
2558		4411	3134	DCA MCTR	/KEEP THO'S EXPONENT
2559		4412	4406	CALL 6	
2560		4413	4432	CRFLD	
2561	STLOOP,	4414	4430	INITAR	/MCTR IS APPROX. 2'S DIVISOR
2562		4415	6031	KSP	/WANT TO CHANGE SCALE OR STOP?
2563		4416	7410	SKP	/NO
2564		4417	4305	JMS MULT	/YES, FIND OUT WHAT,
2565		4420	6211	CDF 10	
2566	LOOPIT,	4421	1411	TAD I YIND	/LOW ORDER
2567		4422	3155	DCA LOORD	
2568		4423	1411	TAD I YIND	/HIGH ORDER
2569		4424	6201	CDF 0	
2570		4425	3243	DCA LHORD	/*6
2571		4426	7127	STL IAC RTL	/GET EVERY 4TH VALUE
2572		4427	1011	TAD YIND	
2573		4430	3011	DCA YIND	
2574		4431	1134	TAD MCTR	
2575		4432	7550	SPA SNA	/MCTR>0, I.E. NEED DIVIDE?
2576		4433	5250	JMP NODIV	/NO
2577					
2578		4434	0303	AND MSK17	
2579	DVID,	4435	1304	TAD CSCR	
2580		4436	3244	DCA LHORD*1	
2581		4437	1195	TAD LOORD	/LOAD MQ
2582		4440	6141	LINC	
2583		4441	0354	SCR 14	
2584		4442	1020	LDA 20	
2585		4443	0000	0	/WILL CONTAIN SCR N
2586	LHORD,	4444	0000	0	
2587		4445	0005	GAC	
2588		4446	0002	PDP	
2589		4447	5261	JMP DSPIT*1	
2590	NODIV,	4450	7500	SMA	/MAGNIFY IT?
2591		4451	5260	JMP DSPIT	/DO NEITHER
2592		4452	3133	DCA LNCNR	/YES
2593		4453	1155	TAD LOORD	/VALUE IS ACTUALLY SINGLE PREC.
2594		4454	7104	CLL RAL	/MULT. BY 2
2595		4455	2133	ISE LNCNR	
2596		4456	5254	JMP *-2	/MULT. AGAIN
2597		4457	7410	SKP	

2598	4460	1155				
2599	4461	1105	DSPIT,	TAD LOORD		
2600	4462	3112		TAD YLIM		
2601	4463	4463		DCA YDIS		
2602	4464	4471		CALL DISMOV	/MOVE POINT ON SCOPE	
2603	4465	7107		CALL ADINX	/GET & INCR, X COORD	
2604	4466	1132		CLL IAC RTL		
2605	4467	7500		TAD CNTR		
2606	4470	5214		SMA	/MORE PTS?	
2607	4471	3132		JMP STLOOP	/NO	
2608	4472	5220		DCA CNTR	/YES	
2609				JMP LOOPIT		
2610						
2611	4473	4434	ENDCHK,	HEDIT2	/MORE SCANS?	
2612	4474	4435		ASK		
2613	4475	7650		SNA CLA		
2614	4476	5301		JMP ,#3	/YES	
2615	4477	7240		STA		
2616	4500	3131		DCA PCTR		
2617	4501	4432		CRLF0		
2618	4502	5600		JMP I LOOKER		
2619	4503	0017	MSK17,	17		
2620	4504	0337	CSCR,	SCR=1		
2621						
2622	4505	0000	MULT,	0		
2623	4506	6036		KRB		
2624	4507	1327		TAD MD		
2625	4510	7440		SEA	/DECREASE SIZE?	
2626	4511	2314		JMP ,#3	/NO	
2627	4512	2134		ISE MCTR		
2628	4513	5705		JMP I MULT		
2629	4514	1330		TAD MM		
2630	4515	7440		SEA MORE	/INCREASE SIZE?	
2631	4516	5323		JMP MORE	/NO	
2632	4517	7240		STA		
2633	4520	1134		TAD MCTR		
2634	4521	3134		DCA MCTR		
2635	4522	5705		JMP I MULT		
2636	4523	3331	MORE,	TAD MS		
2637	4524	7650		SNA CLA	/GET '8' FOR STOP?	
2638	4525	5273		JMP ENDCHK	/YES	
2639	4526	5705		JMP I MULT		
2640	4527	7474	MD,	=304		
2641	4530	7767	MM,	304-315		
2642	4531	7772	MS,	315-323		

	WIDTH,	Ø	ENTR	Ø	ENTR	Ø	ENTR	Ø	ENTR	Ø	ENTR
2643	4532	0000									
2644	4533	4407									
2645	4534	0004									
2646	4535	3473									
2647	4536	0000									
2648	4537	4424									
2649	4540	3550									
2650	4541	5732									
2651											
2652											
2653	4542	4536									
2654	4543	3651									
2655	4544	2101									
2656	4545	0177									
2657	4546	4523									
2658	4547	2151									
2659	4550	4122									
2660	4551	2651									
2661	4552	2414									
2662	4553	0477									
2663	4554	5172									
2664	4555	0651									
2665	4556	1506									
2666	4557	4225									
2667	4560	4443									
2668	4561	6050									
2669	4562	5126									
2670	4563	2651									
2671	4564	5122									
2672	4565	3651									
2673	4566	0000									
2674	4567	0000									

/INPUT AND SCALE WIDTH VALUE

I XMPY

DCA I PIND2
JMP I WIDTH

BTPBS,

ASPC,

```

2675
2676
2677
2678
2679
2680
2681
2682
2683
2684
2685
2686
2687
2688
2689
2690
2691
2692
2693
2694
2695
2696
2697
2698
2699
2700
2701
2702
2703
2704
2705
2706
2707
2708
2709
2710
2711
2712
2713
2714
2715
2716
2717
2718
2719
2720
2721
2722
2723
2724
2725
2726
2727
2728

4600
4601
4602
4603
4604
4605
4606
4607
4608
4609
4610
4611
4612
4613
4614
4615
4616
4617
4618
4619
4620
4621
4622
4623
4624
4625
4626
4627
4628
4629
4630
4631
4632
4633
4634
4635
4636
4637
4638
4639
4640
4641
4642
4643
4644
4645
4646
4647
4648
4649
4650
4651
4652
4653
4654
4655
4656
4657
4658
4659
4660
4661
4662

*4600
INITAR
TAD PLS5
TAD YIND
DCA YIND
TAD PLS5
TAD CNTR
DCA CNTR
TAD ZIND
DCA XIND
CDF 10
DRLOP1, TAD I ZIND
CIA
TAD I YIND
TAD SHF
DCA I XIND
ISZ CNTR
JMP DRLOP1
TAD XIND
DCA TEMP
TAD I TEMP
DCA I XIND
TAD XIND
DCA TEMP
STL IAC RAL
TAD TEMP
DCA TEMP1
CLL STA RTL
TAD NPTS
CIA
DCA CNTR
DRLOP2, TAD I TEMP
DCA I TEMP1
STA TEMP
DCA TEMP
STA TEMP1
DCA TEMP1
ISZ CNTR
JMP DRLOP2
ISZ TEMP
TAD I TEMP
TAD I TEMP1
ISZ TEMP
DCA I TEMP
DISPLAY
PLS5, 5
SHF, 764

/FORMS 5TH PT. DIFFERENCES
/PUT Y(I+5)-Y(I)+SHF INTO Y(I)
/ADD OFFSET FOR CENTERED DISPLAY
/PUT Y(N-5) INTO Y(N=4) AND Y(N-3)
/SET UP TO SHIFT ARRAY UP BY 3
/SUCH THAT FINAL ARRAY HAS VALUES
/Y(I)=Y(I+2)+Y(I-2)+SHF
/WHERE Y(1)=Y(2)=Y(3) AND
/Y(N-2)=Y(N-1)=Y(N)
/PUT Y(I) INTO Y(I+3)

```

2729	/CATACALI				
2730		4663	1074		
2731		4664	7110	SQUEEZE,	TAD NPTS
2732		4665	3074	CLL RAR	/COMPRESS ONE OR BOTH BUFFERS
2733		4666	7240	DCA NPTS	/BY AVERAGING ADJACENT PTS.
2734		4667	1144	STA	
2735		4670	7750	TAD BLOCK	
2736		4671	5274	SPA SNA CLA	/BLOCK=2 FOR DOUBLE SQUEEZE?
2737		4672	3144	JMP ,*3	/NO
2738		4673	7240	DCA BLOCK	/SQUEEZE BUFF. 1 FIRST
2739		4674	3135	STA	
2740		4675	4430	DCA TEMP	/=1 FOR DOUBLE SQUEEZE, 0 FOR SINGLE
2741		4676	6211	INITAR	
2742		4677	1411	CDF 10	
2743		4678	1411	TAD I YIND	
2744		4679	1411	TAD I YIND	
2745		4701	7110	CLL RAR	
2746		4702	7430	SZL	/ROUND OFF?
2747		4703	7001	IAC	/YES
2748		4704	3412	DCA I ZIND	
2749		4705	2132	ISE CNTR	
2750		4706	5277	JMP SOLP	
2751		4707	2135	ISE TEMP	/FINISHED?
2752		4710	5467	DISPLAY	/YES OR IS SINGLE SQUEEZE
2753		4711	7001	IAC	/NO, DO BUFF. 2
2754		4712	3144	DCA BLOCK	
2755		4713	5275	JMP SOLP=2	
2756					
2757		4714	0000	POSTN,	/GET POSITION AND SCALE IT
2758		4715	4407	ENTR	
2759		4716	0004	READ	
2760		4717	2501	F SUB I X1	
2761		4720	3473	FMPY I XMPY	
2762		4721	1123	FADD HALF	
2763		4722	0000	FEXT	
2764		4723	4424	FIXT	
2765		4724	3551	DCA I PIND3	
2766		4725	5714	JMP I POSTN	
2767					

2768							
2769	XFLIP,	4726	4430	INITAR			
2770		4727	1011	TAD YIND	/INVERT X AXIS		
2771		4730	1074	TAD NPTS	/Y(I)=Y(NPTS+1-I)		
2772		4731	3135	DCA TEMP			
2773		4732	1132	TAD CNTR			
2774		4733	7130	STL RAR			
2775		4734	3132	DCA CNTR			
2776		4735	6211	ODF 10			
2777	FLX,	4736	1411	TAD I YIND			
2778		4737	3136	DCA TEMP1			
2779		4740	1535	TAD I TEMP			
2780		4741	3412	DCA I ZIND			
2781		4742	1136	TAD TEMP1			
2782		4743	3535	DCA I TEMP			
2783		4744	7240	STA			
2784		4745	1135	TAD TEMP			
2785		4746	3135	DCA TEMP			
2786		4747	2132	ISE CNTR			
2787		4750	5336	JMP FLX			
2788		4751	5467	DISPLAY			
2789							
2790	COPY,	4752	4760	CALL SPCIN	/COPY DISP, CHAN INTO OTHER		
2791		4753	1411	TAD I YIND			
2792		4754	3413	DCA I AUTO			
2793		4755	2132	ISE CNTR			
2794		4756	5353	JMP , -3			
2795		4757	5467	DISPLAY			
2796	SPCIN,	4760	3014	SPINIT			
2797							
2798	MULP,	4761	4433	HEDIT1	/MIN=		
2799		4762	5157	HDS			
2800		4763	4425	GETNO			
2801		4764	4424	FIXT			
2802		4765	3141	DCA MIN			
2803		4766	4433	HEDIT1	/MPY=		
2804		4767	5165	HDS+6			
2805		4770	4407	ENTR			
2806		4771	0004	READ			
2807		4772	6174	FRUT YSCLFC			
2808		4773	0000	FEXT			
2809		4774	5775	JMP I r+1			
2810		4775	1535	SKL=1			

Address	Hex	Label	Description
2811	5000		*5000
2812			/DISPLAYS DECIMAL VALUES OF CURSORS
2813			0
2814	5001	CRDIS,	CLA
2815	5002		LINC
2816	5003		ESF
2817	5004		STC 1
2818	5005		LDF 2
2819	5006		POP
2820	5007		TAD YTP
2821	5010		DCA YCD
2822	5011		TAD CDTB
2823	5012		DCA AUTO
2824	5013		TAD NEG4
2825	5014		DCA TEM3
2826	5015		DCA TEMP1
2827	5016	LP1,	TAD NEG4
2828	5017		DCA MAX
2829	5020		TAD MTBF
2830	5021		DCA TEM2
2831	5022		TAD I AUTO
2832	5023	LP2,	DCA TEMP
2833	5024		TAD TEMP
2834	5025		TAD I TEMP2
2835	5026		ISE TEMP1
2836	5027		SMA
2837	5030		JMP LP2
2838	5031		STA
2839	5032		TAD TEMP1
2840	5033		CLL RAL
2841	5034		JMS CHRDIS
2842	5035		DCA TEMP1
2843	5036		ISE TEMP2
2844	5037		ISE MAX
2845	5040		JMP LP2+1
2846	5041		TAD KSPC
2847	5042		JMS CHRDIS
2848	5043		TAD KSPC
2849	5044		JMS CHRDIS
2850	5045		ISE TEM3
2851	5046		JMP LP1
2852	5047		JMP I CRDIS
2853	5050		340
2854	5051	YTP,	TPNT-1
2855	5052	CDTB,	ASPC-BTPBS
2856	5053	KSPC,	.+1
2857	5054	MTBF,	-1750
2858	5055		-144
2859	5056		-12
2860	5057		-1

/CATACALI
 5144 4024
 5145 1740
 5146 2313
 5147 1120
 5150 7500
 5151 1411
 5152 1605
 5153 4020
 5154 1417
 5155 2477
 5156 0000
 5157 3615
 5160 1116
 5161 7500
 5162 1501
 5163 3075
 5164 0000
 5165 1520
 5166 3175
 5167 0000
 5170 2014
 5171 1724
 5172 2405
 5173 2240
 5174 1706
 5175 0677
 5176 0000
 5177 0310
 5200 0116
 5201 1605
 5202 1475
 5203 4000
 5204 2305
 5205 0397
 5206 2303
 5207 0116
 5210 7500
 5211 2305
 5212 1623
 5213 0572
 5214 0000
 5215 0405
 5216 1401
 5217 3150
 5220 2305
 5221 0351
 5222 7500
 5223 1617
 5224 5640
 5225 2303
 5226 0116
 5227 2375
 5230 4000
 5231 1517
 5232 2205

2891

HD3, TEXT /LINE PLOT?/

2892

HD5, TEXT /MIN= /

2893

TEXT /MAX= /

2894

TEXT /MPY= /

2895

HD6, TEXT /PLOTTER OFF?/

2896

HD7, TEXT /CHANNEL= /

2897

HD8, TEXT \SEC/SCAN= \

2898

TEXT /SENSE1 /

2899

TEXT /DELAY(SEC)= /

2900

HD9, TEXT /NO. SCANS= /

2901

TEXT /MORE SCANS? /

/CATALOG:

2902 5233 4023
5234 0301
5235 1623
5236 7700
5237 2303 /SCAN INT'L?/
5240 0116
5241 4011
5242 1624
5243 4714
5244 7700
5245 0122 /AREA=/
5246 0501
5247 7500
5250 1617 /NO. PEAKS/
5251 5640
5252 2005
5253 0113
5254 2375
5259 0000
5256 3040 /X RNG, X1, INT.MPLR, BASE, LOR, FR.(0-1)1!/
5257 2216
5260 0734
5261 4030
5262 6134
5263 4011
5264 1624
5265 5615
5266 2014
5267 2294
5270 4002
5271 0123
5272 0554
5273 4014
5274 1722
5275 5640
5276 0622
5277 5650
5300 6055
5301 6151
5302 7236
5303 0000
5304 1007 /HGT,H=WIDTH,POS!/
5305 2454
5306 1055
5307 2711
5310 0424
5311 1054
5312 2017
5313 2372
5314 2600
5315 2013
5316 5420
5317 0154
5320 2614
5321 7200

2902

2903

2904

2905

2906

2907

HD15, TEXT

TEXT

HD20A, TEXT

HD20B, TEXT

TEXT

HD21, TEXT

5322 3603

5323 1717

5324 1440

5325 1124

5326 5600

5327 2324

5330 2211

5331 2040

5332 2005

5333 0113

5334 7700

5335 0625

5336 1414

5337 4002

5340 0123

5341 0577

5342 0000

5343 3602

5344 0104

5345 4030

5346 4020

5347 2423

5350 4136

5351 0000

5352 3631

5353 4022

5354 0116

5355 0705

5356 4046

5357 4015

5360 1116

5361 7200

5362 1503

5363 2450

5364 2305

5365 0351

5366 7500

5367 0214

5370 1361

5371 5440

5372 2554

5373 4015

5374 5060

5375 7527

5376 5172

5377 4000

2908

2909

2910

2911

2912

2913

2914

2915

TEXT / °COOL IT./

TEXT / STRIP PEAK?/

TEXT / FULL BASE?/

TEXT / °BAD X PTS!°/

TEXT / °Y RANGE & MINI/

TEXT / MCT(SEC)=/

TEXT / BLK1, U, M(0=H) /

2916	7600		
2917	7600	0000	
2918	7601	4433	
2919	7602	7640	
2920	7603	4435	
2921	7604	7650	
2922	7605	5210	
2923	7606	1237	
2924	7607	3634	
2925	7610	4434	
2926	7611	4435	
2927	7612	3632	
2928	7613	4434	
2929	7614	4435	
2930	7615	7650	
2931	7616	5221	
2932	7617	1235	
2933	7620	3636	
2934	7621	4432	
2935	7622	4432	
2936	7623	7240	
2937	7624	1200	
2938	7625	3237	
2939	7626	1233	
2940	7627	3637	
2941	7630	2200	
2942	7631	5600	
2943	7632	2235	
2944	7633	7410	
2945	7634	2505	
2946	7635	5242	
2947	7636	2417	
2948	7637	7000	
2949	7640	0102	
2950	7641	2317	
	7642	2220	
	7643	2411	
	7644	1716	
	7645	4047	
	7646	0411	
	7647	2023	
	7650	4777	
	7651	0000	
2951	7652	2711	
	7653	0424	
	7654	1023	
	7655	4005	
	7656	2125	
	7657	0114	
	7660	7700	
2952	7661	0325	
	7662	2417	
	7663	0606	
	7664	4001	

/WILL BE CLOBBED BY PARA'S
/IS USED ONLY FOR FIRST STARTUP
/WORKING W/ ABS. DIPS?

/NO, INSERT NOP
/EQUAL WIDTHS?

/CUTOFF AT 8*W?

/YES, LEAVE AS IS
/NO, FULL BORE CALC.

/THIS WILL PREVENT RECALL OF

/THIS ROUTINE AGAIN W/O RELOADING.

WDSWT, SKP /ABSORPTION 'DIPS'/?
SKIP, BSCHNG
INSCHN, SPCJ
SPECJ, YCLOC+1
CALCJ, NOP
NOOP, TEXT
DHD1.

TEXT /WIDTHS EQUAL?/

TEXT /CUTOFF AT 8*WIDTH?/

/CATACAL:

7665 2440
7666 7052
7667 2711
7670 0424
7671 1077
7672 0000

PAL10

V141

15-APR-70

1101

PAGE 65-1

2953 /THE FOLLOWING ARE A SET OF OVERLAYS
 2954 /FOR FLOATING POINT PKGS. #1,2, & 4
 2955 /WHICH ALLOWS INPUT FROM THE HIGH
 2956 /OR LOW SPEED READERS. SET IOSWT=1 TO USE
 2957 /THE HIGH SPEED READER OR PUNCH.
 2958 /HERE ALSO IS AN OVERLAY WHICH ALLOWS
 2959 /BLANKS TO FOLLOW A + OR - SIGN ON INPUT.
 2960 /PLUS SIGNS ARE DELETED FROM OUTPUT.
 2961

0055	*55		
0053	0		
0056	0	IOSWT,	
7142	*7142	INPUT,	
0000	0	TAD IOSWT	/THIS IS THE INPUT OVERLAY
1056		CLL RAR	/CHECK I/O SWITCH
7110		SEL CLA	
7145		JMP ,*3	/SETS LINK FOR HI SPD RDR.
5351		RDTTY	/USE HI SPD RDR.
4427		SKP	
7410		CALL HSR1	
4770		DCA 57	
3057		TAD 57	
7153		SNA	
1057		JMP INPUT*1	
7430		TAD MRBOUT	/OCTAL VALUE OF RESTRT=377.
5343		SEA CLA	
7167		JMP GOOD	
1367		XCPT=7037	
7640		TAD XCPT	/4241 PRINTS AS 241.
5364		CALL OUTPT	/PRINT 'I' IF RUBOUT.
7037		JMP I RESTRT	/NO
1237		TAD 57	
4766		JMP I INPUT	
5767		JMP 7344	
1057		RESTRT, 7401	
5742		HSR1, HSR	
7344			
7401			
6573	*6573		
0000	0	HSR,	
6573			
6011		RSE	
5374		JMP ,*1	
6016		RRB RFC	
5773		JMP I HSR	
7327	*7327		
0240	240		/REPLACE ASCII + WITH SPACE
0015	255-240		

3003						
3004	7004	*7004	/MODIFY 'DECONV' TO ACCEPT SPACES			
3005	3266	DCA 7066	/AFTER + OR = SIGN.			
3006	7005	JMS INPUT				
3007	7006	TAD 7136				
3008	7007	SNA 7450	/GET + SIGN?			
3009	7010	JMP SPCHK	/YES, CHECK FOR SPACES			
3010	7011	TAD 7135	/GET - SIGN?			
3011	7012	SA 7440	/NO			
3012	7013	JMP 7020	/SET SIGN SWITCH TO -1			
3013	7014	STA	/READ SPACES, IF ANY; RETURN .+3			
3014	7015	JMP I, +1				
3015	7016	CHKBLK				
3016						
3017	6766	*6766				
3018	3777	DCA I SIGN	/0 IF +1 -1 IF =.			
3019	6767	CALL INPT				
3020	6770	TAD HBLNK				
3021	6771	SA CLA				
3022	6772	JMP I RETDEC				
3023	6773	JMP I -4				
3024	6774	SPCHK +3				
3025	6775	*240				
3026	6776	INPT				
3027	6777	7065				
3028						
3029	5675	*5675	/REPLACE FNOR CALL WITH FLOAT			
3030	0567	INTFLT				
3031						
3032	7345	*7345	/SELECT OUTPUT DEVICE			
3033	4747	CALL I, +2				
3034	5744	JMP I, +2				
3035	7347	SELECT				
3036						
3037	7430	*7430	/CAN'T USE INTERPRETIVE FNOR ON INPUT			
3038	4775	CALL 7975				
3039	7431	ENTR				
3040	4407	*7575				
3041	7575	6600				
3042						
3043	6547	*6547	/INTERPRETIVE INSTR. JUMP TABLE			
3044	6000	6000				
3045	6550	READER				
3046	6551	7200				
3047	6552	HEDER2				
3048	6553	6600				
3049	6554	FLEXPO				

3050
3051
3052
3053
3054
3055
3056
3057
3058
3059
3060
3061
3062
3063
3064
3065
3066
3067
3068
3069
3070
3071
3072
3073
3074
3075
3076
3077
3078
3079
3080
3081
3082
3083
3084
3085
3086
3087
3088
3089
3090
3091

/CHANGES TO FLOATING POINT OUTPUT ROUTINE
/TO ALLOW OPTIONAL FIXED POINT OUTPUT
/IF (62)=0, OUTPUT FLOATING
/OTHERWISE C(62) = NUMBER OF DIGITS
/C(AC) = NUMBER OF DECIMAL PLACES
/C(15) LOST DURING EXECUTION

7200	*7200	
7201	0	DCA I SCAD /SAVE C(AC)
7202	FOUT,	TAD HORDER
7203		SPA CLA
7204		TAD SMINUS
7205		TAD SPLUS
7206		JMS ASCOUT /PRINT "SPACE" OR "M"
7207		TAD BFRST
7210		DCA 15 /INITIALIZE AUTO-INDEX
7211		JMP 7234 /CONVERT MANTISSA AND BUFFER THE DIGITS
7212	RETN,	TAD BEXP
7213		DCA 44 /STORE DECIMAL EXPONENT
7214		CALL FXAD /GO TO OUTPUT THE NUMBER
7215		JMP CRLF /FIXED POINT RETURN
7216		TAD CHE /FLOATING POINT RETURN
7217		JMS ASCOUT /PRINT "M"
7220		NOP
7221		NOP
7222		CALL EXPT /GO TO OUTPUT EXPONENT
7223	CRLF,	TAD SWIT1
7224		SNA CLA /PRINT CR=LF?
7225		JMP I FOUT /NO, EXIT
7226		TAD CARTN /YES
7227		JMS ASCOUT
7230		TAD LNFEED
7231		JMS ASCOUT
7232		JMP I FOUT /EXIT

3092
 3093
 3094
 3095
 3096
 3097
 3098
 3099
 3100
 3101
 3102
 3103
 3104
 3105
 3106
 3107
 3108
 3109
 3110
 3111
 3112
 3113
 3114
 3115
 3116
 3117
 3118
 3119
 3120
 3121
 3122
 3123
 3124
 3125
 3126
 3127
 3128

7375	*7375	
7375	SCAD,	SAC
7376	BFRST,	BUFFER=1
7377	FXAD,	FIX
7301	*7301	
7301	3415	DCA I 15
7305	*7305	
7305	3415	DCA I 15
7310	*7310	
7310	5212	JMP RETN
0045	ORDER=45	
7330	S MINUS=7330	
7327	S PLUS=7327	
7324	B EXP=7324	
7343	CHE=7343	
7337	EXPT=7337	
7344	ASCOUT=7344	
0055	SHYI=55	
7341	CARRTN=7341	
7342	LNFEED=7342	

3129
 3130
 3131
 3132
 3133
 3134
 3135
 3136
 3137
 3138
 3139
 3140
 3141
 3142
 3143
 3144
 3145
 3146
 3147
 3148
 3149
 3150
 3151
 3152
 3153
 3154
 3155
 3156
 3157
 3158
 3159
 3160
 3161
 3162
 3163
 3164
 3165
 3166
 3167
 3168
 3169
 3170
 3171
 3172
 3173
 3174
 3175
 3176
 3177

/IN THE COMMENTS BELOW:-
 / F = NUMBER OF DIGITS TO BE OUTPUT
 / D = NUMBER OF DECIMAL PLACES
 / E = DECIMAL EXPONENT
 / P = NUMBER OF PLACES REMAINING TO BE
 / PRINTED BEFORE DECIMAL POINT

*5400

5400	Ø	TAD 62	
5401	FIX,	SNA	/FLOATING OUTPUT?
5402		JMP R6	/YES, ROUND OFF TO 6 PLACES
5403		CIA	
5404		TAD SAC	
5405		SPA	/ F-D > Ø ?
5406		JMP 05	/YES
5407		CLA CMA	
5410		TAD 62	
5411		DCA SAC	/MAKE D = F-1
5412		CMA	
5413		TAD 44	
5414		SMA	/ F-D > E ?
5415		CLA	/NO, ROUND OFF TO F PLACES
5416		TAD 62	/YES
5417		SPA	/ D+E < Ø ?
5420		JMP PRNT=1	/YES, NO ROUNDING NEEDED; GO TO PRINT
5421		TAD M6	/NO, ROUND TO D+E PLACES;
5422		SMA	/TO A MAXIMUM OF 6 PLACES
5423		CLA K7	
5424	R6,	DCA TEMPX	/SAVE NUMBER+1 OF PLACES TO ROUND TO
5425		TAD BUFST	
5426		TAD TEMPX	/SET UP BUFFER ADDRESS AT WHICH
5427		DCA PLGE	/ROUNDING OFF SHOULD START
5430		TAD TEMPX	
5431		CIA TEMPX	/SET UP COUNT OF MAXIMUM NUMBER
5432		CLL IAC RTL	/OF CARRIES ALLOWABLE
5433		ISE I PLCE	/+4
5434		TAD I PLCE	/ADD 1 TO DIGIT AT CURRENT POSITION
5435	RET;	TAD M10	
5436		SPA CLA	/CARRY REQUIRED?
5437		JMP PRNT	/NO, GO TO OUTPUT
5440		DCA I PLCE	/YES, MAKE CURRENT DIGIT A ZERO
5441		ISE TEMPX	/BEGINNING OF BUFFER REACHED?
5442		JMP DECR	/NO, DECREMENT BUFFER ADDRESS AND REPEAT
5443			
5444			
5445			

3178	5446	2766	ISZ I PLCE	/YES, SET MANTISSA TO 0,1
3179	5447	2044	ISZ 44	/COMPENSATE BY INCREMENTING EXPONENT
3180	5450	7200	CLA	
3181	5451	1356	TAD BUFST	
3182	5452	3015	DCA 15	/SET AUTO-INDEX REGISTER
3183	5453	1062	TAD 62	
3184	5454	7450	SNA FLOP	/ F = 0 ?
3185	5455	5342	JMP FLOP	/YES, OUTPUT AS FLOATING NUMBER
3186	5456	7041	CIA FCOUNT	/NO,
3187	5457	3366	DCA FCOUNT	/SET UP COUNT TO PRINT F PLACES
3188	5460	1366	TAD FCOUNT	
3189	5461	1044	TAD 44	
3190	5462	7540	SMA SEA	/ E > F ?
3191	5463	5317	JMP XXX	/YES, PRINT X IS
3192	5464	1365	TAD SAC	
3193	5465	7500	SMA	/ E < F-D ?
3194	5466	7200	CLA	/NO, TAKE P = E
3195	5467	7041	CIA	/YES, TAKE P = F-D
3196	5470	1044	TAD 44	
3197	5471	7041	CIA	
3198	5472	3364	DCA TEMPX	/SET UP MINUS P
3199	5473	1361	TAD M7	
3200	5474	3365	DCA SCOUNT	/SET COUNT OF MAX, NO, OF SIG, FIGS,
3201	5475	1044	TAD 44	
3202	5476	1364	TAD TEMPX	
3203	5477	7650	SNA CLA	/ P = E ?
3204	5500	5330	JMP DIG	/YES, PRINT DIGIT
3205	5501	1364	TAD TEMPX	/NO,
3206	5502	7001	IAC	
3207	5503	7710	SPA CLA	/ P > 1 ?
3208	5504	1360	TAD SPACE	/YES, TAKE SPACE; OTHERWISE ZERO
3209	5505	4323	JMS OUTX	/PRINT CHARACTER
3210	5506	2364	ISE TEMPX	/P CHARACTERS PRINTED?
3211	5507	5275	JMP BACK	/NO
3212	5510	1362	TAD POINT	/YES,
3213	5511	4757	CALL OPUT	/PRINT DECIMAL POINT
3214	5512	5275	JMP BACK	
3215				
3216	5513	7040	CMA	
3217	5514	1366	TAD PLCE	
3218	5515	3366	DCA PLCE	
3219	5516	5236	JMP RET	
3220				

3221					
3222					
3223					
3224					
3225					
3226					
3227					
3228					
3229					
3230					
3231					
3232					
3233					
3234					
3235					
3236					
3237					
3238					
3239					
3240					
3241					
3242					
3243					
3244					
3245					
3246					
3247					
3248					
3249					
3250					
3251					
3252					
3253					
3254					
3255					
3256					
3257					
3258					
3259					
3260					
3261					
3262					
3263					
3264					
3265					
3266					
3267					
3268					
3269					
3270					
3271					
3272					

2663	V141	1101	5467	7200
A	CALSET	DISPLA	5467	FOUT
ADCON	CARRTN	DISPTS	3324	FPNORM
ADCONV	CCLDR	DIV1	0555	FPOUT
ADDMX	CDISPL	DIVD	4314	FTEM1
ADDTWO	CDTB	DLATM	0153	FTEM2
ADDUP	CHE	DLBUF	4000	FUDGE
ADINX	CHECK	DNE	1426	FUGCY
AGO	CHKBLK	DNPEN	1154	FXAD
ALLGS	CHLOP	DONE	0552	GASFR
ANINPT	CHRDIS	DPTR	3376	GCAL
AS260	CHTAB	DRLOP1	4612	GETNO
ASCOU1	CHX	DRLOP2	4640	GETOCT
ASK	CLARR	DSPT	4460	GETPTS
ASKER	CLKSET	DSPTS	0521	GETVAR
ASKIO	CLRR	DTEM	0355	GLFRAC
ASPC	CLSTRT	DUMPIT	2241	GOOD
AUTO	CLTM	DVID	4434	GOSUM
AUTO	CMPINT	ENDCHK	4473	GOTIT
AVGMR	CNTR	ENTR	4407	GSCAN
AVLOP	CNTS	EQUAL	0343	GTAD
AVSUM	COLON	ERRD	3251	GTCHR
AX1	COPY	ERRQ	2066	GTNPT
AX2	CORTAB	ESRNM	4152	GTP2
AX3	COYAG	EXPFC	0122	GTER
AXL	CRD	EXPON	0010	HALF
AXR	CRDIS	EXPT	7337	HD1
AY1	CRLF	EXTRAP	5074	HD15
AY2	CRLCD	EXTRP	3304	HD2
AY3	CRTLFD	F125	3125	HD20A
AYL	CSAM	F161	3130	HD20B
AYR	CSCR	FCOUNT	5566	HD21
B	CSET	FGASF	0100	HD23
BACK	CSXL	FIX	5400	HD25
BAD	CURSET	FIXER	0024	HD26
BEGCAL	CURSR	FIXR	0524	HD3
BEGDIS	CURC	FIXT	4424	HD5
BEXP	CXOB	FKS	4164	HD6
BFRST	CYCTM	FLAG2	2662	HD7
BLKIO	D	FLEXPO	2600	HD8
BLOCK	DAIYP	FLGASF	1775	HD9
BSCANG	DCI	FLIN	0606	HD10
BTBS	DCTAB	FLORF	1174	HDSP
BTPBS	DECR	FLOAT	4423	HEADR1
BUFI	DERIV	FLOATR	0556	HEADR2
BUFFER	DHD1	FLOP	5542	HEDE1
BUFST	DIALOG	FLORF	0077	HEDE2
C	DIG	FLOT	0023	HEDIT
C200	DIG	FLX	4736	HEDIT1
CALBEG	DIND1	FLY	1370	HEDIT2
CALBRT	DILST	FNISH	0323	HGT
CALCJ	DISCUR	FNOR	0007	HIGH
CALCY	DISM2	FNTOT	3422	HIGHT
CALPRT	DISHOV			

/CATACALI	PAL10	V141	15-APR-70	1101	PAGE	72-4	
HIORD	4253	LOOPIT	4420	MS	4531		PAR1 0146
HNDRO	1163	LOORD	0155	MS7	0345		PARDMP 2520
HOLD	0026	LORCLA	2200	MSEE	0336		PARPTR 0075
HORDER	0045	LORFR	0102	MSK17	4503		PCTR 0131
HSR	6573	LOW	1477	MTBF	5053		PEKDMP 2544
HSRI	7170	LP1	5016	MULT	4761		PENDN 0037
HUNDRO	0076	LP2	5023	MULT	4505		PENUP 0036
IN	5505	LRG	0544	NCNTR	0351		PIND1 0147
INCR	1504	LSCHR	0353	NCY	4175		PIND2 0190
INIT	0030	LSLOC	0352	NDIG	1431		PIND3 0151
INITAR	4430	M10	5555	NEGA	0126		PK100 2774
INITIZ	3756	M12	3135	NEGATE	0003		PK14 4146
INOCY	3746	M13	0554	NEGIT	2660		PKOMP 2242
INPT	6776	M256	3753	NEWMP	2176		PKPRNT 2590
INPUT	7142	M261	2070	NEWY	3035		PKS 0145
INSTRN	7634	M272	2071	NLIN	1432		PL13 3133
INSTRK	1007	M300	2067	NLOC	0225		PLCE 5566
INTEG	3400	M36	1774	NMCHK	2055		PLEXT 1707
INTFLT	0567	M6	5594	NO	1057		PLSS 4661
INTRP	0522	M7	5561	NOOIV	4450		PLTINC 1600
INTSP	2373	MALT	0523	NOOP	7637		PLTINT 1335
INVAL	2034	MARKR	0630	NORMAT	0762		PLTLOP 1342
IOASK	0064	MARKR	1064	NPR	1742		PLTHOV 1365
IOSWT	0056	MAX	0142	NPTS	0074		PLTMV 0660
ISCR	4337	MBLNK	6775	NUCALC	2354		PLTXYT 1065
ISDIG	1244	MCHAN	0120	NULINE	1406		PNPPLT 1364
ISXL	4150	MCTR	0134	NUMP	2353		POINT 5562
JMP10	2076	MD	4527	NUPEEK	2211		POS 2360
JMP10B	2075	MDQR	0375	NUPNT	2407		POSTN 4714
K1000	0130	MDLF	0376	NXPX	2500		PPSET 0070
K3100	1123	MEM	1061	NXPT	3333		PR1T 2346
K7	5553	MEN	0346	OCTIN	0272		PRNT 5451
KK100	4374	MES	0347	OCTOUT	0252		PRIT 1767
KK300	4375	MGEE	1060	OFFSET	0111		PSTAB 2355
KSAM	4341	MIN	0141	OLDX	1715		PT1 3432
KSPC	5052	MIN1	0761	OLDY	1716		PT2 3445
LEADER	1200	MIN3	2351	ONE	2702		PTABST 7600
LEDER	1434	MIN5	3136	OPUT	5557		PTINT 3511
LEFY	3522	MK7	3751	ORGN	1050		PTPLT 1063
LG2E	2677	MM	4530	OUT	0031		PU 0001
LGFRAC	2352	MN7	0341	OUTCHR	0627		PX 4000
LHORD	4443	MODCR	0366	OUTPUT	7166		PY 2000
LNCTR	0133	MODE	0143	OUTPUT	0005		QUERY 0035
LNFEED	7342	MODTTI	0356	OUTX	5523		GUES 1055
LNUM	1211	MOH	1062	P123	2314		GUEST 0390
LOADX	2516	MORE	4523	P13	0566		R6 5425
LOKIN	0633	MPYR	0072	P236	1773		RDYTY 4427
LOOK	4340	MPYRI	1171	P256	3752		RDY 3523
LOOKFR	4400	MRBKS	3737	P27	4342		READ 0004
LOOP4	1462	MRBOUT	7167	P336	1772		READER 0600
LOOP6	1410	MRBT	0340	P6	3134		READY 0025
LOOP9	3046	MRRED	2025	P7M0	0342		RECALC 2161

CATALOG	PAL10	V141	15-APR=70	1101	PAGE 72=5
REMOV	3275	STRPK	3262	XYSCAL	1265
RESET	1134	STRIT	0200	YCALC	2400
RESTR	7167	STYN	0441	YCD	5065
RET	5436	SUBRT	2361	YCLC	2416
RETEC	6774	SWAPBL	3000	YDIS	0112
RETN	7212	SWIT1	0055	YES	1056
RH77	0127	SWLOOP	3003	YFLIP	1366
RUBIT	2072	TAGCO	3137	YIND	0011
RUN	0117	TAP1	3661	YLM	0105
SAC	5565	TAPHAN	3613	YMAX	1044
SBPTR	3671	TELRED	0027	YMIN	0166
SCAD	7375	TEM2	0137	YONE	0110
SCALY	1453	TEM3	0140	YRNG	0107
SCANIT	1662	TEMP	0160	YSCLFC	0174
SCASM	3545	TEMPF	0135	YSCVAL	1556
SCOUNT	5565	TEMP1	0136	YSTEP	3311
SCPINT	0426	TEMPX	5564	YSVAL	1324
SCPLOP	0454	THD1	5367	YTP	5050
SELECT	0607	TMCTR	0157	ZIND	0012
SERVIS	2000	TMXP	0156		
SET	1122	TPNT	3305		
SETCLK	4343	TTOUT	0621		
SETIT	0257	TXSM	0115		
SETLY	3510	TYPCH	1753		
SETPP	1717	UPPEN	1144		
SETSTR	3200	VALU	0354		
SHE	4662	VARGET	2715		
SIGN	6777	WDSWT	7632		
SINE	2661	WID	2397		
SKIP	7633	WIDONE	2236		
SKL	1536	WIDSWT	2235		
SMINUS	7330	WIDTH	4532		
SMOT11	3025	WRTP	3711		
SPACE	1433	X1	0101		
SPACE	5560	X11	2751		
SPCHK	7015	XCPT	7037		
SPCIN	4760	XDIS	0005		
SPCJ	5242	XFLIP	4726		
SPECJ	7635	XIND	0010		
SPINT	3014	XLIM	0104		
SPLUS	7327	XLOAD	2705		
SQUEZE	4663	XMAX	1040		
SQLP	4677	XMIN	0163		
SQROOT	0002	XMPY	0073		
SQUARE	0001	XMPY1	1166		
STALL	1103	XNC	0113		
START	0403	XOBL	3707		
STBLK	3712	XRNG	0106		
STLOOP	4414	XSCLFC	0171		
STRBS	3267	XSET	0066		
STRCL	2442	XSETUP	1213		
STRIPR	3254	XXX	5517		

ERRORS DETECTED: 0

LINKS GENERATED: 0

RUN-TIME: 29 SECONDS

3K CORE USED

