

MAXTOR

XT - 3000

PRODUCT SPECIFICATION

&

OEM MANUAL

PRELIMINARY DOCUMENT -- SUBJECT TO CHANGE WITHOUT NOTICE

```
*****  
* USER NOTE: Two additional documents may be useful in *  
* using this manual and the referenced *  
* hardware. The Small Computer Systems *  
* Interface (SCSI) is explicitly defined *  
* in the American National Standards *  
* Committee X3T9.2 specification, *  
* Revision 17-B, dated December 16, 1985. *  
* The Common Command Set is detailed in *  
* an associated document designated as *  
* X3T9.2/85-52: Addendum 4B to Revision *  
* Four, dated June 23, 1986. *  
*****
```

MAXTOR CORPORATION
211 River Oaks Parkway
San Jose, CA 95134

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

REVISION RECORD

Revision	Date Published	Description of Changes
A	3/12/86	Preliminary Issue/CCS Rev 4.A
B	8/29/86	Miscellaneous corrections and updates
C	4/1/87	Addition of XT-3380, miscellaneous corrections and updates. CCS Rev. 4.B

Document No.: 1011005

Address comments concerning this manual to:

MAXTOR CORPORATION
150 River Oaks Parkway
San Jose, California 95134
Telephone: (408) 942-1700
Telex: 171074
FAX: (408) 433-0457

The contents of this manual may
be revised without prior notice.

c Copyright 1986 by Maxtor Incorporated

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

TABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE</u>
1.0	INTRODUCTION 1
1.1	General Description 1
1.1.1	Key XT-3000 Drive Features 1
1.1.2	Key XT-3000 Controller Features 3
1.1.3	Command Set Summary 6
1.2	Specification Summary 7
1.2.1	Physical Specifications 7
1.2.2	Performance Specifications 8
1.2.3	Functional Specifications 9
1.2.4	Reliability Specifications 9
1.2.5	Error Rates..... 9
2.0	FUNCTIONAL CHARACTERISTICS 10
2.1	General Theory of Operation 10
2.2	Read/Write and SCSI Controller Electronics 10
2.3	Drive Mechanism 11
2.4	Air Filtration System 11
2.5	Positioning Mechanism 12
2.6	Read/Write Heads and Disks 13
2.7	SCSI Host Interface 13
3.0	XT-3000 PCB JUMPER OPTIONS 15
3.1	SCSI Controller ID Jumpers 15
3.2	XT-3170 and XT-3280 Other Jumpers 16
3.3	XT-3380 Other Jumpers 17
4.0	TRACK AND SECTOR FORMAT 22
4.1	Track Format 22
5.0	FUNCTIONAL DESCRIPTION 24
5.1	Power Sequencing 24
5.2	Electrical Interface 24
5.3	Interface Termination 25
5.4	Signal Interface 26
5.5	Signal Definitions 26

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

SECTION	PAGE
6.0	SCSI INTERFACE PROTOCOL 29
6.1	Bus Free Phase 30
6.2	Arbitration Phase 30
6.3	Selection Phase 30
6.4	Reselection Phase 31
6.5	Command Phase 33
6.6	Data In or Out Phases 33
6.7	Status Phase 33
6.8	Message Phases 35
6.8.1	Message In Phase 35
6.8.2	Message Out Phase 35
6.8.3	Description of Messages 35
6.8.3.1	Command Complete 36
6.8.3.2	Save Data Pointer 36
6.8.3.3	Restore Pointers 36
6.8.3.4	Disconnect 37
6.8.3.5	Abort 37
6.8.3.6	Message Reject 37
6.8.3.7	No Operation 37
6.8.3.8	Message Parity Error 37
6.8.3.9	Linked Command Complete 38
6.8.3.10	Linked Command Complete with Flag 38
6.8.3.11	Bus Device Reset 38
6.8.3.12	Identify 38
6.9	SCSI Bus Error Handling 39
6.9.1	Identify Message Parity Error 39
6.9.2	Message Out Phase Parity Error 39
6.9.3	Command or Data Out Phase Parity Error 39
7.0	POWER UP OR BUS RESET 40
7.1	Self Test Failure Status 41
7.2	Self Configuration 41
7.3	Unit Attention Condition 42
8.0	XT-3000 BUFFERING SCHEME 43
8.1	Theory of Operation 43
8.2	Buffer Use Example 43

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

SECTION	PAGE
9.0	SCSI COMMANDS/DEFINITIONS/OPERATIONS..... 45
9.1	Status and Parameter Information Returned to Host by Drive . 45
9.2	Command Descriptor Block (CDB) 45
9.2.1	Reserved 45
9.2.2	Operation Code 46
9.2.3	Logical Unit Number (LUN) 47
9.2.4	Logical Block Address (LBA) 48
9.2.5	Transfer Length 48
9.2.6	Control Byte 49
9.3	Command Processing 50
10.0	XT-3000 COMMAND SET 51
10.1	Test Unit Ready Command 52
10.2	Rezero Unit Command 53
10.3	Request Sense Command 53
10.3.1	Extended Sense Data 54
10.4	Format Unit Command 59
10.5	Reassign Blocks Command 69
10.6	Read Command 71
10.7	Write Command 72
10.8	Seek Command 73
10.9	Inquiry Command 74
10.10	Mode Select Command 77
10.10.1	Description of Pages 81
10.10.2	Handling of Defect Fields 88
10.10.3	Track and Sector Format Field 89
10.10.4	Drive Type Field 89
10.11	Reserve Command 91
10.12	Release Command 92
10.13	Mode Sense Command 93
10.13.1	Page Description 98
10.14	Start/Stop Unit Command 104
10.15	Send Diagnostic Command 105
11.0	GROUP 1 COMMANDS 106
11.1	Read Capacity Command 107
11.2	Read Extended Command 109
11.3	Write Extended Command 110
11.4	Seek Extended Command 111
11.5	Write and Verify Command 112
11.6	Verify Command 113
11.7	Read Defect Data Command 114
11.8	Write Buffer Command 117
11.9	Read Buffer Command 119

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

<u>SECTION</u>		<u>PAGE</u>
12.0	GROUP 7 COMMANDS	121
12.1	Read Long Command	122
12.2	Write Long Command	123
13.0	PHYSICAL INTERFACE	124
13.1	J1/P1 Connector	125
13.2	J2/P2 Connector	126
14.0	PHYSICAL SPECIFICATIONS	127
14.1	Mounting Orientation	127
14.2	Mounting Holes	127
14.3	Cooling Requirements	127
14.4	Physical Dimensions	127
14.5	Shipping Requirements	127
	Appendix A: SCSI Command Examples	130

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

FIGURES

<u>Figure</u>		<u>Page</u>
2-1	XT-3000 Air Filtration System	11
2-2	XT-3000 Head Positioning	12
2-3	Single Host System	13
2-4	Multiple Master Configuration	14
3-1	SCSI Controller ID Jumpers	15
3-2	Sequential Motor Delay Table	17
3-3	XT-3170/3280 Drive Jumper Options Non-Shrouded Connector.....	19
3-4	XT-3170/3280 Drive Jumper Options Shrouded Connector.....	20
3-5	XT-3380 Drive Jumper Options	21
4-1	XT-3000 Track Format	22
4-2	3170/3280 Track and Sector Format	23
4-3	3380 Track and Sector Format	23
5-1	Power-Up Sequence	24
5-2	SCSI Bus Terminations	25
6-1	Information Transfer Phases	29
6-2	Signal Sequence Chart for SCSI Phases	32
6-3	Status Byte Code Bit Values	34
6-4	XT-3000 Message Codes	36
6-5	Identify Message Codes	38
7-1	Power Up/Bus Reset Test Table	40
7-2	Self Test Failure Codes	41
9-1	Operation Code	46
9-2	Typical CDB for Six-byte Commands	46
9-3	Typical CDB for Ten-byte Commands	47

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Figure		Page
9-4	Control Byte	49
10-1	Group 0 Commands	51
10-2	Test Unit Ready Command	52
10-3	Rezero Unit Command	53
10-4	Request Sense Command	53
10-5	Extended Sense Data Format	55
10-6	Sense Key Description	56
10-7	Additional Sense Codes in Hex	57
10-8	Format Unit Command	59
10-9	Defect List - Bytes from Index Format	61
10-10	Format Options	67
10-11	Defect Mapping Example	68
10-12	Reassign Blocks Command	69
10-13	Reassign Blocks Defect List	70
10-14	Read Command	71
10-15	Write Command	72
10-16	Seek Command	73
10-17	Inquiry Command	74
10-18	Inquiry Data	75
10-19	Peripheral Device Type	75
10-20	Mode Select Command	77
10-21	Mode Select Parameter List	79
10-22	Media Type	80
10-23	Density Code	80
10-24	Page Codes	81

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

<u>Figure</u>	<u>Page</u>
10-25 Error Recovery Parameters	81
10-26 Format Parameter Page Code 3H (Bytes 0 through 19)	86
10-27 Format Parameter Page Code 3H (Bytes 20 through 23)	87
10-28 Disk Drive Geometry Parameters	90
10-29 Reserve Command	91
10-30 Release Command	92
10-31 Mode Sense Command	93
10-32 Mode Sense Data	96
10-33 Page Codes	99
10-34 Error Recovery Parameters	100
10-35 Format Parameters Page Code 3	101
10-36 Page Code 3 Values	102
10-37 Disk Drive Geometry Parameters	103
10-38 Start/Stop Unit Command	104
10-39 Send Diagnostic Command	105
11-1 Group 1. Commands	106
11-2 Read Capacity Command	107
11-3 Read Capacity Data	108
11-4 Read Extended Command	109
11-5 Write Extended Command	110
11-6 Seek Extended Command	111
11-7 Write and Verify Command	112
11-8 Verify Command	113

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

<u>Figure</u>	<u>Page</u>
11-9	Read Defect Data Command114
11-10	Read Defect Data Byte 2 Values114
11-11	Data Returned in Read Defect Command116
11-12	Write Buffer Command117
11-13	Write Buffer Header118
11-14	Read Buffer Command119
11-15	Read Buffer Header120
12-1	Group 7 Commands121
12-2	Read Long Command122
12-3	Write Long Command123
13-1	Interface Connector Physical Location124
13-2	XT-3000 SCSI Cable Connector125
13-3	J2 Connector (Drive PCB Solder Side)126
13-4	Motor Start Current Requirements126
13-5	DC Power Requirements126
14-1	XT-3000 Mechanical Outline and Mounting Hole Locations128
14-2	XT-3000 Mechanical Outline (Bottom and Side Views)129

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

1.0 INTRODUCTION

1.1 General Description

The XT-3000TM disk drives are low cost, high capacity, high performance random access storage devices utilizing non-removable 5 1/4-inch disks as storage media. Each disk surface employs one moveable head to access the data tracks. The total unformatted capacity of these disk drives can be 170, 280 or 380 MB.

The XT-3000 drive family offers the Small Computer System Interface (SCSI) embedded in the drive electronics. Some of the resulting benefits of having an integrated controller include the elimination of a separate controller PCB, reduction in the number of associated cables and elimination of the controller-specific power supply.

Low cost and high performance are achieved through the use of a rotary voice coil actuator and a closed loop servo system utilizing a dedicated servo surface. The innovative MAXTORQTM rotary voice coil actuator provides performance usually achieved only with larger sized, higher powered linear actuators. The closed loop servo system and dedicated servo surface combine to allow state-of-the-art recording densities (1070 tpi, 20,975 bpi) in a 5 1/4-inch package.

High capacity is achieved by a balanced combination of data encoding, high areal density and high density packaging techniques. Maxtor's advanced MAXPAKTM electronic packaging techniques utilize miniature, surface mount devices to allow all electronic circuitry to fit on one printed circuit board. Advanced 3380 Whitney-type head flexures and sliders allow closer spacing of disks, allowing a higher number of disks in a 5 1/4-inch package. Maxtor's unique integrated drive motor/spindle design allows a deeper deck casting than conventional designs, thus permitting more disks to be used.

The XT-3000 electrical interface is compatible with the industry standard SCSI peripherals. The XT-3000 size and mounting is also identical to the industry standard 5 1/4-inch minifloppy and Winchester disk drives, and uses the same DC voltages and connectors. No AC power is required.

1.1.1 Key XT-3000 Drive Features:

- * Storage capacity of 170 to 380 megabytes unformatted
- * Same physical size and mounting as standard 5 1/4-inch Winchester disk drives.
- * Power supply requirements compatible with industry standard 5 1/4-inch fixed disk drives
- * Imbedded SCSI controller supporting the industry-standard Common Command Set, full message protocol including Disconnect and sophisticated Programmable Defect Management. Controlled by a separate microprocessor.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

- * No AC voltage required.
- * Rotary voice coil and closed loop servo system for fast, accurate head positioning.
- * Separate microprocessor controlled servo for fast access times, high reliability, and high density functional packaging.
- * Thin film metallic media for higher bit density and resolution plus improved durability.
- * Single printed circuit board for improved reliability.
- * Automatic actuator lock, with dedicated head landing and shipping zone.
- * Brushless DC spindle motor inside hub.
- * Separate microprocessor controlled spindle motor for precision speed control ($\pm 0.1\%$) under all load conditions.
- * Dynamic braking during power-down cycle.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

1.1.2 Key XT-3000 Controller Features

This section contains a summary listing of the standard features for the controller functions of the XT-3000. Each feature has a brief description. Sections 4.1 through 13.2 of this manual contain more detailed information.

<u>FEATURE</u>	<u>DESCRIPTION</u>
BUS TRANSFER RATE	The XT-3000 operates up to 1.5 MBytes per second in asynchronous mode.
DISCONNECT/ RECONNECT SUPPORT	The XT-3000 supports Disconnect/Reconnect to enhance total system performance for multi-tasking operations.
DEVICE INDEPENDENCE AND AUTO CONFIGURATION SUPPORT	The XT-3000 memorizes Host selected parameters, simplifying Host software by providing device independence and auto configure at each Power On sequence.
SCSI BUS PARITY	Jumper selectable. On all data transfers, odd parity is generated and, unless disabled, is checked.
AUTOMATIC LOGICAL UNIT IDENTIFICATION	The XT-3000 defaults to LUN 0.
MULTIPLE DRIVE SUPPORT	The SCSI bus allows up to eight targets and hosts in any combination to be attached on the bus. All devices are daisy-chain connected with a 50-pin cable. The XT-3000 is selectable to be one of the eight devices with the selection address of 0 to 7.
DEFECT MANAGEMENT	The XT-3000 may be programmed by the Host for sector level defect management on a track or cylinder zone basis (cylinder zoning can yield a significant increase in capacity to the user). A list of all media defects found at the factory (P list) are recorded on to the drive for automatic mapping at format time, thus eliminating the need for "manual" entry.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

COMMAND LINKING	Upon successful completion of a command, the XT-3000 allows chaining of commands, which prevents the entering of a new Selection phase.
ERROR RETRY	The XT-3000 does automatic retry on errors (unless disabled by the host).
ERROR REPORTING	The XT-3000 uses Extended Sense error reporting with additional sense codes to further define errors. The host may also define error recovery parameters and reporting via a Mode Select command.
PROGRAMMABLE PARAMETER SUPPORT	The XT-3000 uses the Mode Sense command to specify which parameters the host can modify. This allows the host to modify the system parameters using the Mode Select command.
DATA/COMMAND BUFFER	The XT-3380 is equipped with a 32 KByte buffer. The XT-3170 and 3280 are each equipped with an 8 KByte Ring Buffer (wrap around). The buffer is multi-ported, thus transfers between the Host and buffer and the drive and buffer occur simultaneously.
CONTINUOUS TRANSFER RATE	7.5 Megabits/Second (3170/3280) and 10.0 Megabits/second for the 3380.
SYSTEM PERFORMANCE CONSIDERATIONS	The XT-3000 disconnects during implied seeks to maximize the system performance. It uses the ring buffer to allow consecutive sector and track transfers without missing a revolution.
ONE TO ONE SECTOR INTERLEAVING	One to One interleaving is supported.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

BLOCK OR SECTOR SIZE	The XT-3000 supports multiple sectors sizes such as 256, 512, 1024 and 2048 byte sectors which are programmable through the interface.
IMPLIED SEEKS	Supported by the XT-3000 with all data transfer commands
LOGICAL BLOCK ADDRESSING	All data transfer commands.
AUTOMATIC HEAD OR CYLINDER SWITCHING	Supported on multi-block data transfers.
MULTI-BLOCK TRANSFER	Up to 65,535 blocks per extended command.
OPTIONAL SECTOR LEVEL DEFECT HANDLING	<p>During the FORMAT operation, the XT-3000 may map out all bad sectors unless disabled by the host. The following options are included:</p> <ul style="list-style-type: none">- Uses the manufacturer defect list.- Accepts a list of defects from the host.- Does a certify of the format and maps out any bad sectors found during the format.- Maintains permanent and dynamic lists of all defects on the disk. The host can read these lists using the Read Defect Data command. The host can select to have the disk use these lists and/or delete the dynamic list during a format.- Allows the host to determine the number of spare sectors per zone. The zones are variable and can be one track or one cylinder.
ERROR CORRECTION CODES (ECC)	<p>The XT-3000 uses powerful, computer generated polynomial on the data to check transmitted accuracy.</p> <p>Several options are available and include:</p> <ul style="list-style-type: none">- Halt or don't halt on correctable ECC error- Report or don't report correctable ECC errors- Retry either before or after ECC.- Number of retries is programmable by the host. <p>Detection capability: 27 bits</p> <p>Correction capability: 11 bits</p>

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

1.1.3 Command Set Summary Supported by XT-3000

COMMAND	CODE (HEX)	CMD LENGTH (BYTES)	*
GROUP 0			
TEST UNIT READY	00	6 -----	R
REZERO UNIT (RECAL)	01	6 -----	O
REQUEST SENSE (EXTENDED)	03	6 -----	R
FORMAT UNIT (WITH OR WITHOUT DEFECT MAPPING)	04	6 -----	R
REASSIGN BLOCKS	07	6 -----	O
READ	08	6 -----	R
WRITE	0A	6 -----	R
SEEK	0B	6 -----	O
INQUIRY	12	6 -----	R
MODE SELECT	15	6 -----	O
RESERVE UNIT	16	6 -----	R
RELEASE UNIT	17	6 -----	R
MODE SENSE	1A	6 -----	O
START/STOP UNIT	1B	6 -----	O
SEND DIAGNOSTIC	1D	6 -----	R
GROUP 1			
READ CAPACITY	25	10 -----	R
READ	28	10 -----	R
WRITE	2A	10 -----	R
SEEK	2B	10 -----	O
WRITE & VERIFY	2E	10 -----	O
VERIFY	2F	10 -----	O
READ DEFECT DATA	37	10 -----	O
WRITE DATA BUFFER	3B	10 -----	O
READ DATA BUFFER	3C	10 -----	O
GROUP 7			
READ LONG	E8	10 -----	O
WRITE LONG	EA	10 -----	O

*Required (R), Optional (O)
as defined by Common Command Set Draft Proposal, Revision 4B

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

1.2 SPECIFICATION SUMMARY

1.2.1 Physical Specifications

Environmental Limits

Ambient Temperature

Operating: 50° to 113° F (10° to 45° C)

Non-Operating: -40° to 140° F (-40° to 60° C)

Maximum Temperature Gradient

Operating or Non-operating:

18° F/hr. (10° C/hr)

below condensation

Relative Humidity: 8 to 95%

Maximum Elevation

Operating: 10,000 ft.

Non-Operating: -1000 ft. to 40,000 ft.

Shock (inputs to the frame of drive)

Operating shock (all axes): 11 ms. pulsewidth (1/2 sine).....2G

Non-operating shock (all axes): 11 ms. pulsewidth (1/2 sine) 20G

Vibration (inputs to frame of drive)

Operating vibration (all axes)

5-25 hz, 0.006 inches p-p

25-500 hz, 0.2G peak acceleration

Non-operating vibration (all axes)

5-31 hz, 0.02 inches p-p

31-500 hz, 1G peak acceleration

DC Power Requirements

+12V ± 5%, 1.57A typical, 4.5A max. (at power on)

+5V ± 5%, 1.7A typical, 1.9A maximum

+5V Maximum Ripple = 50mV P-P

+12V Maximum Ripple = 120mV P-P

Mechanical Dimensions

Height 3.25 inches

Width 5.75 inches

Depth 8.20 inches

Weight 6.3 lbs (2.8kg)

Shipping Weight 8.0 lbs (3.6kg)

Heat Dissipation

30 watts typical, 35 watts maximum

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

1.2.2 Performance Specifications XT-3170 XT-3280 XT-3380

Capacity, unformatted

Per drive (MB)	172.12	286.86	383.72
Per surface (MB)	19.12	19.12	25.58
Per track (Bytes)	15,624	15,624	20,900

Formatted Capacity, 256 byte sectors

Per drive (MB)	129.72	216.15	277.31
Per surface (MB)	14.41	14.41	18.49
Per track (Bytes)	11,776	11,776	15,104
Per sector (Bytes)	256	256	256
Sector/track	46	46	59

Formatted Capacity, 512 byte sectors

Per drive (MB)	146.64	244.41	319.61
Per surface (MB)	16.29	16.29	21.31
Per track (Bytes)	13,312	13,312	17,408
Per sector (Bytes)	512	512	512
Sectors/track	26	26	34

Formatted Capacity, 1024 byte sectors

Per drive (MB)	157.93	263.71	338.41
Per surface (MB)	17.55	17.55	22.56
Per track (Bytes)	14,336	14,336	18,432
Per sector (Bytes)	1024	1024	1024
Sector/track	14	14	18

Formatted Capacity, 2048 byte sectors

Per drive (MB)	157.93	263.71	338.41
Per surface (MB)	17.55	17.55	22.56
Per track (Bytes)	14,336	14,336	18,432
Per sector (Bytes)	2048	2048	2048
Sector/track	7	7	9

SCSI Bus Transfer Rate, MBytes/sec -----1.5-----

Seek Time, msec, maximum

Average*	-----30-----	-----27---
Track-to-track*	-----4-----	-----4---
Maximum*	-----54-----	-----52---

* Includes settling

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

1.2.3	Functional Specifications	<u>XT-3170/3280</u>	<u>XT-3380</u>
	Rotational Speed (rpm) *	-----3600-----	----3600-----
	Recording density (bpi)	---16,732-----	--20,975-----
	Flux Density (fci)	---11,155-----	--13,970-----
	Track density	-----1070-----	---1,070-----
	Cylinders	-----1224-----	---1,224-----
	Tracks	11,016 18,360	18,360
	Data heads	9 15	15
	Servo heads	1 1	1
	Disks	5 8	8

* Accurate to +0, -0.2%

1.2.4 Reliability Specifications:

MTBF 20,000 POH, typical usage
 PM Not required
 MTTR 30 minutes
 Component Design Life 5 years

1.2.5 Error Rates at the SCSI Interface

Soft read errorsless than 10 per 10¹¹ bits read
 Hard read errorsless than 10 per 10¹³ bits read
 Seek errorsless than 10 per 10⁷ seeks
 Error Correction Capability11 bits
 Error Detection Capability27 bits

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

2.0 FUNCTIONAL CHARACTERISTICS

2.1 General Theory of Operation

The XT-3000 disk drive consists of read/write, control and Small Computer Systems Interface (SCSI) interface electronics, read/write heads, a servo head, a head positioning actuator, media, and an air filtration system. The components perform the following functions:

1. Interpret and generate control signals.
2. Position the heads over the desired track.
3. Read and write data.
4. Provide automatic error correction to the data.
5. Provide a contamination free environment.

2.2 Read/Write Control and SCSI Controller Electronics

All the drive and controller electronics are packaged on a single printed circuit board. This board, which includes three microprocessors, performs both traditional drive and controller functions:

Drive Functions

1. Reading/writing of data
2. Index detection
3. Head positioning
4. Head selection
5. Drive selection
6. Fault detection
7. Voice coil actuator drive circuitry
8. Track 0 detection
9. Recalibration to track 0 on power-up
10. Track position counter
11. Power and speed control for spindle drive motor
12. Braking for the spindle drive motor
13. Drive up-to-speed indication
14. Reduced write current on the inner tracks
15. Monitoring for write fault conditions
16. Control of all internal timing
17. Generation of seek complete signals

Controller Functions

1. Data separation
2. Error correction and reporting
3. SCSI bus disconnect/reconnect functions
4. SCSI bus arbitration
5. Defect handling
6. Information transfer management
7. Automatic retries
8. Data Buffering
9. Command Linking

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

2.3 Drive Mechanism

A brushless DC drive motor contained within the spindle hub rotates the spindle at 3600 rpm. The spindle is direct driven with no belt or pulleys being used. The motor and spindle are dynamically balanced to insure a low vibration level. Dynamic braking is used to quickly stop the spindle motor when power is removed. The head/disk assembly is shock-mounted to minimize transmission of vibration through the chassis or frame.

2.4 Air Filtration System (Figure 2-1)

The disks and read/write heads are assembled in an ultra clean-air environment and then sealed within the module. The module contains an internal absolute filter mounted inside the casting to provide constant internal air filtration. A second filter, located on the enclosure top cover, permits pressure equalization between internal air and ambient air.

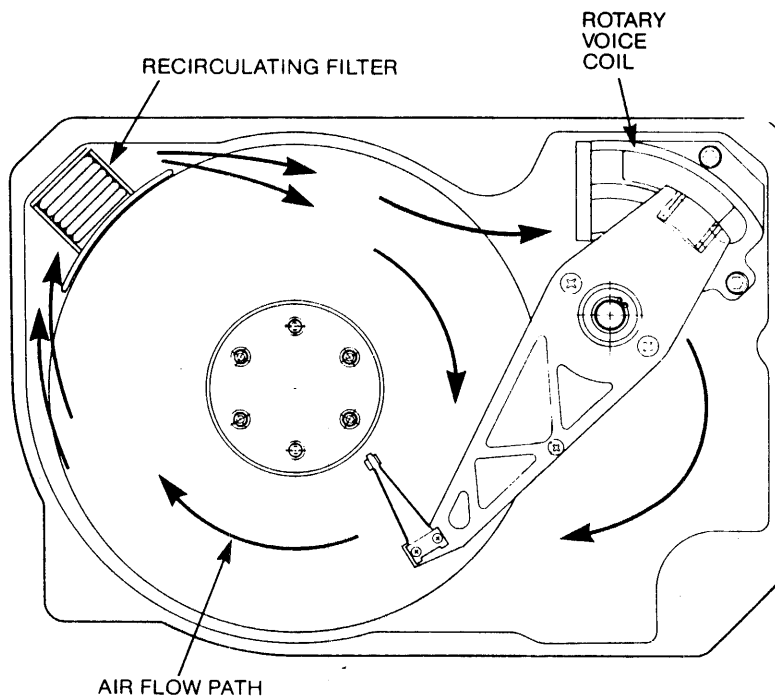


Figure 2-1

XT-3000 Air Filtration System

2.5 Positioning Mechanism (Figure 2-2)

The read/write heads are mounted on a head arm assembly which is then mounted to a ball-bearing supported shaft. The voice coil, an integral part of the head/arm assembly, lies inside the magnet housing when installed in the drive. Current from the power amplifier, controlled by the servo system, causes a magnetic field in the voice coil which either aids or opposes the field around the permanent magnets. This reaction causes the voice coil to move within the magnetic field. Since the head-arm assemblies are mounted to the voice coil, the voice coil movement is translated through the pivot point directly to the heads and achieves positioning over the desired cylinder.

Actuator movement is controlled by the servo feed-back signal from the servo head. The servo head is located on the lower surface of the bottom disk, where servo information is pre-written at the factory. This servo information is used as a control signal for the actuator to provide track-crossing signals during a seek operation, track-following signals during ON CYLINDER operation, and timing information such as index and servo clock.

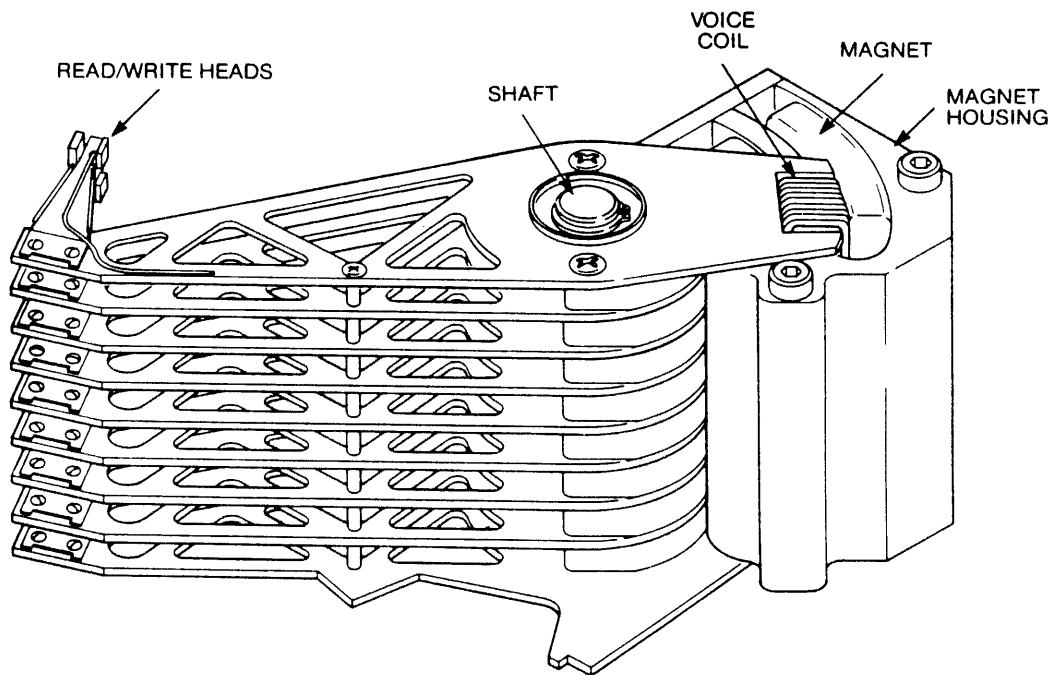


Figure 2-2

XT-3000 Head Positioning System

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

2.6 Read/Write Heads and Disks

The XT-3000 employs state-of-the-art 3380 Whitney-type head sliders and flexures. The Whitney type sliders and flexures provide improved aerodynamic stability, superior head/disk compliance and a higher signal-to-noise ratio.

The XT-3000 media utilizes thin metallic film deposited on 130mm diameter aluminum substrates. The coating formulation together with the low load-force/low mass Whitney-type heads permits highly reliable contact start/stop operation. The nickel-cobalt metallic film yields high amplitude signals, and very high resolution performance compared to conventional oxide coated media. The metallic media also provides a highly abrasion-resistant surface, decreasing the potential for damage caused by shipping shock and vibration.

Data on each of the data surfaces is read by one read/write head, each of which accesses 1224 tracks. There is one surface dedicated to servo information in each drive.

2.7 SCSI Host Interface

The SCSI host interface offers a number of unique advantages which facilitate the interconnection of the XT-3000 with one (or more) computer systems. Unlike traditional microcomputer disk interfaces, such as ST-506, SCSI supports multiple peripherals all operating on the same bus structure. Figure 2-3 shows an example of typical configuration geometry.

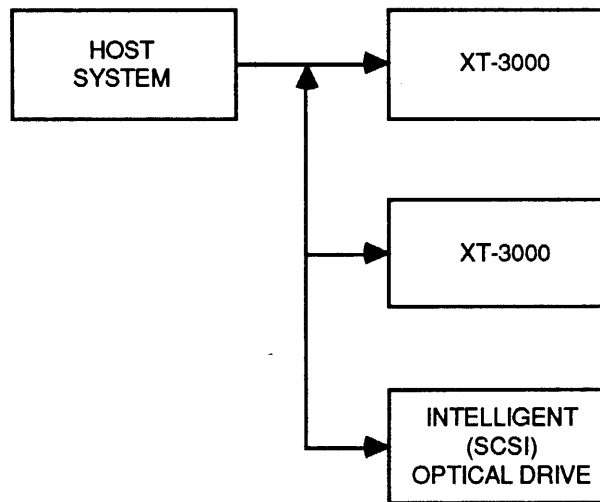


Figure 2-3

Typical SCSI Configuration Geometry -- Single Host System

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

The XT-3000 also supports multiple master configurations (see Figure 2-4) consistent with the established arbitration (or voting) cycle outlined in the SCSI standards. The only hardware change required is that the XT-3000 SCSI address jumpers be manually set when the disk drive is installed in the system (Jumper settings are covered in Section 3.0).

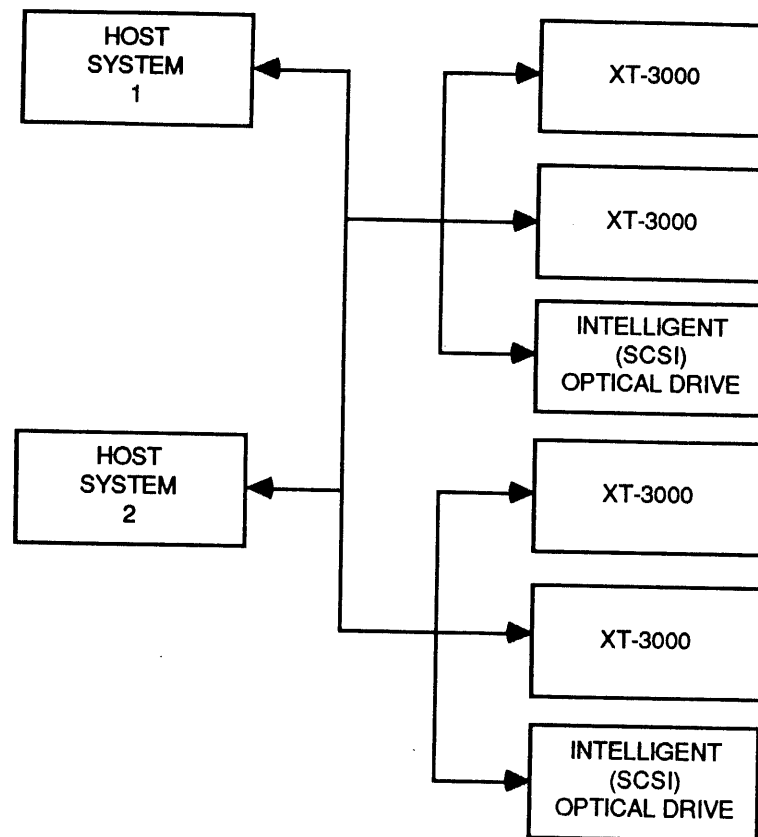


Figure 2-4

Typical SCSI Configuration Geometry -- Multiple Master Configuration

The SCSI implementation used on the XT-3000 is intended to facilitate large data transfers between the host system and the disk drive. Interconnection between the host system(s) and the XT-3000 is via a 50-pin ribbon cable which may be up to 6 meters.

The SCSI bus uses 18 signals (discussed in detail in Sections 5 and 6. Nine signals are for the eight-bit data bus with one data parity bit; the other nine signals are the SCSI control lines which coordinate bus accesses for transfers of commands, data, status and messages.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

3.0 XT-3000 PCB JUMPER OPTIONS

3.1 SCSI Controller ID Jumpers (JP 83, JP 84, JP 85 for XT-3170 and 3280)
(JP 12, JP 13, JP 14 for 3380)

In multiple SCSI device configurations, it is necessary to configure each device with a priority. The priority identification for each drive is determined by the three binarily weighted ID jumpers shown below in Figure 3-1. An ID of 7 is the highest priority in a multi-device configuration. Figure 3-1 provides a convenient reference table of priority values.

As shipped from the factory, all the jumpers are open, giving the XT-3000 a priority value/ID of zero.

Jumper 3170/3280 3380	<u>JP 85</u> (2^2)	<u>JP 84</u> (2^1)	<u>JP 83</u> (2^0)	<u>Controller ID</u>
	<u>JP 14</u>	<u>JP 13</u>	<u>JP 12</u>	
	shorted	shorted	shorted	7 Highest Priority
	shorted	shorted	open	6
	shorted	open	shorted	5
	shorted	open	open	4
	open	shorted	shorted	3
	open	shorted	open	2
	open	open	shorted	1
	open	open	open	0 Lowest Priority

Figure 3-1

SCSI Controller ID Jumpers

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

3.2 XT-3170 and XT-3280 Other Jumpers

Spin on Power-Up (JP44)

When installed, the motor will start as soon as power is applied. Drive will spin down when power is removed from drive.

On 3170/3280 PCB with a NON-SHROUDED connector, this jumper must be installed at all times.

On 3170/3280 PCB with a SHROUDED connector, this jumper, when installed, overrides the position of JP87. On this PCB part number it is recommended that when JP44 is installed, that JP87 also be installed.

SCSI Bus Parity Jumper (JP 86)

Located near the SCSI connector, the parity jumper enables (shorted) or disables (open) odd parity detection of the XT-3000. As shipped the XT-3000 has bus parity detection enabled (shorted). Odd parity is always generated.

JP87

On PCB with a NON-SHROUDED connector, JP87 is the DRIVE TYPE jumper. On PCB with a SHROUDED connector, JP87 is the SPIN DELAY/START COMMAND jumper. The SPIN DELAY/START COMMAND functions do not exist on PCB with a NON-SHROUDED connector. There is no DRIVE TYPE jumper on PCB with a SHROUDED connector.

PCB with a NON-SHROUDED Connector. Drive Type (JP87)

With the jumper installed, the drive reports its type as an XT-3170 (170 MB) in the INQUIRY command. With the jumper removed, the drive reports its type as an XT-3280 (280 MB).

PCB with a SHROUDED Connector. Spin Delay/Start Command (JP87)

In order for the JP87 options to operate on this PCB, JP44 must be removed. With JP87 removed, the drive will not spin-up until the Host issues a Start/Stop Command ($1B_H$) with the Start Bit = 1.

When installed, the ID value will be used to facilitate a sequential drive power-up process. The spindle motor turn-on, after power-up, is delayed by approximately 13 seconds for each priority ID level as shown in Figure 3-2 below.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

CONTROLLER ID	APPROXIMATE MOTOR ON DELAY
0	0 SECONDS
1	13 SECONDS
2	26 SECONDS
3	39 SECONDS
4	52 SECONDS
5	65 SECONDS
6	78 SECONDS
7	91 SECONDS

Figure 3-2

Sequential Motor Delay Table

This technique is used to reduce the instantaneous load on the power supply when it is handling more than one drive.

Once the drive is under power, the motor start/stop command (1B_H) can be used to stop and start the drive.

Terminator Power Jumpers (JP 81, JP 82)

Located between the 50-pin SCSI connector and the corner of the PCB, are the two terminator power jumpers. If JP 81 is shorted, the terminator power is internal from the drive. If JP 82 is shorted, the terminator power is external from the SCSI Bus. As shipped, JP 81 is installed (shorted).

Write Protect Jumper (JP 42)

Located very close to the J2 power connector and the corner of the PCB, the write protect jumper is used to protect the data written to the XT-3000. When the jumper is installed (shorted), data cannot be written on the drive; only read operations can be executed. As shipped from factory, the jumper is removed (open) allowing normal reading/writing.

Manufacturing Test Jumpers

On both PCB's, JP 21, 41, 43 and on PCB with a SHROUDED connector, JP91 through JP94 are for manufacturing test purposes. They are shipped installed (shorted) and are not user selectable.

3.3 XT-3380 Other Jumpers

Write Protect Jumper (JP 7)

When installed, data cannot be written to the drive; only read operations can be executed. As shipped from the factory, the jumper is removed, allowing normal reading and writing.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Spin On Power/Delay/Command Jumpers (JP 8 and 16)

With both jumpers removed (open) the drive will not spin-up until the Host issues a Start/Stop command (1B_H) with the Start Bit = 1.

With JP 8 removed and JP 16 installed (shorted), the drive spins-up after exhausting a 13 second per SCSI ID delay. Refer to figure 3-2.

With JP 8 installed and JP 16 removed, the drive spins-up immediately when power is applied.

Terminator Power Jumpers (JP 10 and 11)

With JP 10 removed and JP 11 installed, the terminator power is external from the SCSI Bus. With JP 10 installed and JP 11 removed, as shipped from the factory, the terminator power is internal from the drive.

SCSI Bus Parity Jumper (JP 15)

The Parity jumper enables (when installed) or disables (when removed) odd parity detection of the XT-3000. As shipped, the XT-3000 detects parity. Odd parity is always generated.

Manufacturing Test Jumpers

JP 1 through 6, 9, and 88 through 91 are for manufacturing test purposes. These jumpers are not user selectable and are shipped installed.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

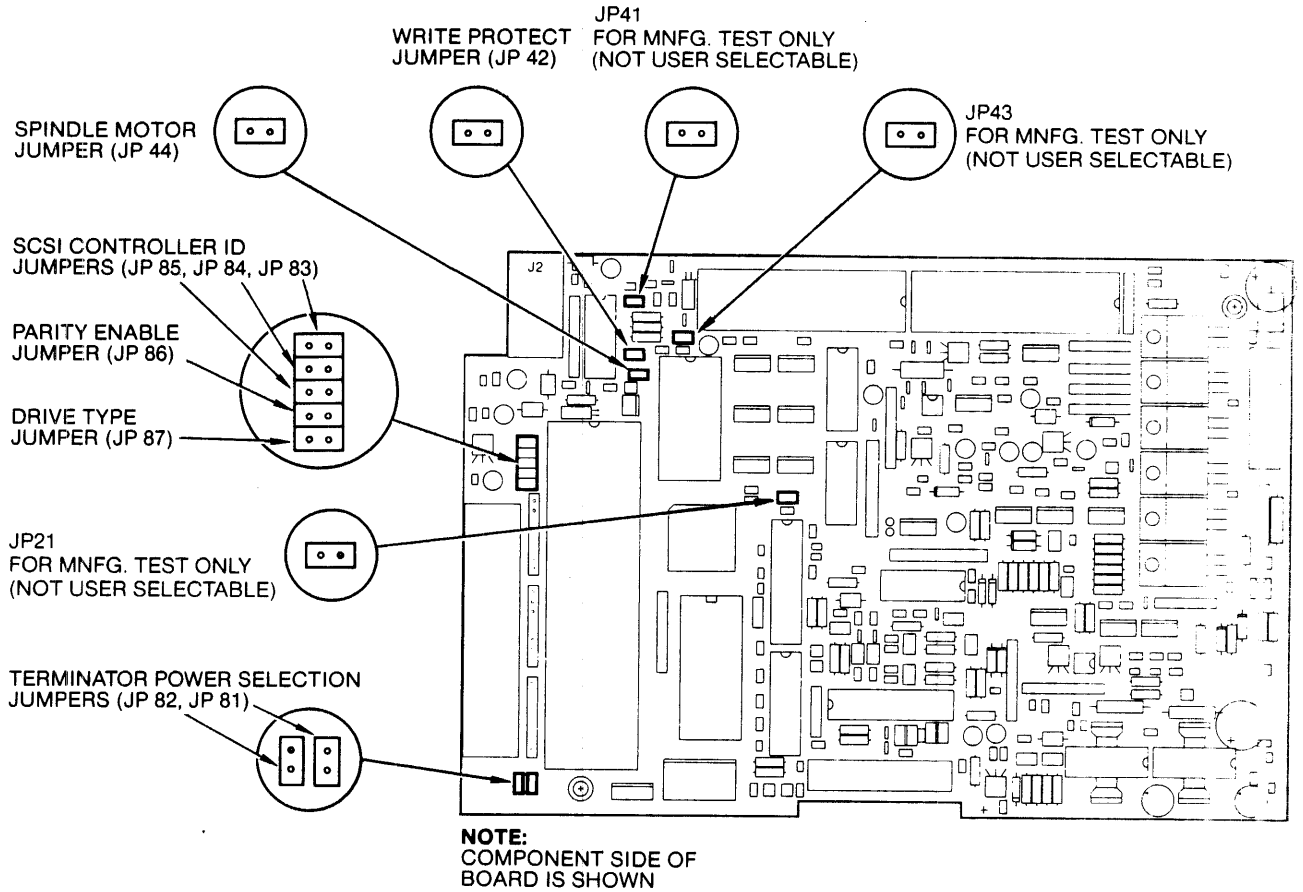


Figure 3-3
XT-3170/3280 Drive Jumper Options
PCB with a NON-SHROUDED Connector

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

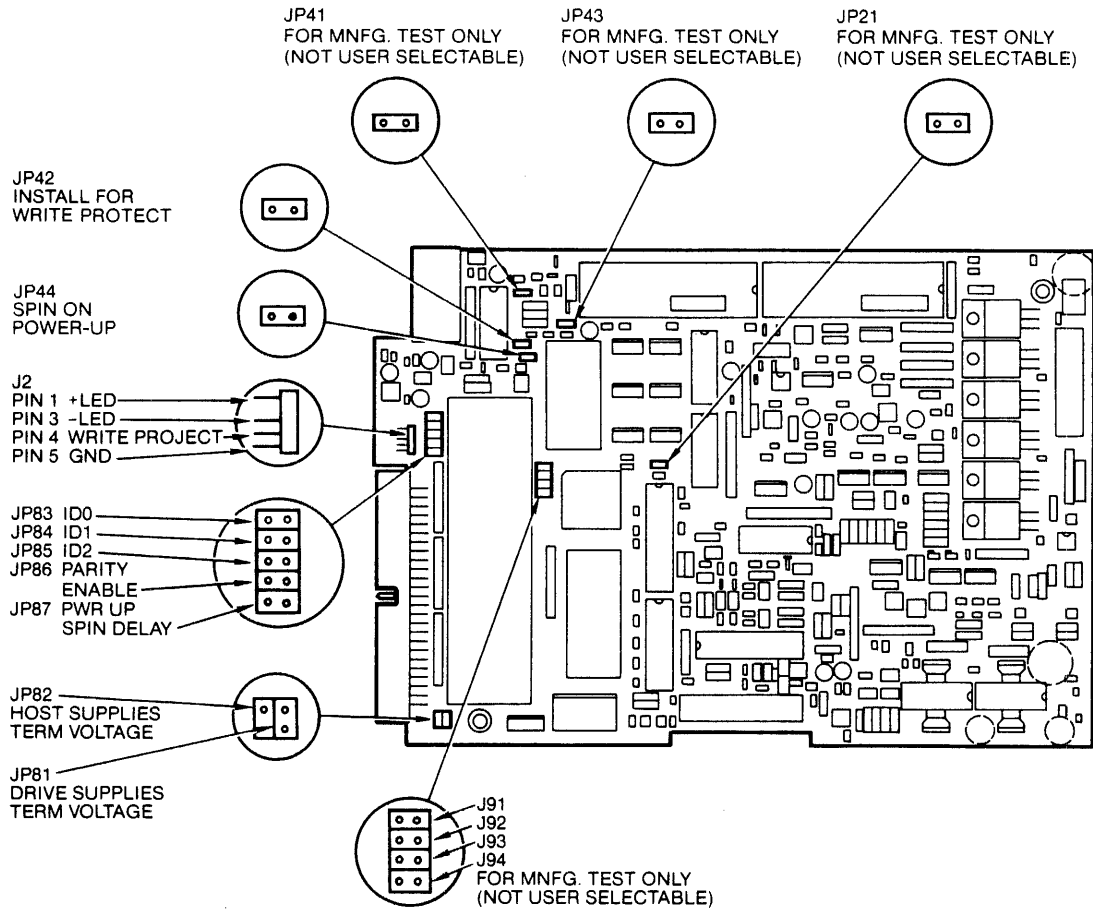


Figure 3-4
XT-3170/3280 Drive Jumper Options
PCB with a SHROUDED Connector

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

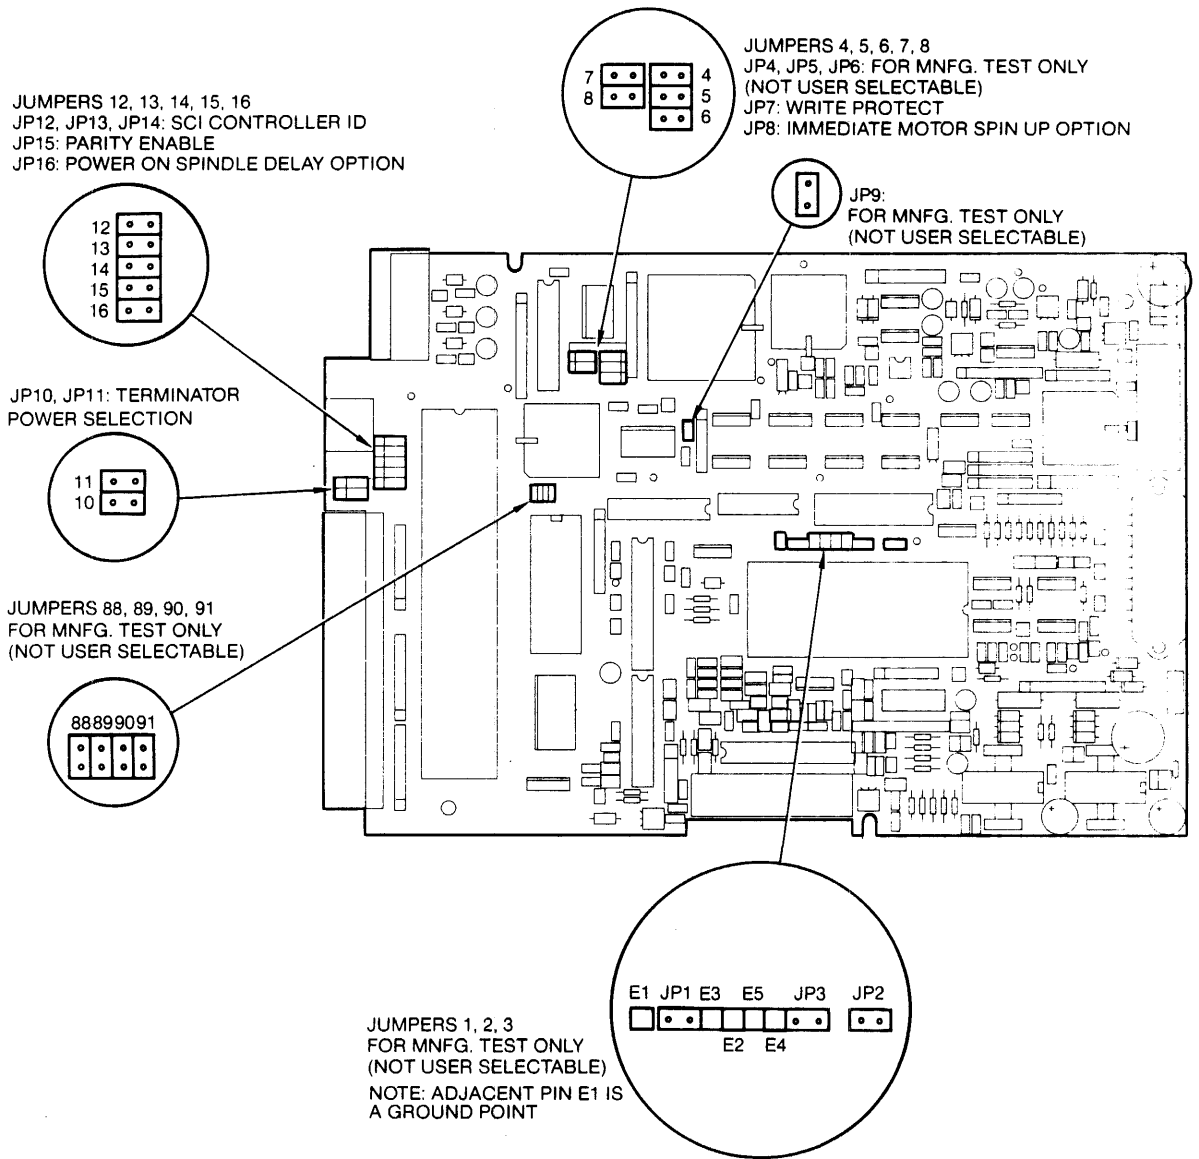


Figure 3-5

XT-3380 Drive Jumper Options

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

4.0 XT-3000 TRACK AND SECTOR FORMAT

4.1 Track Format

The standard track format is organized into numbered data segments, or sectors (See Figure 4-1). The method of encoding used is 2,7 Run Length Limited (RLL) Encoding.


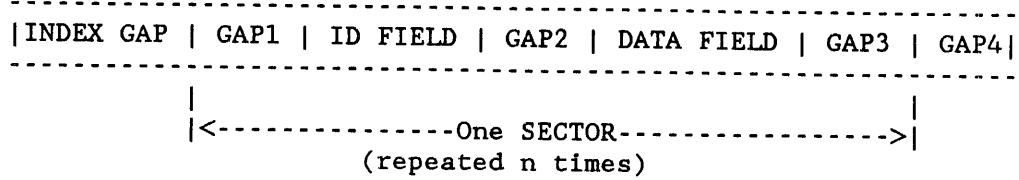


Figure 4-1

XT-3000 Track Format


XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

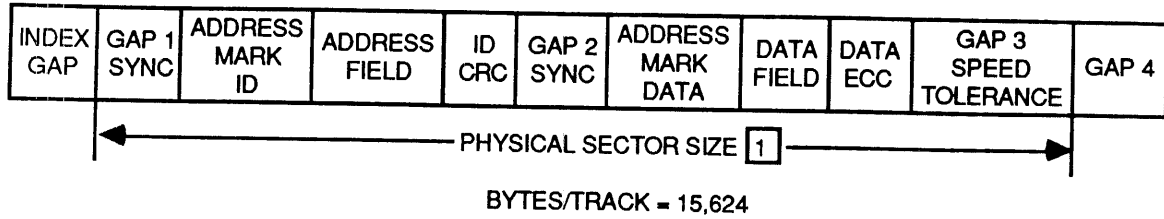

1 PHYSICAL BYTES/SECTOR = LOGICAL SECTOR SIZE + N
 N = 81 BYTES FOR SECTOR SIZES LESS THAN 2048
 N = 89 BYTES FOR SECTOR SIZES GREATER THAN 2047

LOGICAL SECTOR SIZE	PHYSICAL 1 SECTOR SIZE	MAXIMUM SECTORS/TRACK
256	337	46
512	593	26
1024	1105	14
2048	2135	7

Figure 4-2
3170/3280 Track and Sector Format

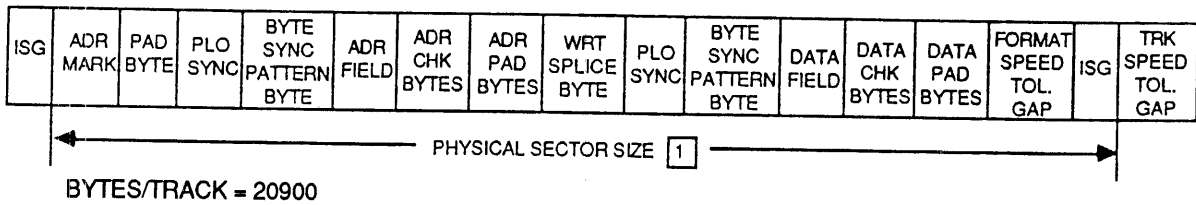

1 PHYSICAL BYTES/SECTOR = LOGICAL SECTOR SIZE + FORMAT SPEED TOLERANCE + 96
 FORMAT SPEED TOLERANCE = INTEGER VALUE OF LOGICAL SECTOR SIZE/100

LOGICAL SECTOR SIZE	PHYSICAL 1 SECTOR SIZE	MAXIMUM SECTORS/TRACK
256	354	59
512	613	34
1024	1121	18
2048	2164	9

Figure 4-3
3380 Track and Sector Format

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

5.0 FUNCTIONAL DESCRIPTION

5.1 Power Sequencing

DC power (+5V and +12V) may be supplied to the drive in any order, but +12VDC is required to start the spindle motor. When the spindle reaches full speed, the actuator lock automatically disengages and the heads then recalibrate to track 0. The recalibration sequence typically takes a maximum of 2.2 seconds to complete. The XT-3000 will spin up and come ready in 20 seconds or less. The drive executes its spin-up sequence whenever power is applied or the SCSI start/stop command is invoked, via the SCSI bus. A sequential drive power-up is possible with the XT-3000 and depends upon the controller ID value. This feature is covered in more detail in Section 3.2. NOTE: Audible noise during a recalibration sequence is normal.

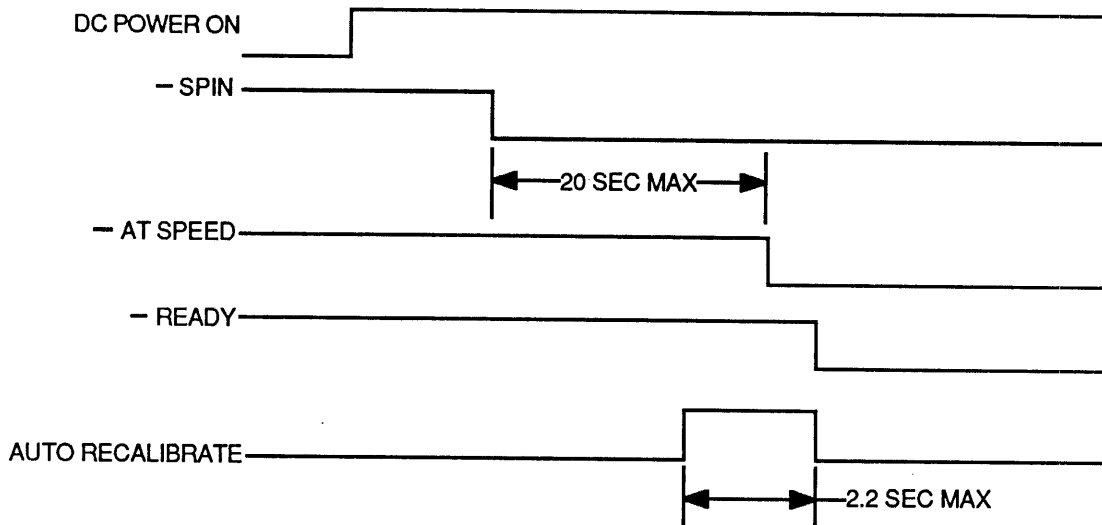


Figure 5-1

Power-Up Sequence

5.2 Electrical Interface

The interface to the XT-3000 can be divided into two categories, each of which is physically separated:

- (1) SCSI bus
- (2) DC Power

Across the SCSI bus all host computer signals are negative true. The signals are "ASSERTED" or active at 0 to 0.4 VDC and "DEASSERTED" or inactive at 2.5 to 5.25 VDC. Refer to the SCSI specification, Rev 17B for further details.

5.3 Interface Termination

As shipped, all assigned interface signal lines are terminated with a removable 220/330 ohm resistor network. The first device and the last device on the daisy-chain SCSI bus must be terminated. Remove the terminators from any devices in between. For instance, if the XT-3000 is in the middle of the string, remove its terminators. Any host adapters being used should be terminated in a similar fashion.

The devices driving the drive inputs should be open collector devices capable of sinking at least 48 milliamps at a voltage level of less than 0.5 Vdc (7438 or equivalent).

Devices receiving the drive outputs should be of "SCHMITT" trigger type to improve noise immunity, 74LS14, 74LS240 or equivalent. The host adapter should not load the bus with more than one standard LSTTL input load per line, and should terminate the drive output signals with 220/330 ohm terminators.

The XT-3000 terminators are shown below in Figure 5-2.

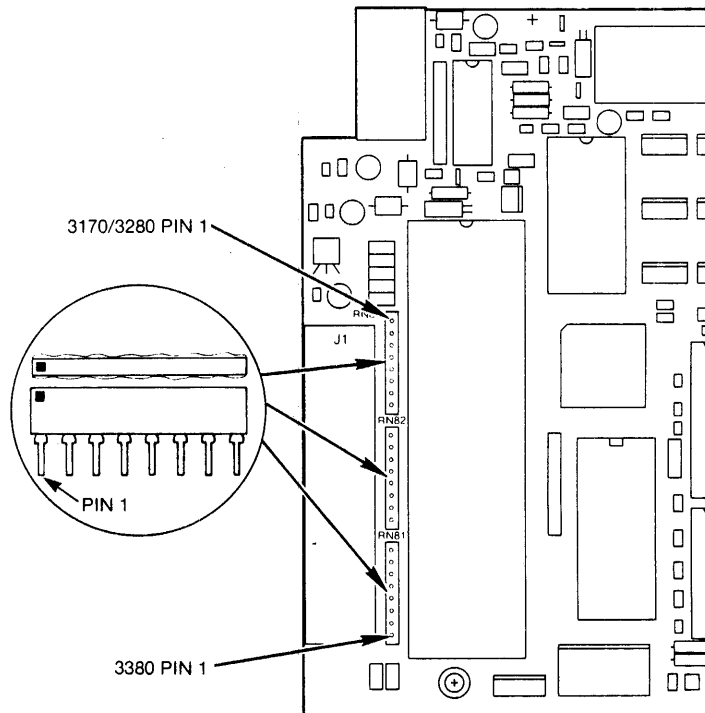


Figure 5-2

SCSI Bus Terminations

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

5.4 Signal Interface

Refer to the SCSI specification Rev. 17B for further details. The host computer interface signals are as shown below. All signals are low true.

	Pin Number		Signal	Driven By	
GND	1	2	-DATA BIT 0 (DB0)	H + D	
	3	4	-DATA BIT 1 (DB1)	H + D	
	5	6	-DATA BIT 2 (DB2)	H + D	
	7	8	-DATA BIT 3 (DB3)	H + D	
	9	10	-DATA BIT 4 (DB4)	H + D	
	11	12	-DATA BIT 5 (DB5)	H + D	
	13	14	-DATA BIT 6 (DB6)	H + D	
	15	16	-DATA BIT 7 (DB7)	H + D	
	17	18	-DATA PARITY (DBP)	H + D	
		19	20	OPEN	
		21	22	OPEN	
		23	24	OPEN	
	OPEN -	25	26	POWER TERMINATION	H or D
		27	28	OPEN	
	29	30	OPEN		
	31	32	-ATTENTION (ATN)	H	
	33	34	OPEN		
	35	36	-BUSY (BSY)	H + D	
	37	38	-ACKNOWLEDGE (ACK)	H	
	39	40	-RESET (RST)	H + D	
	41	42	-MESSAGE (MSG)	D	
	43	44	-SELECT (SEL)	H + D	
	45	46	-CONTROL / DATA (C/D)	D	
	47	48	-REQUEST (REQ)	D	
GND	49	50	-INPUT / OUTPUT (I/O)	D	

Key: H - Host, D - Drive

5.5 Signal Definitions

- RESET (RST)

"OR Tied" signal asserted by the host, causes the XT-3000 to do a hard reset, recalibrate, self configure and return to the idle condition. This signal is normally used during a power-up sequence. The RESET pulse should be at least twenty-five microseconds wide.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

- SELECT (SEL)

Asserted by the host, along with the drive's SCSI ID bit (0 through 7), causes the drive to be selected. The SELECT line must be deasserted by the host after the drive asserts the BUSY line in response to a proper selection. Asserted by the arbitor (host or XT-3000 drive) in the arbitration phase. Asserted by the XT-3000 during the reselection phase. Details are covered under selection and reselection phase operation in Section 6.3 and 6.4.

- BUSY (BUS)

"OR Tied" signal asserted by the XT-3000 indicates that the bus is being used. Asserted by the arbitor during the arbitration phase. Also asserted by the host and the XT-3000 drive during the reselection phase.

- CONTROL/DATA (C/D)

Signal asserted by the XT-3000 indicates that command, status or message information is to be transferred on the data bus. Deassertion of this line indicates that data information is to be transferred on the data bus.

- INPUT/OUTPUT (I/O)

Signal asserted by the XT-3000 indicates that information will be transferred to the host from the drive. Deassertion indicates that information will be transferred to the drive from the host.

- REQUEST (REQ)

Signal asserted by the XT-3000 indicates that a byte is to be transferred on the data bus. REQUEST is deasserted following assertion of the ACKNOWLEDGE line.

- ACKNOWLEDGE (ACK)

Signal asserted by the host, following the assertion of the REQUEST line, indicates data has been accepted by the host or that data is ready to be transferred from the host to the XT-3000. ACKNOWLEDGE is deasserted following deassertion of the REQUEST line.

- ATTENTION (ATN)

Signal asserted by the host to indicate the attention condition, which is a request by the host for the XT-3000 to enter the Message Out phase.

- MESSAGE (MSG)

Signal asserted by the XT-3000 during the Message phase.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

- DATA BITS 0-7 (DBO-7) & PARITY

The 8 bidirectional data and odd parity lines are used to transfer 8-bit parallel data to/from the host computer. Bit 7 is the most significant bit. Bits 0 through 7 are also used as SCSI ID bits during the arbitration, selection and reselection phases. Data Parity is odd.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

6.0 SCSI INTERFACE PROTOCOL

For detailed information about the SCSI Interface Protocol, refer to the SCSI specifications as per ANSI X3T9.2/82-2, Revision 17.B and to the Common Command Set Revision 4-B as agreed to by the ANSI subcommittee on Direct Access Devices.

The SCSI architecture includes eight distinct phases:

BUS FREE phase
ARBITRATION phase
SELECTION phase
RESELECTION phase
COMMAND phase \\
DATA phase \\
STATUS phase /
MESSAGE phase /

These phases are collectively termed the information transfer phases.

The SCSI bus can never be in more than one phase at any given time.

			Bus Signal		
MES- SAGE	COMMAND/ DATA	INPUT/ OUPUT	Phase Name	Direction Of Transfer	Comment
1	1	1	DATA OUT	Host to drive \	Data
1	1	0	DATA IN	Host from drive /	Phase
1	0	1	COMMAND	Host to drive	
1	0	0	STATUS	Host from drive	
0	1	1	*		
0	1	0	*		
0	0	1	MESSAGE OUT	Host to drive \	Message
0	0	0	MESSAGE IN	Host from drive /	Phase

Key: 1 - False, 0 - True, * - Reserved
All lines are low true.

Note: Since the condition of the control lines for Information Transfer phases is validated with the assertion of the REQ signal, then the drive is not "in a phase" unless the REQ signal is asserted. Thus, the state of the SCSI bus is invalid for Information Transfer Phases when the REQ signal is deasserted.

Figure 6-1
Information Transfer Phases

6.1 Bus Free Phase

The BUS FREE phase (-SEL=1, -BSY=1) is used to indicate that no SCSI device is actively using the SCSI bus and that it is available for subsequent users. Bus free occurs when the drive releases BSY following a reset condition or certain Message phases (i.e., Command Complete and Disconnect).

6.2 Arbitration Phase

The ARBITRATION phase allows one SCSI device to gain control of the SCSI bus so that it can assume the role of an initiator (host) or target (XT-3000 drive). The arbitrating device waits for the BUS FREE phase to occur. It then asserts its own SCSI ID bit and BSY. The arbitrating device then examines the data bus. If a higher priority SCSI ID bit exists on the data bus, the arbitrating device has lost arbitration and it releases BSY and the data bus. Otherwise, the arbitrating device has won arbitration and it asserts SEL.

NOTE: Implementation of the ARBITRATION phase is a system option. Systems that do not implement this option can have only one initiator. The ARBITRATION phase is required for systems that use the disconnect/reconnect feature.

6.3 Selection Phase

If the host has won arbitration, it will enter the selection phase by continuing to assert its own host SCSI ID bit and asserting the drive's SCSI ID bit. The host then deasserts BSY (SEL remains asserted by the host). If the Host expects the drive to disconnect/reconnect, then the host must assert the ATN line prior to the deassertion of BSY.

If the host does not support arbitration, then the selection phase is entered from the bus free phase. The host asserts only the drive's SCSI ID bit and asserts SEL.

During the selection phase, the drive maintains a deasserted I/O line so that the selection phase may be distinguished from the reselection phase.

The drive determines that it has been selected by detecting its SCSI ID bit asserted on the bus (as determined by the ID jumpers).

If more than two ID's are asserted on the DATA BUS or parity is enabled and bad parity is detected, the drive will not respond to the select.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

After detecting it has been selected, the drive will assert BUSY. At this point, the host must deassert SEL and may remove the ID's from the DATA BUS.

NOTE: Upon power-on reset, the drive will execute a comprehensive self test and self configuration. During this period (and during a bus reset) the drive will respond to any selects with BUSY status.


6.4 Reselection Phase

After disconnecting to free the bus for other activity, the drive will reconnect when it is ready to transfer data or status across the bus. The drive will arbitrate for the bus and, if it wins, it will reselect the host (additional information on arbitration is provided in Section 6.2.). Reselection is very similar to the selection phase except that the I/O signal line is asserted. The drive asserts its own SCSI ID bit and the SCSI ID bit of the host which is being reselected. The drive releases BSY (BSY was already asserted during arbitration) and continues to assert SEL. The host detects that it has been selected and responds by asserting BSY. The drive detects that the BSY signal is now true and responds by also asserting BSY. (At this point, both the host and the drive are holding the BSY signal low.) The drive then releases SEL and the host responds by releasing BSY. (BSY is still being asserted by the drive.) (Refer to Figure 6.2)

After reselecting the host, the drive will send an IDENTIFY message to identify itself to the host.

If the host does not respond to the reselection within a Selection Timeout Delay (250 milliseconds), the drive will release the bus and then re-arbitrate for the bus trying to reselect the host again. It will do this until the host responds or the drive is reset.

Note: The XT-3000 will NOT disconnect if, during the selection phase, the Host did not set its Host SCSI device ID on the Bus, and if the Host did NOT send an Identify Message Out (with bit 6 asserted) to the XT-3000.

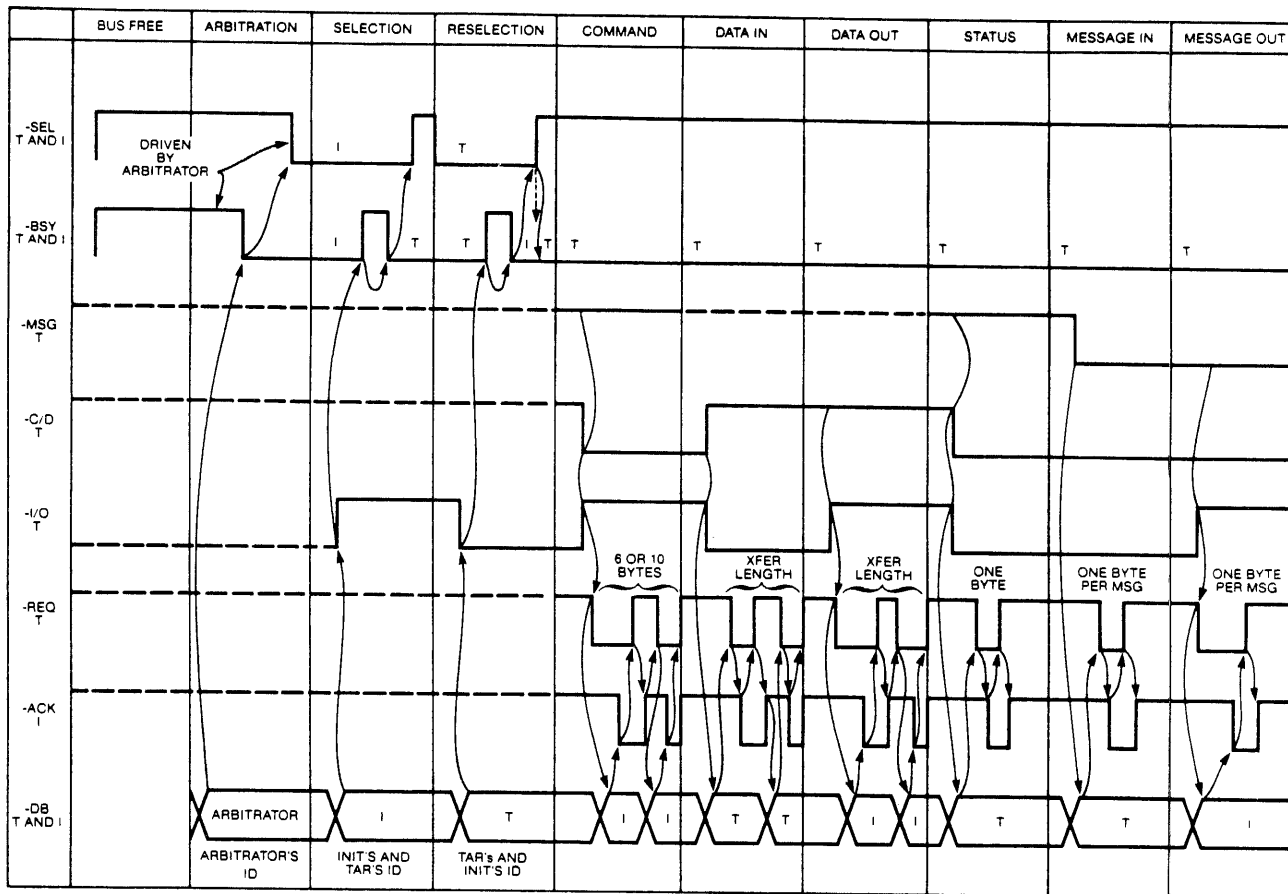

T - Target (XT-3000), I - Initiator (Host)

Figure 6-2

Signal Sequence Chart for SCSI Phases

6.5 Command Phase

After being selected and processing the IDENTIFY message, if any, the drive will normally switch to the COMMAND phase, (-C/D=0, -MSG=1 and -I/O=1). The 6 or 10 bytes of command information (Command Descriptor Block) are transferred from the host to the drive.

If enabled, parity is checked on each command byte. If bad parity is detected, the command will be aborted. The drive will switch to the STATUS phase, return a "Check Condition" status and set the Sense Key/Error code to "Aborted Command/Parity Error" for that host. The drive will then switch to the MESSAGE phase and return a COMMAND COMPLETE message and go to the BUS FREE phase.

After each command byte transfer, the ATN bit is checked; if set, the drive will switch to the MESSAGE OUT phase, receive, then act on the message.

Additional command information is provided in Sections 10.0 and 11.0 of this manual.

6.6 Data In and Data Out Phases

In commands that require a Data Phase (Read, Write, Mode Select, etc.), the drive will enter a Data Phase. During the Data In Phase (-I/O=0, -C/D=1, -MSG=1), data is transferred from the drive to the host. In the Data Out Phase (-I/O=1, -C/D=1, -MSG=1), data is transferred from the host to the drive.

The drive checks to see if bus parity is enabled after each block or group of blocks is transferred to the drive. If bad parity is detected, the command will be aborted. The controller will switch to the STATUS phase, return a "Check Condition" status and set the Sense Key/Error code to "Aborted Command/Parity Error" for that host. The drive will then switch to the MESSAGE phase and return a COMMAND COMPLETE message and go to the BUS FREE phase.

After each block or group of blocks is transferred, the ATN bit is checked; and if set, the drive will switch to the MESSAGE phase to receive, and then act on the message.

6.7 Status Phase

The drive switches to the STATUS phase (-I/O=0, -C/D=0, -MSG=1) and returns the status byte to the host after completing, successfully or unsuccessfully as indicated by the status byte, any command. The drive also switches to the status phase for reporting busy status, intermediate status and reservation conflict status. The drive does not go to the STATUS phase under certain conditions, such as BUS DEVICE RESET and ABORT messages. Following the status phase, the drive enters the message phase.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

The XT-3000 will send a status byte to the host during the STATUS phase at the termination of each command as specified in the following table unless the command is cleared by an ABORT message, by a BUS DEVICE RESET message or by a "hard" RESET condition.

Bits of Status Byte									
7	6	5	4	3	2	1	0	HEX	Status(es) Represented
0	0	0	0	0	0	0	0	00	GOOD
0	0	0	0	0	0	1	0	02	CHECK CONDITION
0	0	0	0	1	0	0	0	08	BUSY
0	0	0	1	0	0	0	0	10	INTERMEDIATE/GOOD
0	0	0	1	1	0	0	0	18	RESERVATION CONFLICT

Figure 6-3

Status Byte Code Bit Values

A description of the status byte codes is given below:

GOOD. This status indicates that the XT-3000 has successfully completed the command.

CHECK CONDITION. Any error, exception, or abnormal condition that causes sense data to be set, shall cause a CHECK CONDITION status. The REQUEST SENSE command should be issued following a CHECK CONDITION status, to determine the nature of the condition. Note that if any other command is issued following a CHECK CONDITION, the sense status will be lost.

BUSY. The XT-3000 is busy. The drive will return this status whenever it is unable to accept a command.

The drive returns this status when it is busy doing self tests and self configuration after being powered up or reset and if busy executing a previously received command.

INTERMEDIATE/GOOD. This status is to be returned for every command in a series of linked commands (except the last command), unless an error, exception, or abnormal condition causes a CHECK CONDITION status or a RESERVATION CONFLICT status to be set. If this status is not returned, the chain of linked commands is broken; no further commands in the series are executed.

RESERVATION CONFLICT. This status is returned whenever a host attempts to access a drive that is reserved by another host.

6.8 Message Phases

This section describes the message system in the Maxtor XT-3000 drive.

6.8.1 Message In Phase

During the Message In (-I/O=0, -C/D=0, -MSG=0) Phase, a message is transferred from the drive to the host. The drive may enter this phase at any time. During the Message Out phase (-I/O=1, -C/D=0, -MSG=0), a message is transferred from the host to the drive. The host requests the drive to enter the Message Out phase by asserting the ATN line. The drive frequently monitors the ATN line and will enter the Message Out phase at its earliest convenience, in response to the host's assertion of ATN.

6.8.2 Message Out Phase

After being selected, the drive will set the Control lines in preparation for the MESSAGE OUT phase. If the host has ATN asserted, the drive will request a message from the host by asserting REQ. The first message is expected to be an IDENTIFY message, but the drive will accept a BUS DEVICE RESET or ABORT message. If any other message is received, the drive will go to the BUS FREE phase. (Section 6.9 provides additional information.)

If, during the selection, the host did not assert its ID on the bus, the drive will not examine the ATN signal. The drive will assume the host cannot support any message except COMMAND COMPLETE and does not support DISCONNECT/RECONNECT. The drive will also assume the host ID is zero and will save any status for that host as host zero.

Note: If the Host expects the XT-3000 to disconnect/reconnect, then a Message Out Phase (Identify with bit 6 true) must occur immediately following a Selection Phase which had BOTH the Host and XT-3000 SCSI device ID's asserted on the bus.

6.8.3 Description of Messages

This section describes the messages the Maxtor XT-3000 drive supports.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Code	Description	Direction
00	COMMAND COMPLETE	to host
02	SAVE DATA POINTERS	to host
03	RESTORE POINTERS	to host
04	DISCONNECT	to host
05	INITIATOR DETECTED ERROR	to disk
06	ABORT	to disk
07	MESSAGE REJECT	both ways
08	NO OPERATION	to disk
09	MESSAGE PARITY ERROR	to disk
0A	LINKED COMMAND COMPLETE	to host
0B	LINKED COMMAND COMPLETE(FLAG)	to host
0C	BUS DEVICE RESET	to disk
8X	IDENTIFY	both ways

Figure 6-4

XT-3000 Message Codes

6.8.3.1 COMMAND COMPLETE (00). This message is sent from the drive to the host to indicate that the execution of a command (or a series of linked commands) has terminated and that valid status has been sent to the host. After sending this message successfully, the drive goes to the BUS FREE phase by releasing BSY, unless the Host sets the ATN line.

NOTE: The command may have been executed successfully or not as indicated in the status.

If the host rejects this message with a MESSAGE REJECT, the drive will go to the bus free phase and not consider this an error.

6.8.3.2 SAVE DATA POINTER (02). This message is sent before every DISCONNECT message, when doing disconnects. If the host rejects this message with a MESSAGE REJECT, the drive will not disconnect.

6.8.3.3 RESTORE POINTERS (03). This message is sent from the drive to direct the host. It acts to restore to the active state the most recently saved pointers for the currently attached logical unit. Pointers to the command, data, and status locations for the logical unit shall be restored to the active pointers. Command and status pointers should be restored to the beginning of the present command and status areas. The data pointer should be restored to the value at the beginning of the data area, or to the value at the point at which the last SAVE DATA POINTERS message occurred for that logical unit.

If the host rejects this message with a MESSAGE REJECT, the drive will immediately terminate the present command with a "CHECK CONDITION" status and set the Sense Key/Error Code to "HARDWARE ERROR/MESSAGE REJECT ERROR" for that host.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

When the drive reselects the host, the IDENTIFY MESSAGE implies that the host restore its pointers. Therefore, this message is not normally used in reselection.

- 6.8.3.4 DISCONNECT (04). This message is sent from the drive to inform the host that the present physical path will be broken (the drive plans to disconnect by releasing BSY), but that a later reconnect will be required in order to complete the current operation. This message will not cause the host to save the data pointer.

If the host rejects this message with a MESSAGE REJECT, the drive will not disconnect.

- 6.8.3.5 ABORT (06). This message is sent from the host to the drive to clear the present operation. All pending data and status for the issuing host from the drive will be cleared, and the drive will go to BUS FREE phase. Pending data and status for other hosts will not be cleared. If a logical unit has not been identified, the drive will go to BUS FREE phase. No status or ending message will be sent for the operation. It is not an error to issue this message to a logical unit that is not currently performing an operation for the host.

- 6.8.3.6 MESSAGE REJECT (07). This message is sent from either the INITIATOR or drive to indicate the last message received was inappropriate or has not been implemented.

In order to indicate its intentions of sending this message, the host should assert ATN prior to its release of ACK for the handshake of the message to be rejected. When the drive sends this message, it will change to MESSAGE IN phase and send this message prior to requesting additional message bytes from the host. This provides an interlock so that the host can determine which message is rejected.

If the host responds to this message with a MESSAGE REJECT message, the drive will immediately terminate the present command with a "Check Condition" status and set the Sense Key/Error Code to "Hardware Error/Message Reject Error" for that host.

- 6.8.3.7 NO OPERATION (08). The host sends this message when it has no valid message for the drive request. The drive receives and ignores this message.

- 6.8.3.8 MESSAGE PARITY ERROR (09). The host sends this message to indicate a parity error on one or more bytes of the last message sent from the drive. The host should assert ATN prior to release of ACK for the last byte of the message in error, so that the drive knows which message is in error. The drive will resend the message a second time. If the MESSAGE PARITY ERROR is received again the disk will go to the Bus Free Phase and will abort the current command for that INITIATOR. No further reconnection will be attempted and no status or Command Complete message will be returned for the command. The Sense Key/Error Code will be set to "Aborted Command/Parity Error" for that host.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

6.8.3.9 LINKED COMMAND COMPLETE (0A). This message is sent to the host to indicate that the execution of a linked command has completed and the status has been sent.

If the INITATOR responds with a MESSAGE REJECT message, the drive will go to the Bus Free Phase and not read the next command. The Sense Key/Error Code will be set to "Hardware Error/Message Reject Error" for that host.

6.8.3.10 LINKED COMMAND COMPLETE (WITH FLAG) (0B). This message is sent to the host to indicate that the execution of a linked command (with the flag bit set to one) has completed and the status has been sent.

If the INITATOR responds with a MESSAGE REJECT message the drive will go to the Bus Free Phase and not read the next command. The Sense Key/Error Code will be set to "Hardware Error/Message Reject Error".

6.8.3.11 BUS DEVICE RESET (0C). A host may send this message to the drive to clear all current commands on that SCSI device. The drive will clear all commands, go through its initial power-up checks, its self configuration and go to the BUS FREE state (Hard Reset).

6.8.3.12 IDENTIFY (80). This message should be sent by a host after it selects the drive.

It is sent by the drive as the first message after a reconnect.

Figure 6-5

Identify Message Codes

BITS	IDENTIFY MESSAGE FUNCTION
7	ALWAYS SET
6	SET INDICATES ABILITY TO DISCONNECT AND RECONNECT (ONLY INITIATORS SET THIS BIT)
5-3	RESERVED
2-0	SPECIFY LOGICAL UNIT NUMBER (should be zero)

If the host responds to this message with a MESSAGE REJECT, the drive will immediately terminate the present command with a "Check Condition" status and set the Sense Key/Error Code to "Hardware Error/Message Reject Error" for that host.

NOTE: The XT-3000 will NOT disconnect if, during the Selection phase, the Host did not set its Host SCSI device ID on the Bus, and if the Host did NOT send an Identify Message Out (with bit 6 asserted) to the XT-3000.

6.9 SCSI BUS ERROR HANDLING

If the host detects the BUS FREE phase (other than as a result of a RESET condition) without first receiving a DISCONNECT or COMMAND COMPLETE message, the host should typically consider this as a catastrophic error condition. If the drive intentionally creates this condition, then it will clear the current command.

6.9.1 IDENTIFY Message Parity Error

If the drive detects a parity error while receiving the IDENTIFY message, it will attempt to receive the IDENTIFY a second time. If the second attempt also fails, the drive will ignore the select and go to the Bus Free Phase.

6.9.2 Message Out Phase Parity Error

If the drive detects a parity error during the Message Out Phase (Other than a IDENTIFY message), it will attempt to receive the message again. If the second attempt fails, the drive will go to the Bus Free Phase, clear the present command and set the Sense Key/Error Code to "Aborted Command/Parity Error.

6.9.3 Command or Data Out Phase Parity Error

If the drive detects a parity error during the Command Phase or the Data Out Phase, it will terminate the command with a "Check Condition" Status and set the Sense Key/Error Code to "Aborted Command/Parity Error" for that host and LUN.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

7.0 POWER UP or BUS RESET

The drive does a hard reset/recalibrate after each POWER-UP or BUS RESET.

After being reset the XT-3000 executes the following tests of the on-board controller:

<u>TEST</u>	<u>DEVICE TESTED</u>	<u>COMMENTS</u>
0	Program ROM	Uses the ROM checksum to verify the ROM.
1	Micro RAM	Uses a moving inversion test to test the RAM. Leaves the RAM filled with zeros.
2	SCSI chip	Tests the SCSI device including the interrupt.
3	DMA	Tests the DMA including the interrupt. Channel 2 REQ and ACK are tied together to perform a test of the DMA, and timing its execution speed.
4	Sequencer	Tests the Sequencer, including the interrupt.
5	Sequencer State	Tests then initializes the drive RAM.
6	Buffer RAM	Determines the size of the buffer RAM then tests it. Leaves the buffer filled with zeros. Uses the path through the Sequencer chip and the DMA, channel 3.

Figure 7-1

Power Up/Bus Reset Test Table

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

7.1 Self Test Failure Status

If tests 0 through 4 fail, this is considered a fatal drive error. The drive will still respond to host selects, if possible, but will not execute any commands except REQUEST SENSE, INQUIRY, and SEND DIAGNOSTIC. If any other of the self tests fail, this is still a drive error; but if the component that failed does not affect another path, commands for the unaffected path will be executed.

TEST	SENSE KEY	ADDITIONAL SENSE CODE
0	04	A0
1	04	A1
2	04	A2
3	04	A3
4	04	A4
5	04	A5
6	04	A6

Figure 7-2

Self Test Failure Codes

7.2 Self Configuration

When the drive powers-up or is Reset, it configures itself from the "configuration" information saved on the drive from the previous format operation. The Configuration information includes the drive's model number returned in the Inquiry command and mode select parameters such as sector size, number of Heads/Cylinders and defect management characteristics. The configuration information is also referred to as the "SAVED VALUES".

If the self configuration fails, the Sense Key/Error Code will be set to "Unit Attention/Self Configuration" (06/90). This status will be reported on the first command issued from a host. When this occurs, the drive will self configure to the "Default" page parameters.

Implementors Note: It is recommended that when a request Sense command returns a "unit attention" Sense Key 06_H (such as after a power-up), that the Host should ensure the Additional Sense Code returned by the Request Sense command in Byte 12 is a 29_H; not a 90_H.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

If the additional Sense Code is a 90H, the Host should reset the drive (SCSI Bus Reset or Bus Device Reset Message). If the error code 90_H still persists, the Host should determine if the drive's "Default" Page Parameters match those parameters desired by the Host. If not, the Host should perform a Mode Select command to Configure the drive to the desired parameters. Then, the Host should recover any data on the drive and format the drive to the desired configuration.

7.3 Unit Attention Condition

A unit attention condition is created for each initiator whenever the drive has been reset (by a BUS DEVICE RESET message or a "hard" RESET condition) or when the MODE SELECT parameters have been changed from other hosts. The UNIT ATTENTION condition (Sense Key = 6_H) is returned into the sense data by the drive in response to a REQUEST SENSE command. The host issues the REQUEST SENSE command in response to the check condition (02) status byte. The Unit Attention condition persists for each initiator until that initiator issues a command other than REQUEST SENSE or INQUIRY. If any other command is received, the unit attention condition is cleared.

If an INQUIRY command is received from an initiator with a pending Unit Attention condition (before the drive reports CHECK CONDITION status), the drive performs the INQUIRY command and does not clear the Unit Attention condition.

If a REQUEST SENSE command is received from an initiator with a pending Unit Attention condition (before the drive reports CHECK CONDITION status), then the drive will report any pending sense data and preserve the Unit Attention condition.

See the "Implementors Note" in Section 7.2.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

8.0 XT-3000 BUFFERING SCHEME

8.1 Theory of Operation

The XT-3380 and the XT-3170/3280 include a static 32K and 8K-byte data buffer respectively. The buffer is used to enhance the performance of the drive (i.e. storing blocks of data while the drive is disconnected from the host) and to help match the speed of the host and the drive.

The buffer used is a ring buffer, controlled by the Integrated SCSI Module (ISM). The chip includes 4 channels (ports). Each channel has its own separate address bus and byte count register. The channels operate simultaneously, allowing read and write operations to the buffer from various data paths at the same time.

Of these channels:

- channel 0 is dedicated to the drive and is used to transfer data between the buffer and the drive,
- channel 1 is only used for diagnostic purposes. channel 1 REQ is tied to channel 1 ACK. This allows the microprocessor to issue commands to channel 1 and check that it actually does transfers. Used during self-test operations.
- channel 2 is connected to the SCSI bus and operates in the SCSI mode.
- channel 3 is used by the controller's Z8 microprocessor to transfer data between the microprocessor bus and the buffer memory. The microprocessor uses this channel to read and write the buffer memory.

8.2 Buffer Use Example

The following case is a multi-block READ command (with disconnect) from the drive:

- 1) After disconnecting from the SCSI bus, the drive's heads are positioned at the proper track and the first logical block (specified as the starting block address in the SCSI command) is read from the disc and written into the buffer, using ISM Memory chip channel 0.
- 2) When the ECC is calculated, the data block is available for transfer to the host bus.
- 3) After winning arbitration, the drive will reconnect. During this time, the drive is continuously reading data into Buffer Channel 0 if more data is required.
- 4) The data block is then transferred asynchronously to the host.
- 5) Subsequent blocks are stored in the buffer as soon as they are read (at the address below previous blocks). Reading of data from the drive and sending data to the host are independent and take place at the same time.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

- 6) Blocks are stored below each other in the buffer, until the maximum address is reached; then the channel wraps around to the first address in the buffer (assuming that the first block has already been transferred to the host).
- 7) If the host is too slow to empty all data blocks stored in the buffer from the drive, and another block is ready to be stored (with no space available) an overrun situation occurs. In this case, the XT-3000 drive will stop reading data from the disc to the buffer and wait for one block size to be available to start reading again.

9.0 SCSI COMMANDS/DEFINITIONS/OPERATION

The command definitions provide continuous logical blocks of a fixed data length.

A single command may transfer one or more logical blocks of data. Multiple commands may be linked. The drive may disconnect from the SCSI bus to allow activity by other SCSI devices while it is preparing to transfer data.

Upon command completion (successful or unsuccessful), the drive returns a status byte to the initiator (see 6.7).

9.1 Status and Parameter Information returned to Host by Drive

Some commands require the XT-3000 to return status/parameter-type information to the Host (i.e. Mode Sense, Inquiry, Request Sense). Some of the fields in this data may be a zero value because these fields are not currently used. The Host should not test for zero's in these fields, since future products or current product enhancements may use these fields. Also, because future products may have different characteristics, the values returned in some of the currently used fields may change or vary.

A good example is the Mode Sense command. A different drive might require more than two alternate spare tracks per volume (Page 3, bytes 8 and 9). Different drives may have a different number of Heads and Cylinders (Page 4). A different drive might have a different Step Rate (Page 4, bytes 12 and 13).

Therefore, the Host should not necessarily lock itself into the expectation of these values.

9.2 Command Descriptor Block (CDB)

A request from the initiator is performed by sending a CDB to the drive. For some commands, the request is accompanied by a list of parameters sent during the DATA OUT phase.

9.2.1 Reserved

All reserved bits, fields, bytes, and code values must be set to zero by the initiator.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

9.2.2 Operation Code

The operation code of the command descriptor block has a group code field and a command code field.

The group code specifies one of the following groups:

- Group 0 - six-byte commands
- Group 1 - ten-byte commands
- Group 2-6 - reserved
- Group 7 - ten byte commands (vendor unique)

The Command Code defines the command being issued to the drive.

Bit	7	6	5	4	3	2	1	0
Byte								
0	Group Code			Command Code				

Figure 9-1

Operation Code

Bit	7	6	5	4	3	2	1	0
Byte								
0	Operation Code							
1	Logical Unit Number			Logical Block Addr (if reqd) (MSB)				
2	Logical Block Addr (if required)							
3	Logical Block Addr (if reqd) (LSB)							
4	Transfer Length (if required)							
5	Control Byte							

Figure 9-2

Typical CDB for Six-byte Commands

Bit	7	6	5	4	3	2	1	0
Byte								
0	Operation Code							
1	Logical Unit Number			Reserved (Zeros)				
2	Logical Block Addr (if rqd) (MSB)							
3	Logical Block Addr (if required)							
4	Logical Block Addr (if required)							
5	Logical Block Addr (if rqd) (LSB)							
6	Reserved (00 _H)							
7	Transfer Length (if rqd) (MSB)							
8	Transfer Length (if rqd) (LSB)							
9	Control Byte							

Figure 9-3

Typical CDB for Ten-byte Commands

9.2.3 Logical Unit Number (LUN)

The logical unit number is set to zero. This method of addressing is provided for systems that do not implement the IDENTIFY message. Systems implementing the IDENTIFY message ignore the LUN specified within the CDB.

The drive is LUN 0. If a command other than Request Sense or Inquiry is issued to any other LUN, the drive will respond with Check Status. The drive will return Extended Status with the Sense Key/Error Code set to "Illegal Request/Invalid LUN" in response to a Request Sense command to any other LUN.

9.2.4 Logical Block Address (LBA)

The logical block address begins with block zero and is contiguous up to the last user accessible logical block.

Group 0 commands contain 21-bit logical block addresses.

Group 1 and 7 commands contain 32-bit logical block addresses.

The maximum LBA allowed is the LBA value returned in the READ CAPACITY Data with PMI bit set to zero (refer to section 11.1).

9.2.5 Transfer Length

The Transfer Length specifies the amount of data to be transferred. Except for the read and write buffer commands, the transfer length specifies the number of sectors (blocks) to be transferred. The read and write buffer command's transfer length specifies bytes to be transferred.

Six byte commands use one byte for Transfer Length allow up to 256 blocks of data to be transferred by one command. A Transfer Length value of 1 to 255 indicates the number of blocks that shall be transferred. A value of zero indicates 256 blocks.

Ten byte commands use two bytes for Transfer Length, allowing up to 65,535 blocks of data to be transferred by one command. In this case, a Transfer Length of zero indicates that no data transfer shall take place. A value of 1 to 65,535 indicates the number of blocks that shall be transferred.


The Transfer Length of the commands that are used to send a list of parameters to a drive is called the Parameter List Length. The Parameter List Length specifies the number of bytes sent during the DATA OUT phase.

The Transfer Length of the commands that are used to return sense data (e.g. REQUEST SENSE, INQUIRY, MODE SENSE, etc.) to an initiator is called the Allocation Length. The Allocation Length specifies the number of bytes that the initiator has allocated for returned data. The drive shall terminate the DATA IN phase when Allocation Length bytes have been transferred or when all Available Sense Data has been transferred to the initiator, whichever is less.

Note: If the LBA and Transfer Length result in exceeding the maximum LBA, a CHECK CONDITION occurs with an ILLEGAL REQUEST/INVALID LBA Sense Key/Code. For the maximum LBA, refer to Section 11.1.

9.2.6 Control Byte

The Control Byte is the last byte of every command descriptor block.

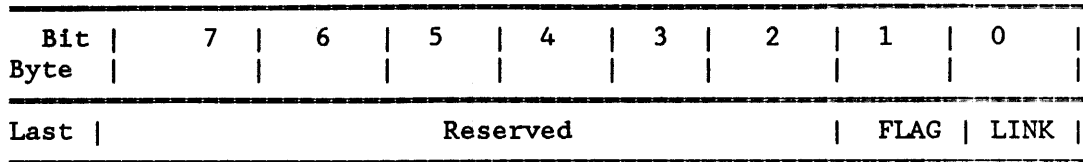

Bit	Description
7 through 2	Reserved
1	Flag bit - If the Link bit is zero, then the Flag bit shall be set to zero. If the Link bit is one, and if the command terminates successfully, the drive will send LINKED COMMAND COMPLETE message if the Flag bit is zero and will send LINKED COMMAND COMPLETE (WITH FLAG) message if the Flag bit is one.
0	Link bit- Used to prevent a bus free phase between commands. This bit is set to one to indicate that the host desires an automatic Link to the next command upon successful completion of the current command. If the Link bit is one, the drive will, upon successful termination of the command, return INTERMEDIATE status and then send one of the two messages defined by the Flag bit (above). Next, the drive will enter the "COMMAND" phase for the next command from the host link list.

Figure 9-4

Control Byte

9.3 Command Processing

The following sequence is common to all commands.

After being selected (with the Host's SCSI device ID asserted on the bus) the XT-3000 sets C/D, I/O and MSG for the MESSAGE OUT phase and, if the host bus asserted the ATN signal, the drive will issue the REQ signal and get the IDENTIFY message from the host. Next, the drive normally switches to the COMMAND phase and transfers the command into its registers. If the host did not assert ATN, the drive will enter the command phase directly from the selection phase.

- 1) The drive checks if a self-test failure exists. If the XT-3000 has failed one of its self-tests and the command is not a REQUEST SENSE, INQUIRY or DIAGNOSTIC command, the drive returns CHECK condition status and sets the Sense Key/Error Code to "Hardware Error/AX", where X is the self-test number.
- 2) The drive checks if this is the first command after power-up or reset for this host. If so, the Unit Attention condition exists for this host and the drive returns CHECK condition status. If the drive failed self-configuration (cannot read "saved" Mode Select parameters) the error code is 90. If the drive successfully self-configured, the error code is 29.
- 3) The drive decodes the command operation code. If unsupported the command returns CHECK condition status and sets the Sense Key/Error Code to "Illegal Request/Invalid Command Operation Code".
- 4) The drive checks the reserved bits in the Control Byte. If nonzero, it returns CHECK condition status and sets the Sense Key/Error Code to "Illegal Request/Illegal Field in CDB".
- 5) If the LUN is for a nonexistent drive and the command is not REQUEST SENSE, or INQUIRY, the drive returns CHECK condition status and sets the Sense Key/Error Code to "Illegal Request/Invalid LUN".

10.0 XT-3000 COMMAND SET

Operation Code	Command Name	Section
00	TEST UNIT READY	10.1
01 ^H	REZERO UNIT	10.2
03 ^H	REQUEST SENSE	10.3
04 ^H	FORMAT UNIT	10.4
07 ^H	REASSIGN BLOCKS	10.5
08 ^H	READ	10.6
0A ^H	WRITE	10.7
0B ^H	SEEK	10.8
12 ^H	INQUIRY	10.9
15 ^H	MODE SELECT	10.10
16 ^H	RESERVE	10.11
17 ^H	RELEASE	10.12
1A ^H	MODE SENSE	10.13
1B ^H	START/STOP UNIT	10.14
1D ^H	SEND DIAGNOSTIC	10.15

Figure 10-1

Group 0 Commands

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

10.1 TEST UNIT READY Command

Operation Code: 00_H

Bit	7	6	5	4	3	2	1	0	
Byte									
0	Operation Code								
1	Logical Unit Number			Reserved (00 _H)					
2	Reserved (00 _H)								
3	Reserved (00 _H)								
4	Reserved (00 _H)								
5	Control Byte								

If the drive is ready and not seeking or not busy, GOOD STATUS is returned.

Figure 10-2

TEST UNIT READY Command

10.2 REZERO UNIT Command
 Operation Code: 01_H

Bit	7	6	5	4	3	2	1	0
0	Operation Code							
1	Logical Unit Number			Reserved (00 _H)				
2	Reserved (00 _H)							
3	Reserved (00 _H)							
4	Reserved (00 _H)							
5	Control Byte							

The actuator on the drive is positioned at track zero. The drive will disconnect from the host while this command is in progress, if the host supports disconnects.

Figure 10-3

REZERO UNIT Command

10.3 REQUEST SENSE Command
 Operation Code: 03_H

Bit	7	6	5	4	3	2	1	0
0	Operation Code							
1	Logical Unit Number			Reserved (00 _H)				
2	Reserved (00 _H)							
3	Reserved (00 _H)							
4	Allocation Length							
5	Control Byte							

Figure 10-4

REQUEST SENSE Command

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

The REQUEST SENSE command requests that the drive transfer sense data to the host via a DATA IN phase. The drive will transfer sense data in the extended sense data format.

The sense data is valid for a CHECK CONDITION status returned on the prior command. This sense data is preserved by the drive for the host until retrieved by the REQUEST SENSE command or until the receipt of any other command from the host that issued the command resulting in the CHECK CONDITION status. Sense data is cleared upon receipt of any subsequent command from the host receiving the CHECK CONDITION status. In the case that the Host does not assert its Host SCSI device ID during the Selection Phase, the drive will assume that the REQUEST SENSE command is from host zero.

The Allocation Length specifies the number of bytes that the host has allocated for returned sense data. An Allocation Length of zero indicates that four bytes of sense data is to be transferred. Any other value indicates the maximum number of bytes to be transferred. The drive will terminate the DATA IN phase when the Allocation Length bytes have been transferred or when all available sense data have been transferred to the host, whichever is less.

The REQUEST SENSE command will return the CHECK CONDITION status only to report errors for the REQUEST SENSE command. For example:

- (1) The drive receives a nonzero reserved bit in the CDB.
- (2) An unrecovered parity error occurs on the DATA BUS.
- (3) A drive malfunction prevents return of the sense data.

If no error occurs during the execution of the REQUEST SENSE command, the drive will return the sense data with GOOD status. Following an error on a REQUEST SENSE command, sense data may be invalid.

10.3.1 Extended Sense Data

Error class 7 specifies extended sense. Error code zero specifies the Extended Sense data format.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

The Extended Sense Data Format is shown in the following figure:

Bit	7	6	5	4	3	2	1	0
Byte								
0	Valid	Class (7)			Error Code (0)			
1	Zero Value							(00 _H)
2	0	0	0	0	Sense Key			
3	Information Byte (MSB)							
4	Information Byte							
5	Information Byte							
6	Information Byte (LSB)							
7	Additional Sense Length							
8	Zero Value							(00 _H)
9	Zero Value							(00 _H)
10	Zero Value							(00 _H)
11	Zero Value							(00 _H)
12	Additional Sense Code							
n+12	Zero Value							(00 _H)

Figure 10-5

Extended Sense Data Format

The information bytes are not defined if the valid bit is zero. If the valid bit is one, the information bytes contain the unsigned LBA associated with the sense key.

The Additional Sense Length specifies the number of additional sense bytes to follow byte 7. If the Allocation Length of the CDB was too small to transfer all of the additional sense bytes, the Additional Sense Length is not adjusted to reflect the truncation.

Byte 2 Sense Key descriptions are provided in Figure 10-6.

Byte 12 Additional Sense codes are listed in Figure 10-7.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Sense Key (Bit 0-3 of Byte 2)	Description
0 _H	NO SENSE. Indicates that there is no specific sense key information to be reported. This is the case for a successful command.
1 _H	RECOVERED ERROR. Indicates that the last command was completed successfully with some recovery action performed by the drive. Details may be determined by examining the additional sense bytes and the information bytes.
2 _H	NOT READY. Indicates that the drive cannot be accessed. Operator intervention may be required to correct this condition.
3 _H	MEDIUM ERROR. Indicates that the command terminated with a nonrecovered error condition that was probably caused by a flaw in the disk media or an error in the recorded data.
4 _H	HARDWARE ERROR. Indicates that the drive detected a nonrecoverable hardware failure (for example, drive failure, device failure, parity error, etc) while performing the command or during a self test.
5 _H	ILLEGAL REQUEST. Indicates that there was an illegal parameter in the CDB or in the additional parameters supplied as data for some commands. If the drive detects an invalid parameter in the CDB, then it will terminate the command without altering the medium.
6 _H	UNIT ATTENTION. Indicates that the drive has been powered-up, reset or that Mode Select Parameters have been changed. This status is reported to all hosts as the initial status after the drive is powered-up or reset unless the drive had a self-test failure. (Refer to Section 7.3)
7 _H	DATA PROTECT. Indicates that a command that reads or writes to/from the drive was attempted on a block that is protected from this operation. The READ or WRITE operation is not performed.
B _H	ABORTED COMMAND. Indicates that the drive aborted the command. The host may be able to recover by trying the command again.
E _H	MISCOMPARE. Indicates that the source data did not match the data read from the medium.

Figure 10-6
Sense Key Description

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

The Additional Sense code 00 indicates that the drive does not support any additional sense code for the related Sense Key or does not have any appropriate Additional Sense to return for the CHECK CONDITION status that it created.

Sense Code (Byte 12) Description

00	No Additional Sense Information.
01	No Index/Sector signal
02	No Seek Complete
03	Write Fault
04	Drive Not Ready
05	Drive Not Selected
06	No track zero found
07 through 0F	Reserved
10	ID CRC error
11	Unrecovered Read error of data blocks
12	No Address Mark found in ID field
13	No Address Mark found in Data field
14	No record found
15	Seek positioning error
16	Reserved
17	Recovered Read data with drive's Read retries (not with ECC)
18	Reserved
19	Defect List Error
1A	Parameter Overrun
1B	Reserved
1C	Primary Defect List not found
1D	Reserved
1E through 1F	Reserved
20	Invalid Command Operation Code
21	Invalid Logical Block Address (LBA). Address greater than the LBA returned by the READ CAPACITY data with PMI bit set to 0 in the CDB.
22	Reserved
23	Reserved
24	Illegal field in CDB
25	Invalid LUN
26	Invalid field Parameter List
27	Write Protected
28	Reserved
29	Power On or Reset or Bus Device Reset occurred.
2A	Mode Select Parameters changed
2B through 30	Reserved
31	Format Failed
32	No Defect Spare Location Available
33 through 3F	Reserved

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

40	RAM failure
41	Reserved
42	Reserved
43	Message Reject Error
44	SCSI Hardware/Firmware Error
45	Reselect failed
46	Reserved
47	SCSI Parity Error
48	Initiator Detected Error
49	Inappropriate/Illegal Message
4A through 4F	Reserved
50 through 5F	Reserved
60 through 6A	Reserved
6B through 6F	Reserved
70 through 7F	Reserved
80 through 8B	Correctable ECC error, number of bits correctable - x (0 through B)
8C through 8F	Reserved
90	Configuration Error. Saved values not available
91 through 9F	Reserved
A0 through AF	Selftest "Ax" Failed
B0 through FF	Reserved

Figure 10-7

Additional Sense Codes in HEX

10.4

FORMAT UNIT Command

Operation Code: 04_H

Bit	7	6	5	4	3	2	1	0
Byte								
0	Operation Code							
1	Logical Unit Number	FmtData	CmpLst	Defect List Format				
2	Reserved (00 _H)							
3	Interleave Factor (MSB)							(00 _H)
4	Interleave Factor (LSB) (00 _H or 01 _H)							
5	Control Byte							

Figure 10-8

FORMAT UNIT Command

The FORMAT UNIT command formats the medium on the drive. It also creates control structures for the management of defects. The MODE SELECT command (Page 3) defines parameters to be set by the host for defect management. Initialization and Mode Select Parameters are stored on the disk media after the format process is completed successfully. On all subsequent power-up sequences the XT-3000 will read these parameters and configure itself.

The FORMAT UNIT command should be preceded by a MODE SELECT command which defines the format and drive parameters other than the default parameters. The recommended sequence of commands to perform a format is: RESERVE UNIT to prevent other devices from changing parameters during this sequence, MODE SENSE to find the current parameters and which options are supported and changeable, MODE SELECT (Page 3) to define the format parameters, FORMAT UNIT to perform the actual format, and a RELEASE UNIT to release the unit.

Formatting starts from track 0 of cylinder 0, and proceeds until the last track of the unit is formatted.

A FmtData (format data) bit of one indicates that a DATA OUT Phase takes place during the command execution. This data specifies the four byte defect list header. The header defines if the drive is to format using the P List and/or C List, if the drive is to stop on an error during format, and the length of the D List, if any. The optional D list of defects follows the header during the DATA OUT phase. The D List consists of one or more defect descriptors. The format of the D List is determined by the Defect List Format defined by bits 0 through 2 of the CDB. If bit 2 of byte 1 of the CDB equals zero, only the 4 byte Defect List Header is transferred from the host during the DATA OUT phase.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

In this case, the Defect List Length of the header (bytes 2 and 3) must equal zero. If bit 2 of byte 1 of the CDB equals one, then one or more Defect Descriptors is transferred in the "Bytes from Index" format.

FmtData bit of zero indicates that the DATA OUT phase shall not occur (no Defect List Header and no Defect Descriptors are supplied by the host). If Mode Select Page 3 (alternates per zone) does not equal zero, then the P-list will be mapped out. If alternates per zone equals zero, then no defects are mapped out and the drive is not requested to handle defects at all. No spare locations will be deallocated by the drive. Further REASSIGN BLOCKS commands will be rejected with CHECK CONDITION status and ILLEGAL REQUEST Sense Key.

A CmpLst (complete list) bit of one indicates the lists defined by the host during the DATA OUT phase of the command execution are the complete lists of known defects. Any previous host-specified defect map or defect data (G List) will be erased by the drive. The result is to erase the current G List and build a new G List.

Note: The FmtData bit must equal one if the CmpLst bit equals one.

A CmpLst bit of zero indicates that the data supplied by the host during the DATA OUT phase (header only or header and descriptors) is an addition to existing defect data already removed from the host addressable blocks. The result is that the existing G List (if one exists) is used. At the host request, the P, C and/or D Lists will also be used.

The Defect List Format (Bits 0-2) is used to specify the format of the Defect Descriptors used for a D-List. The only values allowed in this field are binary 000 (no D List) and 100 (D List is in the "Bytes from Index" format). If this field is set to binary 000, then the defect list in the header must also be zero. If this field is set to binary 100, then the defect list length may be zero (no D List), or eight (8) times the number of defects (use D List as defined by the Defect Descriptors).

An interleave value of zero or one requests that the drive use its default interleave which is one to one, thus one requesting that consecutive logical blocks be placed in consecutive physical order. The drive will not accept a value different from zero or one. Since the large multi-ported ring buffer of the drive electronics allows simultaneous transfers between the disc and host through the buffer, the need for interleave factors other than 1:1 is eliminated. The XT-3000 will disconnect, assuming the host supports Disconnect/Reconnect, while executing this command.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

The defect list shown in the following Figure 10-10 contains a four-byte Header followed by one or more Defect Descriptors. The Defect List Length is equal to eight times the number of Defect Descriptors. If the Defect List Length equals zero, no Defect Descriptors are transferred.

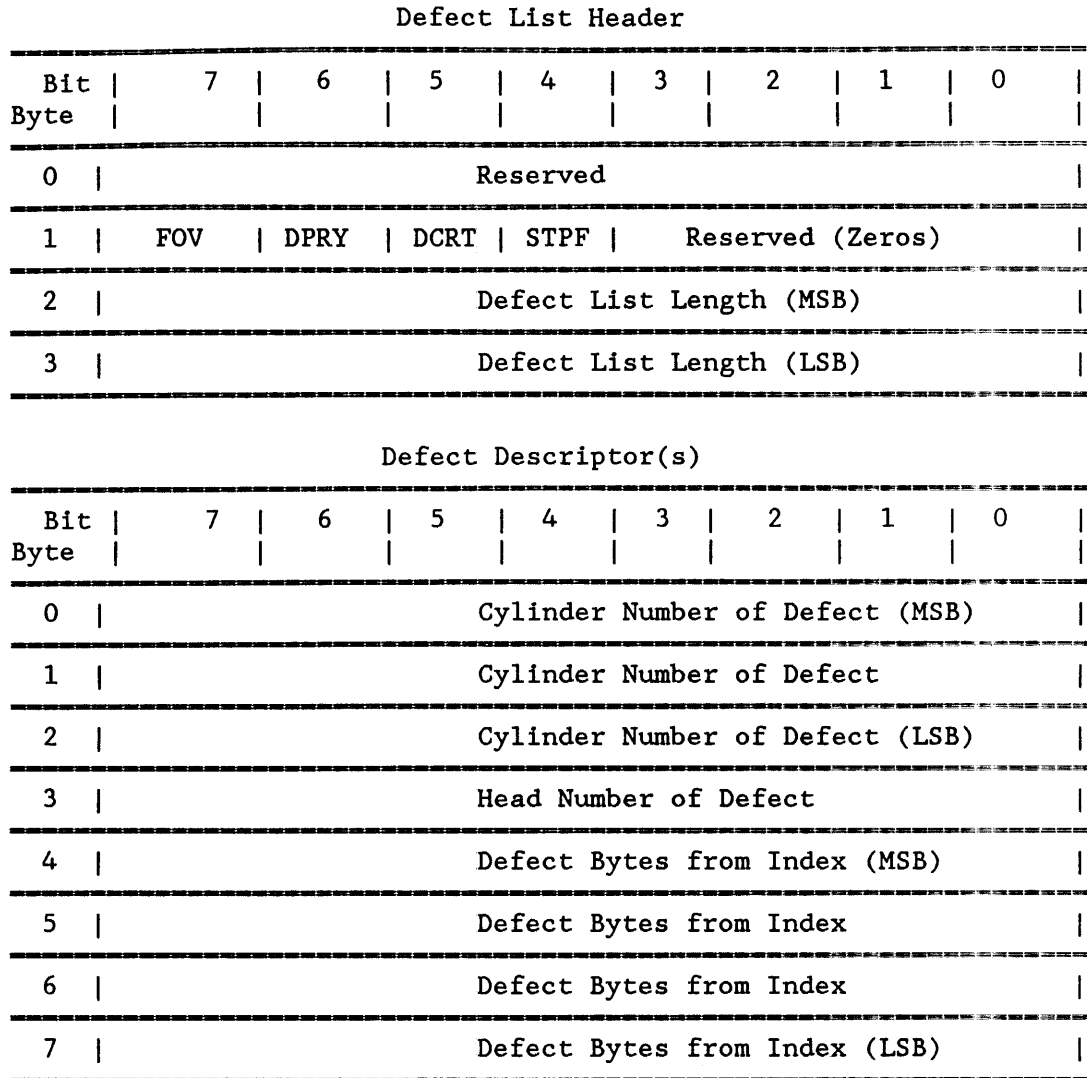


Figure 10-9

Defect List (D List) - Bytes from Index Format

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

The Byte 1 of the Defect List Header defines how the host may optionally control the Primary Defect List and the XT-3000 Certification flaw management schemes during the FORMAT UNIT command.

- Bits 0 through 3 are reserved.
- FOV (Format Options Valid) Bit 7 set to zero indicates that the initiator requests the drive's default values to be set for the functions defined by bits 4 through 6. If bit 7 is set to zero, the initiator shall set bits 4 through 6 to zero, otherwise the drive creates the CHECK CONDITION status with ILLEGAL REQUEST Sense Key. If FOV = 0, the drive defaults to DPRY = 0, DCRT = 1, and STPF = 0 (assuming Mode Select/Sense, Page 3 "Alternates per Zone" is greater than zero).
- FOV Bit 7 of one authorizes the setting of bits 4 through 6.
- DPRY (Disable Primary) bit set to zero and FOV set to one indicates that the drive shall manage the Primary List of defects while formatting.
- DPRY bit set to one and FOV set to one indicates that the drive shall exclude the Primary List from the list of flaws to manage while formatting.
- DCRT (Disable Certification) bit set to zero and FOV set to one indicates that the drive shall enable the certification routine while formatting.
- DCRT bit set to one and FOV set to one indicates that the drive shall disable the certification routine while formatting.
- STPF (Stop Format) bit set to zero indicates that the drive shall continue the format process even if either of the Lists of Defects P or G are not successfully accessed in whole or in part. The drive will create the CHECK CONDITION status after completion of the format process with RECOVERED ERROR Sense key, if no other error occurred other than the unsuccessful access of the P or G Lists.
- STPF bit set to one indicates that the drive shall stop the format process upon failing to successfully access, in whole or in part, any of the Lists of Defects P or G. The drive creates the CHECK CONDITION status with MEDIUM ERROR Sense key.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Each Defect Descriptor for the Bytes From Index format specifies the starting Byte address of the defect on the medium. The Defect Descriptor is defined as an eight-byte defect location. Each Defect Descriptor is comprised of the Cylinder Number of Defect, the Head Number of Defect, and the Defect Bytes from Index. The Defect Descriptors shall be in ascending order. For determining ascending order, the Cylinder Number of Defect is considered the most significant part of the address and the Defect Bytes from Index is considered the least significant part of the address.

A defect Bytes From Index of FFFFFFFFh in the D list indicates that the entire track is to be relocated.

General Defect Management Formatting

The Mode Select command Format Parameters, Page 3, and the Format Unit Command mapping options work together to define the type of Defect Management the drive uses.

The Format Unit command defines which defects are relocated. Mode Select, Page 3, defines which sectors are deallocated for "Spares".

Deallocation is the process of assigning a fixed number of sectors throughout the drive to be used as spare sectors. These spare sectors cannot be used directly and therefore are not considered user accessible LBA's. They are used only as alternative locations for the "replacement", or better, the relocation of "bad" LBA's.

Relocation is the process of changing the physical address of an LBA. When LBA's are relocated from bad sectors to good sectors, the bad sector is flagged as "bad" (this process is also referred to as "mapping-out"), and a previously deallocated sector becomes reallocated as a user accessible LBA. Therefore, deallocated sectors must exist before LBA's can be relocated. Thus, Mode Select/Sense, Page 3, "Spare (alternate) sectors per zone" field, must be at greater than zero.

Default Format

When the "Default" Format of the XT-3000 is used, then the XT-3000 will map-out the Plist. Also, the Stop on Format Error feature is enabled. This is equivalent to a FORMAT UNIT command four-byte Defect List Header DATA OUT phase of 00, B0, 00, 00.

There are two conditions that cause the Default Format to be used by the drive (assuming Mode Sense, page 3, "Alternates per Zone" > 0):

- 1) Format Unit CDB 04, 00, 00, 00, 00, 00. No Data Out phase occurs.
- 2) Format Unit CDB 04, 1X, 00, 00, 00, 00 with a Data Out phase of 00, 00, 00, 00; where X = bit 3 = 0, then Glist is also mapped out. Where X = bit 3 = 1, then Glist is erased and not mapped-out.

If the drive's current values for the "Alternates per Zone" field in Mode Select/Sense, Page 3, equals zero, then a Format Unit command of 04, 00, 00, 00, 00, 00 will not use the Default Format; no spares will be deallocated and no defects will be relocated.

Defect Lists Management

In order for any list of defects to be relocated, the drive's current values for "Alternates per Zone" field in Mode Select/Sense, Page 3, must be greater than zero.

The host may select how the drive shall handle the list by use of the bits in the CDB and the host supplied Defect List Header (refer to Figure 10-9).

The XT-3000 has the capability of mapping out bad sectors so the drive media appears error free to the host. In the Defect List Header during the DATA OUT phase of a format unit command, the host may use the DPRY and FOV bits to request whether or not the drive relocates the list of flaws recorded by Maxtor prior to shipment (P list). Also, the drive will maintain and map out an additional list of flaws (G List) on the disk if requested by the host in the Format Unit CDB by using the Cmplst bit. The G list, if it exists and is readable, may include any errors identified by the host in the Data Defect List (D List) supplied in the Defect Descriptors during the Data Out Phase of the FORMAT UNIT command. The G list may also include any errors identified by the drive (C List) during the verify process of the FORMAT UNIT command. The user may request the certification process (C List) by using the DCRT and FOV bits in the Defect List Header during the DATA OUT phase of a format unit command. The G list will also include errors previously identified by all REASSIGN BLOCKS commands that have been issued since the last completion of a format unit command with the Cmplst bit = 1.

With the MODE SELECT command, the host specifies how many sectors are deallocated either per track or cylinder to handle bad sectors. See the "zone" definition in the MODE SELECT command "Page 3." If the host deallocates no spare sectors with the MODE SELECT command (zero alternates/zone) then the XT-3000 will not map out any flaws or create any spare sectors (The host operating system must handle the defects.) If the host attempts either a REASSIGN BLOCK command or a FORMAT UNIT command which involves block reassignment, without first deallocating spare sectors, the drive will return an error condition.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

The Host disables the relocation of all defect lists (including Default format) while enabling the deallocation of spare sectors (assuming the current value of "Alternates per Zone" is greater than zero) by performing a Format Unit command 04, 18, 00, 00, 00, 00 with a Header Data Out Phase of 00, EO (or FO), 00, 00.

The Host disables deallocation of spare sectors and disables relocation of all defect lists by performing a Mode Select command which sets "Alternates per Zone" to zero, followed by a Format Unit command 04, 00, 00, 00, 00, 00.

Defect Lists

P - PRIMARY DEFECT LIST: This list refers to the list of defects recorded on the drive (if any) by Maxtor.

During the FORMAT UNIT command, if CDB bit FmtData = 1, Header bit FOV = 1, and the header bit DPRY = 0, the XT-3000 accesses this list in order to remove the P List flaws from the host addressable data blocks. This list is not subject to additions.

The host can select that the drive use only the P List flaws to return to the "as shipped" condition from Maxtor. The host may also request that the drive use the P-List in addition to any other list of flaws (C, D and/or G) the host may have selected. The P list is also used in the "Default" Format.

C - DRIVE CERTIFICATION: Includes the defects detected by the XT-3000 during a verify process executed during the FORMAT UNIT command. The drive certification flaws are added to the grown list (G List) by the XT-3000. During the FORMAT UNIT command, if CDB bit FmtData = 1, Header bit FOV = 1, and Header Bit DCRT = 0, the drive will automatically develop and map out the resulting C List.

D - DATA DEFECT LIST: This list is the Defect Descriptor/s supplied to the XT-3000 by the host in the DATA OUT phase. This list is supplied by the host when bits 4 and 2 of byte 1 of the CDB are set to 1 and bytes 2 and/or 3 of the Defect List Header are not a zero value. If the Defect List Length (Byte 2 and 3) of the Defect List Header is null, no Defect Descriptor/s (D List) is transferred. The defects identified by the host in the D List are mapped out and added to the Grown List (G List).

G: GROWN DEFECT LIST : This list includes defects identified to or by the XT-3000 (the C, D and G Lists). This list does not include the Primary defect list. These defects are classified as flaws appearing once the medium has been formatted. The host may request that the current G List be used during format (CDB bit CmpLst = 0 and FmtData = 1) or that the current G List be erased and a new one begun (CDB bit CmpLst = 1 and FmtData = 1). Entries to this Grown List include:

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

- Defects provided to the drive in Data Defect Lists (D List) during previous FORMAT UNIT commands.
- The drive certification defects (C List) detected during the previous FORMAT UNIT command.
- Defects appended by the result of successful completion of the REASSIGN BLOCKS commands.

NOTE: Because the Grown List incorporates dynamic lists (C and D and Reassign Block Command Locations), it should be the only defect list recorded by the XT-3000 after shipment.

Options	CDB Byte One				Defect List Header				Comments	
	Fmt Data		Def List		Byte One		Bytes 2 & 3			
	Bit 4	Bit 3	Format	Bit 2	FOV	DPRY	DCRT	(Default		
a	0	0	0	0	X	X	X	X	Default	No data out phase (no defect list header or defect descriptors). If Mode Select, page 3 alternates/zone does not equal zero, then map out Default (P list). If Mode Select, page 3 alternates/zone equals zero then format with no defect mapping. No spares are created. Reformat using existing G List for defect mapping. Data out phase of 4 byte defect list header. No defect descriptors. Use Default also. G list only.
b	1	0	0	0	0	0	0	X	Default, G	G list and perform certification process and map out resulting C list.
c	1	0	0	1	1	1	1	X	C	Same as d; also map out P List.
d	1	0	0	1	1	1	0	X	G, C	
e	1	0	0	1	0	0	0	X	G, C, P	
f	1	0	0	1	0	1	1	X	G, P	
g	1	0	1	1	1	0	1	0	G, P	
h	1	0	1	1	1	0	1	non-zero	G, P, D	Same as f; note that when Def List Fmt bit equals one and Defect List Length equals zero, no D List is transferred. This chart does not list this possibility again.
i	1	0	1	1	1	0	0	non-zero	G, P, D, C	Same as f; also map out D List (Defect Descriptors) transferred from Host during Data Out Phase (following the Defect List Length).
j	1	0	1	1	1	1	0	non-zero	G, D, C	Same as h; also perform certification and map out C List.
k	1	0	1	1	1	1	1	non-zero	G, D	
l	1	0	1	0	X	X	X	non-zero	G, D	Same as k.
m	1	1	1	0	X	X	X	non-zero	D	Existing G list is erased and not used.
n	1	1	1	1	1	1	0	non-zero	D, C	
o	1	1	1	1	1	0	0	non-zero	D, C, P	
p	1	1	1	1	1	0	1	non-zero	D, P	
q	1	1	0	1	0	1	1	X	P	P List only.
r	1	1	0	1	0	0	0	X	P, C	
s	1	1	0	1	1	1	0	X	C	C List only.
t	1	1	0	1	1	1	1	X	None	No defect mapping. Data Out Phase of 4 byte header. However, alternate sectors will still be reserved in each zone.
u	1	1	0	0	0	0	0	X	Default	
v	1	X	0	X	X	X	X	non-zero		Illegal request. When Def. List Fmt. bit = 0, the Defect List Length <u>MUST</u> also be zero.

X = Don't care
 * C indicates that existing (if any) G list will be used.
 C indicates certification process occurs (C list).
 P indicates the Maxtor factory list (P list) will be used.
 D indicates the host will provide a list of defects (D list).
 Default indicates that the "Default Format" option is used.

Figure 10-10
 Format Options

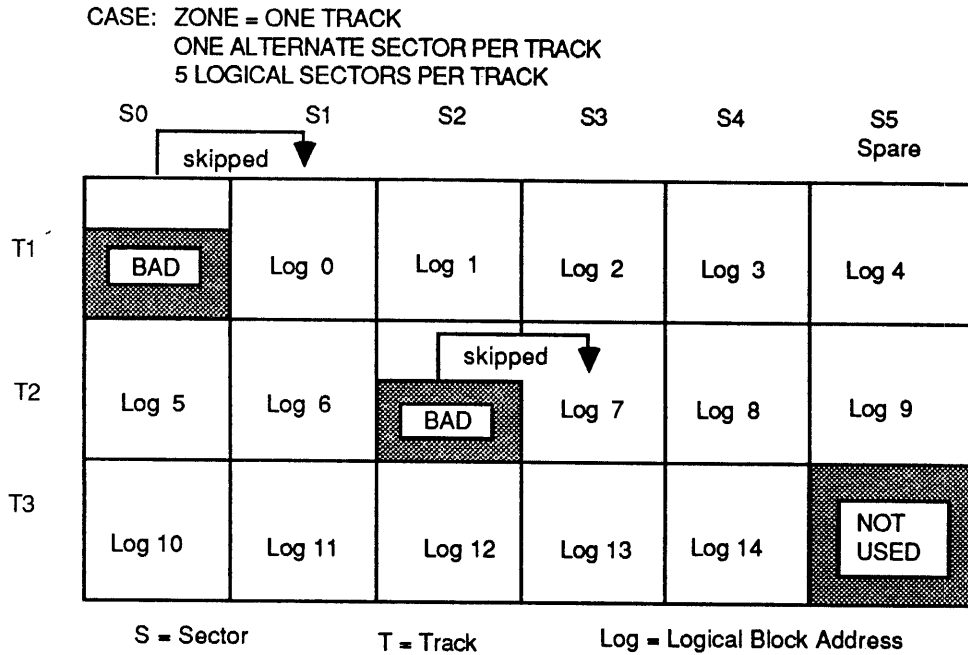


Figure 10-11

Defect Mapping Example

When possible during FORMAT or REASSIGN BLOCKS command, the controller skips known defects as shown in the above example. This scheme is designed to minimize the number of revolutions necessary to read consecutive tracks.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

10.5 REASSIGN BLOCKS Command
Operation Code: 07H

Bit	7	6	5	4	3	2	1	0	
Byte									
0	Operation Code								
1	Logical Unit Number			Reserved (Zeros)					
2	Reserved (00 _H)								
3	Reserved (00 _H)								
4	Reserved (00 _H)								
5	Control Byte								

Figure 10-12

REASSIGN BLOCKS Command

The REASSIGN BLOCKS command requests the XT-3000 to reassign the defective logical blocks to an area on the drive reserved for this purpose. If the FORMAT UNIT command was issued with FmtData set to zero in the CDB and Mode Select Page 3 alternates per zone equals zero, then the drive was not requested to reserve blocks for the defect management. In this case, the drive will reject the REASSIGN BLOCKS command with the CHECK CONDITION status and Sense Key/Error Code set to ILLEGAL REQUEST/No Defect Spare Location Available.

The host transfers a Defect List that contains the logical block addresses to be reassigned. The drive will reassign the physical media used for each logical block address in the list. The data contained in the logical blocks specified in the Defect List may be altered, but the data in all other logical blocks on the disk surface is preserved.

The effect of specifying a logical block to be reassigned that previously has been reassigned is to reassign the block again. Thus, over the life of the media, a logical block can be assigned to multiple physical addresses (until no more spare locations remain on the media).

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

The REASSIGN BLOCKS Defect List contains a four-byte Header followed by one or more Defect Descriptors. The length of each Defect Descriptor is four bytes.

The Defect list length specifies the total length in bytes of the Defect Descriptors that follow. The Defect List Length is equal to four times the number of Defect Descriptors. All defects specified by the Reassign Blocks Command will be logged in the G list.

Bit	7	6	5	4	3	2	1	0
0	Reserved							(00 _H)
1	Reserved							(00 _H)
2	Defect List Length (MSB)							
3	Defect List Length (LSB)							

Defect Descriptor(s)

Bit	7	6	5	4	3	2	1	0
0	Defect Logical Block Address (MSB)							
1	Defect Logical Block Address							
2	Defect Logical Block Address							
3	Defect Logical Block Address (LSB)							

Figure 10-13

REASSIGN BLOCKS Defect List

The Defect Descriptor specifies a four-byte Defect Logical Block address that specifies the defect location. These addresses are the values of the Information Bytes of the Extended Sense Data for which MEDIUM ERROR or RECOVERED ERROR Sense Keys were reported.

If the XT-3000 has insufficient capacity to reassign all of the Defective Logical Blocks, the command terminates with a CHECK CONDITION status and the Sense Key/Error Code is set to "MEDIUM ERROR/No Defect Locations Available".

10.6

READ Command

Operation Code: 08_H

Bit	7	6	5	4	3	2	1	0
Byte								
0	Operation Code							
1	Logical Unit Number			Logical Block Address (MSB)				
2	Logical Block Address							
3	Logical Block Address (LSB)							
4	Transfer Length							
5	Control Byte							

Figure 10-14

READ Command

The READ command requests that the XT-3000 transfers data to the host.

The Logical Block Address specifies the logical block at which the read operation will begin.

The Transfer Length specifies the number of contiguous logical blocks of data to transfer. A Transfer Length of zero indicates that 256 logical blocks are transferred. Any other value indicates the number of logical blocks that are transferred. The most recent data value written in the addressed logical block will be returned.

The drive disconnects while processing this command if the Host supports disconnect.

10.7

WRITE Command

Operation Code: 0A_H

Bit	7	6	5	4	3	2	1	0
0	Operation Code							
1	Logical Unit Number			Logical Block Address (MSB)				
2	Logical Block Address							
3	Logical Block Address (LSB)							
4	Transfer Length							
5	Control Byte							

Figure 10-15

WRITE Command

The WRITE command requests that the drive write the data transferred by the host to the medium. The Logical Block Address specifies the logical block at which the write operation will begin.

The Transfer Length specifies the number of contiguous logical blocks of data to be transferred. A Transfer Length of zero indicates that 256 logical blocks are to be transferred. Any other value indicates the number of logical blocks that are to be transferred.

The drive disconnects while processing this command (after a Data Out phase) if the Host supports disconnect.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

10.8

SEEK Command

Operation Code: 0B_H

Bit	7	6	5	4	3	2	1	0	
Byte									
0	Operation Code								
1	Logical Unit Number			Logical Block Address (MSB)					
2	Logical Block Address								
3	Logical Block Address (LSB)								
4	Reserved (00 _H)								
5	Control Byte								

Figure 10-16

SEEK Command

The SEEK command causes the XT-3000 to be physically positioned to the cylinder as defined in bytes one through three. No attempt to verify seek position is made until a READ or WRITE command is issued.

10.9

INQUIRY Command
 Operation Code: 12_H

Bit	7	6	5	4	3	2	1	0
Byte								
0	Operation Code							
1	Logical Unit Number			Reserved (Zeros)				
2	Reserved (00 _H)							
3	Reserved (00 _H)							
4	Allocation Length							
5	Control Byte							

Figure 10-17

INQUIRY Command

The INQUIRY command requests that information regarding parameters of the drive be sent to the initiator.

The Allocation Length specifies the number of bytes that the initiator has allocated for returned INQUIRY data. An Allocation Length of zero indicates that no INQUIRY data is transferred. This condition will not be considered as an error. Any other value indicates the maximum number of bytes that are to be transferred. The drive will terminate the DATA IN phase when Allocation Length bytes have been transferred or when all available INQUIRY data have been transferred to the host, whichever is less. The drive will return up to 36 bytes of INQUIRY data.

The INQUIRY command will return a CHECK CONDITION status only when the drive cannot return the requested INQUIRY data. The INQUIRY data is returned even though the peripheral device may not be ready for other commands, in which case, the drive may not have available the Product Identification (XT-????).

If an INQUIRY command is received from an initiator with a pending unit attention condition (before the drive reports CHECK CONDITION status), the drive will perform the INQUIRY command and will not clear the unit attention condition.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

The INQUIRY data contains a 5 byte Header followed by 31 bytes of Data Format as follows.

Bit	7	6	5	4	3	2	1	0
0	Peripheral Device Type					(00 _H) or (7F _H)		
1	Zero Value					(00 _H)		
2	Version					(00 _H) or (01 _H)		
3	Reserved (Zeros)		Response DataFormat - CCS (1 _H)					
4	Additional Length					(1F _H)		
5-7	Reserved					(00 _H)		
8-15	Vendor Identification "MAXTOR" in ASCII							
16-31	Product Identification XT-3170, XT-3280, XT-3380, in ASCII							
32-35	Firmware Revision Level in ASCII							

Note: Spaces in the above ASCII messages are 20_H.

Figure 10-18

INQUIRY Data

The peripheral device type (byte 0) is shown in the following table.

Code	Description
00 _H	Direct-Access device (Winchester disk)
7F _H	Logical Unit not present

Figure 10-19

Peripheral Device Type

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

The version byte 2 represents the implemented version of the SCSI standard as defined in the formal SCSI specification. A version byte of zero indicates the standard prior to publication. A version byte of one indicates the standard upon ANSI publication. The standard was published by ANSI in 1986.

The XT-3000 complies with the Common Command Set (CCS) specifications. Thus, the Response Data Format field of byte 3 is 1_H for the common command set.

The Additional Length (Byte 4) specifies the length in bytes of the Data Format parameters. If the Allocation Length of the CDB is too small to transfer all of the parameters, the Additional Length is not adjusted to reflect the truncation.

10.10 MODE SELECT Command
 Operation Code: 15_H

Bit	7	6	5	4	3	2	1	0
Byte								
0	Operation Code							
1	Logical Unit Number	PF	Reserved (Zeros)				SP	
2	Reserved (00 _H)							
3	Reserved (00 _H)							
4	Parameter List Length							
5	Control Byte							

Figure 10-20

MODE SELECT Command

The MODE SELECT command provides a means for the initiator to specify or change peripheral device parameters to the XT-3000.

The Parameter List Length specifies the length, in bytes, of all the information transferred during the DATA OUT phase of the MODE SELECT command. The value that the host puts in this byte should be the same value that is returned in the Sense Data Length, byte 0, of the Mode Sense Header for the page being selected, if the Block Descriptor is also included in the Mode Select command. If the Block Descriptor is not included in the Mode Select command, then Byte 4 of the CDB should equal the value returned in the Page Length, byte 1, of the Mode Sense data for the page being selected, plus six. If multiple Pages are to be selected, then their length and header must also be included. For example, when transferring a parameter list that includes the Block Descriptor, use 24_H for Page Code 3 and use 20_H for Page Code 4. A Parameter List Length of zero indicates that no data is transferred. This condition will not be considered as an error.

PF (Page Format) bit 4 byte 1 set to one indicates that the data sent by the initiator after the MODE SELECT Header and the Block Descriptors (if any) complies to the CCS Page Format and is not vendor unique.

PF (Page Format) bit 4 byte 1 set to zero indicates that the data sent by the initiator after the MODE SELECT Header and the Block Descriptors (if any) may be vendor unique.

SP (Save Parameters) bit 0 byte 1 set to one indicates that the drive shall:

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

- update the Current Page values with the values defined in the Pages, if issued;
- save the values defined in Page 1, if issued. The information is written on the drive in a special area. When the drive is powered up, it reads this area and uses the information as its parameters. If the host has not saved any pages, the page "default" values are used. The saved values may be read by the host via a MODE SENSE "report saved values" and "report current values" command.
- report command complete with no CHECK CONDITION status when successfully completing the above. Pages are reported as saveable in the MODE SENSE command with the PS bit (bit 7 byte 0) of the Page Header set to one.

SP bit 0 byte 1 set to zero indicates that the drive shall:

- update the Current Page values with the values defined in the Pages, if issued;
- shall not save the values defined in Page 1, if issued (i.e., modified values will be lost at power-down.) Previously saved values will not be altered.
- shall report command complete with no CHECK CONDITION status when successfully completing the above.

Important: The SP bit set to one only saves Page Code 1_H values. Setting the SP bit to one never saves Page Codes 3_H and 4_H. Page Codes 3_H and 4_H are only saved automatically when a Format Unit Command is issued immediately following the alteration of Page Codes 3_H and 4_H.

The MODE SELECT parameter list contains a four-byte Header, followed by one or no Block Descriptor, followed by zero or more pages of parameters, if any.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

MODE SELECT HEADER

Bit	7	6	5	4	3	2	1	0
0								(00 _H)
1								(00 _H)
2								(00 _H)
3								(08 _H) or (00 _H)

BLOCK DESCRIPTOR

Bit	7	6	5	4	3	2	1	0
0								(00 _H)
1								(00 _H)
2								(00 _H)
3								(00 _H)
4								(00 _H)
5								(00 _H)
6								Block Length
								01 _H - 256 Bytes/Block
								02 _H - 512 Bytes/Block
								04 _H - 1024 Bytes/Block
								08 _H - 2048 Bytes/Block
7								(00 _H)

PAGE DESCRIPTOR/S

0-n	Refer to each page
-----	--------------------

Figure 10-21

MODE SELECT Parameter List

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Code value for the media type field is assigned as follows :

00_H Default (currently mounted media type)

Figure 10-22

Media Type

The Block Descriptor Length (Byte 3) specifies the length in bytes of the Block Descriptor. The drive only accepts one or no Block Descriptor. A Block Descriptor Length of zero indicates that no Block Descriptor is included in the Parameter List. This condition will not be considered as an error.

The Block Descriptor specifies the media characteristics for the entire drive. The Block Descriptor contains a Density Code, a Number of Blocks, and a Block Length.

Code value for the Density Code field is assigned as follows:

00_H Default (default density of media)

Figure 10-23

Density Code

The Number of Blocks field specifies the number of Logical Blocks on the media that meet the Density Code and Block Length in the Block Descriptor. A number of blocks of zero, the only value accepted, indicates that all logical blocks of the drive have the same characteristics.

The Block Length specifies the length in bytes of each Logical Block which is programmable. The drive can be formatted with various bytes per block. The data fields in each sector on the disk are the same size as the block size. When Block Length is changed, Page 3 must also be sent in the same MODE SELECT command with the "sectors per track" (Byte 11) altered to reflect the new Block Length (i.e., a 512 byte sector can have as many as 26 sectors per track on an XT-3280, while a 1024 byte sector can only accommodate 14 sectors per track on an XT-3280.) Default = 512.

Note: Bytes 12 and 13 of Page 3 (Bytes/Physical Sector) must also be changed to the same Block length value.

Additional blocks of parameters called "Pages" may be sent to the XT-3000, following the MODE SELECT header, if the Block Descriptor Length is set to zero, or following the Block Descriptor. The Block Descriptor Length does not include the length of the Pages.

10.10.1 Description of Pages

The Pages are separated into sub-blocks containing a list of related flags and/or values. Each Page is preceded by a Page Code and the Length of the Page. The length byte value shall not include itself. The Page Code identifies the meaning of the following bytes within the page Length. Those pages in which the host requests parameters to be changed shall be sent to the drive. All Pages may be sent by the host.

It is recommended that the host issues a MODE SENSE command requesting Changeable values in byte 2 of the CDB, prior to issuing a MODE SELECT command, in order to find out which Pages are implemented by the drive, the length of each Page, and what values within each page are changeable.

```

-----
Page Code      Description
-----
1H           Error Recovery parameters
3H           Format Parameters
4H           Disk Drive Geometry parameters
-----
    
```

The XT-3000 may return a CHECK CONDITION status and set the Sense Key to ILLEGAL REQUEST for a value different than those above.

Figure 10-24

Page Codes

Bit	7	6	5	4	3	2	1	0
Byte								
0	0	0	Page Code - 1 _H					
1	Page Length (in bytes) (returned in Mode Sense)							
2	AWRE	ARRE	TB	RC	EEC	PER	DTE	DCR
3	Retry Count							

Figure 10-25

ERROR RECOVERY PARAMETERS: Page code 1

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

A DCR (Disable Correction), bit 0, of one indicates that the data is to be transferred without applying correction, whether or not it is actually possible to correct the data.

A DCR bit of zero indicates that the data is to be corrected if possible.

A DTE (Disable Transfer on Error), bit 1, of one and if the PER bit is set to one, indicates that the drive creates the CHECK CONDITION status and terminates the data transfer to the host immediately upon detection of a recoverable error. In this case the Transfer Length is not exhausted. The block in error, which is the first erring block encountered, may or may not be transferred to the host depending upon the setting of the TB bit. The DTE bit can only be set to one by the host if the PER bit is also set to one. The drive creates the Check Condition status with Illegal Request Sense Key if it receives PER bit of zero and DTE bit set to one.

A DTE bit of zero enables data transfer for any data which can be recovered within the limits of the Error Recovery Flags. Any erroring block that would be posted, which is the last recovered block encountered, is not posted until the Transfer Length is exhausted.

A PER (Post Error), bit 2, of one indicates that the drive enables the reporting of the CHECK CONDITION status for recovered errors, with the appropriate Sense Key. The CHECK CONDITION shall happen during the data transfer depending either on the DTE bit value or if an unrecoverable error occurred. If multiple errors occur, the Sense data shall report the Block Address of either the unrecoverable error, or if no unrecoverable error occurred, the last block with recovered error (DTE = 0), or the first block with recovered error (DTE = 1).

A PER bit of zero indicates that the XT-3000 will not create the CHECK CONDITION status for errors recovered within the limits established by the other Error Recovery Flags. Recovery procedures exceeding the limits established by the other Error Recovery Flags are posted accordingly. The transfer of data may terminate prior to exhausting the Transfer Length depending on the error type of (recoverable or unrecoverable) and the state of the other Error Recovery Flags.

An EEC (Enable Early Correction) bit 3, of one indicates that the XT-3000 enables the use of the error correction, before applying retries. Seek or positioning retries and the recovery procedure retries of the message system are not affected by the value of this bit. EEC and DCR both of one is an Invalid Request for which the drive will create the CHECK CONDITION with Illegal Request Sense Key.

An EEC bit of zero, indicates that the drive exhausts the defined retry limit prior to enabling error correction.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

An RC (Read Continuous), bit 4, of one requests the XT-3000 to transfer the Transfer Length without adding delays which would increase or ensure data integrity (ie. Delays caused by the drive's Error recovery schemes). This implies that the drive may send data which may be erroneous or fabricated in order to maintain a continuous flow of data and avoid delays. The drive assigns priority to this bit over conflicting error control bits within this byte.

An RC bit of zero, indicates that error recovery operations which cause reasonable delays are acceptable during the data transfer. Data is not fabricated.

Implementors note: Fabricated data may be data already in the buffer or any other drive scheme.

An ARRE (Automatic Read Reallocation of defective blocks Enabled) bit 6 set to one indicates that the target shall enable automatic reallocation of defective data blocks during READ operations. The execution of the automatic reallocation is similar to the function of the REASSIGN BLOCKS command, but is initiated at the discretion of the target.

An ARRE bit set to zero indicates that the target shall not perform automatic reallocation of defective data blocks during READ operations, but instead shall create the CHECK CONDITION Status with Sense Key of MEDIUM ERROR upon encountering such defective data blocks.

An AWRE (Automatic Write Reallocation of defective data blocks Enabled) bit 7 set to one indicates that the target shall enable automatic reallocation of defective data blocks during WRITE operations. The execution of the automatic reallocation is similar to the function of REASSIGN BLOCKS command, but is initiated at the discretion of the target.

An AWRE bit sets to zero indicates that the target shall not perform automatic reallocation of defective data blocks during WRITE operations, but instead shall create the CHECK CONDITION Status with Sense Key of MEDIUM ERROR upon encountering such defective data blocks.

A TB (Transfer Block), bit 5, of one, indicates that the failing block data is to be transferred to the host.

A TB bit of zero indicates the the failing block data is not to be transferred to the host.

Bit 6 and 7 are not used and must be 0.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

The following table summarizes all modes of operation.

EEC	PER	DTE	DCR	Description
0	0	0	0	Retries then Correction are attempted. Recovered and/or corrected data (if any) is transferred corrected (EEC and DCR off) with no CHECK CONDITION Status (PER off) at the end of the transfer. - Transfer Length is exhausted. Data transfer stops only if an unrecoverable error is encountered. The drive creates CHECK CONDITION status with the appropriate Sense Key. - The data of the unrecoverable Block (if any) may or may not be transferred to the initiator depending on the setting of the TB bit.
0	0	0	1	Same as (0 0 0 0) above but No Correction Applied (EEC off, DCR on).
0	0	1	0	Invalid Request (DTE on, PER off)
0	0	1	1	Invalid Request (DTE on, PER off)
0	1	0	0	Report Last Data Block in error at the end of transfer. Retries then Correction (EEC off, DCR off) are attempted and recovered data (if any) is transferred corrected. -The Transfer Length is exhausted if no unrecoverable error occurred (DTE off). - The drive creates Check Condition status with RECOVERED ERROR Sense Key and reports, in the Information bytes field of the Extended Sense data, the last block for which recovered error occurred, if any (PER on). - The data of the unrecoverable Block (if any) may or may not be transferred to the initiator depending on the setting of the TB bit.
0	1	0	1	Same as (0 1 0 0) above but No Correction Applied (EEC off, DCR on).
0	1	1	0	Stop Transfer on First Recovered Error Encountered. Retries then Correction (EEC off, DCR off) are attempted and recovered data (if any) is transferred corrected, but transfer stops (DTE on) after the first recovered (or not) or unrecoverable error is detected.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

EEC	PER	DTE	DCR	Description
				- The drive creates CHECK CONDITION status (PER on) with RECOVERED ERROR Sense Key on the first block for which a recovered error occurred, if any.
				- This combination is only valid if the corrected data is transferred, therefore TB bit shall be set to one. TB bit not set to one is an Invalid Request.
0	1	1	1	Same as (0 1 1 0) above but No Correction Applied (EEC off, DCR on).
				- The data of the erring Block (if any) may or may not be transferred to the initiator depending on the setting of the TB bit.
1	0	0	0	Correction then Retries (DCR off, EEC on). Same as (0 0 0 0) except apply ECC Correction first.
1	0	0	1	Invalid Request (EEC on, DCR on).
1	0	1	0	Invalid Request (DTE on, PER off).
1	0	1	1	Invalid Request (DTE on, PER off)(EEC on, DCR on).
1	1	0	0	Report Last Data Block in error at the end of transfer. Same as (0 1 0 0) except apply ECC Correction first.
1	1	0	1	Invalid Request (EEC on, DCR on).
1	1	1	0	Stop transfer on First Recovered Error Encountered. Same as 0110 except Correction then Retries are attempted.
1	1	1	1	Invalid Request (EEC on, DCR on).

The XT-3000 will return a CHECK CONDITION status and set the Sense Key/Error code to "ILLEGAL REQUEST/ Illegal Function for Device Type" for any invalid combination.

Retry Count is the number of times that the drive shall attempt its read recovery algorithm.

Additional Page 1 Bytes are not currently used, however, the host should determine the length of Page 1 in the Mode Sense command for possible additional Page 1 bytes.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Bit Byte	7	6	5	4	3	2	1	0
0	0	0	Page Code = 3 _H				(03 _H)	
1	Page Length (in bytes)						(16 _H)	

HANDLING OF DEFECT FIELDS

2	Tracks per Zone (MSB)				(00 _H)			
3	Tracks per Zone (LSB)*							
4	Alternate Sectors per Zone (MSB)							
5	Alternate Sectors per Zone (LSB)							
6 & 7	Not Used						(00 _H)	
8	Alternate Tracks per Volume (MSB)				(00 _H)			
9	Alternate Tracks per Volume (LSB)				(00 or 02 _H)			

* (00_H) or (01_H) or (Data Tracks per Cylinder _H)

TRACK and SECTOR FORMAT FIELDS

10	Sectors Per Track (MSB)							
11	Sectors Per Track (LSB)							
12	Data Bytes per Physical Sector (MSB)							
13	Data Bytes per Physical Sector (LSB)							
14	Interleave (MSB)				(00 _H)			
15	Interleave (LSB)				(00 or 01 _H)			
16 through 19	Not Used						(00 _H)	

Figure 10-26

Format Parameters: Page Code 3_H (Bytes 0 through 19)

(The following page contains bytes 20 through 23.)

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

(Continued from previous figure)

DRIVE TYPE FIELD

Bit	7	6	5	4	3	2	1	0	
20	SSEC - 1	0	0	0	0	Reserved (80 _H)			
21 through 23	Reserved (00 _H)								

Figure 10-27

FORMAT PARAMETERS: Page code 3_H (Bytes 20 through 23)

Important: Page Code 3 parameters must never be changed unless a Format Unit Command Follows.

10.10.2 Handling of Defect Fields; Page Code 3

The bad sector mapping scheme supported by the XT-3000 allows the host to allocate spare sectors per zone. The host defines that the size of the zone may be a track or cylinder. The host also defines how many spare sectors will be assigned to each zone. The spare sectors are physically located at the end of the zone. When tracks per zone equals one track, and a bad sector is mapped out, it will be mapped to the following sector. All subsequent sectors are shifted until the end of the zone. This is done to minimize the performance degradation due to bad sectors. When tracks per zone equals a cylinder, and a sector is mapped out, it is mapped to a spare sector at the end of the zone.

If the host specifies a value for the Tracks Per Zone that is not supported by the drive, the drive will round up or round down the value to a supported zone size and reject the command with CHECK CONDITION status. The Sense Key/Error Code will be set to "ILLEGAL REQUEST/Illegal Block Descriptor. The host may then issue a MODE SENSE command requesting the Current values to be returned, in order to be informed about which value has been set by the controller in response to the initially requested value of the MODE SELECT command. The round up or down value is only available with the current values, and will also be available as saved values after successful completion of the Format Unit Command.

Tracks Per Zone indicates that the controller shall divide the capacity of the XT-3000, prior to format, in equal number of tracks for the purpose of allocating with the next four bytes, an equal number of alternate sectors or tracks per zone for handling defects. A zone can be one track (01_H) or one cylinder (number of heads; 09_H - 3170 or $0F_H$ - 3280/3380). The last zone of the device may not include the same number of tracks as the previous zone(s).

Alternate Sectors per Zone indicates the number of sectors that the controller deallocates from the host addressable blocks prior to the FORMAT UNIT command. These sectors will be available as replaceable sectors for defective sectors. These alternates will be located at the end of tracks, or cylinders, depending on the zone size. If this field equals zero, then the FmtData bit of the FORMAT UNIT command should also equal zero.

There are two ways to disable XT-3000 defect handling:

(1) No Deallocation. The host sets the Mode Select Page 3 alternates per zone field to zero and sets the FmtData bit of the FORMAT UNIT command to zero. No spare sectors are deallocated.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

(2) Deallocation without Relocation. The host sets the FmtData and the CmpLst bits in the FORMAT UNIT command to one and sets the Defect List Length of the Header (sent during the Data Out phase of the FORMAT UNIT command) to zero. Byte one of the Header must equal an EO_H or an FO_H. This will cause the alternates per zone to be deallocated, but no defects will be mapped out.

Alternate Tracks per Volume field is for Mode Sense only. Mode Select ignores this field.

10.10.3 Track and Sector Format Field: Page Code 3

Sectors per Track indicates the number of physical sectors that the drive shall format (or has formatted in the case of a Mode Sense Command) per disk track. The drive will set an equal data sector size to all sectors accordingly. The drive will format as many sectors as it can. For capacity reasons it is recommended to use the maximum number of sectors per track according to the sector size. The MODE SENSE command returns the number of physical sectors per track. If one sector per track is deallocated for defect handling, the XT-3000 will include that sector in this Sectors Per Track field. On the XT-3380, if this field is equal to zero, the drive will automatically calculate the maximum number of sectors/track.

The Data Bytes per Physical field are used to change the sector size. Data Bytes for physical sector indicates the number of data bytes that the drive has allocated per physical sector. This field should equal the value as the Logical Block size field in the Block Descriptor (i.e. 1024 Bytes/Sector = 0400_H).

Interleave is only returned by the MODE SENSE command. The drive reports this field as non changeable in the corresponding MODE SENSE commands. The drive ignores this field in MODE SELECT commands.

10.10.4 Drive Type Field: Page Code 3

A SSEC bit of one indicates that the controller uses soft sector formatting. This bit is not changeable by the initiator.

NOTE: The Read Capacity command uses the values of Page Codes 3 and 4 to calculate the maximum addressable LBA.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Bit	7	6	5	4	3	2	1	0
Byte								
0	0	0	Page Code = 4 _H				(04 _H)	
1	Page Length (in bytes)						(12 _H)	
2	Number of Cylinders (MSB)							
3	Number of Cylinders							
4	Number of Cylinders (LSB)							
5	Number of Heads							
6 through 11	Not Used						(00 _H)	
12	Drive Step Rate							
13	Drive Step Rate							
14 through 16	Not Used						(00 _H)	
17 through 19	Reserved						(00 _H)	

Figure 10-28

Disk Drive Geometry Parameters: Page Code 4

The Number of Cylinders and number of heads is changeable and can be up to the value returned by the MODE SENSE command with Default values. The drive will create a CHECK CONDITION status when receiving a value greater than the default value. The FORMAT UNIT command will format the drive up to the cylinder value received in the MODE SELECT command.

The Drive Step Rate field applies only to the 3170 and 3280 and is returned by Mode Sense only. It is not changeable and is ignored in the Mode Select command.

All other parameters shall be set to zero by the initiator.

10.11

RESERVE Command

Operation Code: 16_H

Bit	7	6	5	4	3	2	1	0
Byte								
0	Operation Code							
1	Logical Unit Number		3rd Pty	Third Party Device ID				0
2	Reserved (00 _H)							
3	Reserved (00 _H)							
4	Reserved (00 _H)							
5	Control Byte							

Figure 10-29

RESERVE Command

The RESERVE command is used to reserve the drive.

The initiator requests that the entire drive be Reserved until the reservation is released by a RELEASE command from the same initiator, by a BUS DEVICE RESET message from any initiator, or by a "hard" RESET condition. A drive reservation will not be granted if the drive is reserved by another initiator. It is permissible for an initiator to reserve a drive that is currently reserved for that initiator. If, after honoring the reservation, any other initiator then subsequently attempts to perform any command on the reserved drive then the command is rejected with RESERVATION CONFLICT status.

An initiators reservation may be superceded if that initiator issues another RESERVE UNIT with a different SCSI ID. An initiator can supercede its reservation without first issuing a RELEASE command.

The XT-3000 supports the third party reservation option.

The third party reservation option for the RESERVE command allows an initiator to reserve a drive for another SCSI device.

If the third-party (3rdPty) bit is zero, then the third-party reservation option is not requested. If the 3rdPty bit is one the RESERVE command will reserve the specified SCSI device specified in the third-party device ID field. The drive will preserve the reservation until it is released by the same initiator, or by a BUS DEVICE RESET message from any initiator, or a "hard" RESET condition. The drive will ignore any attempts to release the reservation made by any other initiator.

10.12

RELEASE Command

Operation Code: 17_H

Bit	7	6	5	4	3	2	1	0
0	Operation Code							
1	Logical Unit Number	3rd Pty	Third Party Device ID					0
2	Reserved (00 _H)							
3	Reserved (00 _H)							
4	Reserved (00 _H)							
5	Control Byte							

Figure 10-30

RELEASE Command

The RELEASE command is used to release the previously reserved drive. It is not an error for an initiator to attempt to release a reservation that is not currently active. The drive will ignore any attempts to release a reservation made by another initiator.

The initiator requests the XT-3000 to terminate all drive reservations from the initiator.

The XT-3000 supports the third party release option.

The third-party release option for the RELEASE command allows an initiator to release a device that was previously reserved by the same initiator using the third-party reservation option.

If the third-party (3rdPty) bit is zero, then the third-party release option is not requested. If the 3rdPty bit is one then the device will be released, but only if the reservation was made using the third-party reservation option by the same initiator for the same SCSI device as specified in the third-party device ID field.

10.13

MODE SENSE Command

Operation Code: 1A_H

Bit	7	6	5	4	3	2	1	0
0	Operation Code							
1	Logical Unit Number				Reserved (Zeros)			
2	Page Control Field				Page Code			
3	Reserved (00 _H)							
4	Allocation Length							
5	Control Byte							

Figure 10-31

MODE SENSE Command

The MODE SENSE command provides a means for the XT-3000 to report its peripheral device parameters to the Initiator. It is a complementary command to the MODE SELECT command.

It is recommended that the Initiator issue a MODE SENSE command requesting the drive to return all Changeable values (PCF field configuration 0 1 and Page Code 3FH in byte 2 of the MODE SENSE CDB) prior to issuing any MODE SELECT commands, in order to find out which Pages are implemented by the drive, the length of each Page, and which bits and bytes are changeable.

An initiator may request a particular Page to be returned from the drive by selecting its code in byte 2 of the CDB. A page code of 3F_H will return all pages.

Page Control Field bits 7 and 6 byte 2 of the CDB.

7 6
0 0

Report Current Values.

- If the Page Code is equal to 3F_H, all supported Pages are returned to the initiator with fields and bits set to Current values.

- If the Page Code is different than 3F_H, the Page defined by the Page Code is returned to the initiator with fields and bits set to Current values.

The Current values are either :

- as set in the last successfully completed MODE SELECT command since Power On or Reset.

- or are identical to the Saved values if no MODE SELECT command has been issued since the last Power On or Reset.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

- or report Drive Not Ready if unable to yet access the Saved Values.

- or are identical to the Default value if no saved parameters exist and no MODE SELECT command has been issued since Power On or Reset.

Fields and bits not supported by the drive shall be set to zero.

The Page Length byte value of each Page returned by the drive indicates up to which fields are supported within the particular Page.

- 0 1 Report Changeable Values.
- If the Page Code is equal to $3F_H$, all supported Pages are returned to the initiator with bits and fields that are allowed to be changed by the initiator set to one. Fields and bits not allowed to be changed by the initiator are set to zero.
 - If the Page Code is different than $3F_H$, the Page defined by the Page Code is returned to the initiator with bits and fields that are allowed to be changed by the initiator set to one. Fields and bits not allowed to be changed by the initiator are set to zero.
- 1 0 Report Default Values.
- If the Page Code is equal to $3F_H$, all supported Pages are returned to the initiator with fields and bits set to the drive default values.
 - If the Page Code is different than $3F_H$, the Page defined by the Page Code is returned to the initiator with fields and bits set to the drive default values.
- Fields and bits not supported by the drive are set to zero.
- The value of the fields returned with this code aids in avoiding confusion over whether the value of zero is the default or the non supported value.
- 1 1 Report Saved Values.
- If the Page Code is equal to $3F_H$, all supported Pages are returned to the initiator with fields and bits set to the saved values.
 - If the Page Code is different than $3F_H$, the Page defined by the Page Code is returned to the initiator with fields and bits set to the saved values.
- The Saved values are either:
- the values saved during the last successfully completed FORMAT UNIT (Page 3 and 4) or MODE SELECT (w/sp =1 for Page 1) commands.
 - or report Drive Not Ready if unable to yet access the Saved Values.
 - or identical to the Default values if saved parameters do not exist.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

The saved values are recorded on disk. Pages 3 and 4 are only saved automatically after a FORMAT UNIT command. Page 1 is saved when the host sets the SP bit to one in the Mode Select CDB, Page 1. Fields and bits not supported by the drive are set to zero.

The Allocation Length specifies the number of bytes that the initiator has allocated for returned MODE SENSE data. An Allocation Length of zero indicates that no MODE SENSE data is to be transferred. This condition will not be considered as an error. Any other value indicates the maximum number of bytes that are to be transferred. The XT-3000 will terminate the DATA IN phase when Allocation Length bytes have been transferred or when all available MODE SENSE data have been transferred to the initiator, whichever is less. Thus, if the host wants all available data to be transferred from the drive, byte 4 may equal FF_H.

The MODE SENSE data contains a four-byte Header, followed by one eight-byte Block Descriptor, followed by zero or more Pages. Byte 2 of the CDB is allocated to the selection of the Pages. The PCF field defines in which format the Pages shall be returned to the initiator, and the Page Code field specifies which Pages to return.

Implementors note: The values returned to the Host in the Mode Sense data should be used for examination and configuration purposes. Some of the fields in this data are zeros because they are not currently used. The Host should not test for zeros in these fields since future products or current product enhancements may use these fields. Also, because future products or current product enhancements may have different characteristics, the values presently returned in some of the currently used fields may change or vary. Therefore, the Host should not necessarily lock itself into the expectation of these values.

A good sequence for Host systems to use is to ensure that the UNIT ATTENTION additional error code after a Power-On and/or Reset is equal to a 29_H, not a 90_H (refer to Section 7.2). Next, the Host should perform an Inquiry command to determine device type and model. Next, the Host should perform a Mode Sense command of CURRENT values to determine if the drive is currently at the desired configuration. If not, the Host should perform a Mode Sense command of CHANGEABLE values to determine if the bits to be changed are indeed changeable. The Host may then change the configuration of the drive with a Mode Select command. If any Page 3 or 4 values are changed, then a Format Unit command is required. The Host may then perform a Read Capacity command to determine the maximum addressable LBA.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

MODE SENSE HEADER

Bit	7	6	5	4	3	2	1	0	
Byte									
0	Sense Data Length								
1	Medium Type							(00 _H)	
2	WP		Reserved				(80 _H) or	(00 _H)	
3	Block Descriptor Length							(08 _H)	

BLOCK DESCRIPTOR

Bit	7	6	5	4	3	2	1	0	
Byte									
0	Density Code							(00 _H)	
1	Number of Blocks (MSB)							(00 _H)	
2	Number of Blocks							(00 _H)	
3	Number of Blocks (LSB)							(00 _H)	
4	Reserved							(00 _H)	
5	Block Length (MSB)							(00 _H)	
6	Block Length i.e (01 _H) (02 _H), (04 _H) or (08 _H)								
7	Block Length (LSB)							(00 _H)	

PAGE DESCRIPTOR/S

Bit	7	6	5	4	3	2	1	0
Byte								
0	PS	0	Page Code					
1	Page Length							
2-n	Refer to Page Descriptor Definitions							

Figure 10-32

MODE SENSE Data

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

The Sense Data Length (Byte 0 of the Header) specifies the length in bytes of the following MODE SENSE data that is available to be transferred during the DATA IN phase. The Sense Data Length does not include byte 0. The medium type value returned is 00_H.

The Block Descriptor Length (Byte 3) specifies the length in bytes of the Block Descriptor which is always 08_H.

The Block Descriptor specifies the media characteristics for the entire drive. The Block Descriptor contains a Density Code, a Number of Blocks, and a Block Length.

The Number of Blocks field specifies the number of logical blocks on the media that meet the Density Code and Block Length in the Block Descriptor. A Number of Blocks of zero, value returned, indicates that all logical blocks of the drive have the same media characteristics. The XT-3000 returns 00_H for these values.

The Block Length specifies the length in bytes of each logical block (sector size) and is programmable with a Mode Select Command. The drive is typically formatted with either 256, 512, 1024 or 2048 bytes per block. The data fields in each sector on the disk are the same size as the block size.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Each Page is preceded by a Header of two bytes defining that the page is savable (PS bit = 1), the Page Code and the length of the Page. Following the Header, the Pages are separated into sub-blocks containing a list of related flags and/or values.

10.13.1 Page Description

PS (Parameters Savable) bit 7 byte 0 of each Page Header is always set to one by the drive indicating that the supported parameters in the Page defined by the Page Code can be saved by the drive. Page Codes 3 and 4 are always automatically saved only with the subsequent Format Unit command. Also, when successfully completing a MODE SELECT command of Page Code 1 issued with the SP bit set in the CDB, the drive will save the error recovery parameters of the defined Page Code 1. Thus, all Page Codes are saveable. See MODE SELECT command definition.

Bit 6 of byte 0 is reserved.

The Page Code identifies the meaning of the subsequent bytes in the Page. The Page Length indicates the number of bytes that the drive supports in each Page. The Page Length value of each page does not include the Page Length byte. The XT-3000 returns in the Pages of the MODE SENSE commands as many consecutive bytes that it supports, for each Page that it supports. The Page Length shall be set in the Pages of the MODE SELECT commands to the exact same value returned by the drive in the MODE SENSE Page Length bytes. Otherwise, the XT-3000 shall create CHECK CONDITION status with the Sense Key of ILLEGAL REQUEST.

Changeable values of Pages may be modified by successfully completing a MODE SELECT command. Saved values of Pages 3 and 4 may only be updated by a successfully completed FORMAT UNIT command. A FORMAT UNIT command completing with NO CHECK CONDITION status indicates that the saved values have been successfully saved.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Page code	Meaning
1 _H	Error Recovery parameters
3 _H	Direct Access Device Format parameters
4 _H	Disk Drive Geometry parameters
3F _H	Return all Pages to the initiator.

Figure 10-33

Page Codes (bits 0 through 5 of byte 0 in the Page Header
and bits 0 through 5 of byte 2 of the CDB)

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Bit	7	6	5	4	3	2	1	0
Byte								
0	PS - 1	0	Page Code - 1 _H				(81 _H)	
1	Page Length							
2	AWRE	ARRE	TB	RC	EEC	PER	DTE	DCR
3	Retry Count							

MODE SENSE values				
	<u>Current</u>	<u>Changeable</u>	<u>Default</u>	<u>Saved</u>
Byte 0	81 _H	81 _H	81 _H	81 _H
Byte 1	02 _H	02 _H	02 _H	02 _H
Byte 2	Host dependent	3F _H	00 _H	Host dependent
Byte 3	Host dependent	FF _H	08 _H	Host dependent

Figure 10-34

ERROR RECOVERY PARAMETERS Page Code 1

Current, Changeable, Default and Saved Values

Page 1 is saved when a successful Mode Select command (with SP bit set to one) is completed.

Refer to MODE SELECT Page 1 for the definition of Bytes 2 and 3.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Bit	7	6	5	4	3	2	1	0
Byte								
0	PS - 1	0	Page Code - 3 _H				(83 _H)	
1	Page Length (in bytes)						(16 _H)	
2	Tracks per Zone (MSB)							
3	Tracks per Zone (LSB) (01 _H , 09 _H or 0F _H)							
4	Alternate Sectors per Zone (MSB)							
5	Alternate Sectors per Zone (LSB)							
6	Not Used						(00 _H)	
7	Not Used						(00 _H)	
8	Alternate Tracks per Volume (MSB)						(00 _H)	
9	Alternate Tracks per Volume (LSB)						(02 _H)	
10	Sectors per Track (MSB)							
11	Sectors per Track (LSB)							
12	Data Bytes per Physical Sector (MSB)							
13	Data Bytes per Physical Sector (LSB)							
14	Interleave						(00)	
15	Interleave (LSB)						(01)	
16 through 19	Not Used						(00 _H)	
20	SSEC-1	0	0	0	0	Reserved (80 _H)		
21 through 23	Reserved						(00 _H)	

Figure 10-35

FORMAT PARAMETERS Page Code 3

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

	MODE SENSE values			
	<u>Current</u>	<u>Changeable</u>	<u>Default</u>	<u>Saved</u>
Byte 0	83 _H	83 _H	83 _H	83 _H
Byte 1	16 _H	16 _H	16 _H	16 _H
Byte 2 & 3	Host dependent	FFFF _H	Drive Dependent * (one cylinder)	Host dependent
Byte 4 & 5	Host dependent	FFFF _H	0002 _H (two sectors)	Host dependent
Byte 6 to 9	Zero	Zero _H	Zero _H	Zero
Byte 10 & 11	Host dependent	FFFF _H	Drive Dependent **	Host dependent
Byte 12 & 13	Host dependent	FFFF _H	0200 _H (512 bytes)	Host dependent
Byte 14 & 15	0001	0000 _H	0001 _H	Host dependent
Byte 16 to 19	Zero	Zero _H	Zero _H	Zero
Byte 20	80	00 _H	80 _H	Host dependent
Byte 21 to 23	Zero	Zero _H	Zero _H	Zero

* - 3170 = 0009_H, 3280 and 3380 = 000F_H
 ** - 3170 and 3280 = 001A_H (26 sectors)
 3380 = 0022_H (34 sectors)

Figure 10-36

Page Code 3 Current, Changeable, Default and Saved Values

Page 3 and 4 are saved only if a successful Format Unit command is completed.

Refer to MODE SELECT Page 3 for definitions of Bytes 2 through 23.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Bit	7	6	5	4	3	2	1	0
Byte								
0	PS - 1	R	Page Code - 4 _H				(84 _H)	
1	Page Length (in bytes)					(12 _H)		
2	Number of Cylinders (MSB)							
3	Number of Cylinders							
4	Number of Cylinders (LSB)							
5	Number of Heads							
6 through 11	Not Used					(00 _H)		
12	Drive Step Rate							
13	Drive Step Rate							
14 through 16	Not Used					(00 _H)		
17 through 19	Reserved					(00 _H)		

Figure 10-37

DISK DRIVE GEOMETRY PARAMETERS Page Code 4

The Number of Cylinders is a changeable parameter, but cannot be set to a value greater than the default value (1224 or 04C8_H). A value greater than the real capacity will result in an error in the next Format Unit command. Defining a number of cylinders less than the real capacity of the XT-3000 is allowed. The Default Number of Cylinders includes all tracks reserved by the XT-3000.

The Number of Heads is changeable to any value equal to or less than the actual number of heads. The default value depends on the drive model: XT-3170 = 9, XT-3280 and 3380 = 15 (0F_H).

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

MODE SENSE Page 4 returned values

	<u>Current</u>	<u>Changeable</u>	<u>Default</u>	<u>Saved</u>
Byte 0	84 _H	84 _H	84 _H	84 _H
Byte 1	12 _H	12 _H	12 _H	12 _H
Byte 2 to 4	Host dependent	FFFFFF _H	0004C8 _H	Host dependent
Byte 5	Host dependent	FF _H	Drive Dependent*	Host dependent
Byte 6 to 11	Zero	Zero	Zero	Zero
Byte 12 to 13	Drive dep. **	Zero	Drive dep. **	Drive dep. **
Byte 14 to 19	Zero	Zero	Zero	Zero

*(09_H or 0F_H)

** (3170/3280 = 005C_H, 3380 = 00)

Page Code 4 Current, Changeable, Default and Saved Values

10.14 START/STOP UNIT Command
Operation Code: 1B_H

Bit	7	6	5	4	3	2	1	0
Byte								
0	Operation Code							
1	Logical Unit Number			0	0	Immed		
2	Reserved (00 _H)							
3	Reserved (00 _H)							
4	Reserved (Zeros)						Start	
5	Control Byte							

Figure 10-38

START/STOP UNIT Command

An Immed (immediate) bit of one indicates that status will be returned as soon as the operation is initiated.

An Immed bit of zero indicates that status will be returned after the operation is completed.

If the Immediate bit is not set and the host supports disconnect/reconnect, the command will disconnect while performing the command.

A Start bit of one requests the drive be made ready for use.

A Start bit of zero requests that the drive be disabled for use.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Important: To use this command on the XT-3170 and 3280, jumper JP 44 must be removed. To use this command on the XT-3380, JP8 and 16 must be removed. (See Section 3.2).

10.15 SEND DIAGNOSTIC Command
Operation Code: 1D_H

Bit	7	6	5	4	3	2	1	0	
Byte									
0	Operation Code								
1	Logical Unit Number		Reserved		SelfTest		0	0	
2	Reserved (00 _H)								
3	Reserved (00 _H)								
4	Reserved (Zeros)								
5	Control Byte								

Figure 10-39

SEND DIAGNOSTIC Command

The SEND DIAGNOSTIC command requests the XT-3000 to perform diagnostic tests on itself.

A SelfTest bit of one directs the drive to complete its default self test. If the self test successfully passes, the command is terminated with a GOOD status; otherwise, the command will be terminated with a CHECK CONDITION status and the sense key is set to HARDWARE ERROR.

11.0 GROUP 1 COMMANDS

Unlike the six byte command descriptor blocks of Group 0 commands, Group 1 command descriptor blocks are ten bytes in length.

The Group 1 commands that the drive supports are as shown in the following Table.

Operation Code	Command Name	Section
25 _H	READ CAPACITY	11.1
28 _H	READ EXTENDED	11.2
2A _H	WRITE EXTENDED	11.3
2B _H	SEEK EXTENDED	11.4
2E _H	WRITE AND VERIFY	11.5
3F _H	VERIFY	11.6
37 _H	READ DEFECT DATA	11.7
3B _H	WRITE BUFFER	11.8
3C _H	READ BUFFER	11.9

Figure 11-1

Group 1 Commands

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

11.1 READ CAPACITY Command
Operation Code: 25_H

Bit	7	6	5	4	3	2	1	0	
Byte									
0	Operation Code								
1	Logical Unit Number			Reserved (Zeros)					
2	Logical Block Address (MSB)								
3	Logical Block Address								
4	Logical Block Address								
5	Logical Block Address (LSB)								
6	Reserved (00 _H)								
7	Reserved (00 _H)								
8	Reserved (Zeros)								PMI
9	Control Byte								

Figure 11-2

READ CAPACITY Command

The READ CAPACITY command provides a means for the initiator to request information regarding the capacity of the logical unit.

A partial media indicator (PMI) bit of zero indicates that the information returned in the READ CAPACITY Data is the Logical Block Address and Block Length (in bytes) of the last user addressable logical block of the drive. If spare sectors are deallocated, only user addressable blocks are counted in the calculation of the last logical block address; alternate sectors are not counted. Tracks reserved by the XT-3000 are not counted.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

A PMI bit of one indicates that the information returned is the LBA and Block Length (in bytes) of the last logical block after the LBA specified in the CDB before a substantial delay in data transfer will be encountered (i.e. any seek). This function is intended to assist storage management software in determining whether there is sufficient space on the current cylinder to contain a frequently accessed data structure such as a file directory or file index.

The eight bytes of READ CAPACITY Data shown in the following figure, are sent during the DATA IN phase of the command.

Bit	7	6	5	4	3	2	1	0
Byte								
0	Logical Block Address (MSB)							
1	Logical Block Address							
2	Logical Block Address							
3	Logical Block Address (LSB)							
4	Block Length (MSB)							
5	Block Length							(00 _H)
6	Block Length							01 _H - 256 Bytes/Sector
	Examples:							02 _H - 512 Bytes/Sector
								04 _H - 1024 Bytes/Sector
								08 _H - 2048 Bytes/Sector
7	Block Length (LSB)							(00 _H)

Figure 11-3

READ CAPACITY Data

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

11.2

READ EXTENDED Command
Operation Code: 28_H

Bit	7	6	5	4	3	2	1	0
0	Operation Code							
1	Logical Unit Number			Reserved (Zeros)				
2	Logical Block Address (MSB)							
3	Logical Block Address							
4	Logical Block Address							
5	Logical Block Address (LSB)							
6	Reserved (00 _H)							
7	Transfer Length (MSB)							
8	Transfer Length (LSB)							
9	Control Byte							

Figure 11-4

READ EXTENDED Command

The READ EXTENDED command is the same as the READ command except that the Transfer Length occupies two bytes and the starting Logical Block Address occupies four bytes. The Transfer Length can be from 0000 to 65535 blocks.

11.3 WRITE EXTENDED Command
 Operation Code: 2A_H

Bit	7	6	5	4	3	2	1	0
0	Operation Code							
1	Logical Unit Number				Reserved (Zeros)			
2	Logical Block Address (MSB)							
3	Logical Block Address							
4	Logical Block Address							
5	Logical Block Address (LSB)							
6	Reserved (00 _H)							
7	Transfer Length (MSB)							
8	Transfer Length (LSB)							
9	Control Byte							

Figure 11-5

WRITE EXTENDED Command

The WRITE EXTENDED command is the same as the WRITE command except the Transfer Length occupies two bytes and the starting Logical Block Address occupies four bytes. The Transfer Length can be from 0000 to 65535 blocks.

11.4 SEEK EXTENDED Command
 Operation Code: 2B_H

Bit	7	6	5	4	3	2	1	0
0	Operation Code							
1	Logical Unit Number				Reserved (Zeros)			
2	Logical Block Address (MSB)							
3	Logical Block Address							
4	Logical Block Address							
5	Logical Block Address (LSB)							
6	Reserved (00 _H)							
7	Reserved (00 _H)							
8	Reserved (00 _H)							
9	Control Byte							

Figure 11-6

SEEK EXTENDED Command

The SEEK EXTENDED is similar to the SEEK command.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

11.5

WRITE AND VERIFY Command

Operation Code: 2E_H

Bit	7	6	5	4	3	2	1	0
0	Operation Code							
1	Logical Unit Number				Not Used (Zeros)			
2	Logical Block Address (MSB)							
3	Logical Block Address							
4	Logical Block Address							
5	Logical Block Address (LSB)							
6	Reserved (00 _H)							
7	Transfer Length (MSB)							
8	Transfer Length (LSB)							
9	Control Byte							

Figure 11-7

WRITE AND VERIFY Command

The WRITE AND VERIFY command requests that the XT-3000 write the data transferred from the initiator to the drive and then verify that the data is correctly written. The drive performs media verification against ECC.

The LBA specifies the logical block at which the write operation will begin.

The Transfer Length specifies the number of contiguous logical blocks of data that shall be transferred. A Transfer Length of zero indicates that no logical blocks are transferred. This condition will not be considered as an error and no data is written. Any other value indicates the number of logical blocks that shall be transferred.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

11.6

VERIFY Command

Operation Code: 2F_H

Bit	7	6	5	4	3	2	1	0	
Byte									
0	Operation Code								
1	Logical Unit Number			Not Used (Zeros)					
2	Logical Block Address (MSB)								
3	Logical Block Address								
4	Logical Block Address								
5	Logical Block Address (LSB)								
6	Reserved (00 _H)								
7	Verification Length (MSB)								
8	Verification Length (LSB)								
9	Control Byte								

Figure 11-8

VERIFY Command

The VERIFY command requests that the XT-3000 verify the data written on the media. The drive performs media verification against ECC. No data is transferred.

The LBA specifies the logical block at which the verify operation will begin.

The Verification Length specifies the number of contiguous logical blocks of data that is to be verified. A Transfer Length of zero indicates that no logical blocks are to be verified. This condition will not be considered as an error. Any other value indicates the number of logical blocks that will be verified.

11.7 READ DEFECT DATA Command
 Operation Code: 37_H

Bit	7	6	5	4	3	2	1	0
0	Operation Code							
1	Logical Unit Number				Reserved (zeros)			
2	Reserved (zeros)			P	G	Defect List Fmt (4 _H)		
3	Reserved (00 _H)							
4	Reserved (00 _H)							
5	Reserved (00 _H)							
6	Reserved (00 _H)							
7	Allocation Length (MSB)							
8	Allocation Length (LSB)							
9	Control Byte							

Figure 11-9

READ DEFECT DATA Command

The READ DEFECT DATA command requests that the controller transfer the media defect data to the initiator.

The meaning of the Defect List Format field (bits 0 through 2 of byte 2) is similar to the bit definition of the Defect List Format field (bits 0 through 2 of the byte 1) of the FORMAT UNIT command. The Defect List Format the controller currently supports is bytes from Index (4_H).

List/s to be read	Value of Byte 2
P list	14
G list	0C
P & G lists	1C

Figure 11-10
 Read Defect Data Byte 2 Values

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

If the host requests another format, the controller will return the list requested in the Bytes from Index format and create the CHECK CONDITION status with the Sense Key/Error Code set to "RECOVERED ERROR" at the end of the Read Defect Data data transfer.

- The P bit set to one indicates that the initiator requests that the Primary List of Defects be returned. The P bit of zero indicates that the controller will not return the P List of Defects.

- The G bit set to one indicates that the initiator requests that the G List of Defects be returned. The G bit of zero indicates that the controller will not return the G List of Defects.

- With bits P and G both set to one, the controller will return the Primary and the Growing Lists of Defects.

- With bits P and G set to zero, only the Defect List Header is to be returned.

If the controller is unable to read the defect list from the drive, the controller will create the CHECK CONDITION status and set the Sense Key/Error Code to "MEDIUM ERROR/No Record Found".

The Allocation Length specifies the number of bytes that the initiator has allocated for returned READ DEFECT DATA. An Allocation Length of zero indicates that no READ DEFECT DATA is to be transferred. Any other value indicates the maximum number of bytes that is requested to be transferred.

The controller terminates the DATA IN phase when the Allocation Length bytes have been transferred or when all available READ DEFECT DATA have been transferred to the initiator, whichever is less.

The READ DEFECT DATA contains a four byte Header, followed by zero or more Defect Descriptors.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

DEFECT LIST HEADER

Bit	7	6	5	4	3	2	1	0	
Byte									
0	Reserved (00 _H)								
1	Reserved (Zeros)			P	G	Defect List Fmt (4 _H)			
2	Defect List Length (MSB)								
3	Defect List Length (LSB)								

DEFECT DESCRIPTOR/S

Bit	7	6	5	4	3	2	1	0
Byte								
0	Cylinder Number of Defect (MSB)							
1	Cylinder Number of Defect							
2	Cylinder Number of Defect (LSB)							
3	Head Number of Defect							
4	Defect Bytes from Index (MSB)							
5	Defect Bytes from Index							
6	Defect Bytes from Index							
7	Defect Bytes from Index (LSB)							

Figure 11-11

DATA RETURNED IN THE READ DEFECT DATA COMMAND

The meanings of bits 0 through 2 of byte 1 are similar to the Defect List Format of the FORMAT UNIT command. The P and G bits in the Defect List Header indicate which Defect List is actually returned by the controller. The Bytes From Index format of the Defect Descriptors (if the Defect List Length is different than zero) are shown in the FORMAT UNIT command. The length of each Defect Descriptor is eight bytes. The Defect List Length specifies the total length in bytes of the Defect Descriptors that follow. The Defect List Length is equal to eight times the number of Defect Descriptors. If the Allocation Length of the CDB is too small to transfer all of the Defect Descriptors, the Defect List Length is not adjusted by the controller to reflect the truncation.

The initiator may calculate the exact number of Defects by dividing the Defect List Length by 8 (the Defect Descriptor Length).

11.8

WRITE BUFFER Command

Operation Code: 3B_H

Bit	7	6	5	4	3	2	1	0
Byte								
0	Operation Code							
1	Logical Unit Number			Reserved (Zeros)				
2	Reserved (00 _H)							
3	Reserved (00 _H)							
4	Reserved (00 _H)							
5	Reserved (00 _H)							
6	Reserved (00 _H)							
7	Byte Transfer Length (MSB)							
8	Byte Transfer Length (LSB)							
9	Control Byte							

Figure 11-12

WRITE BUFFER Command

The WRITE BUFFER Command is used in conjunction with the READ BUFFER command as a diagnostic function for testing the drive's buffer memory and the SCSI bus integrity. There is no access to the media during the execution of this command. The Byte Transfer Length specifies the maximum number of bytes to be transferred to and retained in the drive buffer. The Byte Transfer Length contains a four byte header, followed by the WRITE BUFFER data. A Byte Transfer Length of zero indicates that no Write Buffer Header and no WRITE BUFFER data shall be transferred. This condition does not create the CHECK CONDITION status. If the Byte Transfer Length is greater than available length plus four reported by the Read Buffer Command, the drive creates the CHECK CONDITION status with the Sense Key of ILLEGAL REQUEST. In this case no data is transferred from the initiator. It is not an error to request a Byte Transfer Length less than the Available Length.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Bit	7	6	5	4	3	2	1	0	
Byte									
0	Reserved							(00 _H)	
1	Reserved							(00 _H)	
2	Reserved							(00 _H)	
3	Reserved							(00 _H)	

Figure 11-13

WRITE BUFFER Header

It is recommended that the initiator link the WRITE BUFFER and READ BUFFER commands and not allow disconnection during the process to guarantee that the data buffer not be corrupted by uncompleted commands issued from the same or other initiators.

11.9

READ BUFFER Command
 Operation Code: 3C_H

Bit	7	6	5	4	3	2	1	0
0	Operation Code							
1	Logical Unit Number				Reserved (Zeros)			
2	Reserved (00 _H)							
3	Reserved (00 _H)							
4	Reserved (00 _H)							
5	Reserved (00 _H)							
6	Reserved (00 _H)							
7	Allocation Length (MSB)							
8	Allocation Length (LSB)							
9	Control Byte							

Figure 11-14

READ BUFFER Command

The READ BUFFER Command may be used in conjunction with the WRITE BUFFER command as a diagnostic function for testing the drive's buffer memory and the SCSI bus integrity. There is no access to the media during the execution of this command.

The Allocation Length specifies the maximum number of bytes that the initiator has allocated for returned READ BUFFER data. The Allocation Length contains a four byte header, followed by the READ BUFFER data called Available Length. The maximum Available Length is determined by the drive. An Allocation Length of zero indicates that no Read Buffer Header and no READ BUFFER data shall be transferred. This condition does not create the CHECK CONDITION STATUS sent during the WRITE BUFFER command. Up to 8 kilobytes may be requested to be transferred including four bytes of Header and up to 8 kilobytes of READ BUFFER data. If the Allocation Length is greater than the Available Length, added to the four bytes of Read Buffer Header, the Read Buffer Header with the Available Length shall be transferred to the initiator. It is not an error to request an Allocation Length less than the Available Length.

The drive terminates the DATA IN phase when Allocation Length bytes have been transferred or when the Read Buffer Header and the Available Length have been transferred to the initiator, whichever is less.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Bit	7	6	5	4	3	2	1	0
Byte								
0	Reserved (00 _H)							
1	Reserved (00 _H)							
2	Available Length (MSB)							
3	Available Length (LSB)							

Figure 11-15

READ BUFFER Header

It is recommended that the initiator issue the RESERVE UNIT command prior to the WRITE BUFFER command, and issue the RELEASE UNIT command after the READ BUFFER command is completed, in order to avoid corruption of the drive's data buffer by another initiator.

12.0 GROUP 7 COMMANDS

Group 7 commands are ten bytes in length.

The group 7 commands supported by the XT-3000 are shown in the following figure:

Operation Code	Command Name	Section
E8 _H	READ LONG	12.1
EA _H	WRITE LONG	12.2

Figure 12-1
Group 7 Commands

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

12.1

READ LONG Command

Operation Code: E8_H

Bit	7	6	5	4	3	2	1	0
Byte								
0	Operation Code							
1	Logical Unit Number			Reserved (Zeros)				
2	Logical Block Address (MSB)							
3	Logical Block Address							
4	Logical Block Address							
5	Logical Block Address (LSB)							
6	Reserved (00 _H)							
7	Reserved (00 _H)							
8	Reserved (00 _H)							
9	Control Byte							

Figure 12-2

READ LONG Command

The READ LONG command is used to read the block addressed by the LBA and the 6 byte Error Correction Code that was written by the XT-3000 for that block.

NOTE: The number of bytes transferred by this command is the block size + 6 bytes.

12.2

WRITE LONG Command

Operation Code: EA_H

Bit	7	6	5	4	3	2	1	0
0	Operation Code							
1	Logical Unit Number				Reserved (Zeros)			
2	Logical Block Address (MSB)							
3	Logical Block Address							
4	Logical Block Address							
5	Logical Block Address (LSB)							
6	Reserved (00 _H)							
7	Reserved (00 _H)							
8	Reserved (00 _H)							
9	Control Byte							

Figure 12-3

WRITE LONG Command

The WRITE LONG command is used to write the block addressed by the LBA plus the 6 byte Error Correction Code.

NOTE: The number of bytes transferred by this command is the block size + 6 bytes.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

13.0 PHYSICAL INTERFACE

The electrical interface between the XT-3000 and the host controller is via three connectors:

1. J1 - SCSI connector (50 pin)
2. J2 - DC power input
3. J3 - Frame ground

Refer to Figure 14-1 for connector locations.

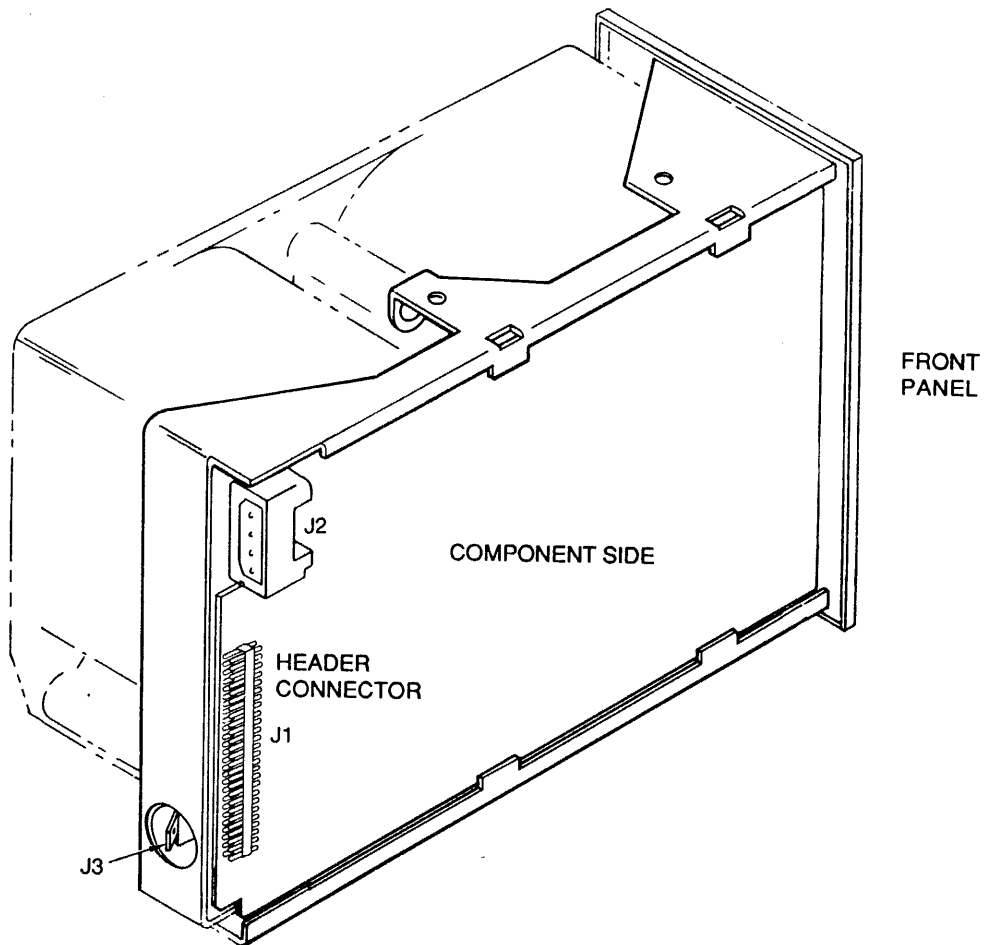


Figure 13-1
INTERFACE CONNECTOR PHYSICAL LOCATION

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

13.1 J1/P1 Connector

Connection to J1 is via a non-shielded 50 - conductor connector consisting of two rows of 25 female contacts on 100 mil centers, as shown in Figure 14.2. The J1 pins are numbered 1 through 50, with the odd pins located closest to the component side of the PCB. Pin 1 is located on the end of the connector closest to the white DC power connector (J2/P2). Figure 14-2 shows the configuration and dimensions of a suitable mating connector. Recommended strain-relief connectors are AMP part number 1-499506-2 or Dupont part number 669002 (66900-250).

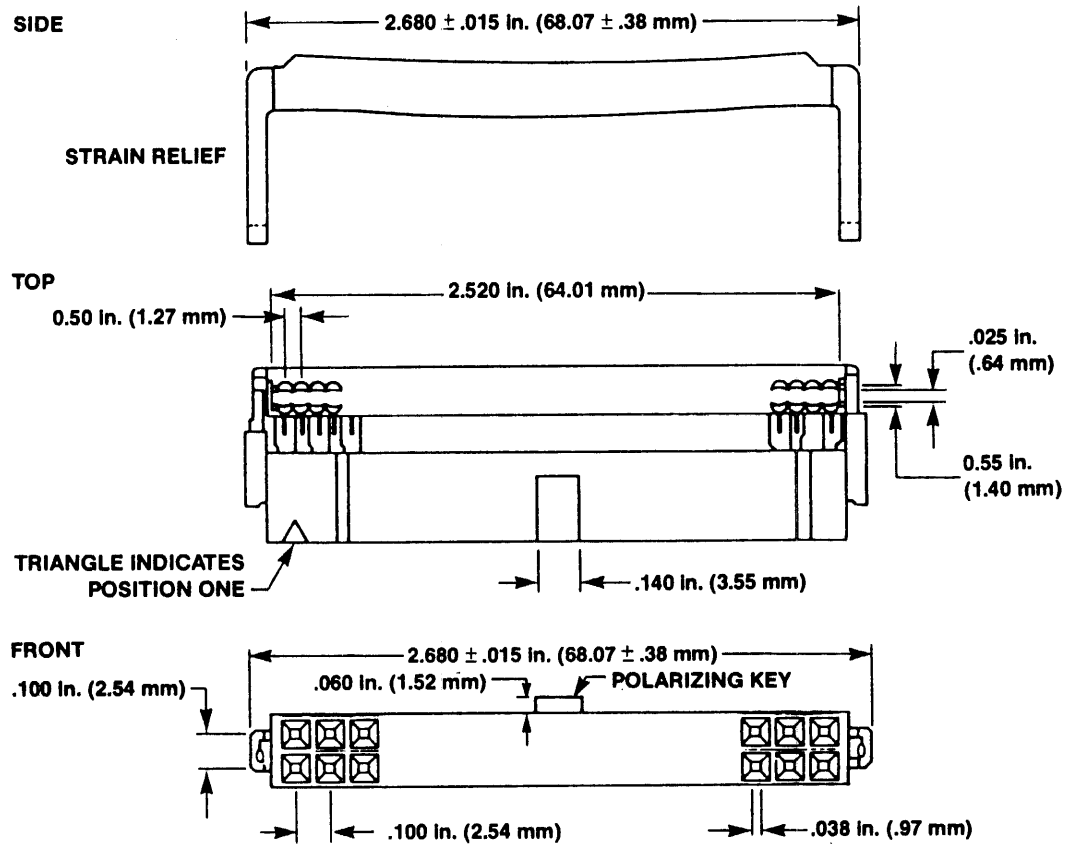


Figure 13-2

XT-3000 SCSI Cable Connector

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

13.2 J2/P2 Connector

The DC power connector (J2), Figure 14-4, is a 4 pin AMP MATE-N-LOCK connector P/N 3505430-1 mounted on the solder side of the PCB. The recommended mating connector (P2) is AMP P/N1-480424-0 utilizing AMP pins P/N 350078-4 (strip) or P/N 61173-4 (loose piece). J2 pins are numbered as shown in Figure 14-4.

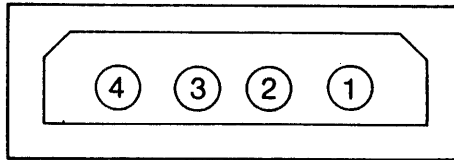


Figure 13-3

J2 Connector (Drive PCB Solder Side)

The required voltages and current levels on connector J2/P2 are shown below.

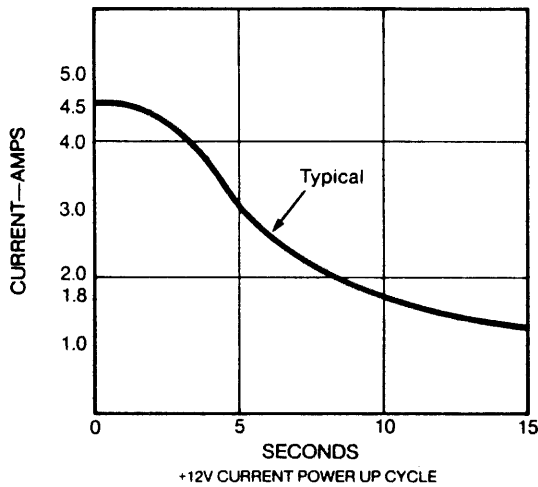


Figure 13-4
Motor Start Current Requirements

J2 CONNECTOR	
PIN 4	+5 VOLTS DC $\pm 5\%$
PIN 3	+5 VOLT RETURN
PIN 1	+12 VOLTS DC $\pm 5\%*$
PIN 2	+12 VOLT RETURN

*10% AT POWER ON OR SEEKING

Figure 13-5
DC Power Requirements

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

14.0 PHYSICAL SPECIFICATIONS

This section describes the mechanical and mounting recommendations for the XT-3000.

14.1 Mounting Orientation

The XT-3000 may be mounted in any orientation. In any final mounting configuration, insure that the operation of the three shock mounts which isolate the base casting from the frame is not restricted. Certain switching power supplies may emanate electrical noise which will degrade the specified read error rate. For best results, it is suggested that the XT-3000 be oriented so that the PCB assembly is not adjacent to these noise sources.

14.2 Mounting Holes

Eight mounting holes, four on the bottom and two on each side are provided for mounting the drive into an enclosure. The size and location of these holes, shown in Figure 11-1, are identical to industry standard minifloppy drives.

* CAUTION *
* The casting is very close to the frame mounting holes in some*
* locations. Mounting screw lengths must be chosen such that no *
* more than .125" of the screw is available to enter the frame *
* mounting hole. The torque applied to the mounting screws should *
* be at least 9 inch-pounds; but to avoid stripping the threads, the*
* maximum torque applied shall not exceed 12 inch-pounds. *

14.3 Cooling Requirements

Reliability of the XT-3000 will be further enhanced if proper cooling is provided. Forced air cooling of approximately 500 linear feet/minute (approximately 5 cubic feet/minute) across the PCB is suggested for optimum performance.

14.4 Physical Dimensions

Overall height, width, and depth along with other key dimensions are shown in Figures 15-1 and 15.2.

14.5 Shipping Requirements

At powerdown, the heads are automatically positioned over the non-data, dedicated landing zone on each disk surface. The automatic shipping lock solenoid is also engaged at this time.

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

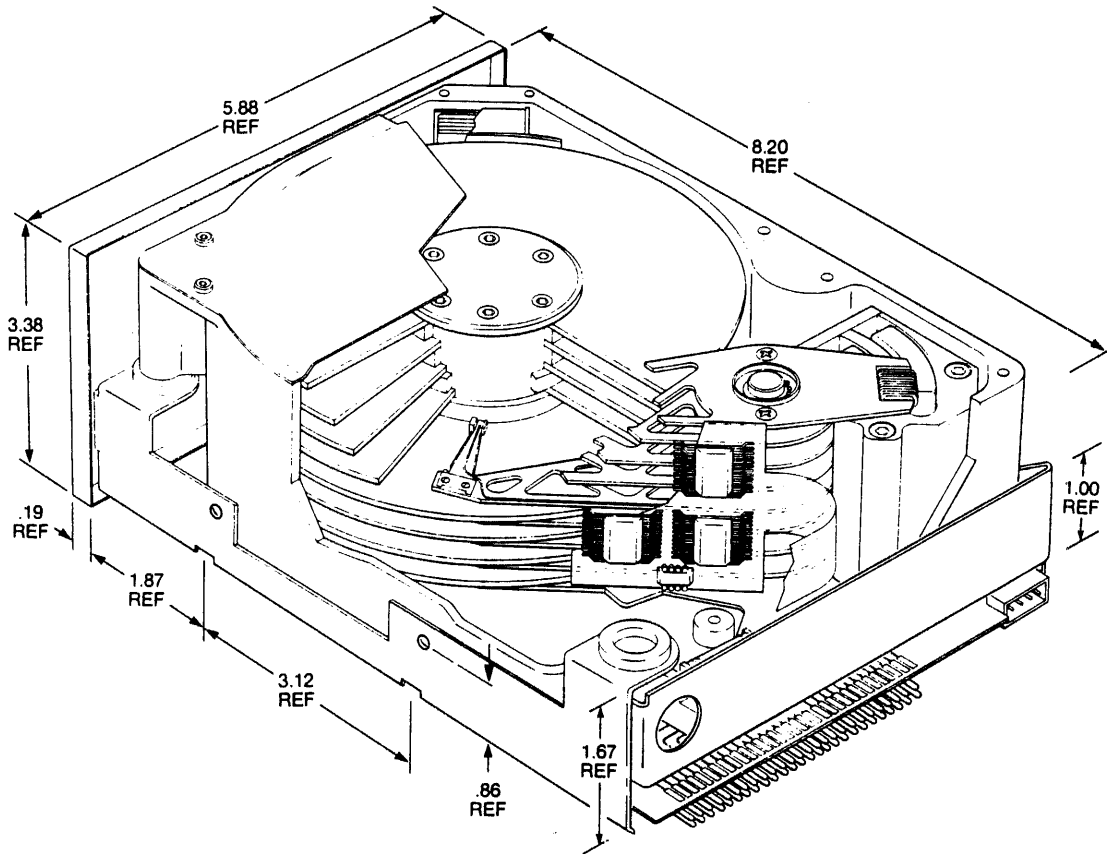


Figure 14-1
XT-3000 Mechanical Outline
and Mounting Hole Location

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

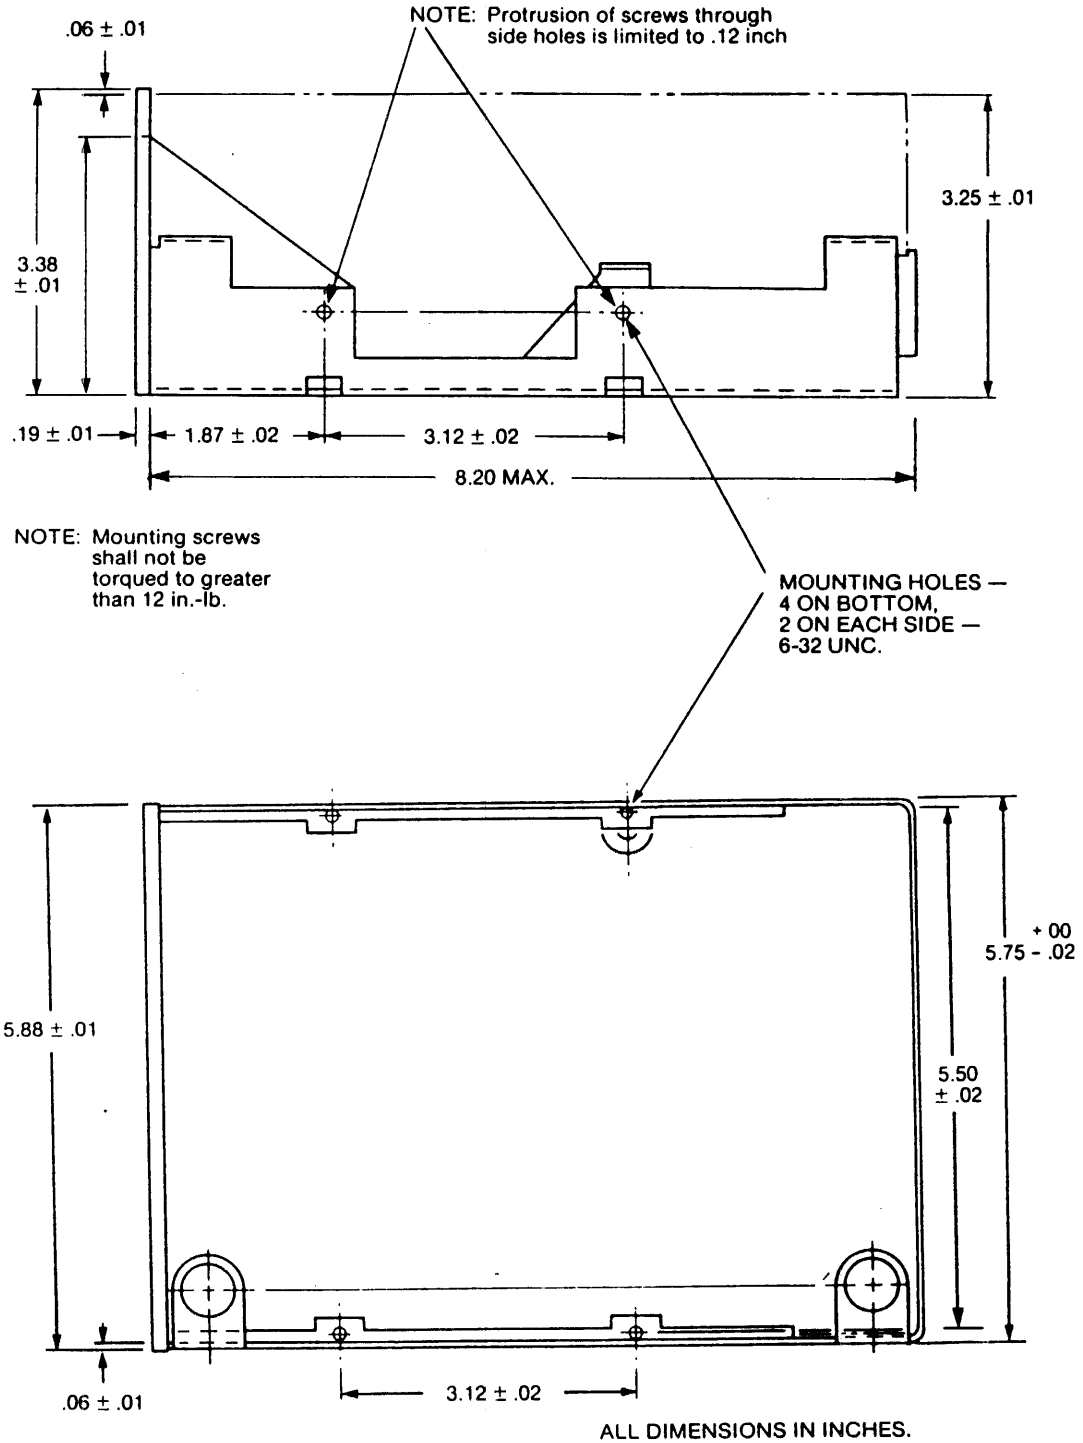


Figure 14-2
XT-3000 Mechanical Outline
Bottom and Side Views

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Appendix A: SCSI Command Examples

This section is intended to provide specific examples of some of the more complex SCSI commands.

Example #1 - Mode Select - Page 3, four spare sectors per cylinder on an XT-3280. Also, change the sector size to 1024 bytes/sector.

First, the host data buffer is initialized as follows:

<u>Buffer Byte Number</u>		<u>Value to Input</u> <u>(Hex)</u>	<u>Comments</u>
0		-----00	
1	MODE SENSE	00	
2	HEADER	00	
3		-----00	
4		-----00	
5		00	
6		00	
7	BLOCK	00	
8	DESCRIPTOR	00	
9		00-	
10		04-	-----Bytes/Logical Block changed here
11		-----00-	
12		-----03-	-----Page Code.
13		16-	-----Number of following bytes.
14		00-	
15		0F-	-----Tracks per zone.
16		00-	
17		04-	-----Alternates per zone.
18		00	
19	PAGE	00	
20	THREE	00-	
21	DESCRIPTOR	02-	-----Alternate Tracks/Volume.
22	(FORMAT	00-	Not changeable.
23	PARAMETERS)	0E-	-----Physical sectors/track changed here.
24		00-	
25		40-	-----Bytes/Physical Sector changed here.
26		00-	
27		01 or 00-	-----Does not matter. Mode Select ignores this field.
28		00	
29		00	
30		00	
31		00	
32		80 or 00-	-----Does not matter. Mode Select ignores this field.
33 - 35		-----00(s)	

XT-3000 OEM MANUAL & PRODUCT SPECIFICATION

Then, issue the following command:

<u>Command Byte Number</u>		<u>Value to Input (Hex)</u>	<u>Comments</u>
0	MODE	15	OP code
1	SELECT	00	
2	(PAGE 3)	00	
3	COMMAND	00	
4		24	Transfer length
5		00	

Example #2 - FORMAT UNIT COMMAND - Use P-list, C-list, G-list and send two defects to be mapped out via D-list. The two defects are:

<u>Cylinder</u>	<u>Head</u>	<u>Bytes from Index</u>
21	11	10624
7	15	720

First, the host data buffer is initialized as follows:

<u>Buffer Byte Number</u>		<u>Value to Input (Hex)</u>	<u>Comments</u>
0		00	
1	DEFECT LIST	80	Use P and C list
2	HEADER	00	
3		10	Length of D list
4		00	
5		00	
6	DEFECT	07	Cylinder
7	DESCRIPTOR	0F	Head
8	#1	00	
9		00	
10		02	Bytes from index
11		00	
12		00	
13		00	
14	DEFECT	15	Cylinder
15	DESCRIPTOR	0B	Head
16	#2	00	
17		00	
18		29	
19		80	Bytes from index

Then issue the following command:

<u>Command Byte Number</u>		<u>Value to Input (Hex)</u>	<u>Comments</u>
0	FORMAT	04	Format Unit command.
1	UNIT	14	Transfer header and D list
	COMMAND		and use G list
2		00	
3		00	
4		00	
5		00	